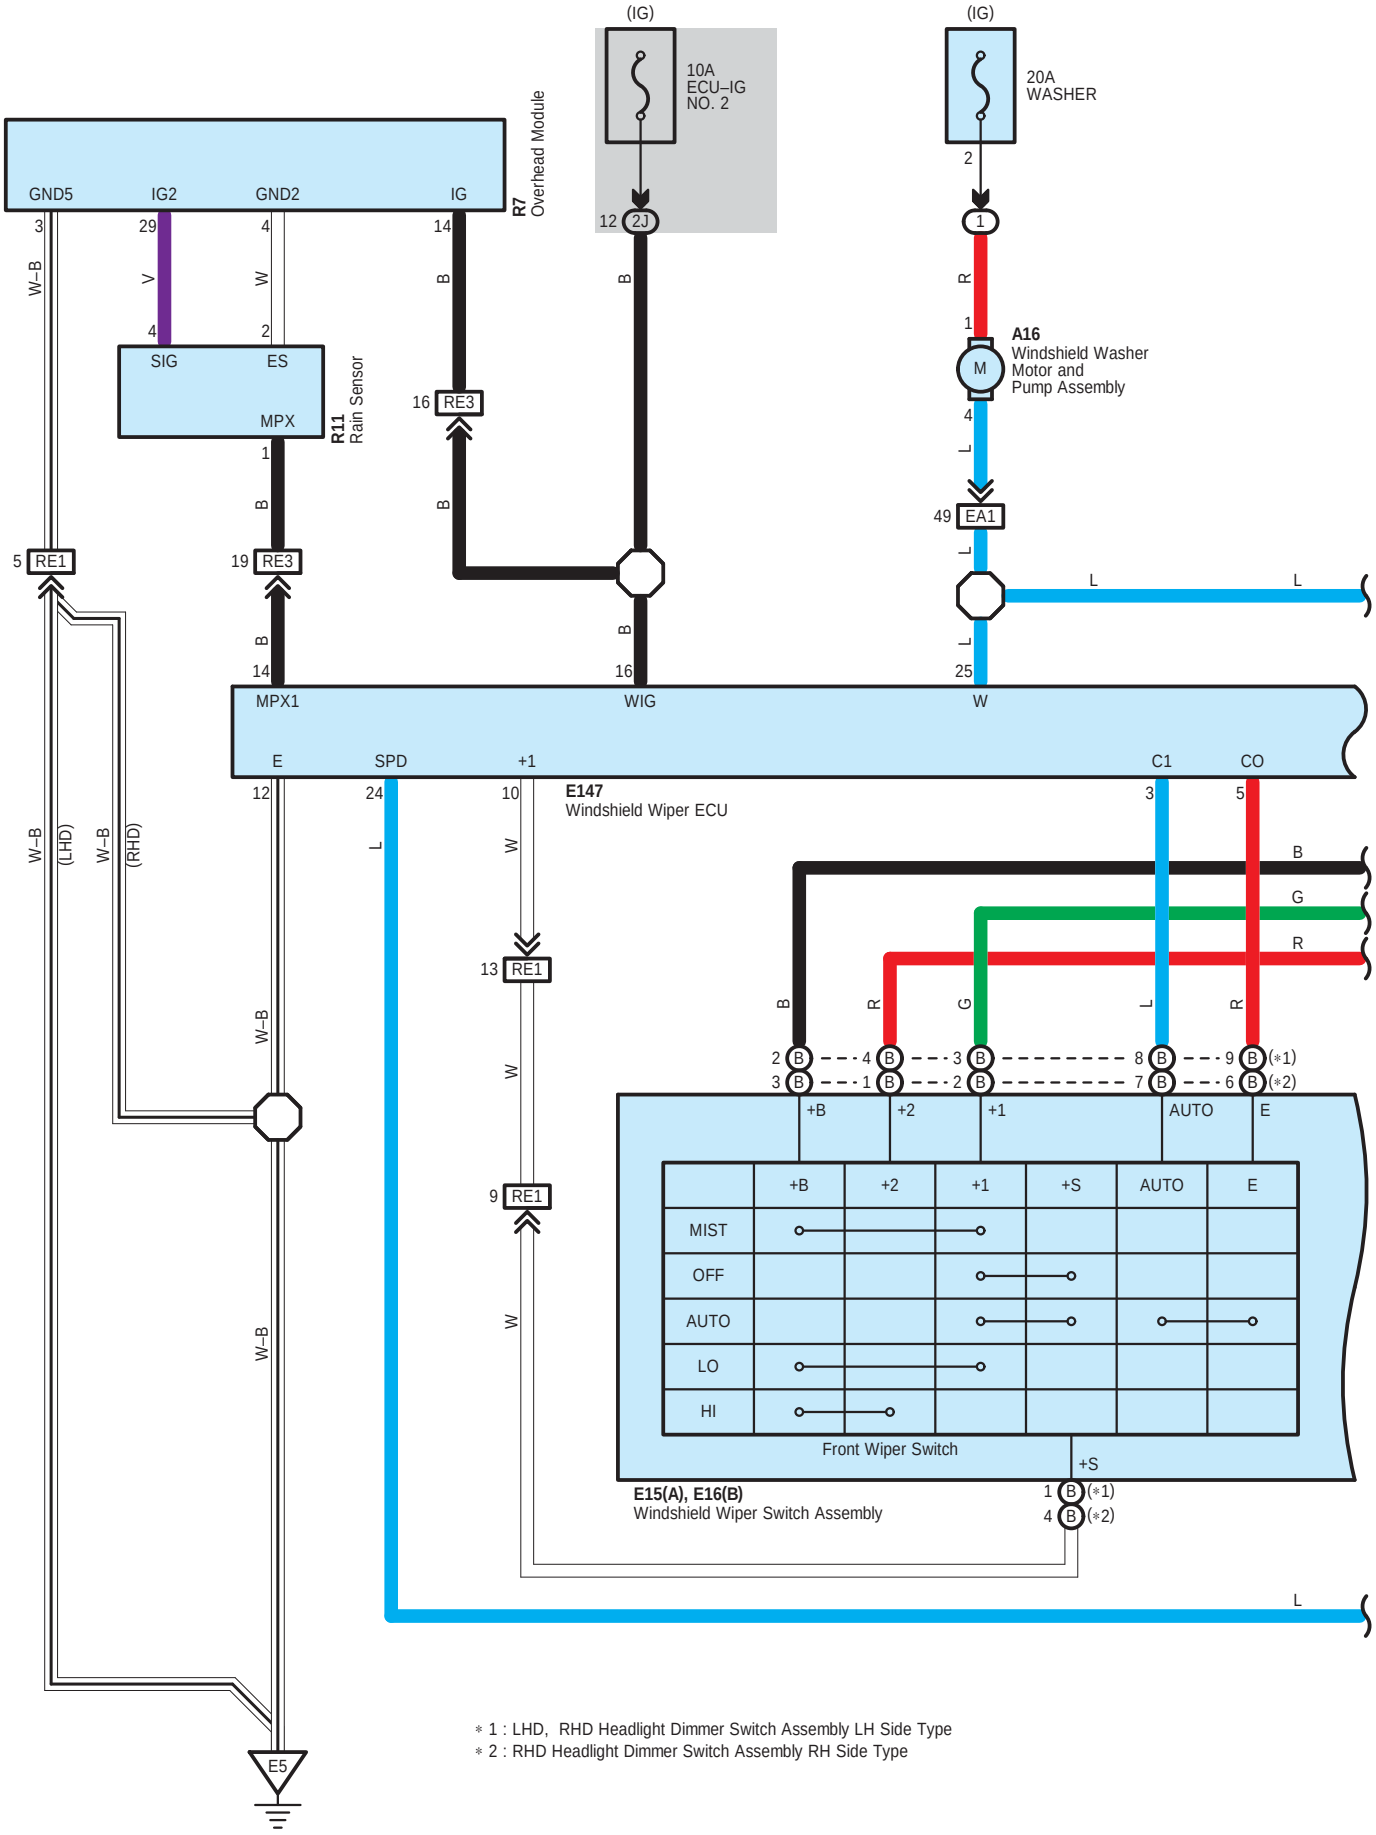
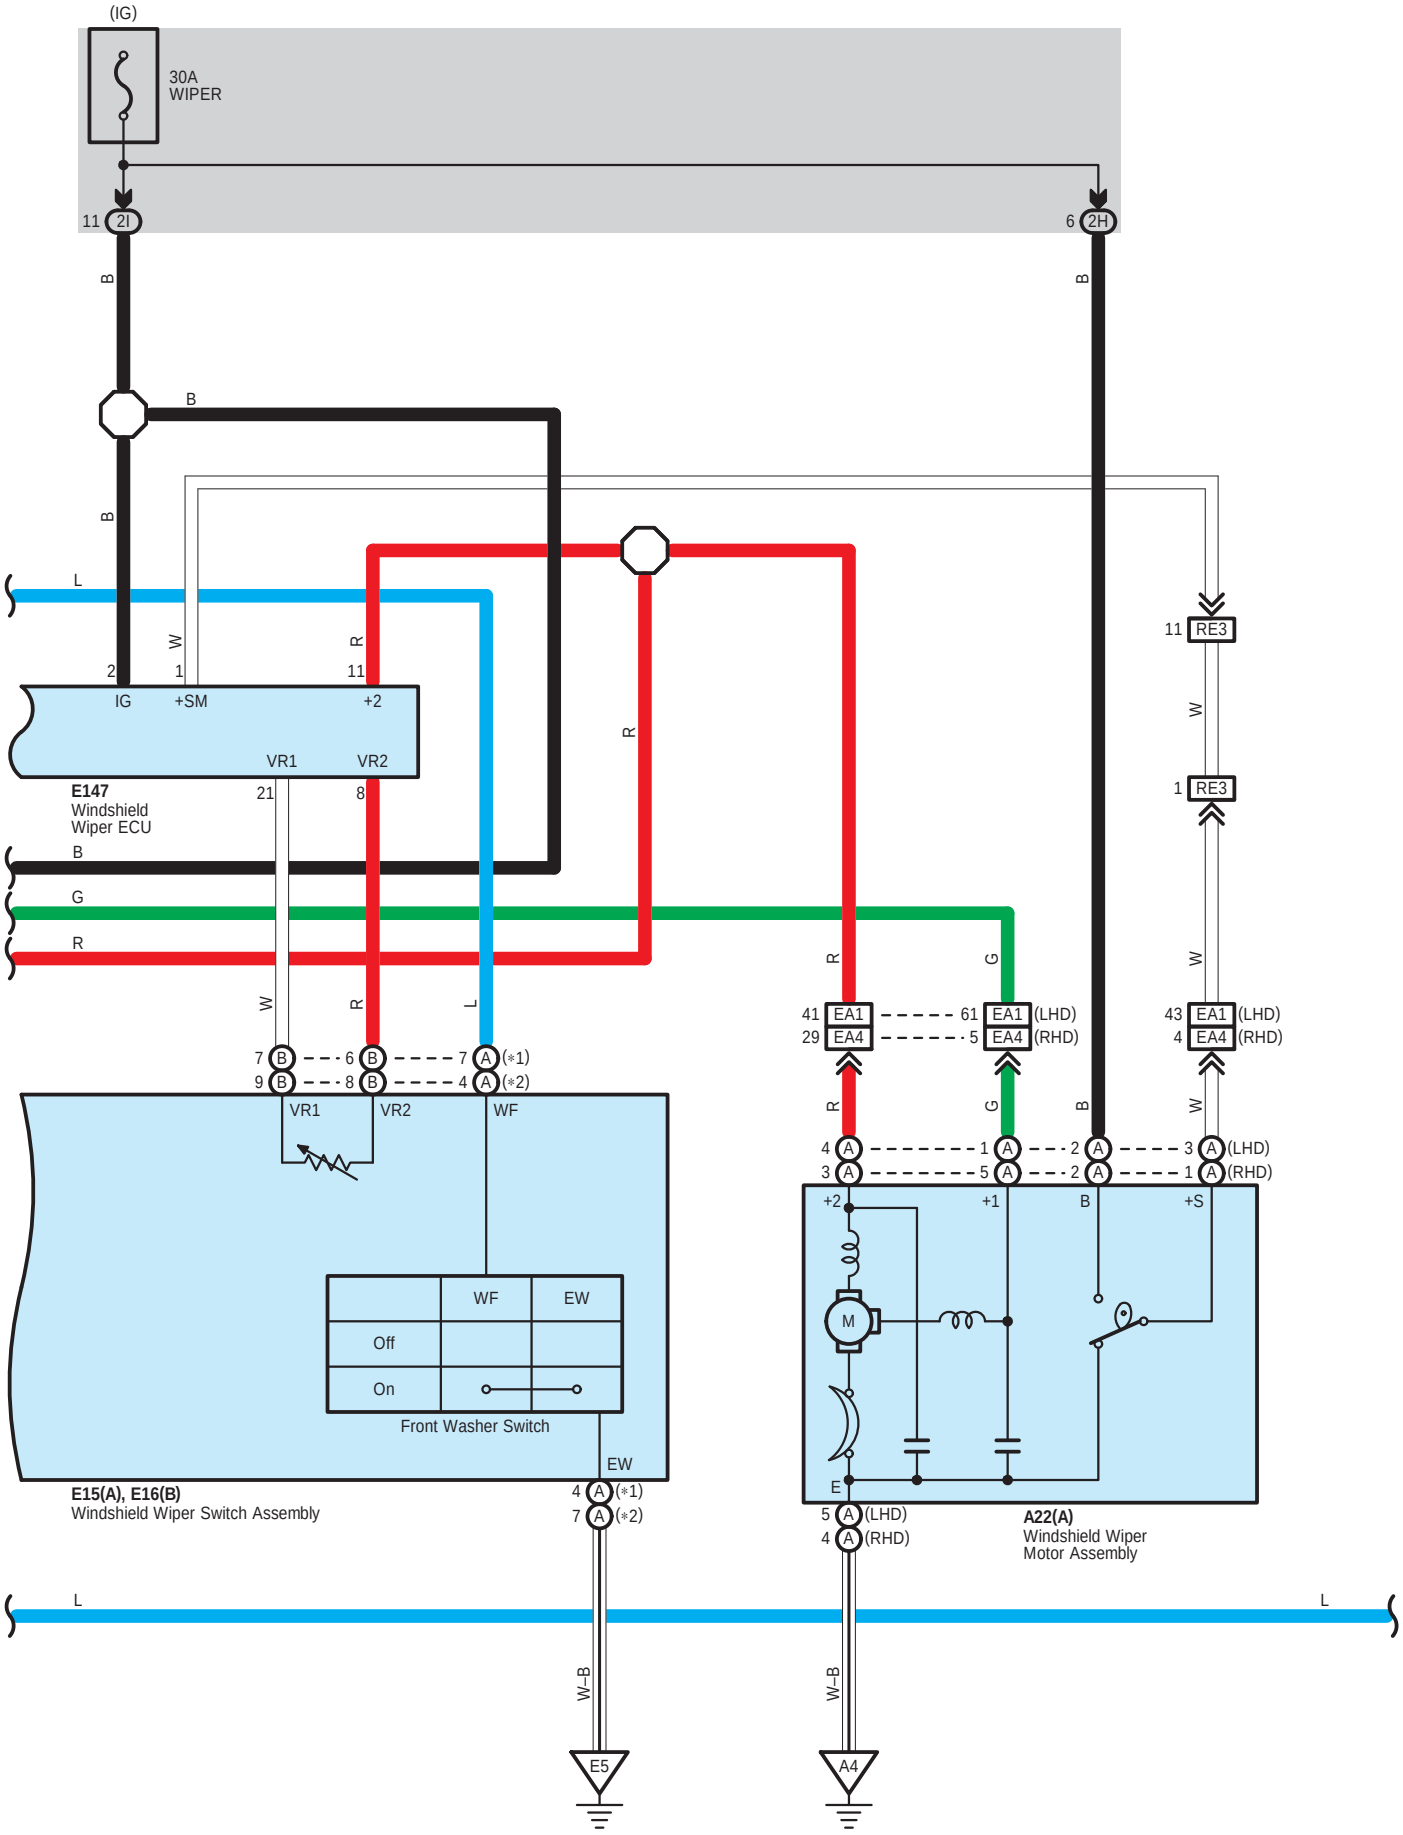
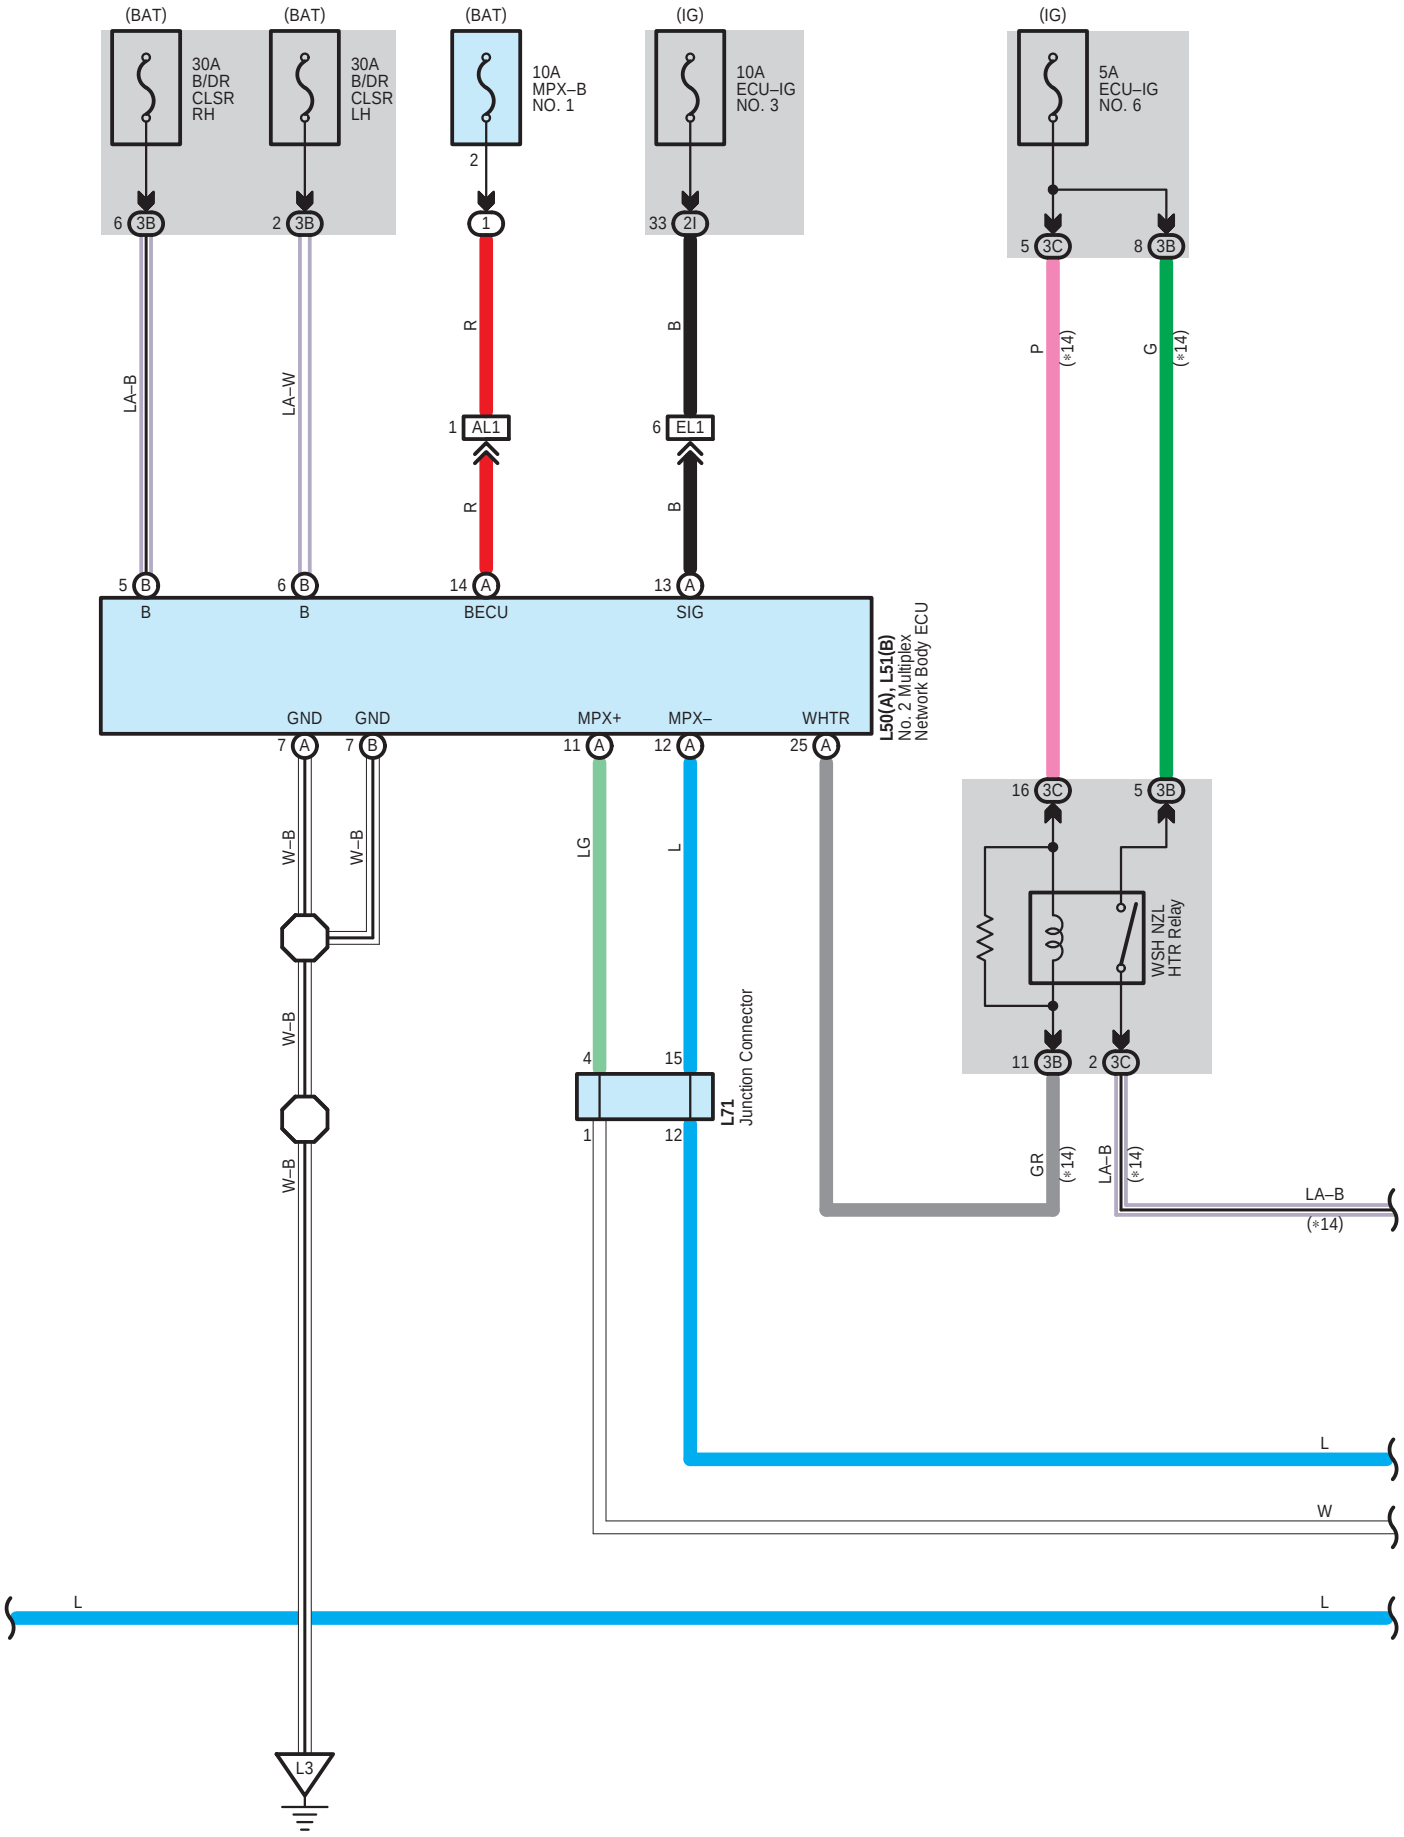
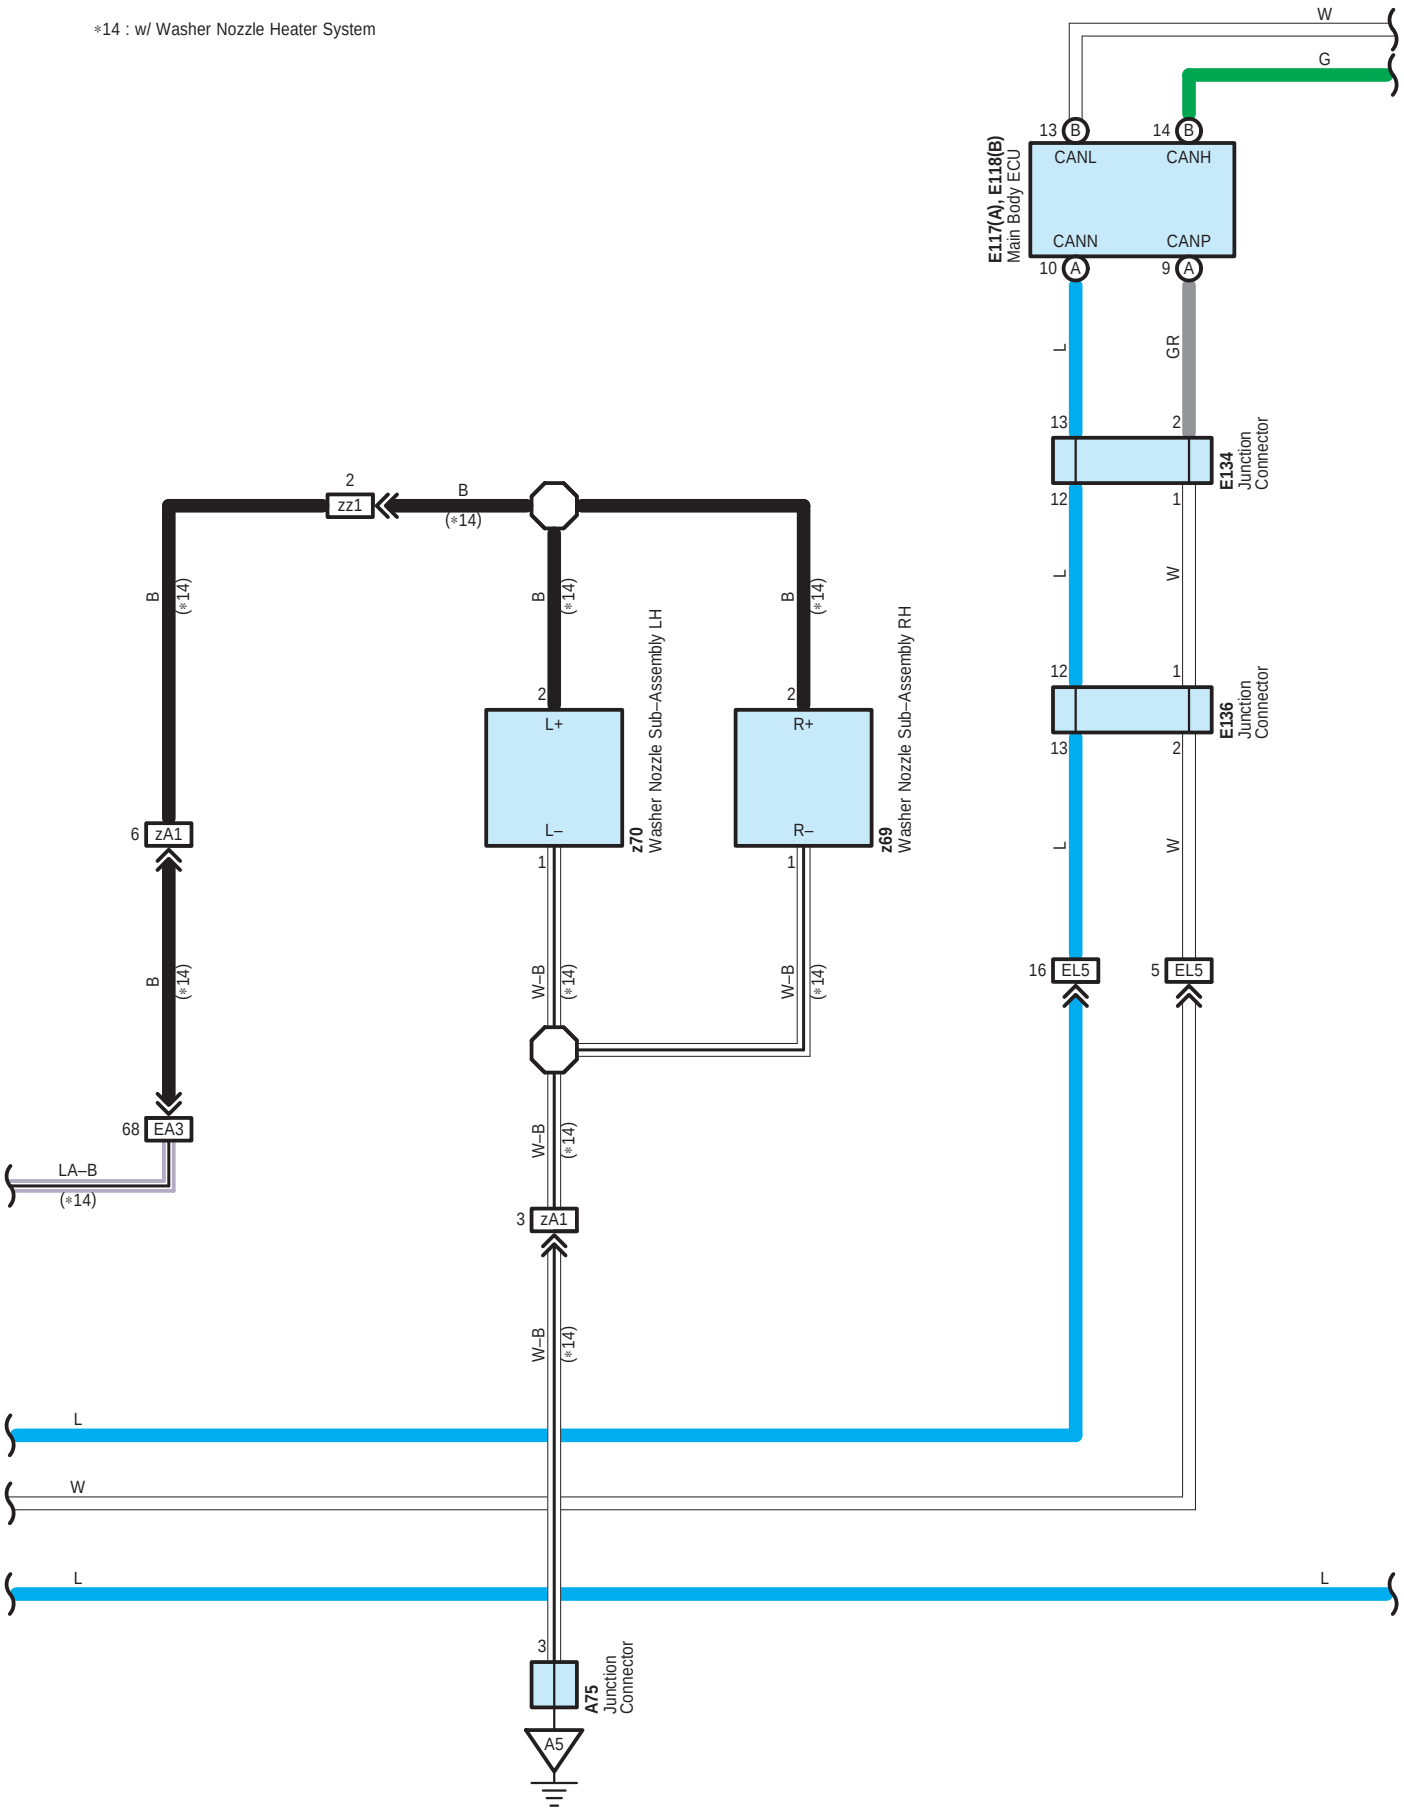
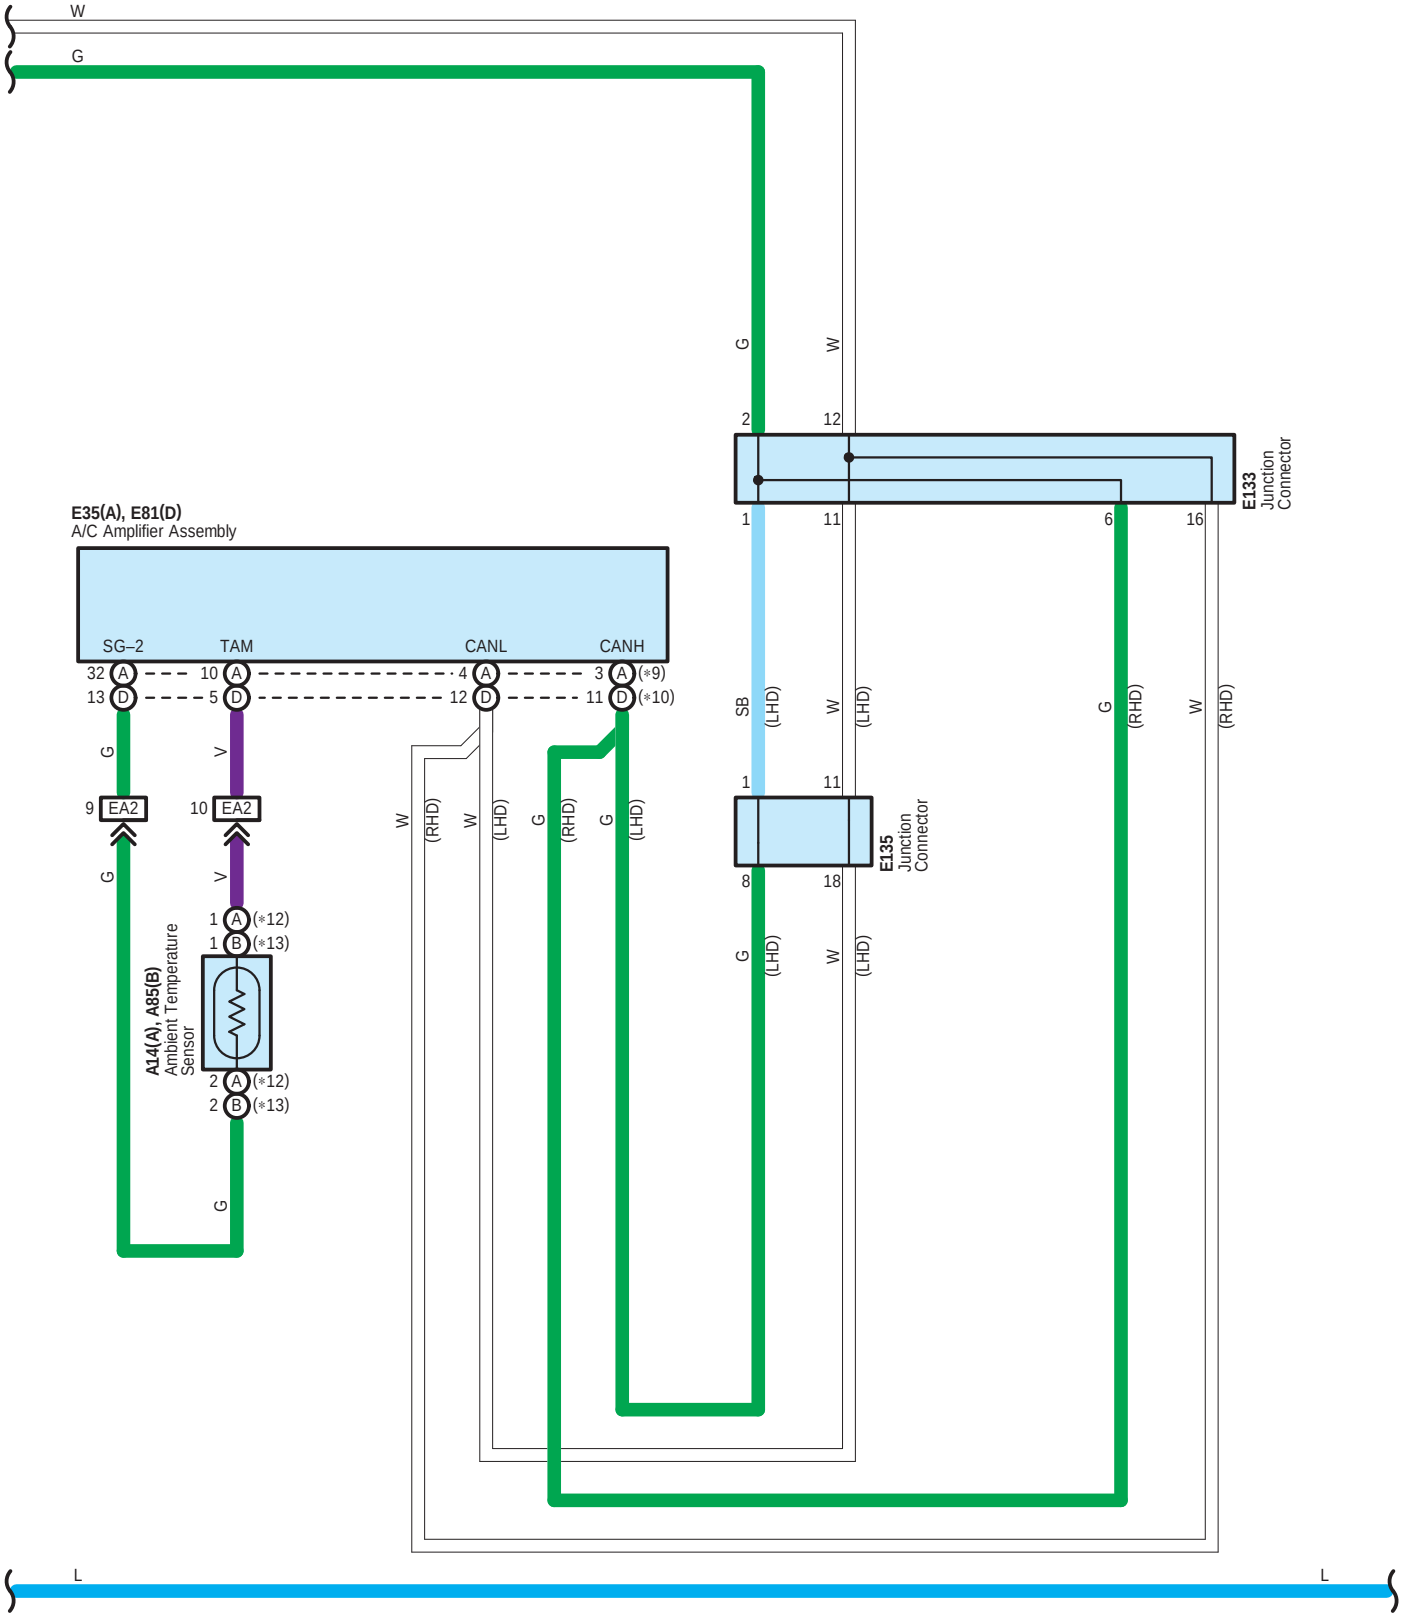



∗ 1 : LHD, RHD Headlight Dimmer Switch Assembly LH Side Type
∗ 2 : RHD Headlight Dimmer Switch Assembly RH Side Type


(IG)
30A
WIPER
11 2I
6 2H
B
L
W
R
G
2
1
11
IG
+SM
+2
VR1
VR2
21
8
E147
Windshield
Wiper ECU
11 RE3
1 RE3
41 EA1
29 EA4
61 EA1 (LHD)
5 EA4 (RHD)
43 EA1 (LHD)
4 EA4 (RHD)
7 B
9 B
6 B
8 B
7 A (*1)
4 A (*2)
WF
4 A
3 A
1 A
5 A
2 A
+2
+1
B
+S
M
E
WF
EW
Off
On
Front Washer Switch
E15(A), E16(B)
Windshield Wiper Switch Assembly
4 A (*1)
7 A (*2)
5 A (LHD)
4 A (RHD)
A22(A)
Windshield Wiper
Motor Assembly
W-B
E5
A4


(BAT)
30A B/DR CLSR RH
(BAT)
30A B/DR CLSR LH
(BAT)
10A MPX–B NO. 1
(IG)
10A ECU–IG NO. 3
(IG)
5A ECU–IG NO. 6
6 3B
2 3B
2
1
33 2I
5 3C
8 3B
LA–B
LA–W
R
R
B
B
P (*14)
G (*14)
1 AL1
6 EL1
5 B
6 B
14 A
13 A
B
B
BECU
SIG
L50(A), L51(B) No. 2 Multiplex Network Body ECU
GND
GND
MPX+
MPX–
WHTR
7 A
7 B
11 A
12 A
25 A
W–B
W–B
W–B
W–B
LG
L
16 3C
5 3B
W/SH NZL HTR Relay
11 3B
2 3C
4
15
1
12
L71 Junction Connector
GR (*14)
LA–B (*14)
LA–B (*14)
L
W
L
L
L3


∗14 : w/ Washer Nozzle Heater System
W
G
13 B
14 B
CANL
CANH
CANN
CANP
E117(A), E118(B)
Main Body ECU
10 A
9 A
L
GR
13
2
E134
Junction Connector
12
1
L
W
12
1
E136
Junction Connector
13
2
L
W
16 EL5
5 EL5
2
zz1
B
(∗14)
B (∗14)
B (∗14)
B (∗14)
2
L+
L–
z70
Washer Nozzle Sub–Assembly LH
2
R+
R–
z69
Washer Nozzle Sub–Assembly RH
1
1
W–B (∗14)
W–B (∗14)
6 zA1
B (∗14)
68 EA3
LA–B
(∗14)
W–B (∗14)
3 zA1
W–B (∗14)
L
W
L
L
3
A75
Junction Connector
A5


W
G
G
W
2
12
E133
Junction
Connector
1
11
6
16
E35(A), E81(D)
A/C Amplifier Assembly
SG–2
TAM
CANL
CANH
32 A
13 D
10 A
5 D
4 A
12 D
3 A (*9)
11 D (*10)
SB
(LHD)
W
(LHD)
G
(RHD)
W
(RHD)
G
V
9 EA2
10 EA2
1
11
E135
Junction
Connector
8
18
W
(RHD)
W
(LHD)
G
(RHD)
G
(LHD)
G
(LHD)
W
(LHD)
1 A (*12)
1 B (*13)
A14(A), A85(B)
Ambient Temperature
Sensor
2 A (*12)
2 B (*13)
G
L
L

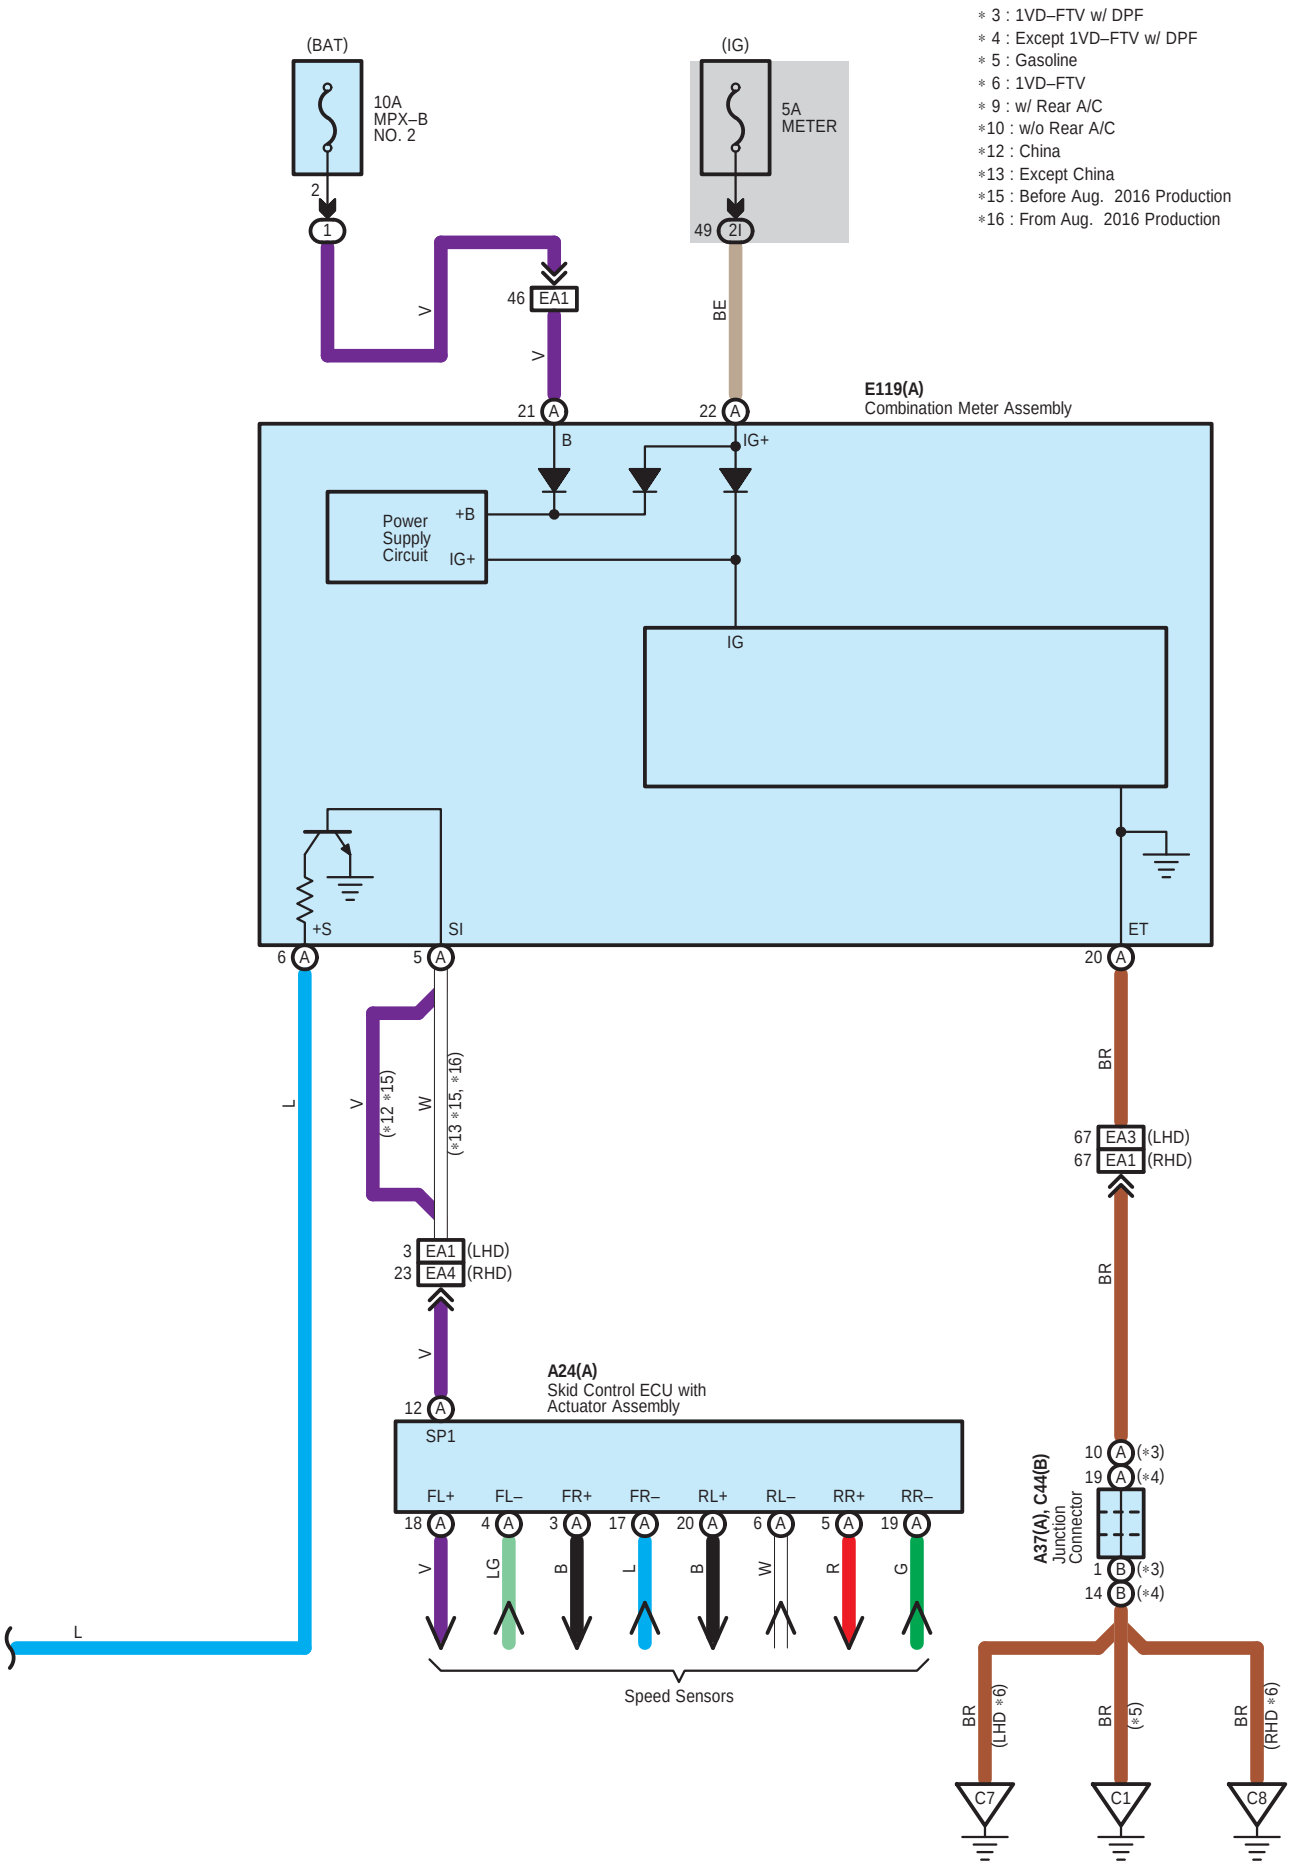
∗ 3 : 1VD–FTV w/ DPF
∗ 4 : Except 1VD–FTV w/ DPF
∗ 5 : Gasoline
∗ 6 : 1VD–FTV
∗ 9 : w/ Rear A/C
∗10 : w/o Rear A/C
∗12 : China
∗13 : Except China
∗15 : Before Aug. 2016 Production
∗16 : From Aug. 2016 Production
(BAT)
10A
MPX–B
NO. 2
(IG)
5A
METER
E119(A)
Combination Meter Assembly
Power
Supply
Circuit
+B
IG+
IG
+S
SI
ET
A24(A)
Skid Control ECU with
Actuator Assembly
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
Speed Sensors
A37(A), C44(B)
Junction
Connector
(LHD)
(RHD)
(LHD ∗6)
(∗5)
(RHD ∗6)
C7
C1
C8


A 14
Black




A 16
Gray




A 22
Black

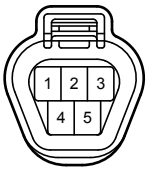


A 24
Black

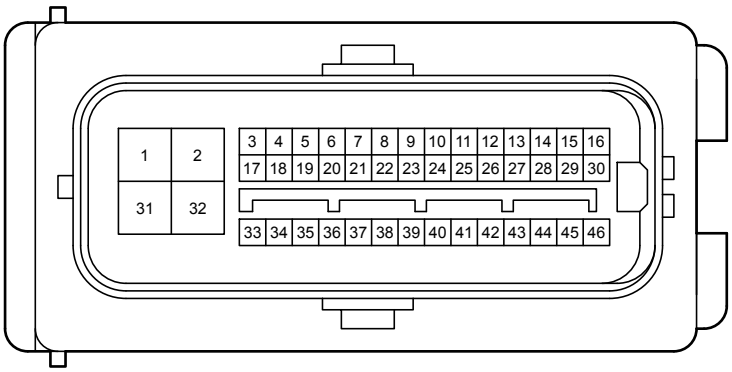


A 37
Blue

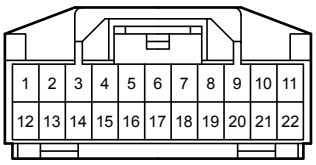


A 75
Black

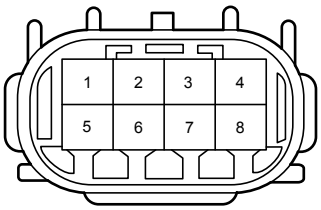


A 85
Black

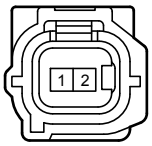


C 44
Blue

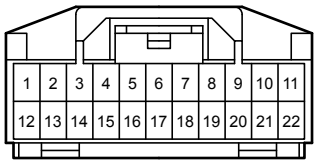


E 15
White

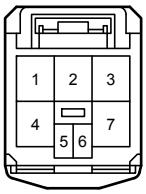


E 16
White

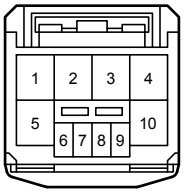


E 35
White

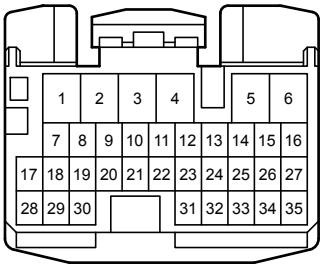


E 81
White

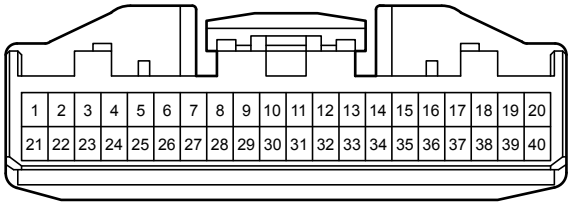


E117
White

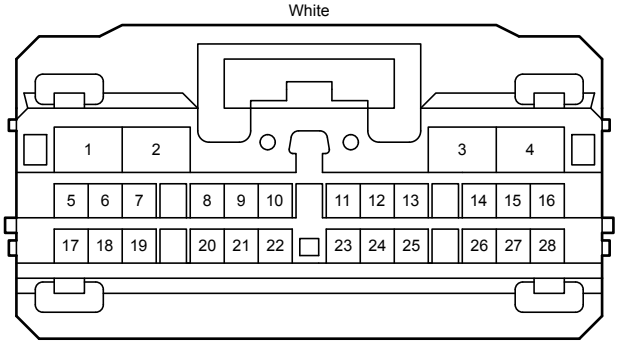


E118
White

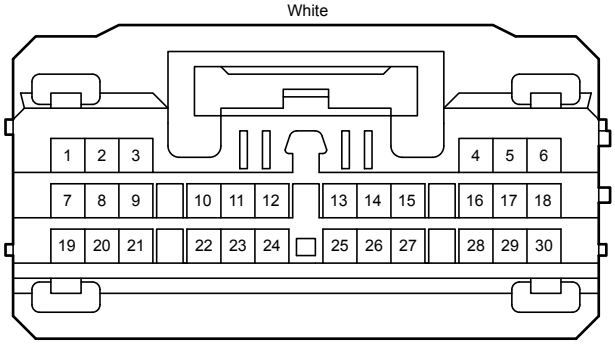


E119
Black

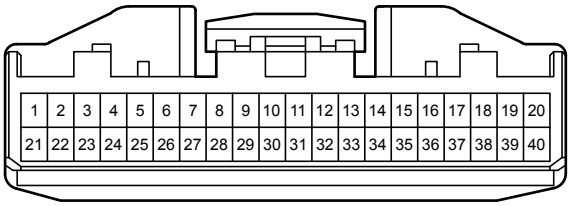


E133
White

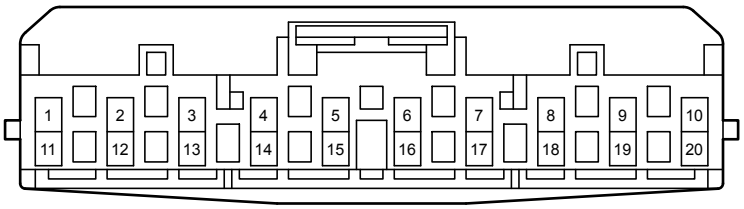


E134
Black

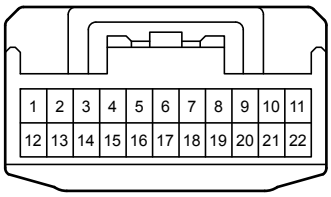


E135
White

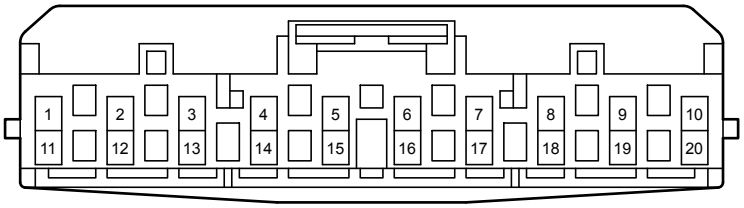


E136
Black

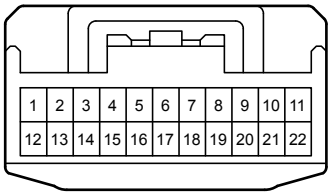


E147
White

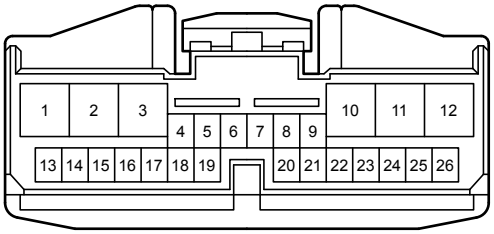


L 50
White

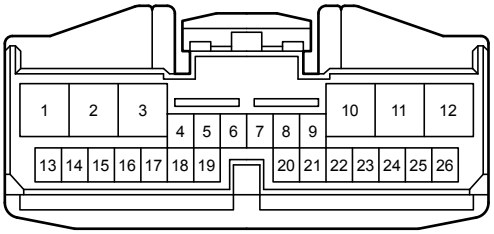


L 51
Blue

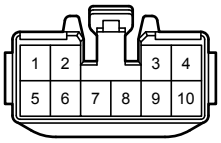


L 71
Black

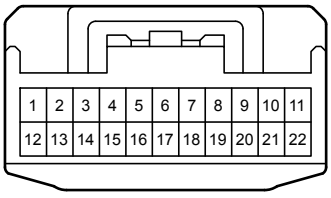


R 7
White

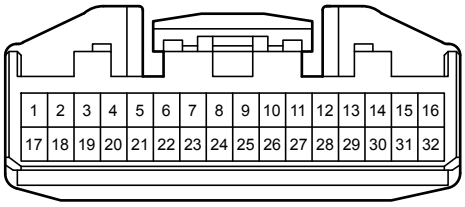


R 11
Black

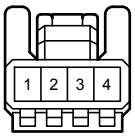


z 69
Gray

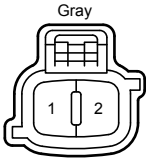


z 70
Gray

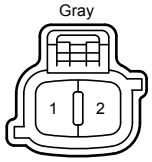


2H
White

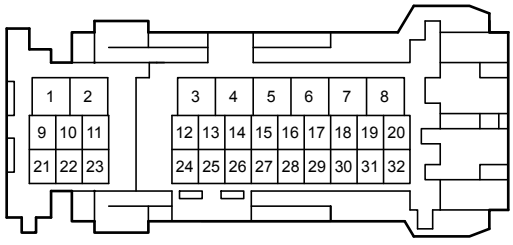


2I
White

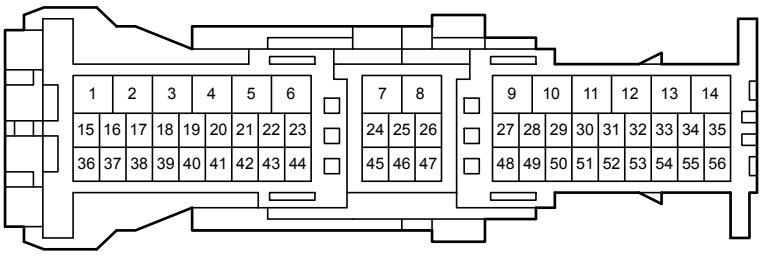


2J
White

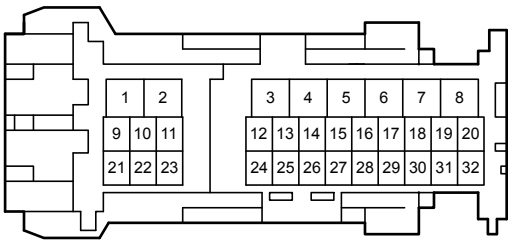


3B
Gray




3C
White

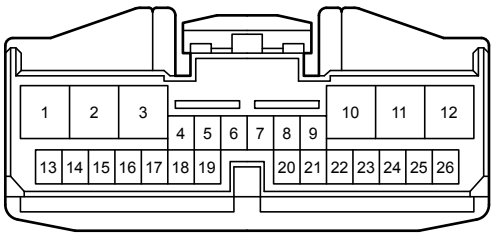

AL1
White

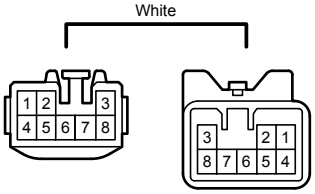


EA1
White

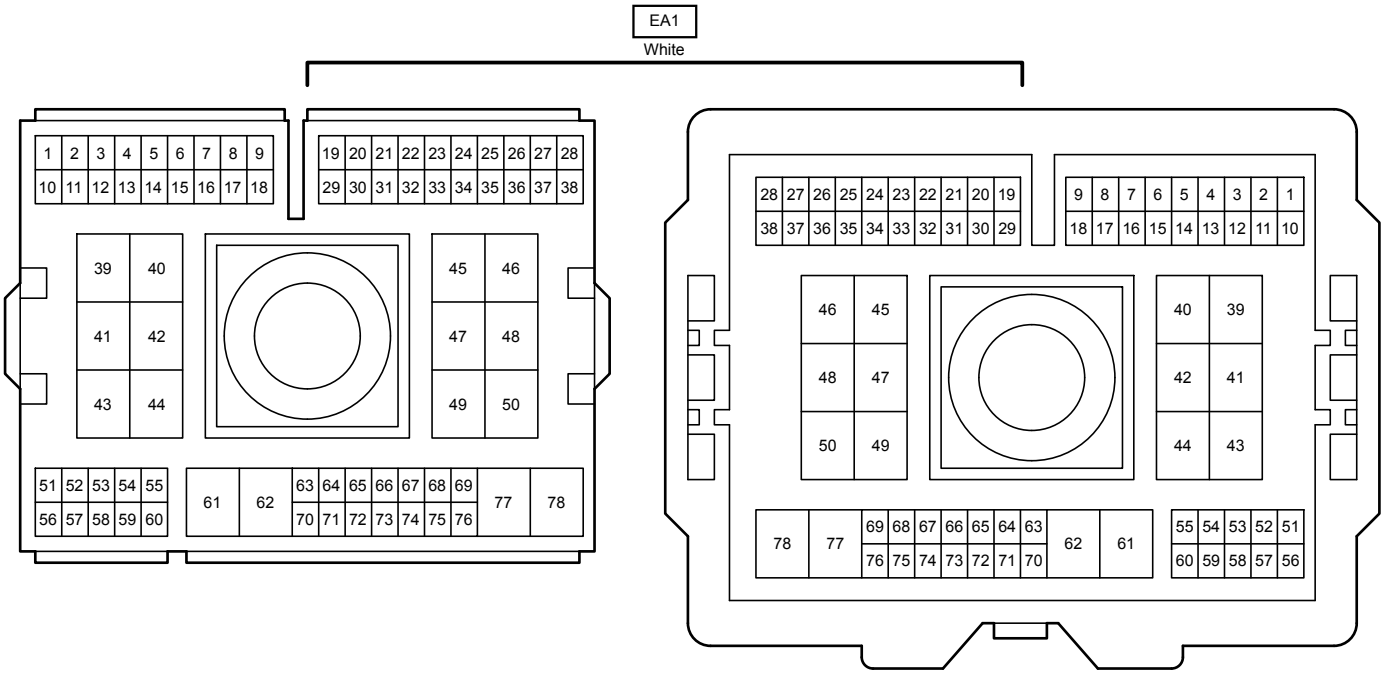


EA2

White


Gray

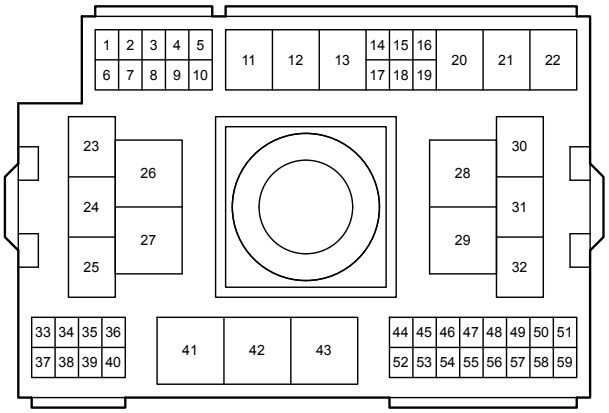


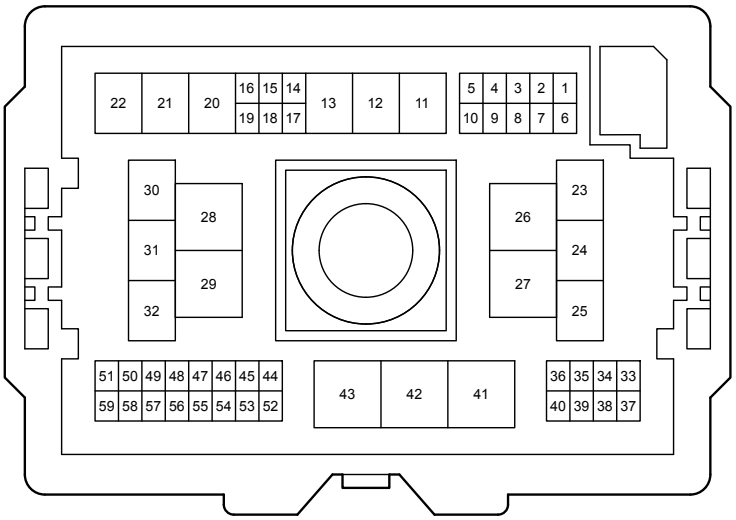


EA3

White

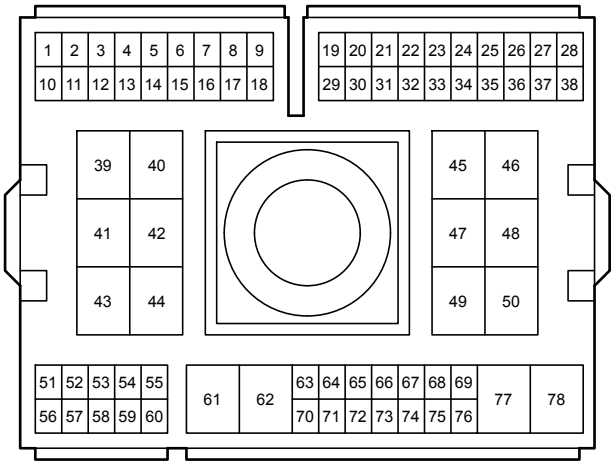


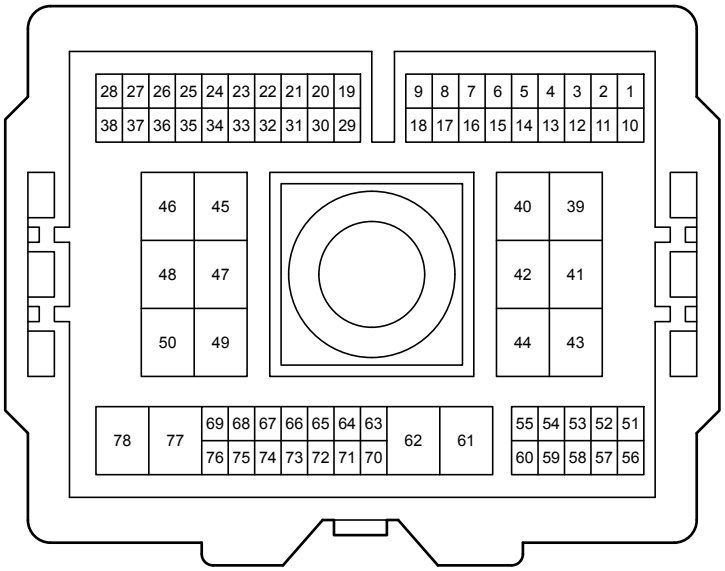


EA4
White

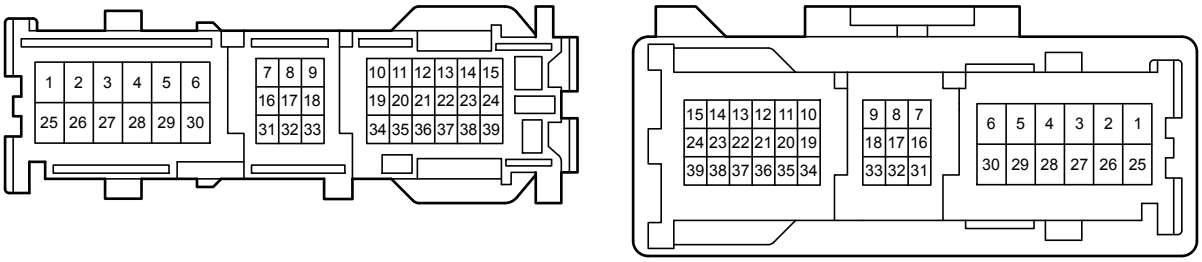


EL1
White

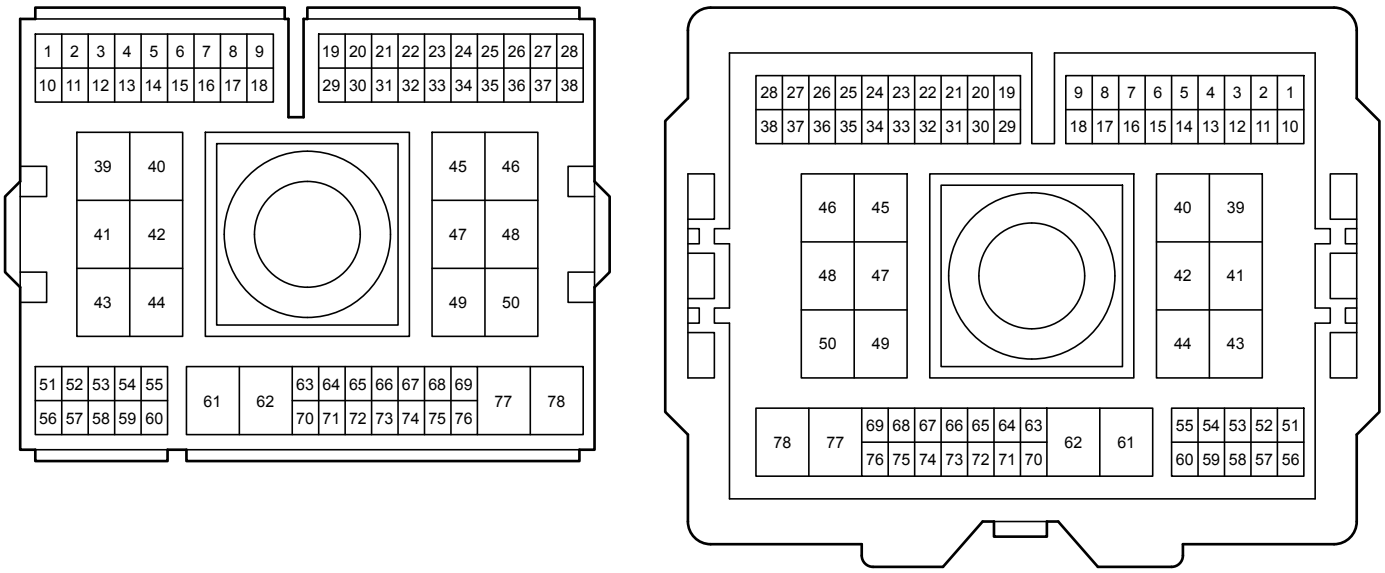


EL5
White

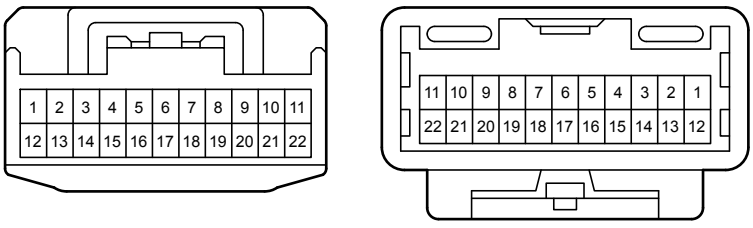

RE1
White

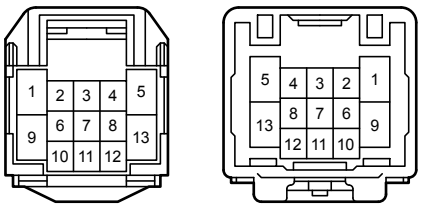

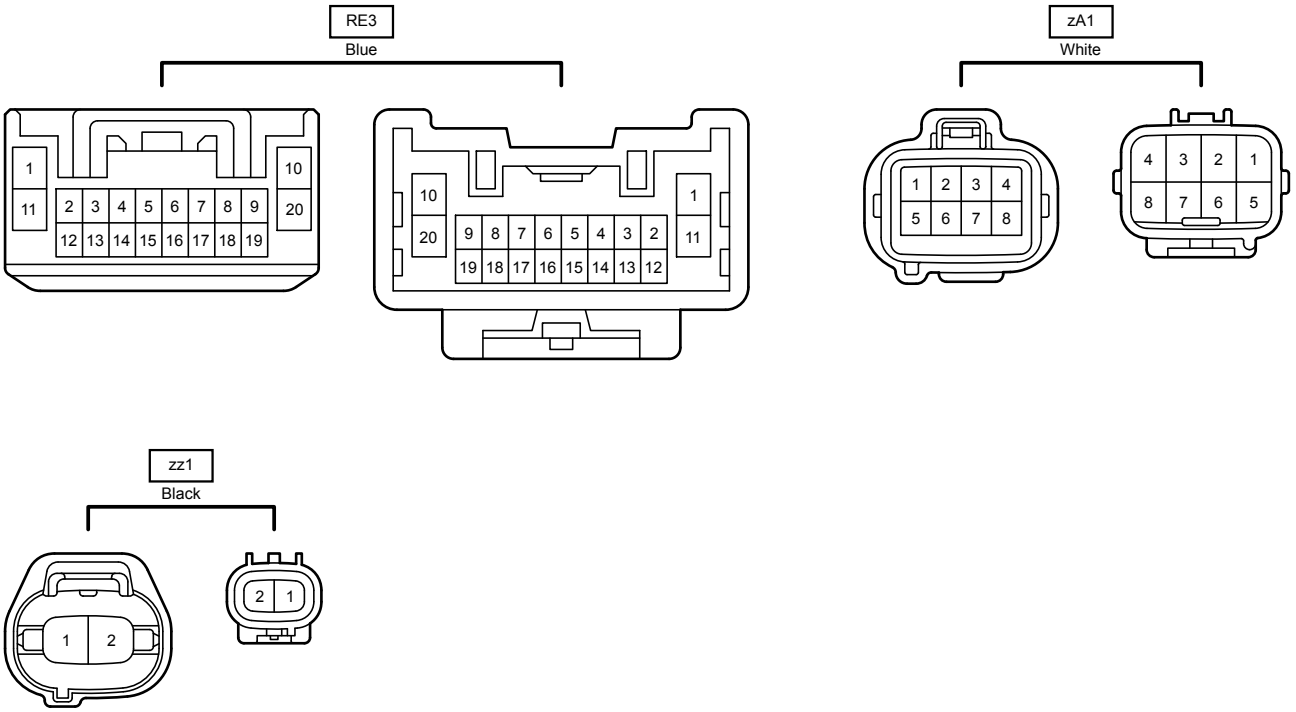
RE3
Blue
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11
zA1
White
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5
zz1
Black
1 2
2 1