
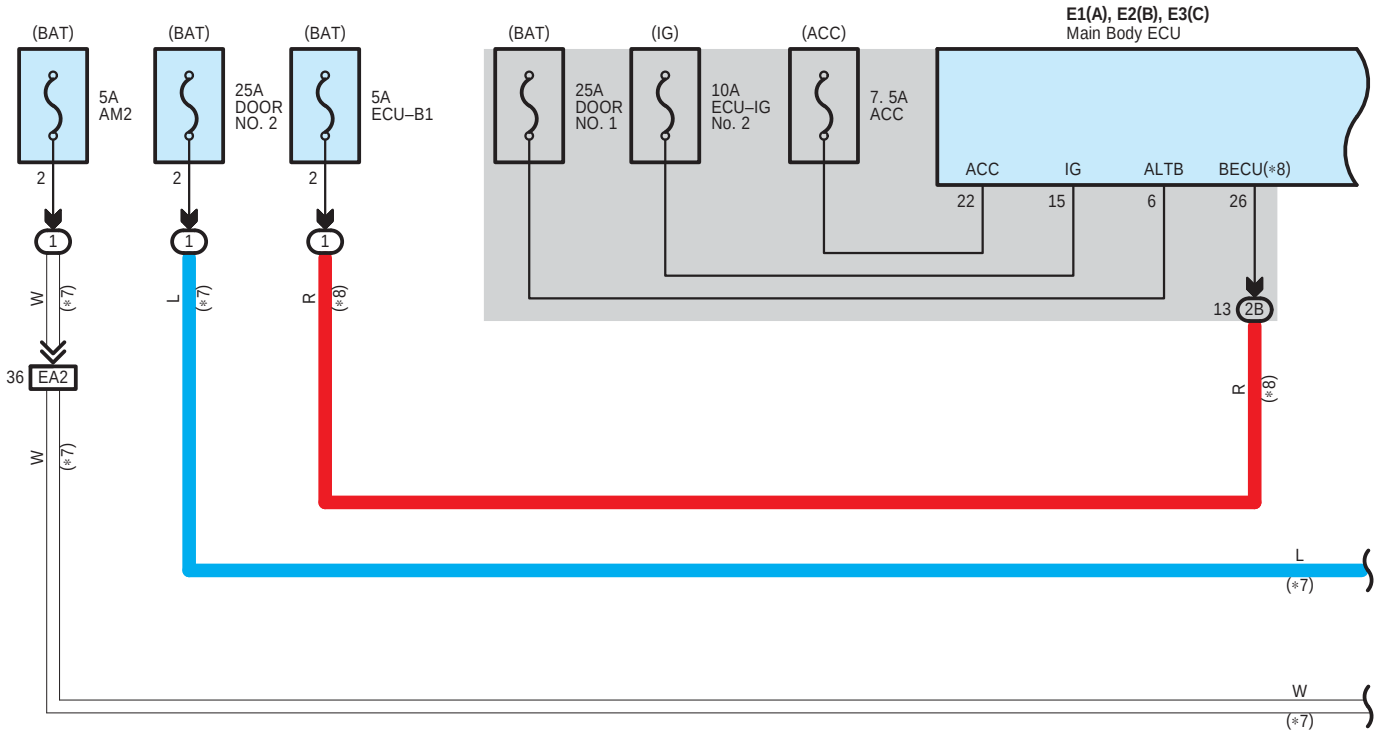
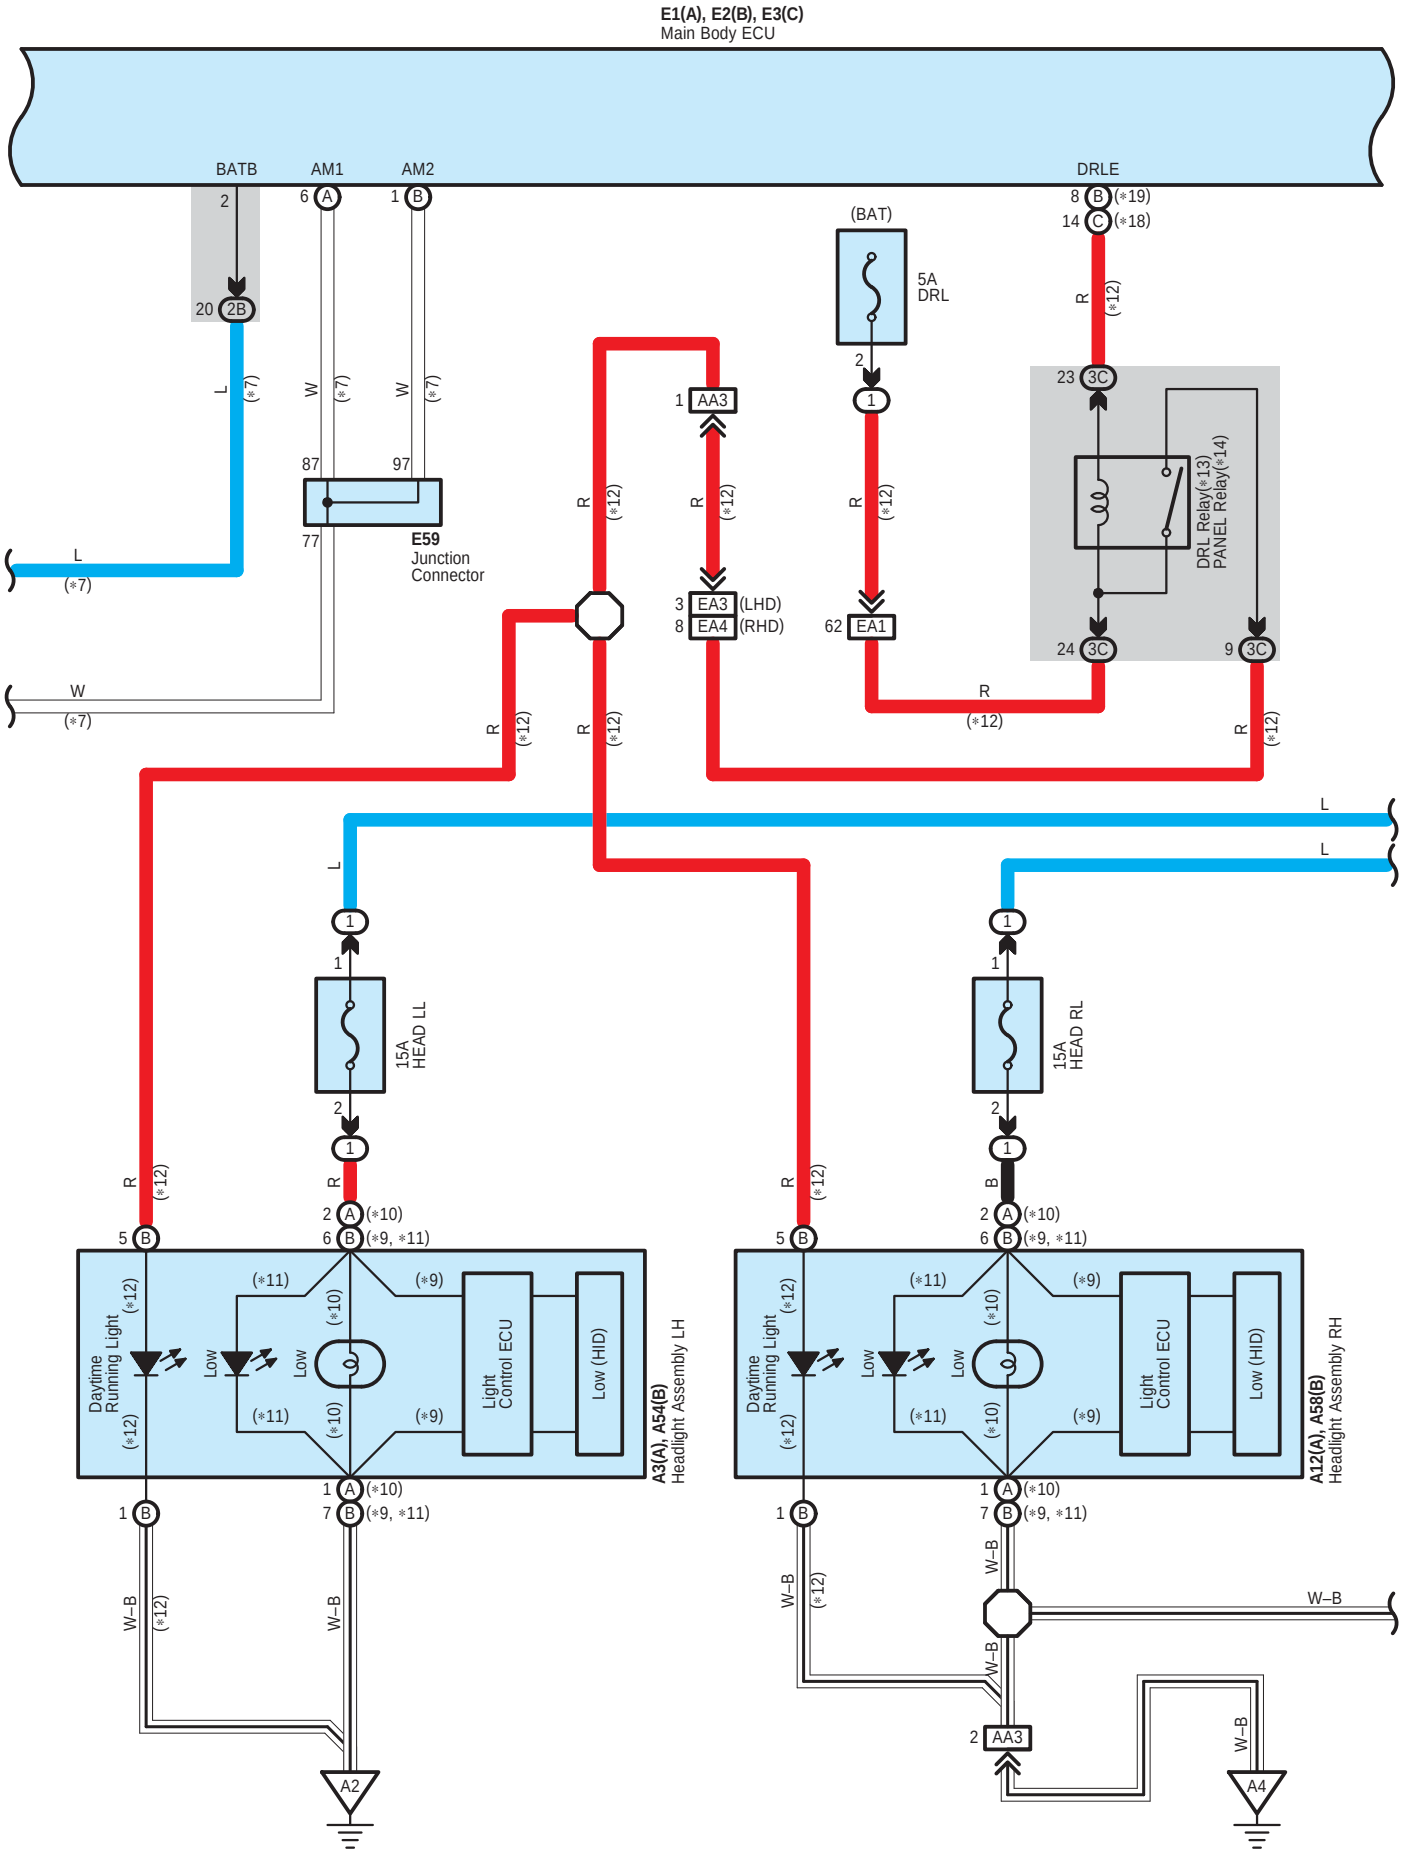
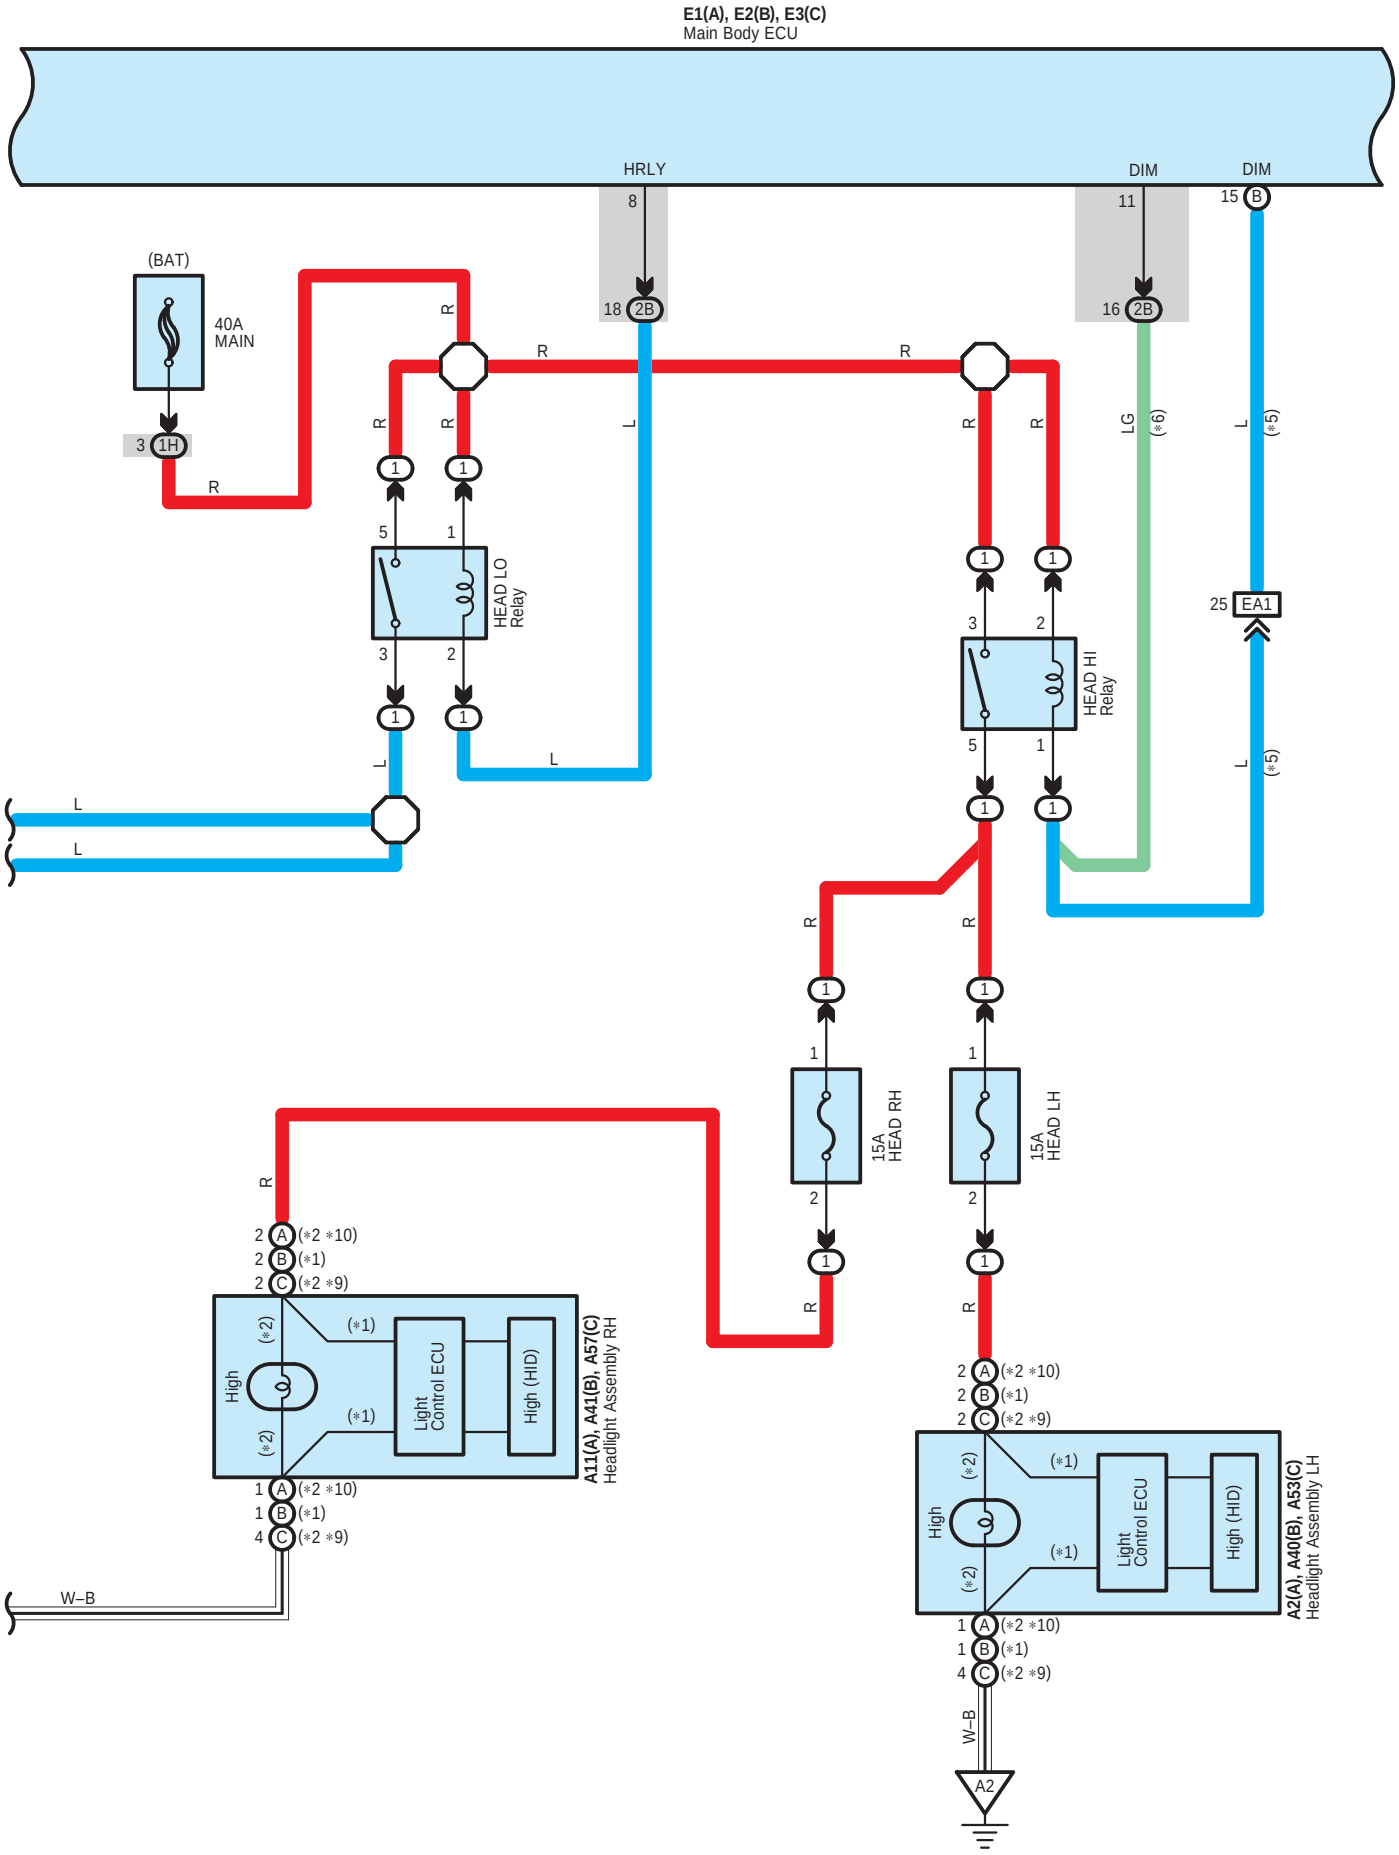
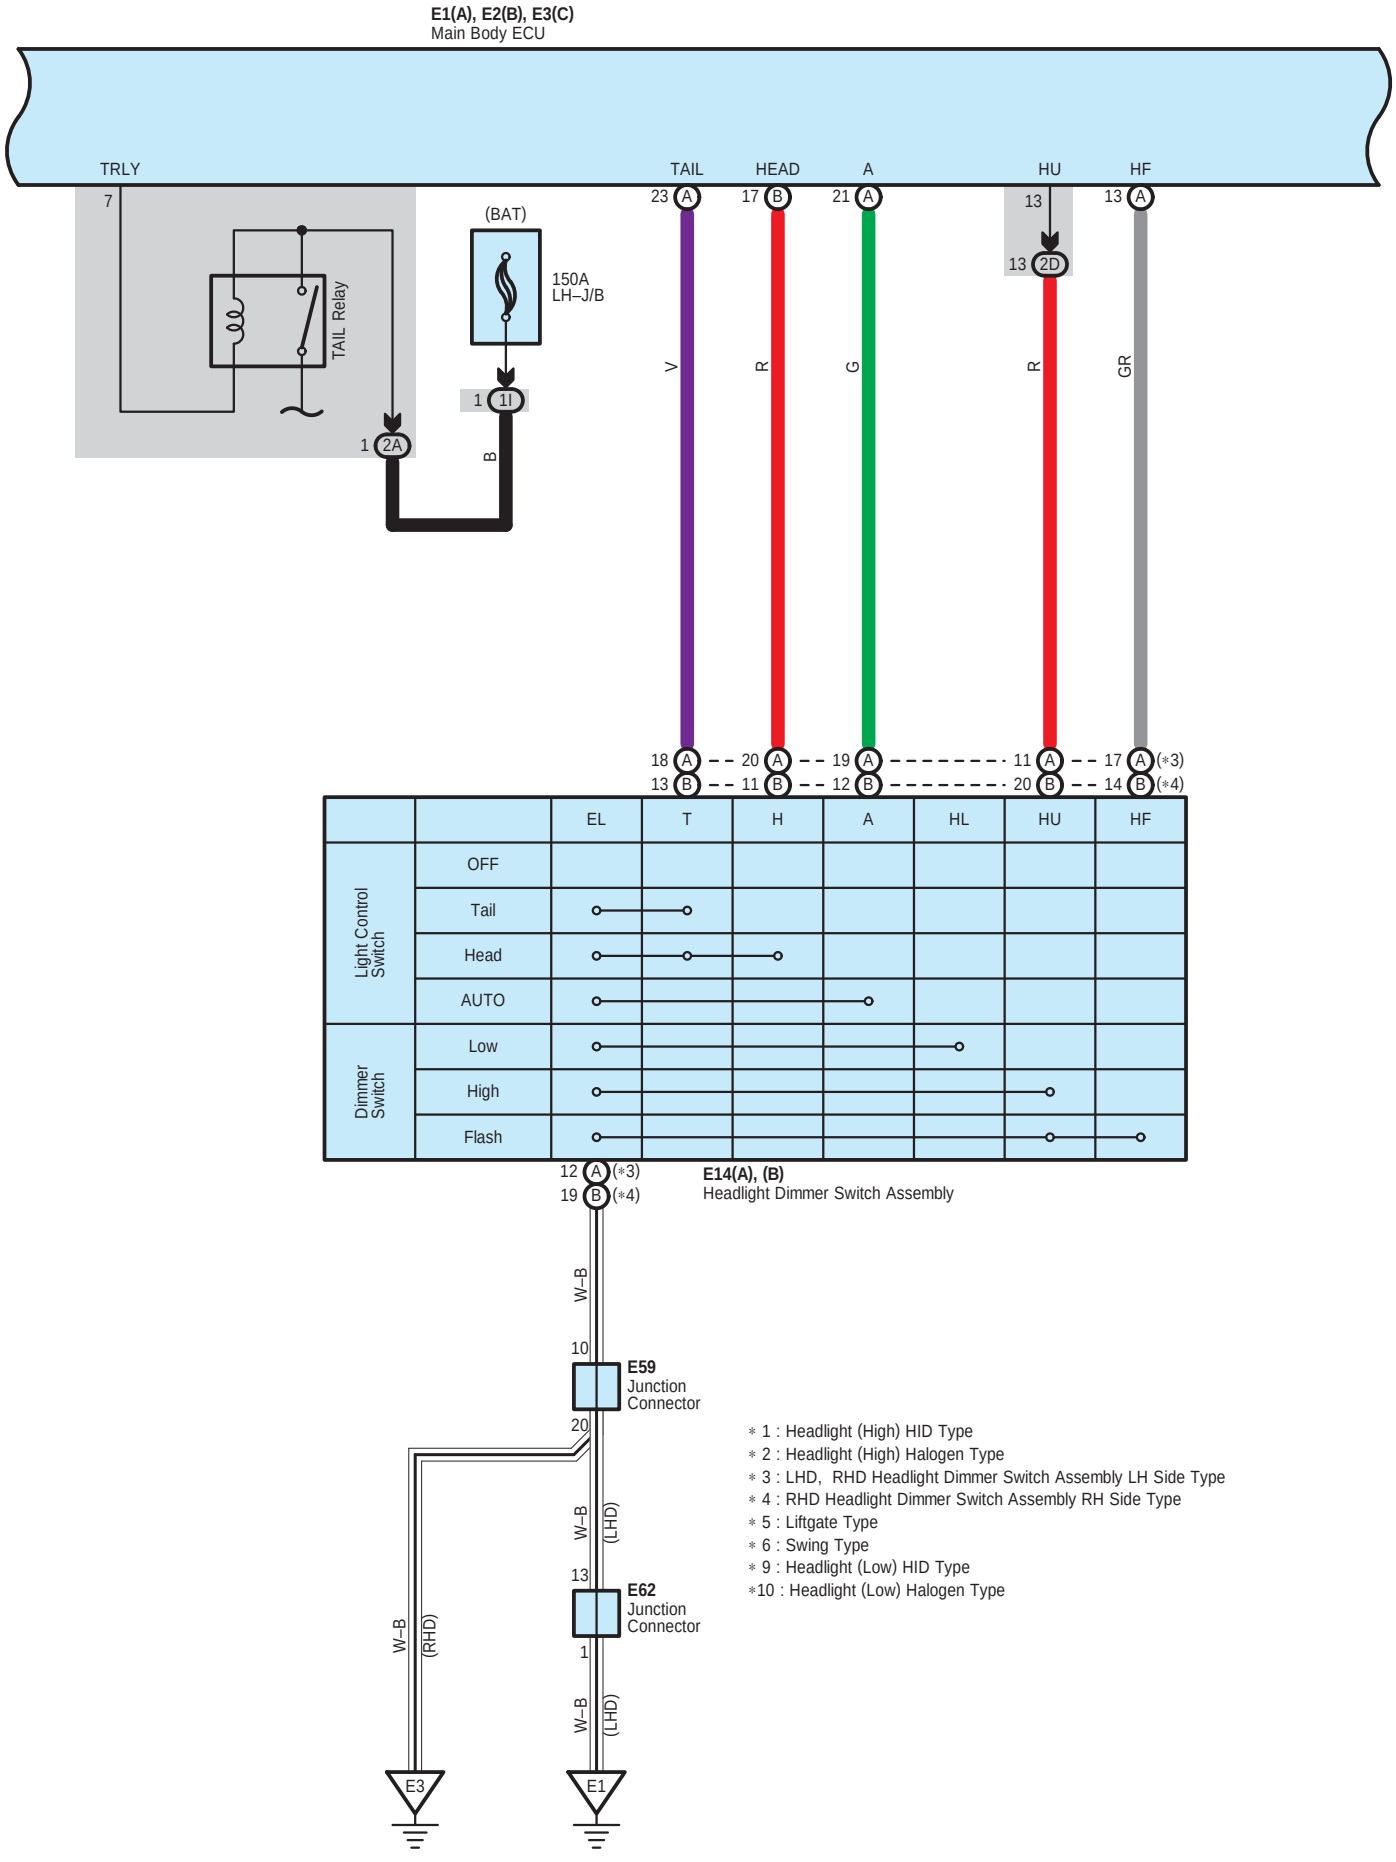


∗ 7 : w/ Entry & Start System
∗ 8 : w/o Entry & Start System
∗ 9 : Headlight (Low) HID Type
∗10 : Headlight (Low) Halogen Type
∗11 : Headlight (Low) LED Type
∗12 : w/ Daytime Running Light
∗13 : w/ Heated Windshield Defroster
∗14 : w/o Heated Windshield Defroster
∗18 : G. C. C.
∗19 : Except G. C. C.



E1(A), E2(B), E3(C)
Main Body ECU
BATB
AM1
AM2
DRLE
(BAT)
5A
DRL
15A
HEAD LL
15A
HEAD RL
E59
Junction
Connector
DRL Relay(*13)
PANEL Relay(*14)
Daytime
Running Light
Low
Low
Light
Control ECU
Low (HID)
A3(A), A54(B)
Headlight Assembly LH
A12(A), A58(B)
Headlight Assembly RH
A2
A4



E1(A), E2(B), E3(C)
Main Body ECU
HRLY
DIM
DIM
8
18 2B
11
16 2B
15 B
(BAT)
40A
MAIN
3 1H
R
L
LG
(*6)
(*5)
HEAD LO
Relay
HEAD HI
Relay
25 EA1
15A
HEAD RH
15A
HEAD LH
2 A (*2 *10)
2 B (*1)
2 C (*2 *9)
High
(*2)
(*1)
Light
Control ECU
High (HID)
A11(A), A41(B), A57(C)
Headlight Assembly RH
A2(A), A40(B), A53(C)
Headlight Assembly LH
1 A (*2 *10)
1 B (*1)
4 C (*2 *9)
W–B
A2


E1(A), E2(B), E3(C)
Main Body ECU
TRLY
7
TAIL Relay
(BAT)
150A
LH–J/B
1 1I
1 2A
B
TAIL
HEAD
A
HU
HF
23 A
17 B
21 A
13
13 2D
13 A
V
R
G
R
GR
18 A
13 B
20 A
11 B
19 A
12 B
11 A
20 B
17 A (*3)
14 B (*4)
EL
T
H
A
HL
HU
HF
Light Control Switch
OFF
Tail
Head
AUTO
Dimmer Switch
Low
High
Flash
12 A (*3)
19 B (*4)
E14(A), (B)
Headlight Dimmer Switch Assembly
W–B
10
E59
Junction Connector
20
W–B
(LHD)
13
E62
Junction Connector
1
W–B
(LHD)
W–B
(RHD)
E3
E1
* 1 : Headlight (High) HID Type
* 2 : Headlight (High) Halogen Type
* 3 : LHD, RHD Headlight Dimmer Switch Assembly LH Side Type
* 4 : RHD Headlight Dimmer Switch Assembly RH Side Type
* 5 : Liftgate Type
* 6 : Swing Type
* 9 : Headlight (Low) HID Type
*10 : Headlight (Low) Halogen Type

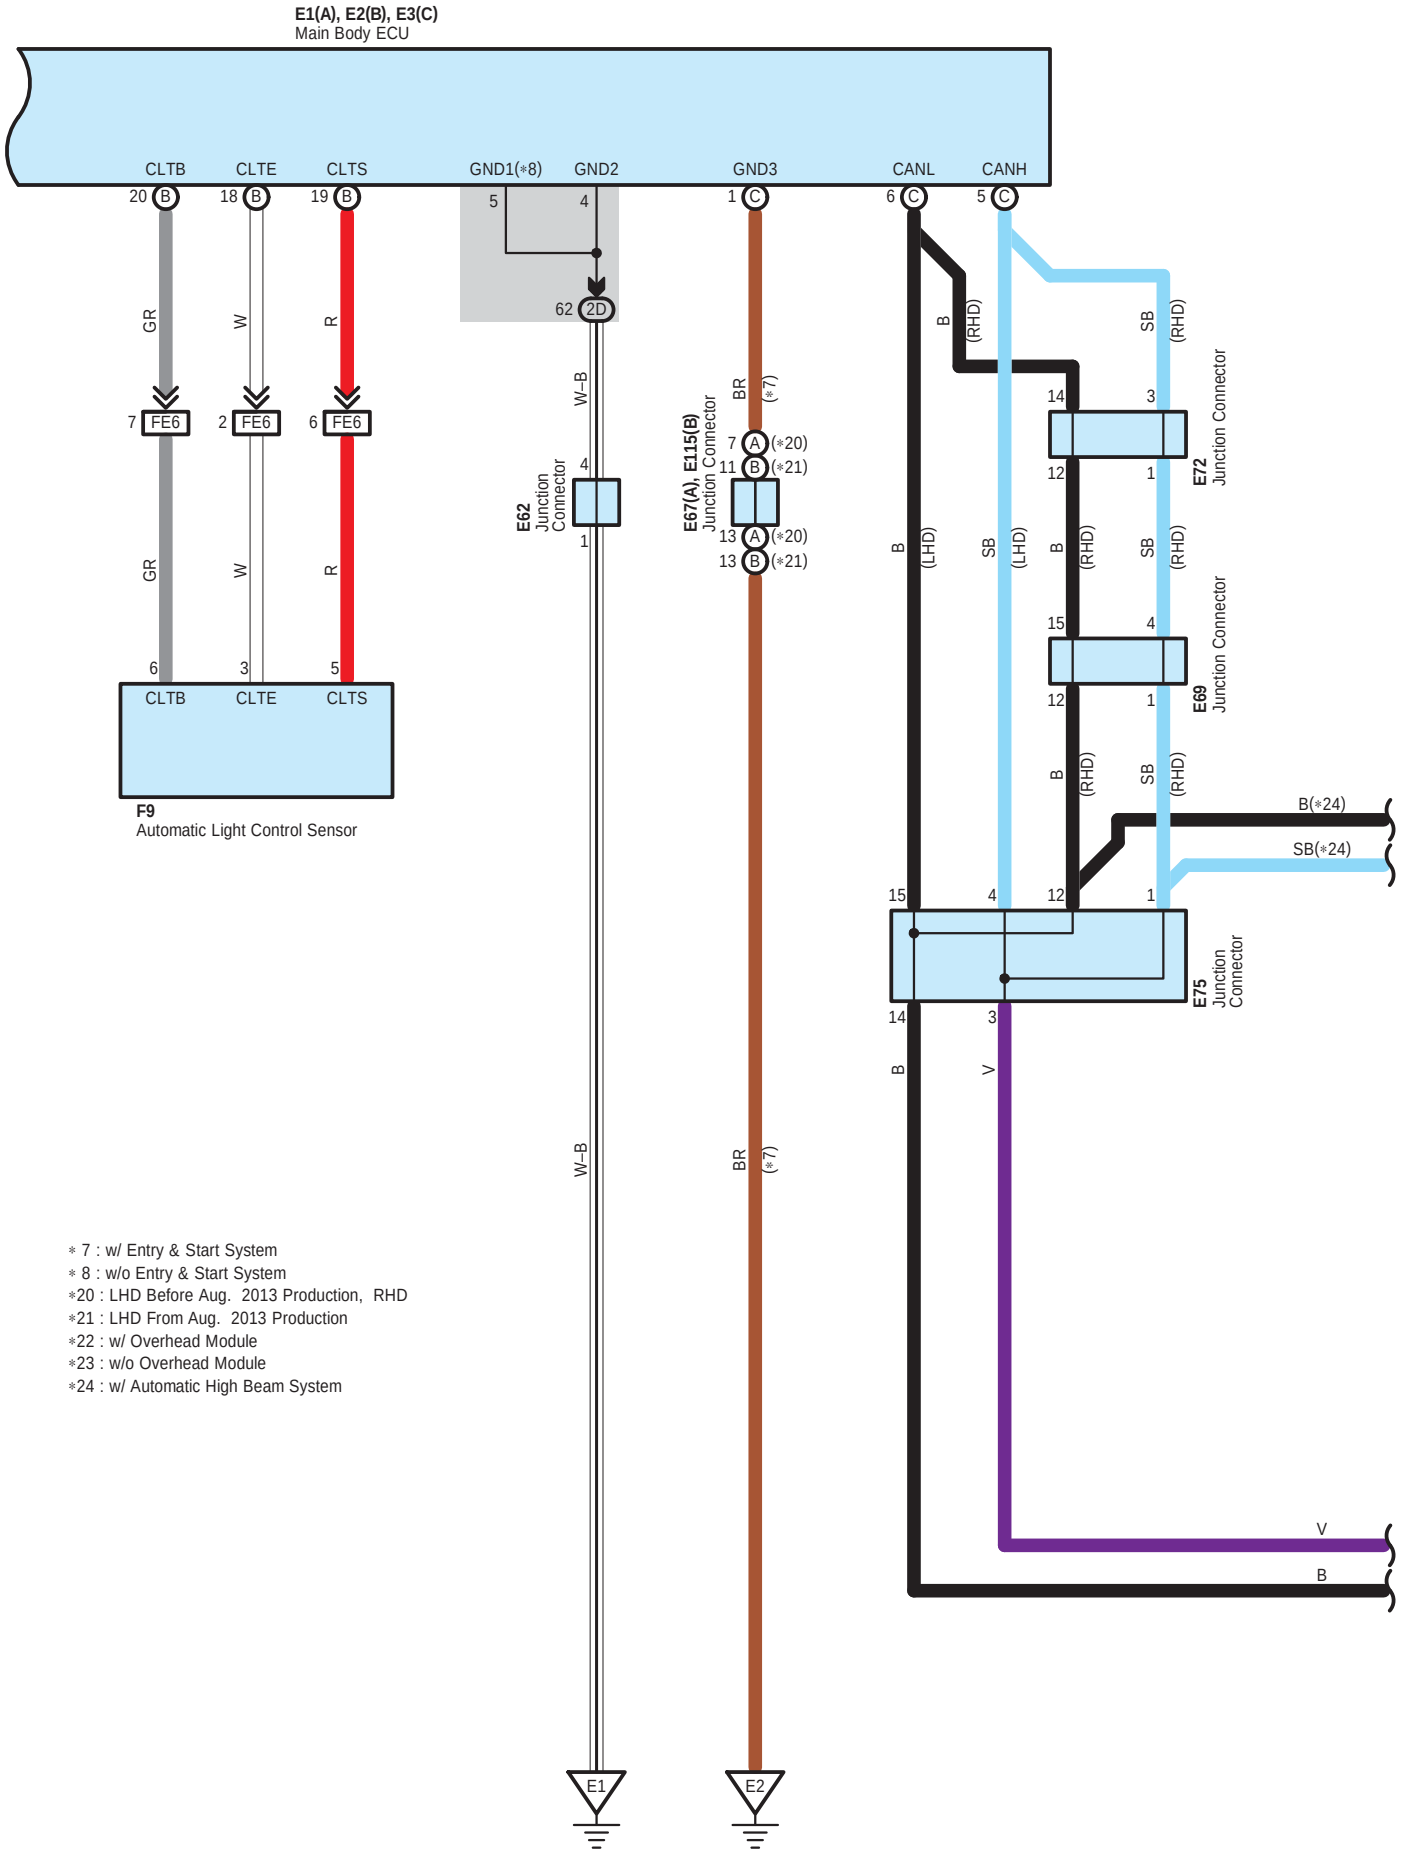


∗ 7 : w/ Entry & Start System
∗ 8 : w/o Entry & Start System
∗20 : LHD Before Aug. 2013 Production, RHD
∗21 : LHD From Aug. 2013 Production
∗22 : w/ Overhead Module
∗23 : w/o Overhead Module
∗24 : w/ Automatic High Beam System

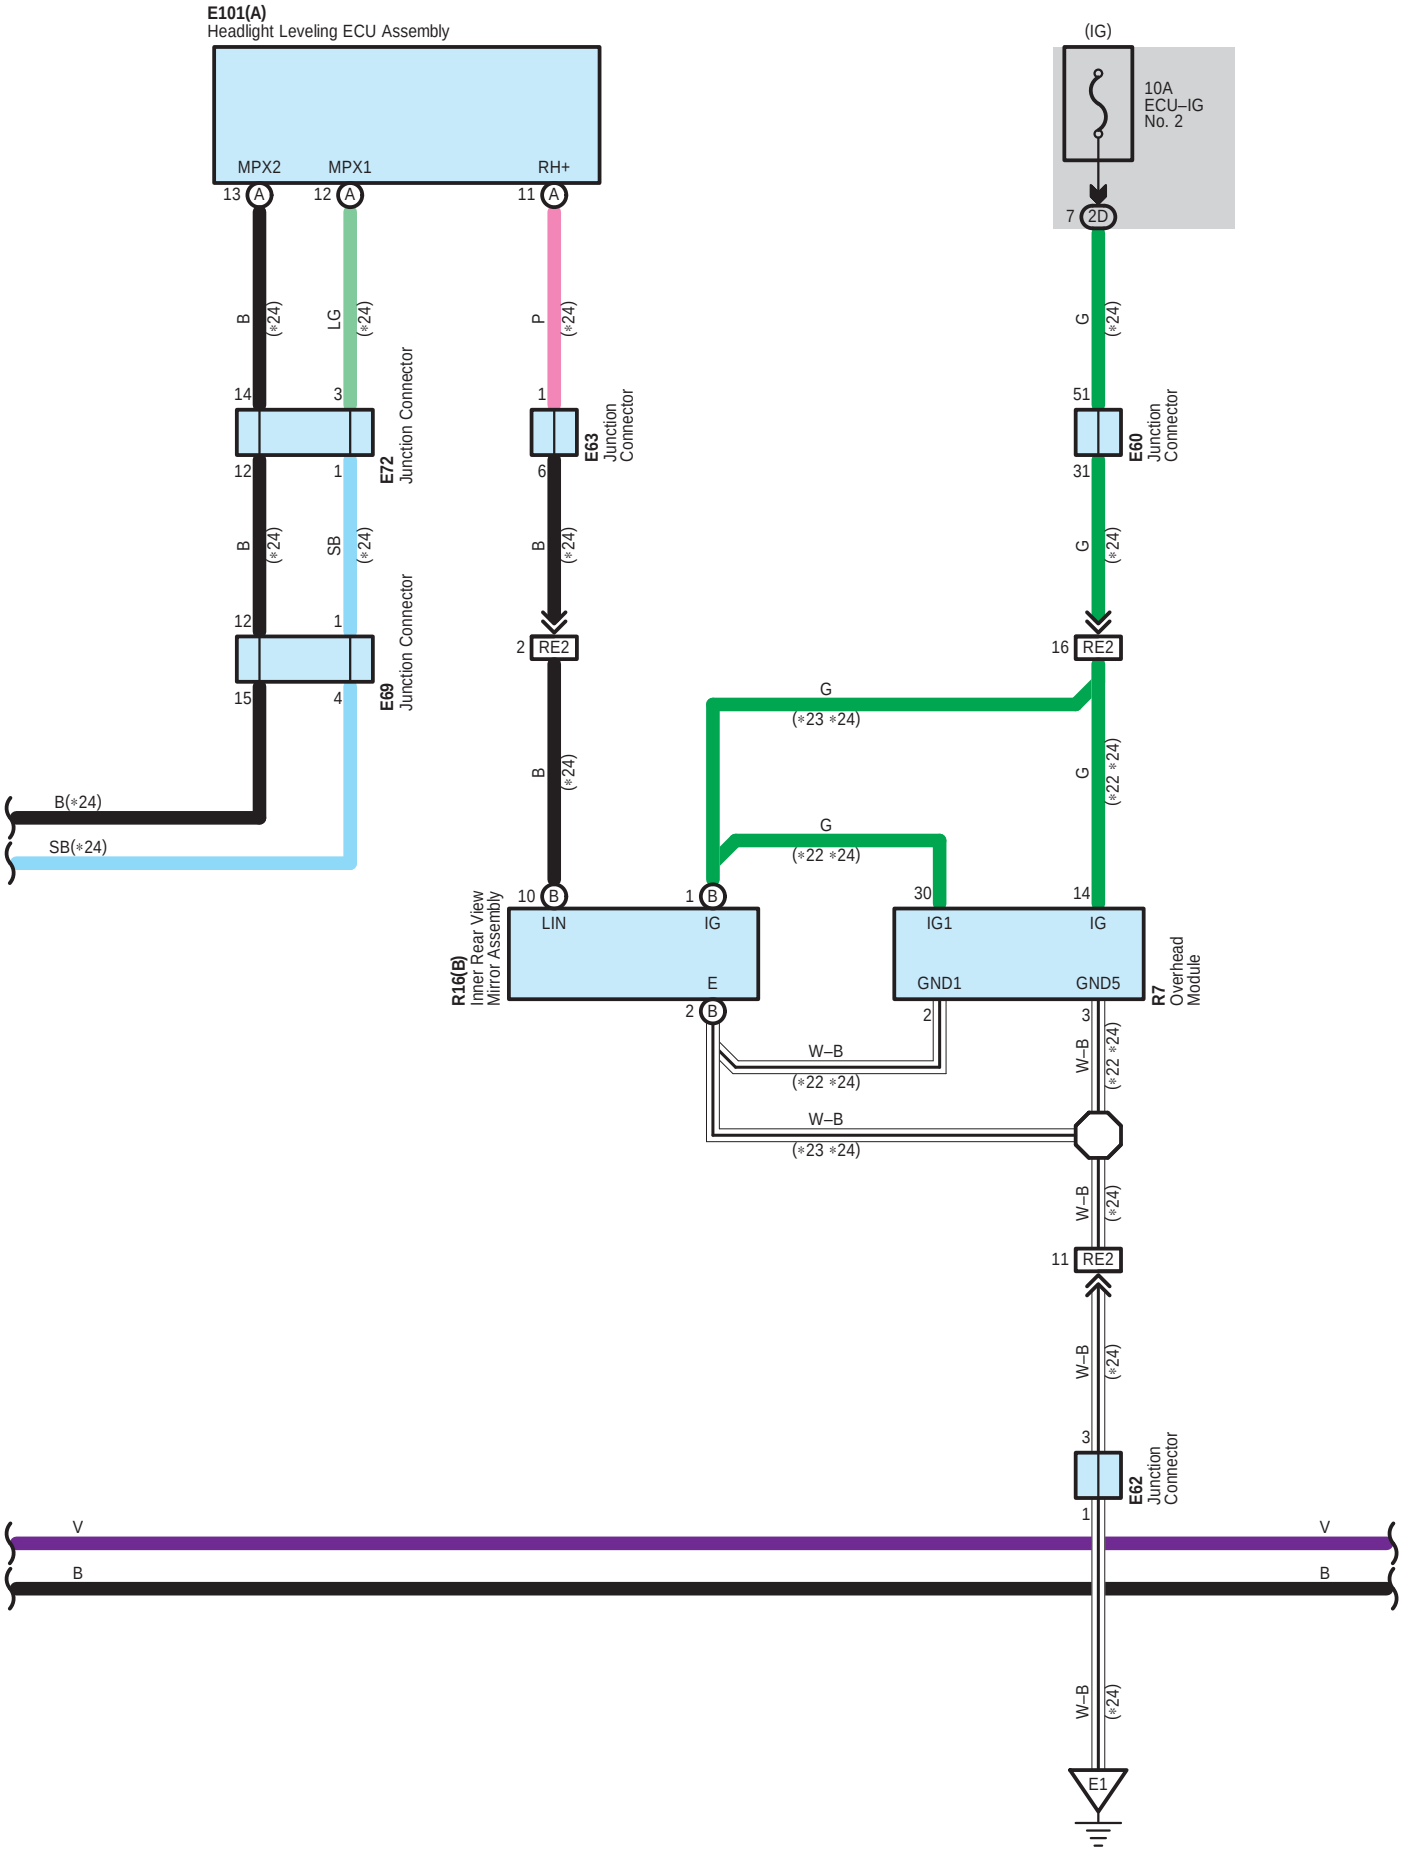
E101(A)
Headlight Leveling ECU Assembly
MPX2
MPX1
RH+
13 A
12 A
11 A
(IG)
10A
ECU–IG
No. 2
7 2D
B (*24)
LG (*24)
P (*24)
G (*24)
14
3
1
51
E72 Junction Connector
E63 Junction Connector
E60 Junction Connector
12
1
6
31
B (*24)
SB (*24)
B (*24)
G (*24)
12
1
2 RE2
16 RE2
E69 Junction Connector
15
4
G (*23 *24)
G (*22 *24)
B(*24)
SB(*24)
B (*24)
G (*22 *24)
10 B
1 B
30
14
R16(B) Inner Rear View Mirror Assembly
LIN
IG
IG1
IG
E
GND1
GND5
R7 Overhead Module
2 B
2
3
W–B (*22 *24)
W–B (*22 *24)
W–B (*23 *24)
W–B (*24)
11 RE2
W–B (*24)
3
E62 Junction Connector
1
V
B
V
B
W–B (*24)
E1

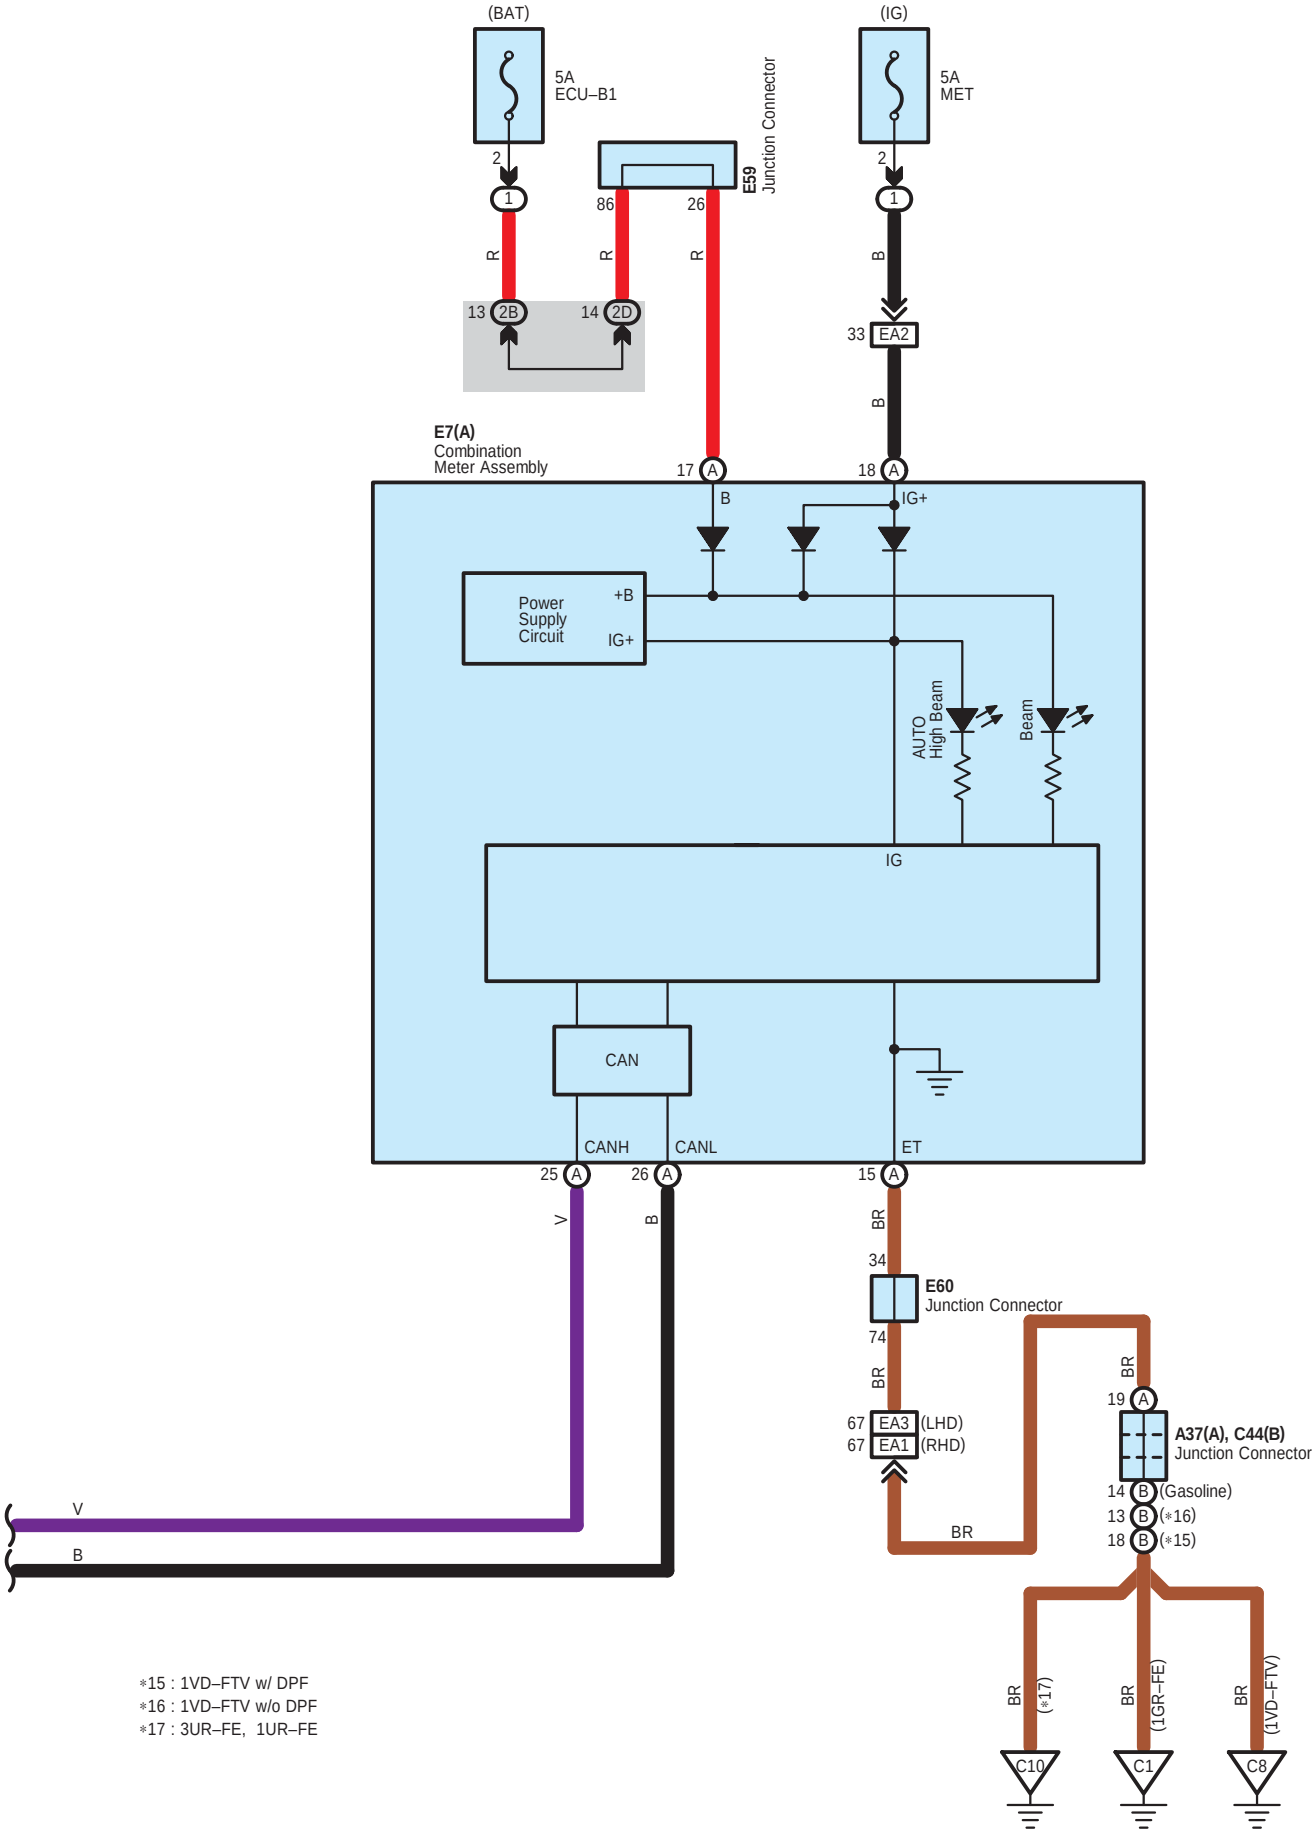


*15 : 1VD–FTV w/ DPF
*16 : 1VD–FTV w/o DPF
*17 : 3UR–FE, 1UR–FE


A 2
Black




A 3
Black

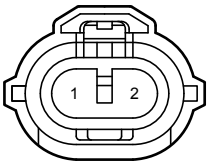


A 11
Black



A 12
Black

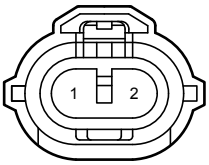

A 37
Blue

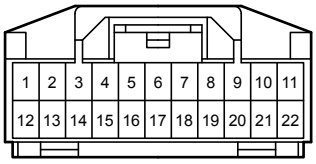

A 40
Gray




A 41
Gray



A 53
Black




A 54
Black

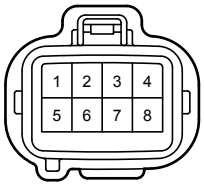


A 57
Black




A 58
Black

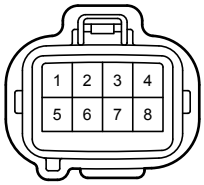


C 44
Blue

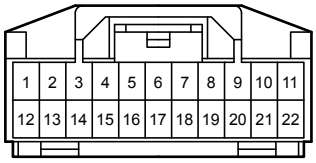


E 1
White

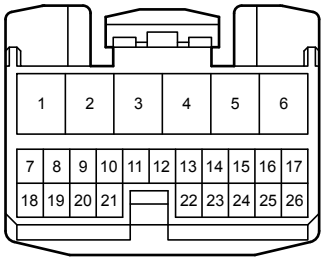


E 2
White

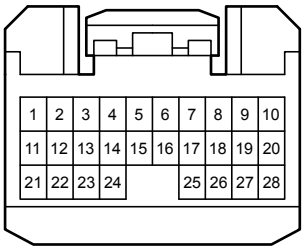


E 3
White

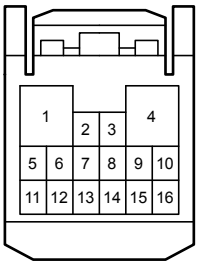


E 7
White

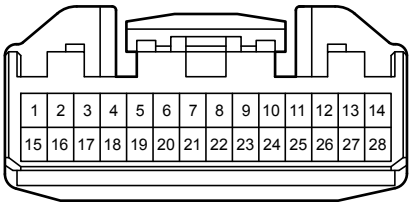


E 14
White

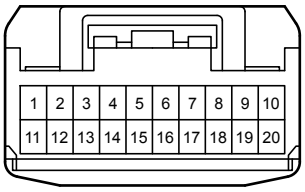


E 59

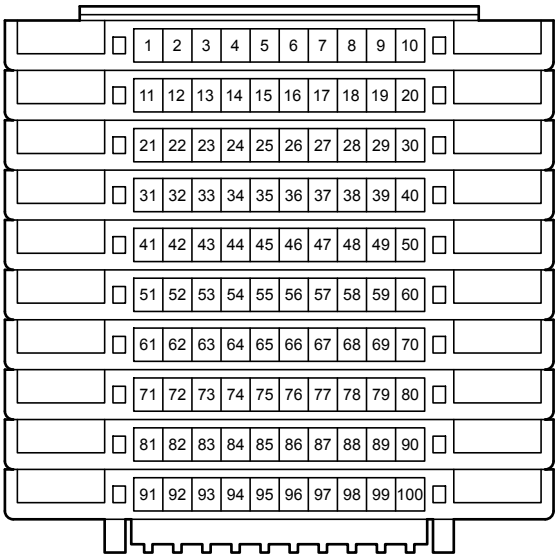


E 60

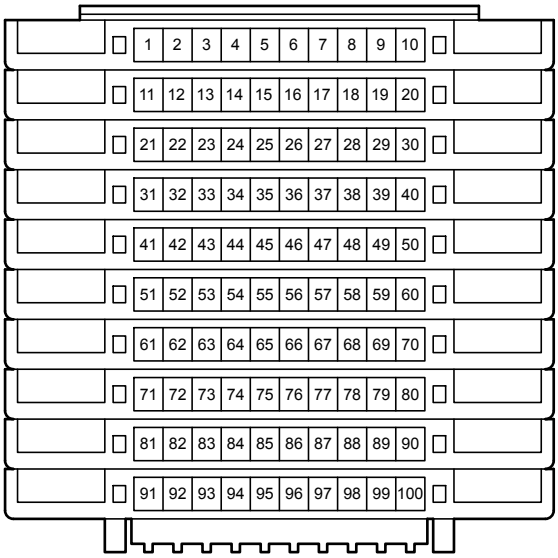


E 62
White

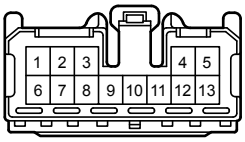


E 63
Gray




E 67
White

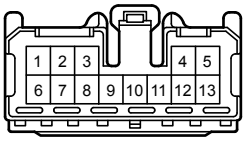


E 69
Gray

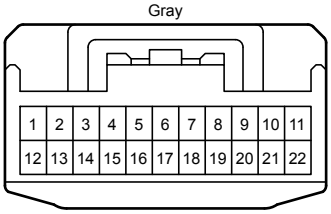


E 72
Gray

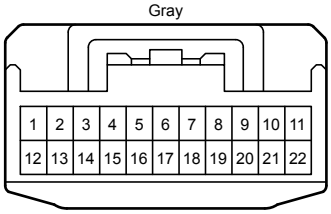


E 75
Gray

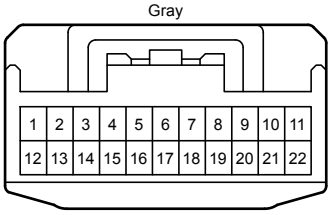


E101
White

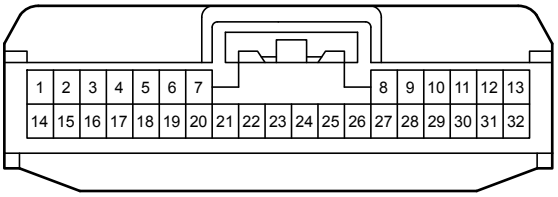


E115
White

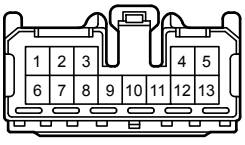


F 9
Black

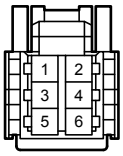


R 7
White

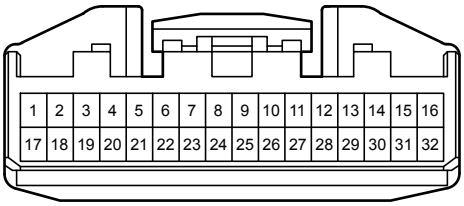


R 16
White

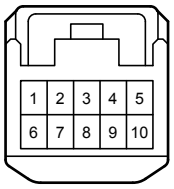


1H
White

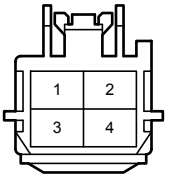


1I




2A
White




2B
White

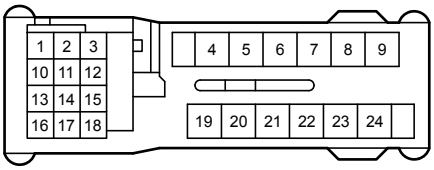


2D
White

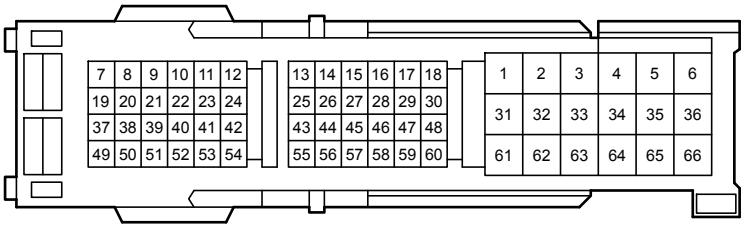

3C
White

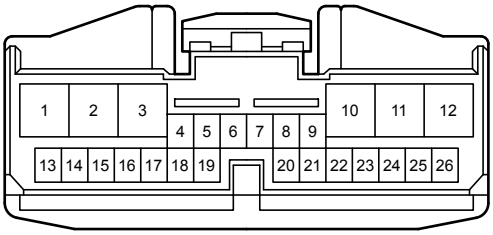


AA3
Gray

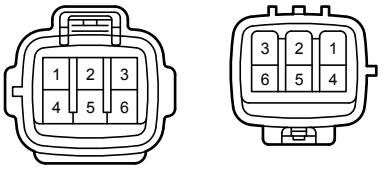

EA1


White

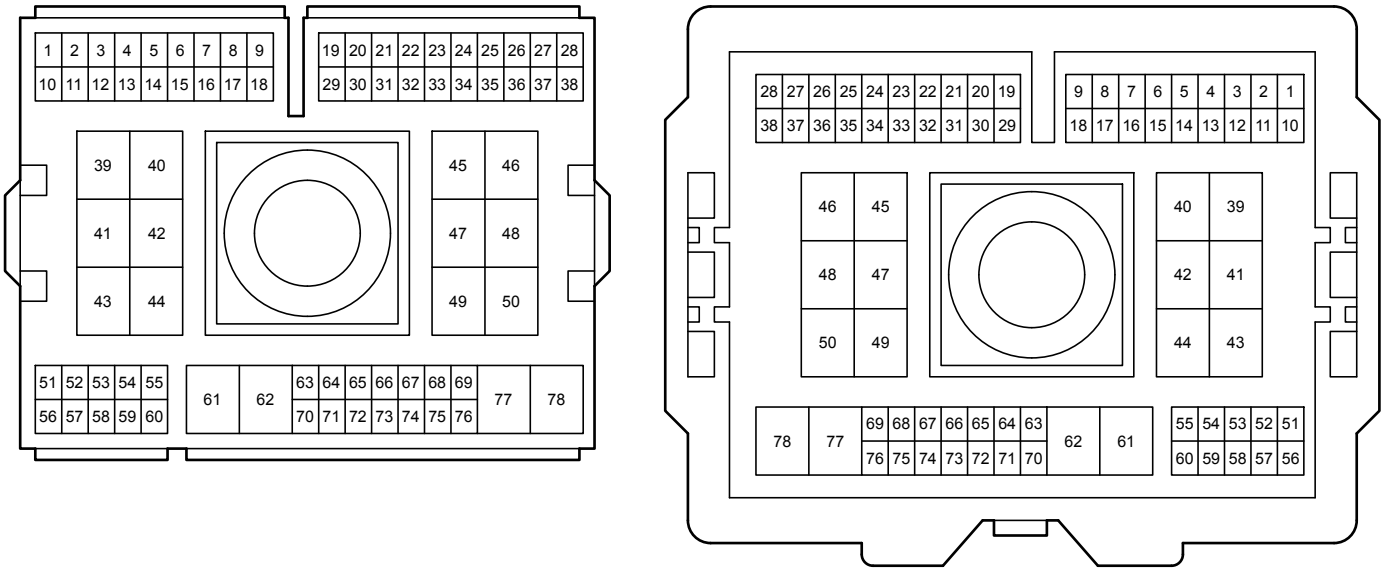


EA2

White


Gray

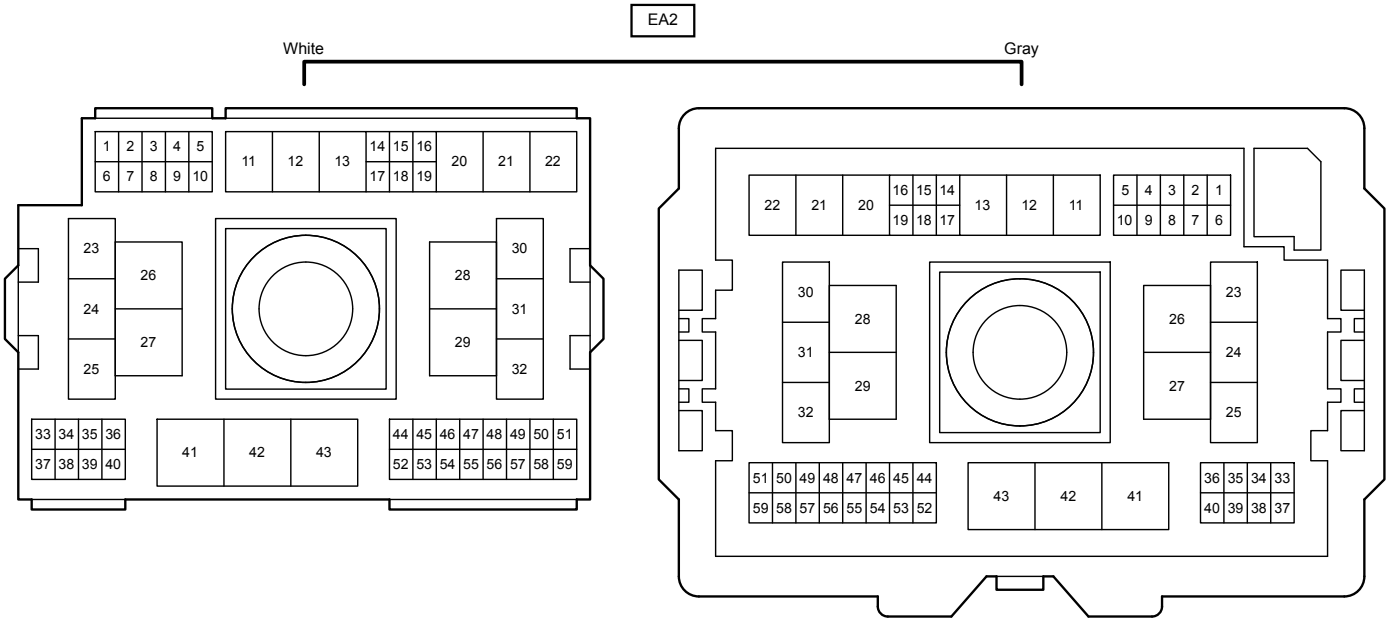


EA3
White

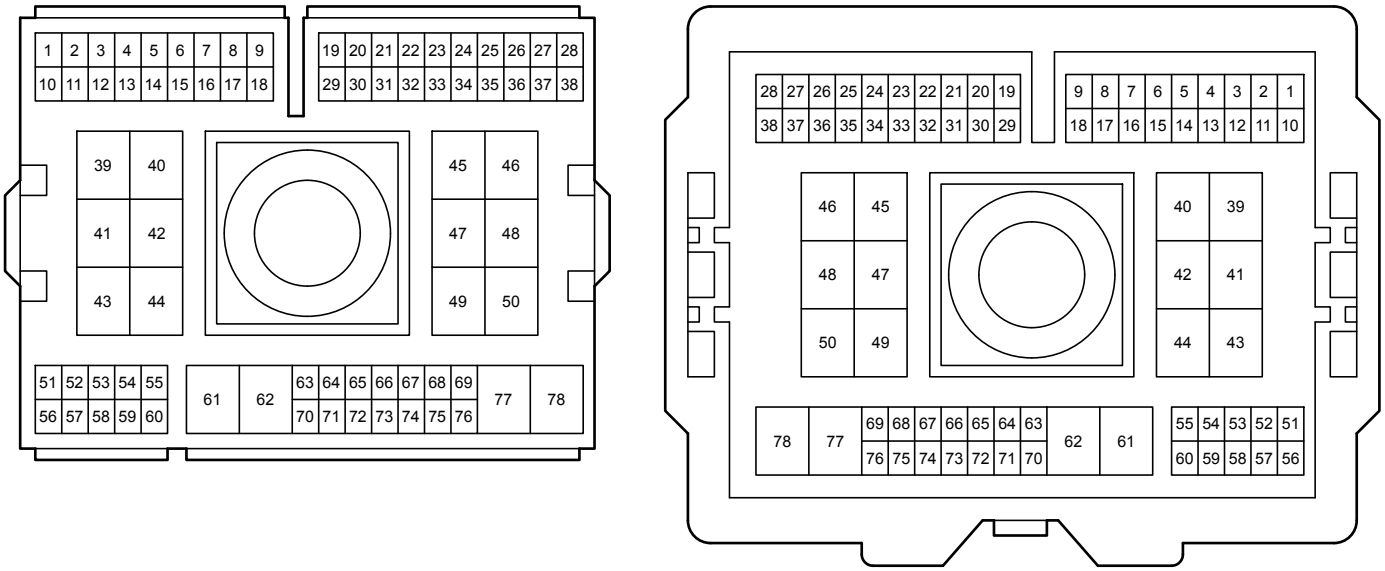

EA4
White

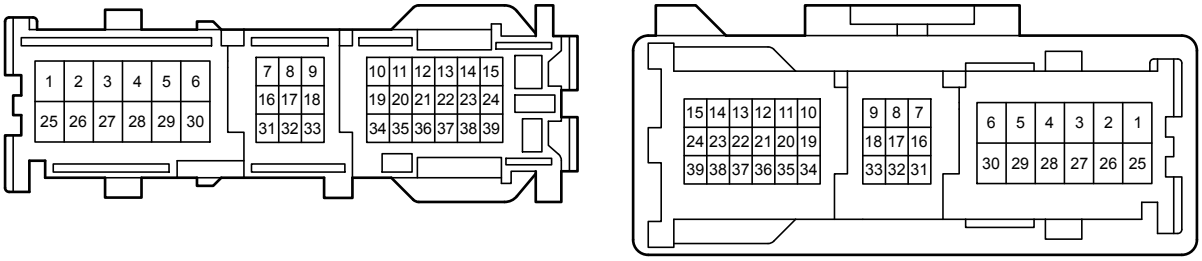

FE6
White

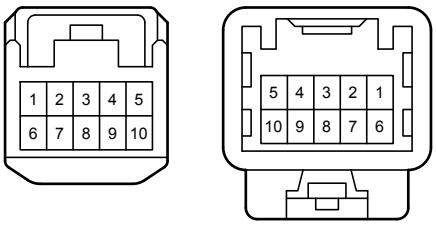

RE2
Blue

