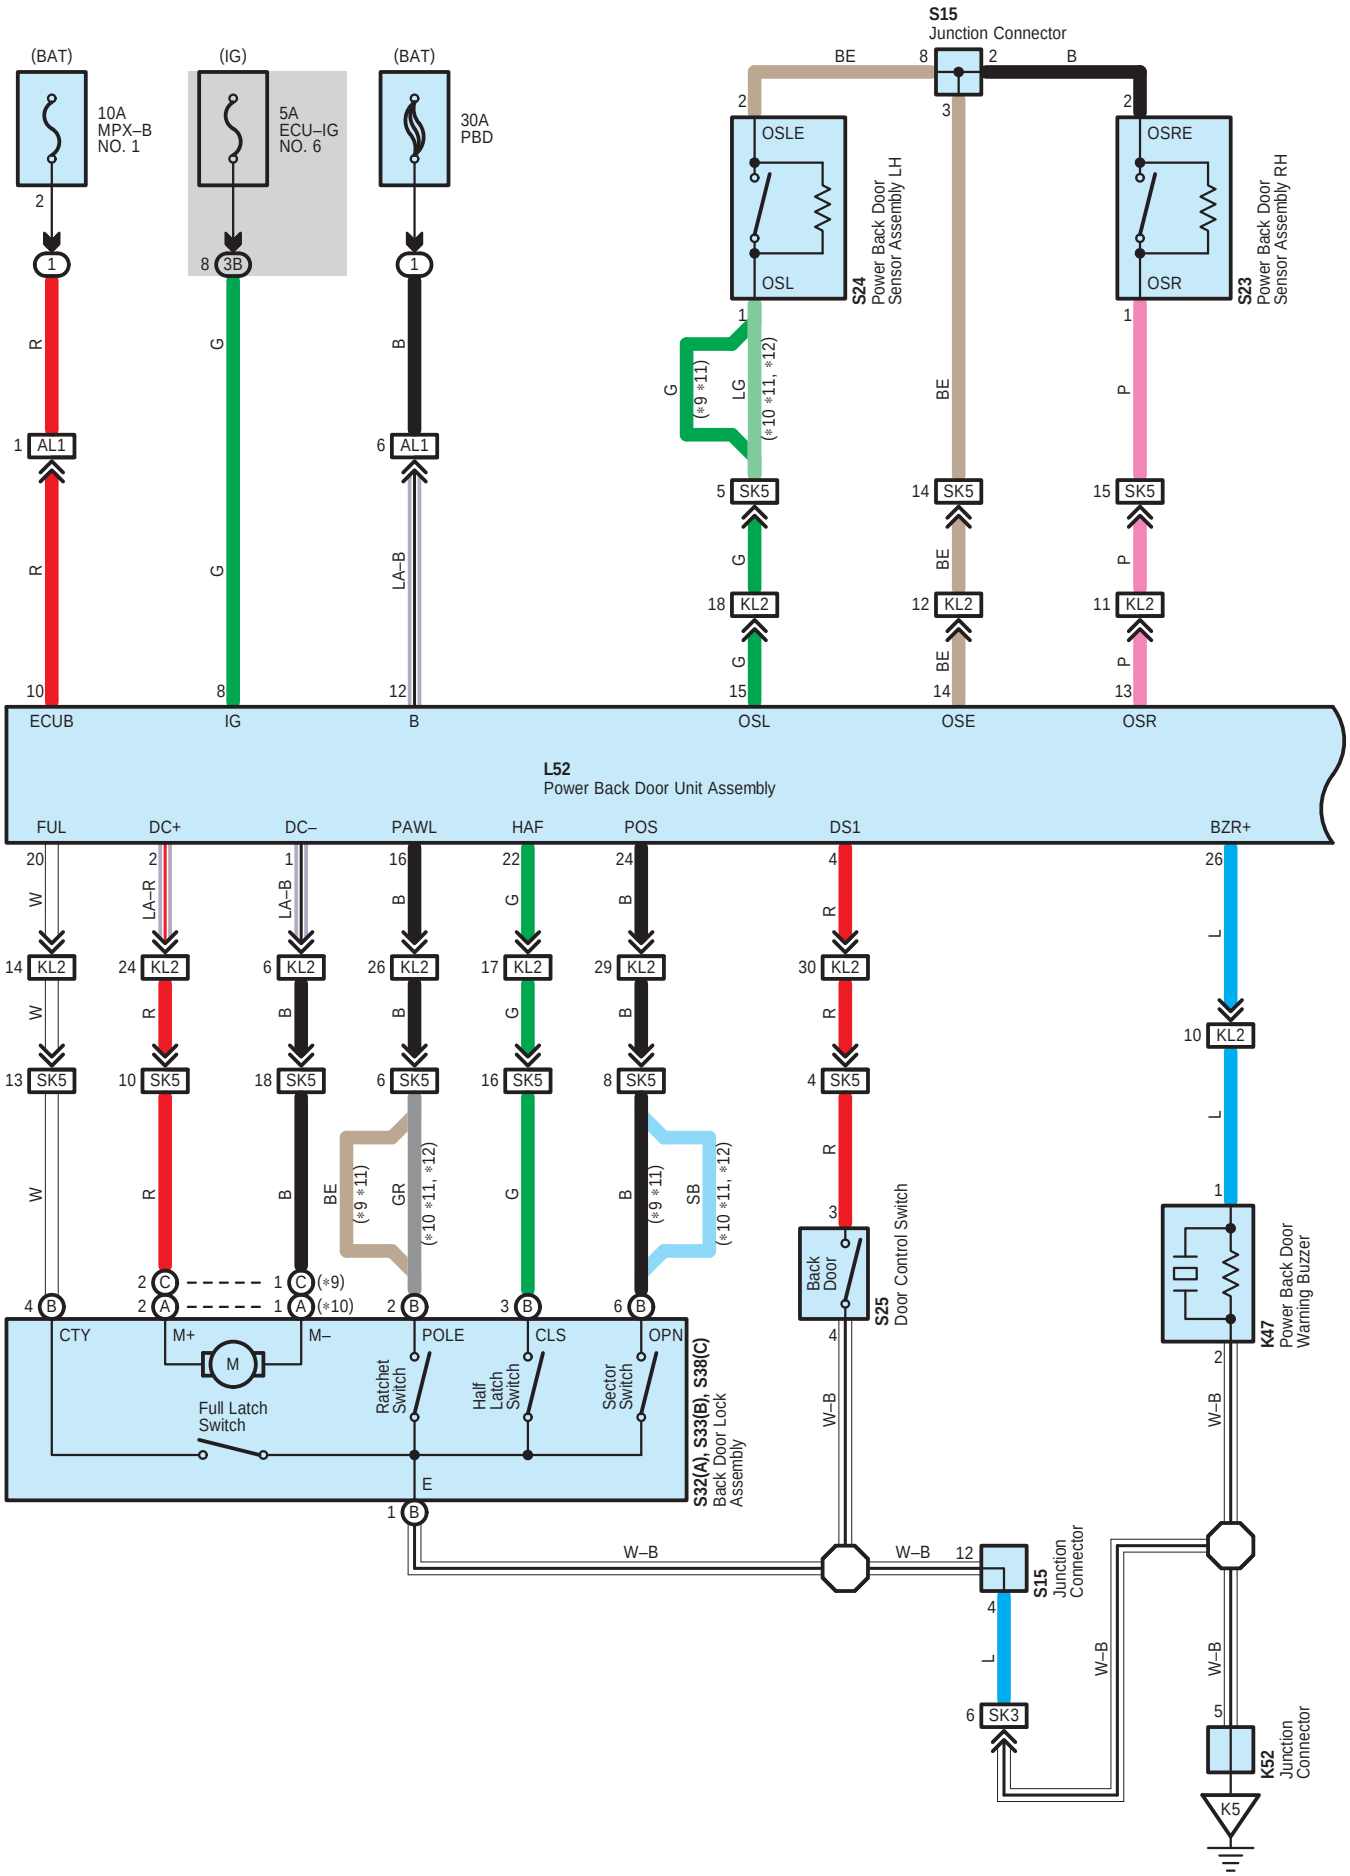
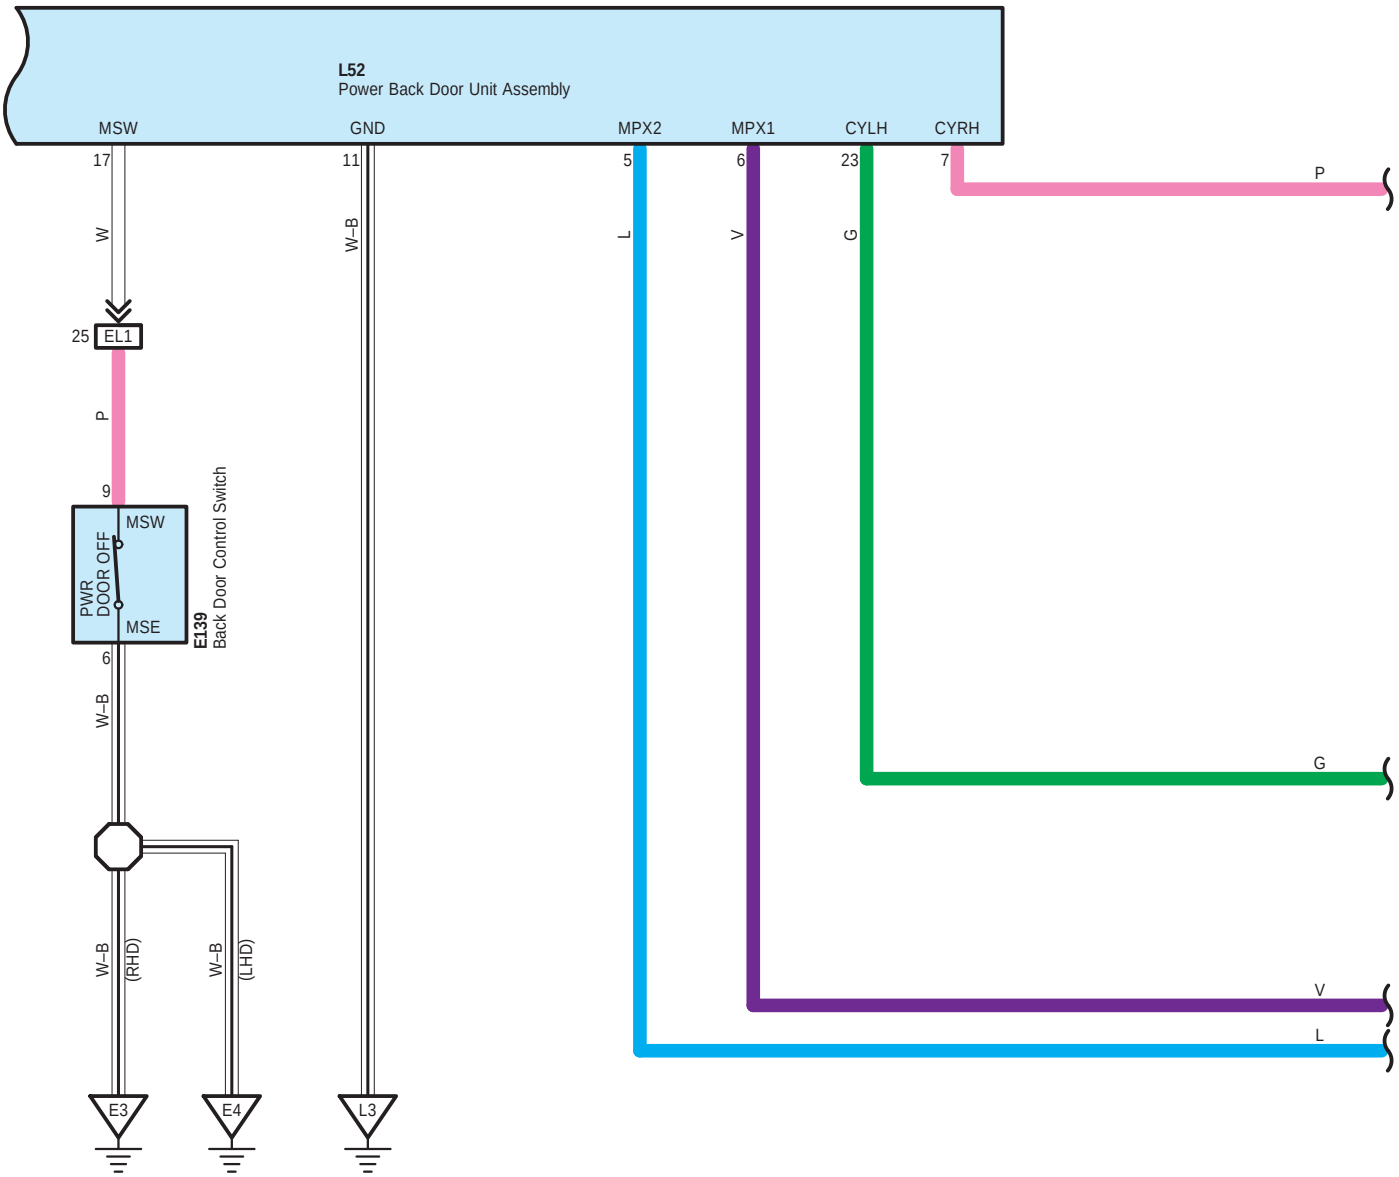
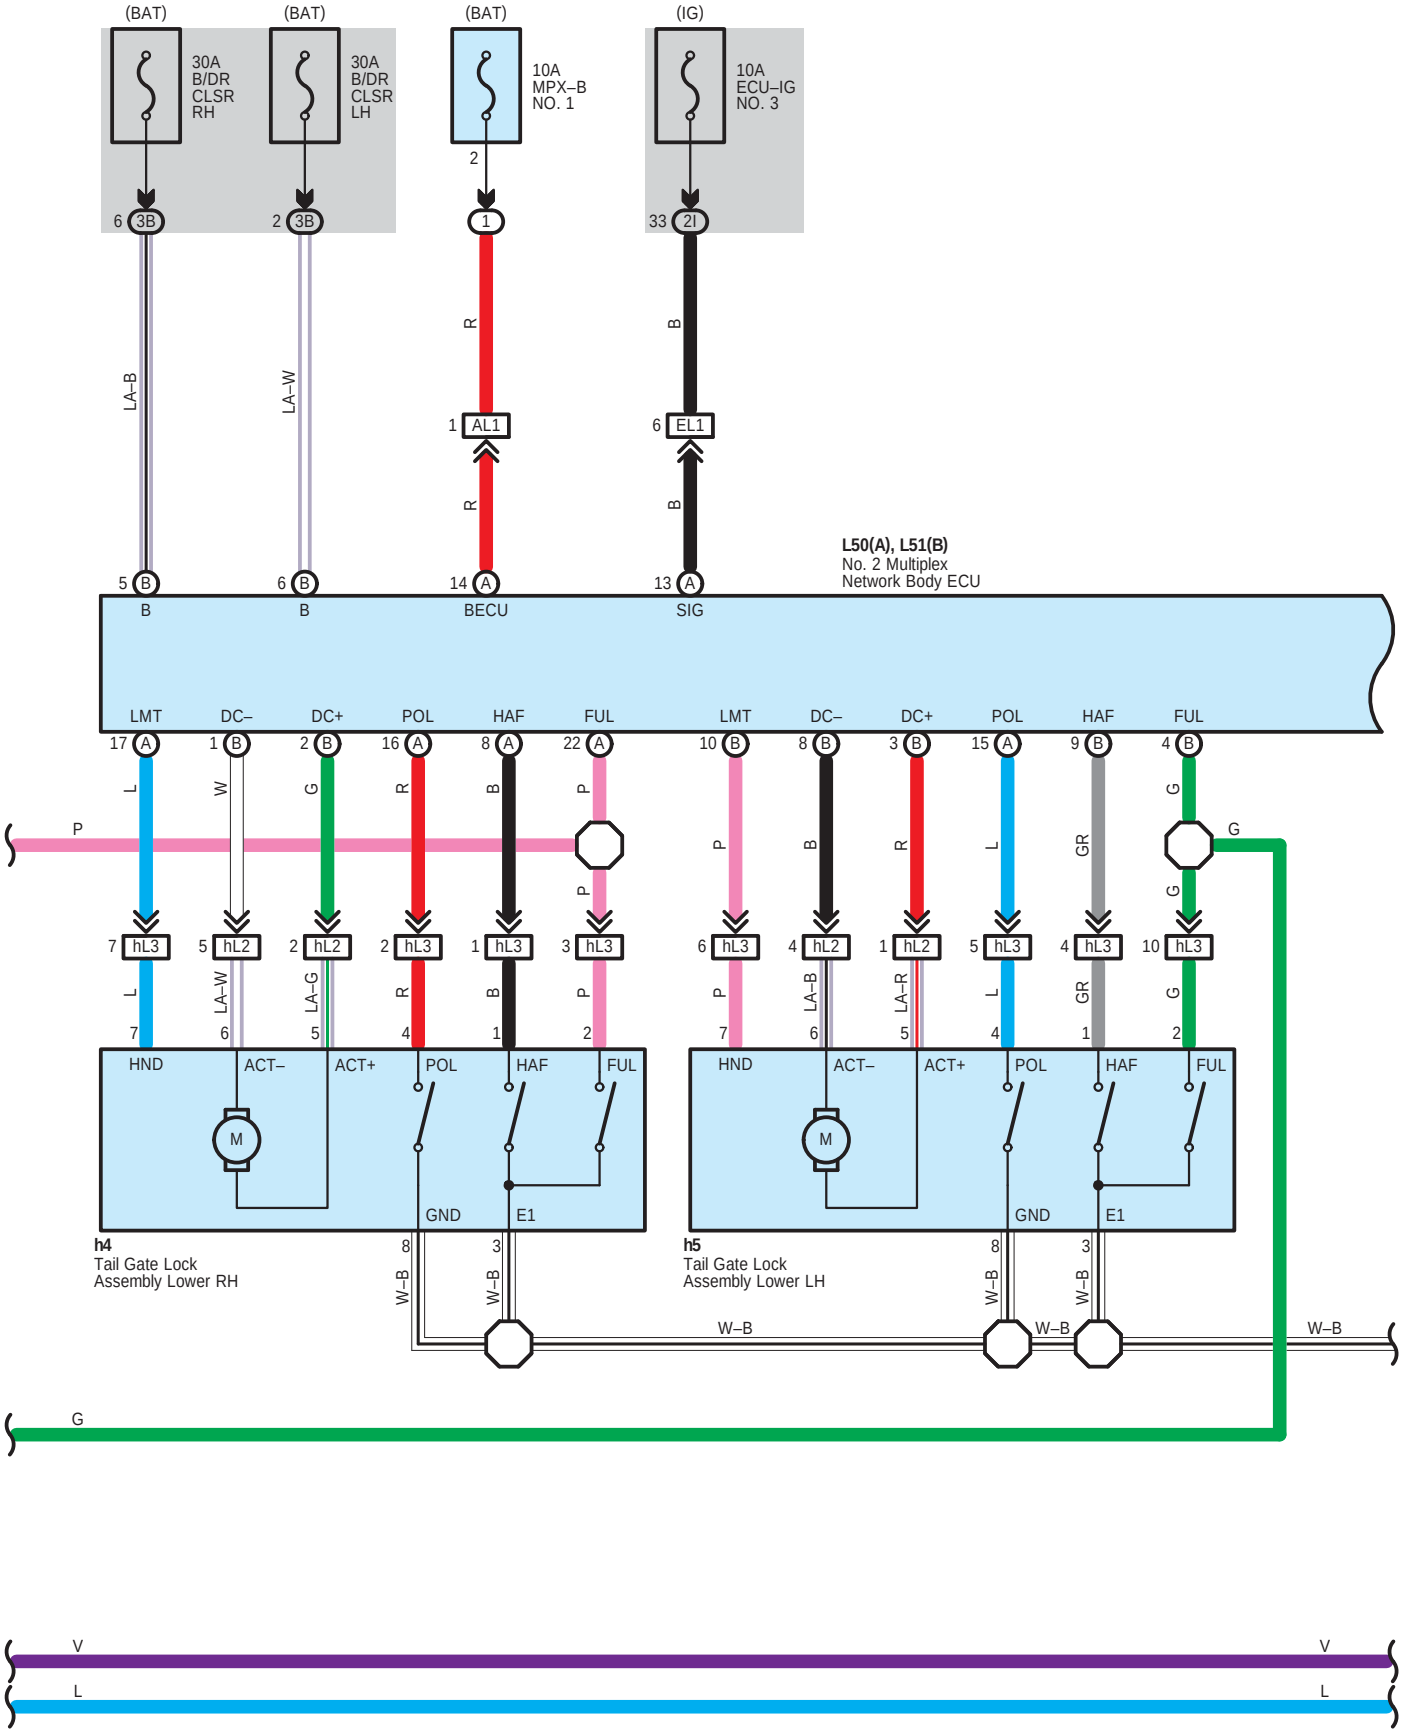
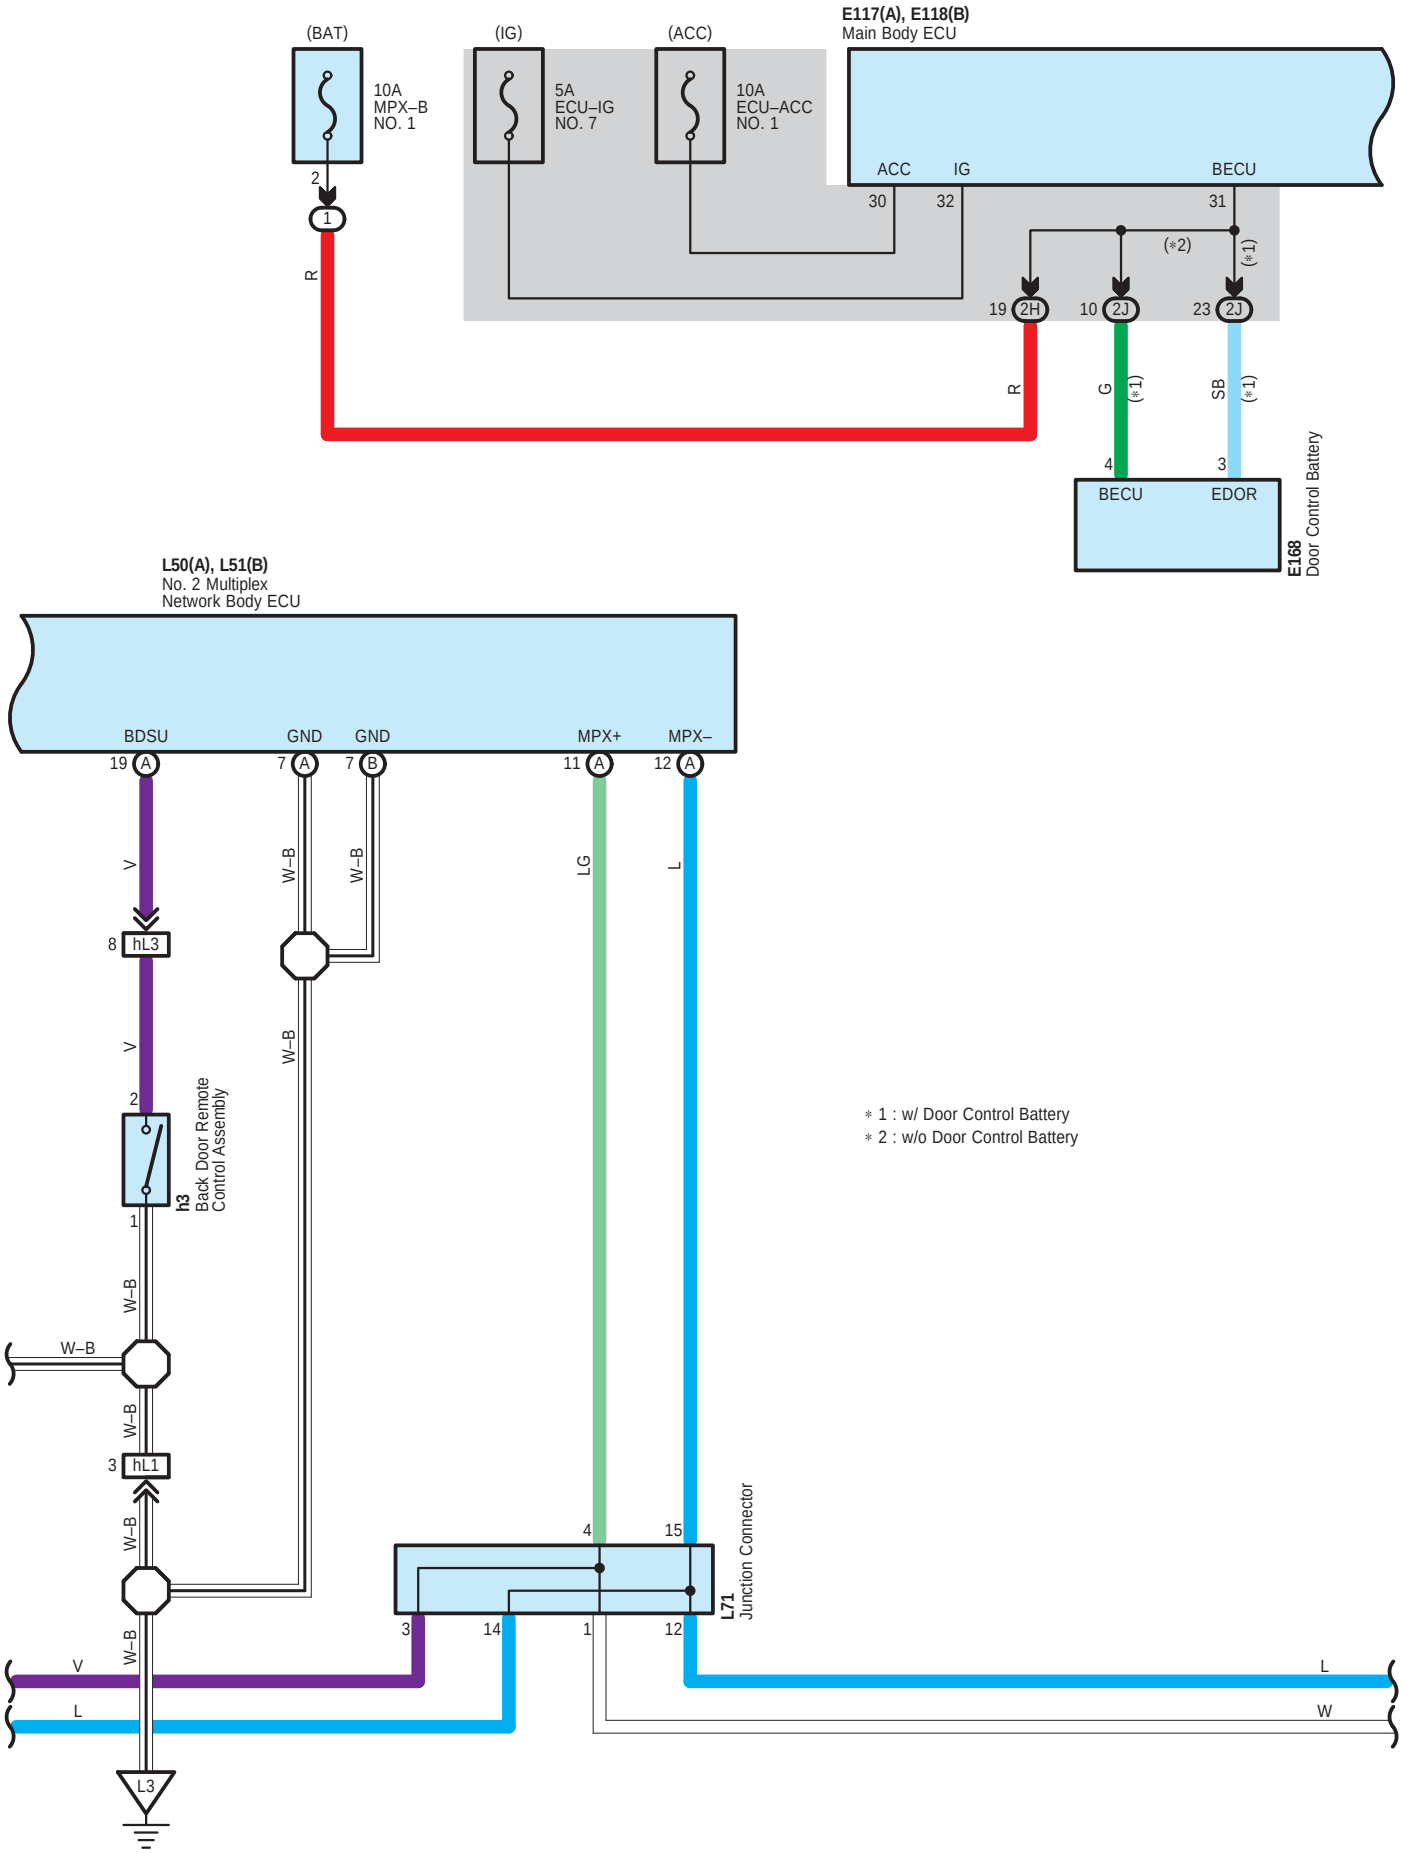
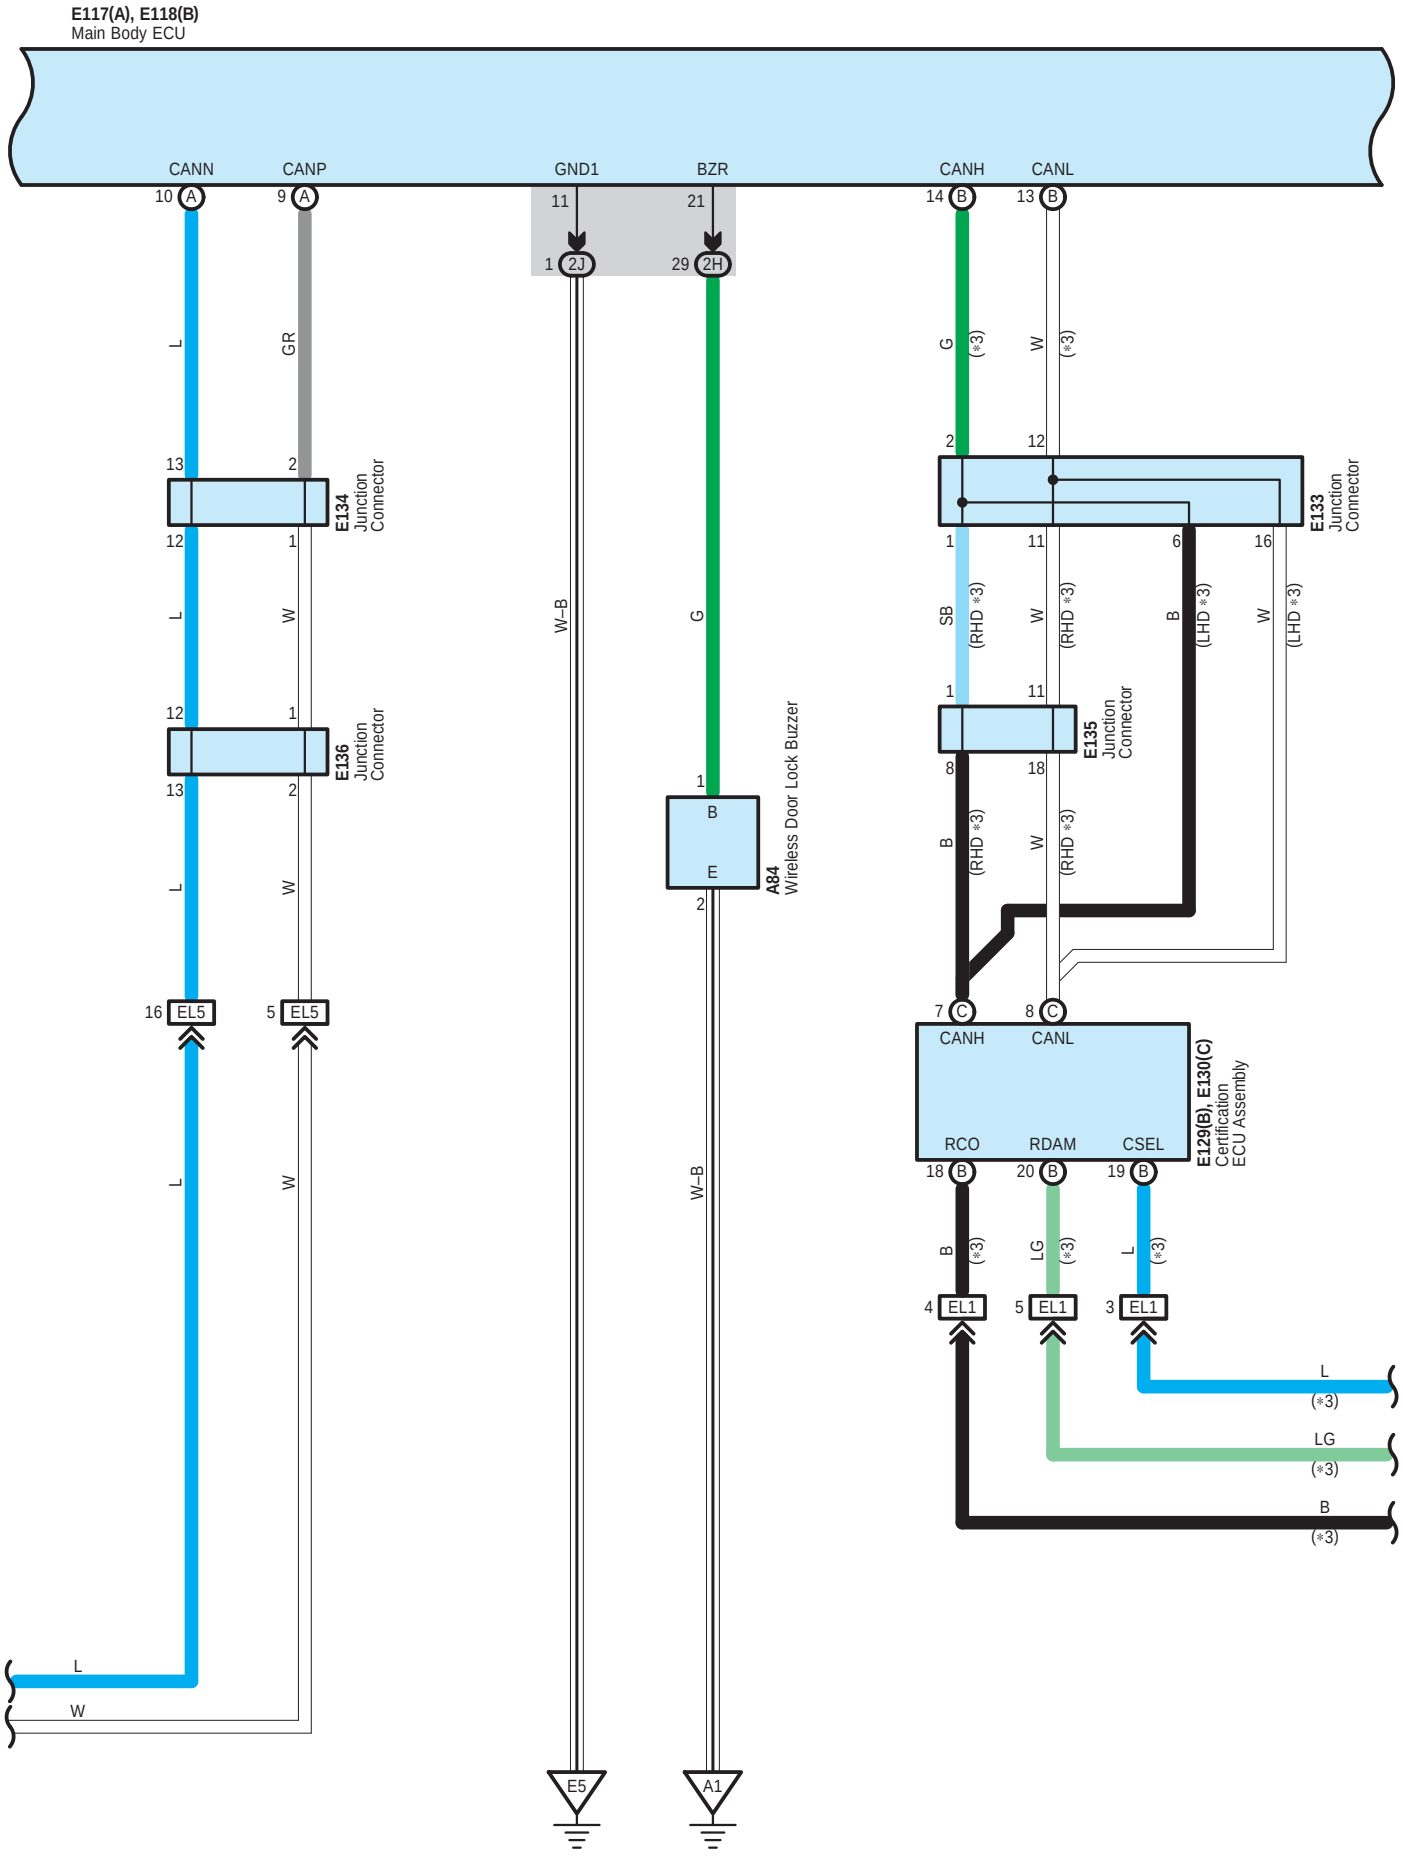

(BAT)
10A
MPX–B
NO. 1
(IG)
5A
ECU–IG
NO. 6
(BAT)
30A
PBD
S15
Junction Connector
OSLE
OSL
S24
Power Back Door
Sensor Assembly LH
OSRE
OSR
S23
Power Back Door
Sensor Assembly RH
AL1
SK5
KL2
ECUB
IG
B
OSL
OSE
OSR
L52
Power Back Door Unit Assembly
FUL
DC+
DC–
PAWL
HAF
POS
DS1
BZR+
CTY
M+
M–
POLE
CLS
OPN
Full Latch
Switch
Ratchet
Switch
Half
Latch
Switch
Sector
Switch
S32(A), S33(B), S38(C)
Back Door Lock
Assembly
Back
Door
S25
Door Control Switch
K47
Power Back Door
Warning Buzzer
SK3
K52
Junction
Connector
K5

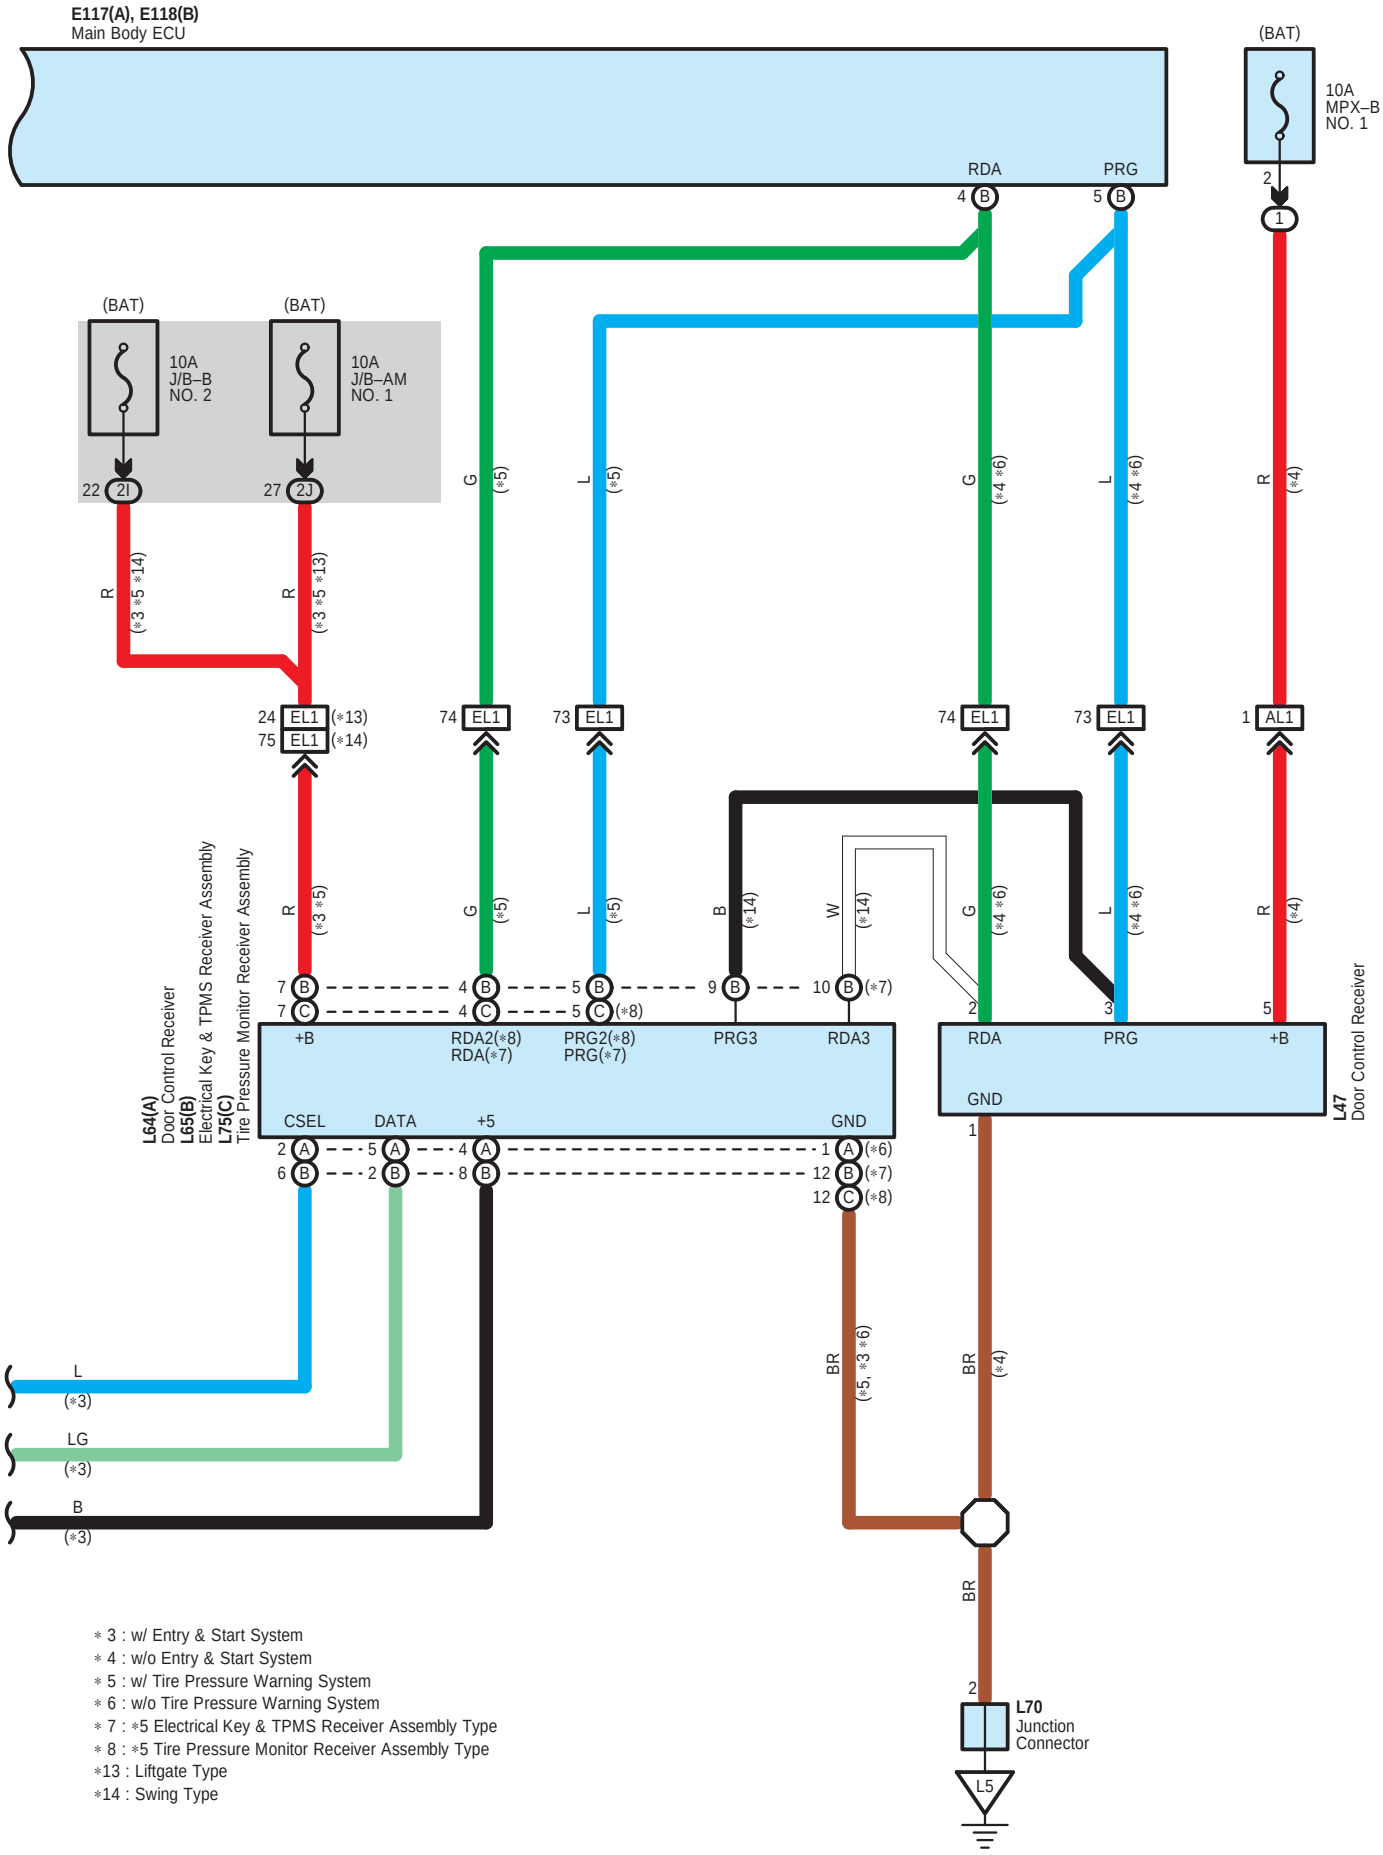
∗ 9 : China
∗10 : Except China
∗11 : Before Aug. 2016 Production
∗12 : From Aug. 2016 Production



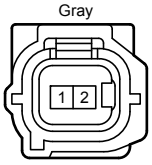

(BAT)
30A B/DR CLSR RH
(BAT)
30A B/DR CLSR LH
(BAT)
10A MPX–B NO. 1
(IG)
10A ECU–IG NO. 3
6 3B
2 3B
2
1
33 2I
LA–B
LA–W
R
B
1 AL1
6 EL1
L50(A), L51(B)
No. 2 Multiplex Network Body ECU
5 B
6 B
14 A
13 A
B
B
BECU
SIG
LMT
DC–
DC+
POL
HAF
FUL
17 A
1 B
2 B
16 A
8 A
22 A
10 B
8 B
3 B
15 A
9 B
4 B
L
W
G
R
B
P
GR
P
7 hL3
5 hL2
2 hL2
2 hL3
1 hL3
3 hL3
6 hL3
4 hL2
1 hL2
5 hL3
4 hL3
10 hL3
LA–W
LA–G
LA–B
LA–R
7
6
5
4
1
2
HND
ACT–
ACT+
POL
HAF
FUL
GND
E1
M
h4
Tail Gate Lock Assembly Lower RH
h5
Tail Gate Lock Assembly Lower LH
8
3
W–B
V
L


(BAT)
(IG)
(ACC)
10A
MPX–B
NO. 1
5A
ECU–IG
NO. 7
10A
ECU–ACC
NO. 1
E117(A), E118(B)
Main Body ECU
ACC
IG
BECU
30
32
31
(*2)
(*1)
19 2H
10 2J
23 2J
R
G
SB
4
3
BECU
EDOR
E168
Door Control Battery
L50(A), L51(B)
No. 2 Multiplex
Network Body ECU
BDSU
GND
GND
MPX+
MPX–
19 A
7 A
7 B
11 A
12 A
V
W–B
LG
L
8 hL3
2
1
h3
Back Door Remote
Control Assembly
3 hL1
L3
4
15
3
14
1
12
L71
Junction Connector
* 1 : w/ Door Control Battery
* 2 : w/o Door Control Battery

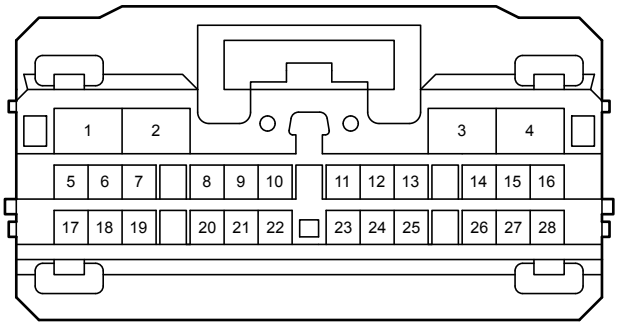

E117(A), E118(B)
Main Body ECU
CANN
CANP
GND1
BZR
CANH
CANL
10 A
9 A
11
21
1 2J
29 2H
14 B
13 B
L
GR
W–B
G
G (*3)
W (*3)
2
12
13
2
E134 Junction Connector
12
1
L
W
SB (RHD *3)
W (RHD *3)
B (LHD *3)
W (LHD *3)
1
11
6
16
E133 Junction Connector
12
1
E136 Junction Connector
1
11
E135 Junction Connector
13
2
8
18
B (RHD *3)
W (RHD *3)
1
B
E
A84 Wireless Door Lock Buzzer
2
7 C
8 C
CANH
CANL
E129(B), E130(C) Certification ECU Assembly
RCO
RDAM
CSEL
18 B
20 B
19 B
B (*3)
LG (*3)
L (*3)
16 EL5
5 EL5
4 EL1
5 EL1
3 EL1
L
W
L (*3)
LG (*3)
B (*3)
E5
A1


E117(A), E118(B)
Main Body ECU
(BAT)
10A
MPX–B
NO. 1
RDA
PRG
(BAT)
(BAT)
10A
J/B–B
NO. 2
10A
J/B–AM
NO. 1
24 EL1 (*13)
75 EL1 (*14)
74 EL1
73 EL1
74 EL1
73 EL1
1 AL1
L64(A)
Door Control Receiver
L65(B)
Electrical Key & TPMS Receiver Assembly
L75(C)
Tire Pressure Monitor Receiver Assembly
+B
RDA2(*8)
RDA(*7)
PRG2(*8)
PRG(*7)
PRG3
RDA3
CSEL
DATA
+5
GND
RDA
PRG
+B
GND
L47
Door Control Receiver
L
(*3)
LG
(*3)
B
(*3)
BR
(*5, *3 *6)
BR
(*4)
BR
L70
Junction
Connector
L5
* 3 : w/ Entry & Start System
* 4 : w/o Entry & Start System
* 5 : w/ Tire Pressure Warning System
* 6 : w/o Tire Pressure Warning System
* 7 : *5 Electrical Key & TPMS Receiver Assembly Type
* 8 : *5 Tire Pressure Monitor Receiver Assembly Type
*13 : Liftgate Type
*14 : Swing Type

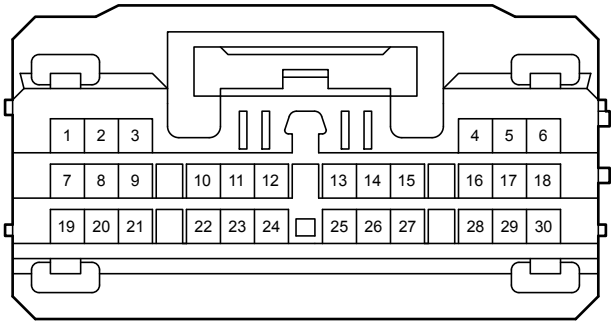
A 84
Gray



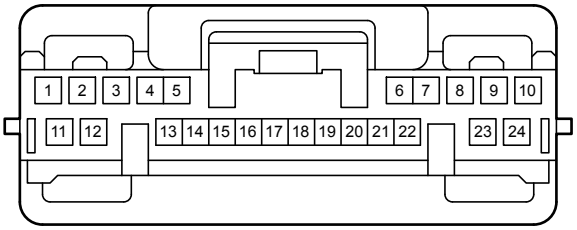

E117
White



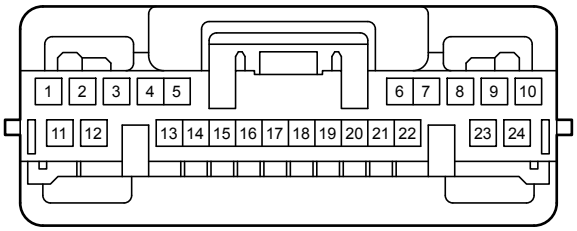

E118
White



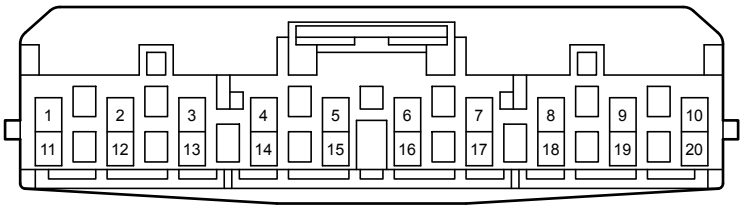

E129
Black



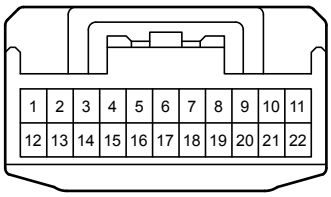

E130
Black



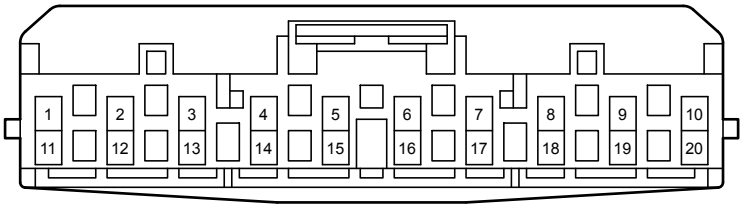

E133
White



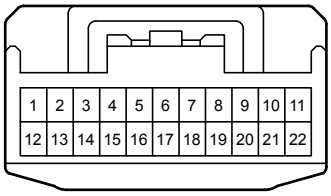

E134
Black



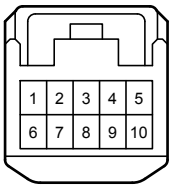

E135
White



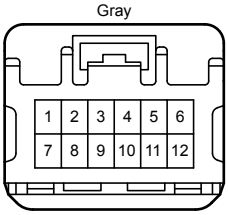

E136
Black



E139
Black



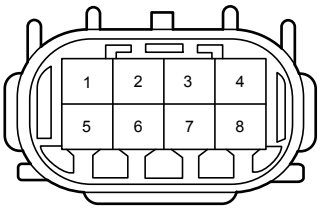

E168
Gray



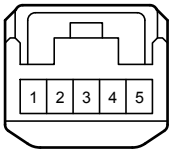

K 47
Black



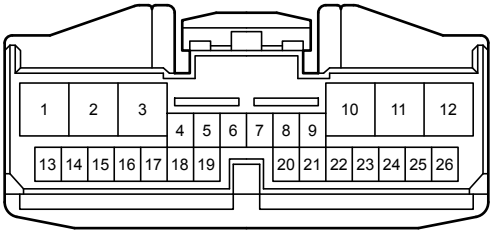

K 52
Black



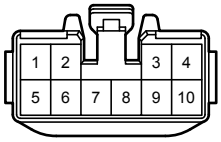

L 47
White



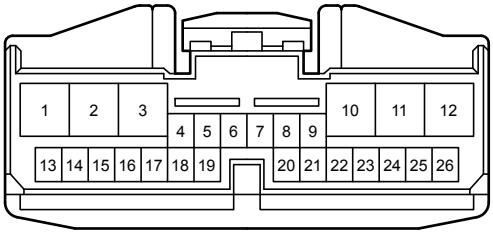

L 50
White



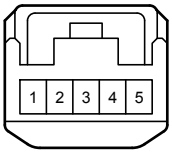

L 51
Blue



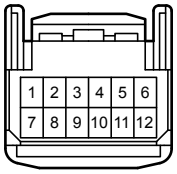

L 52
White



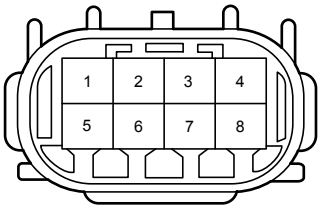

L 64
Blue



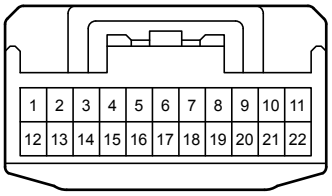

L 65
White




L 70
Black



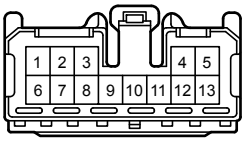

L 71
Black



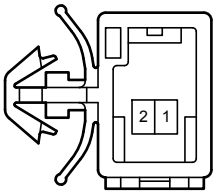

L 75
Black



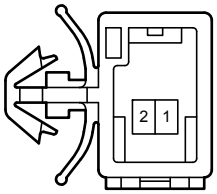

S 15
White



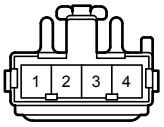

S 23
White




S 24
White



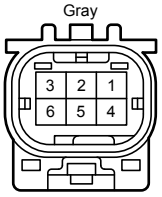

S 25
Black




S 32
White



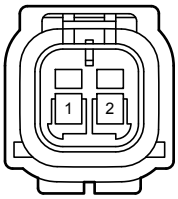

S 33
Gray



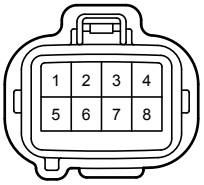

S 38
Black



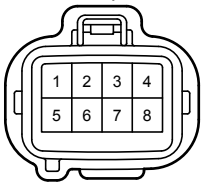

h 3
Black



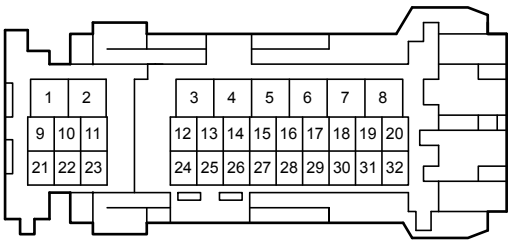

h 4
White



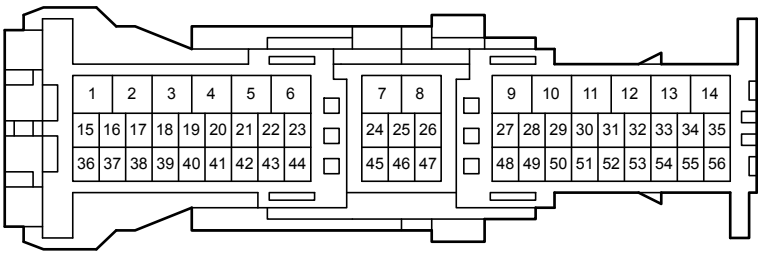

h 5
Gray



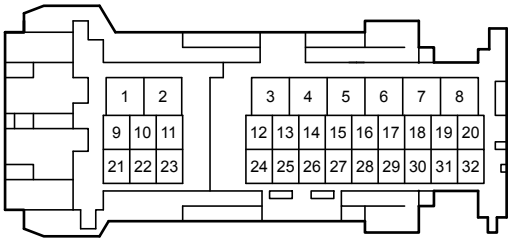
2H
White





2I
White



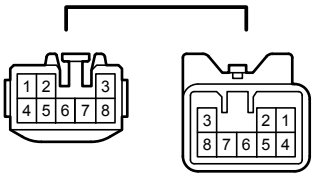

2J
White



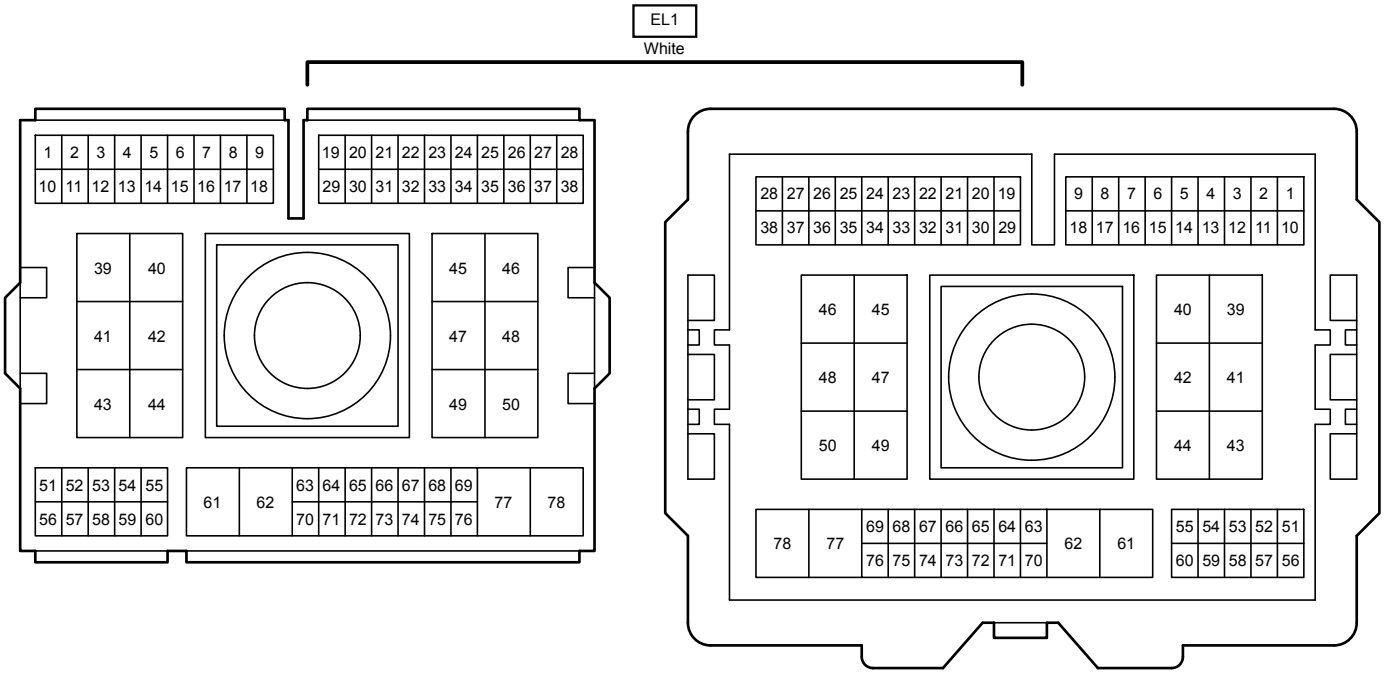

3B
Gray



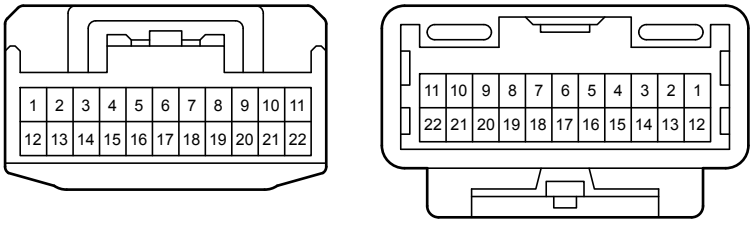

AL1
White



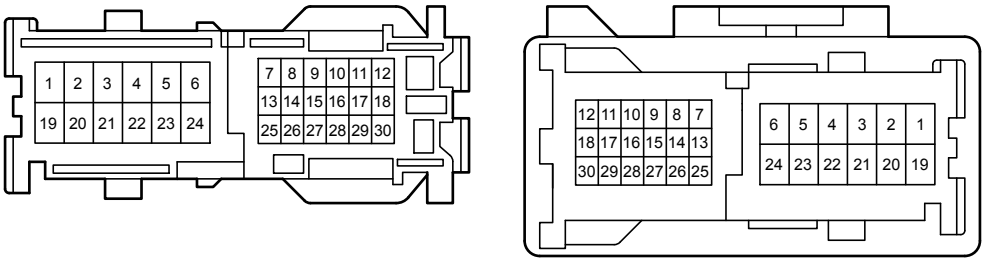

EL1
White



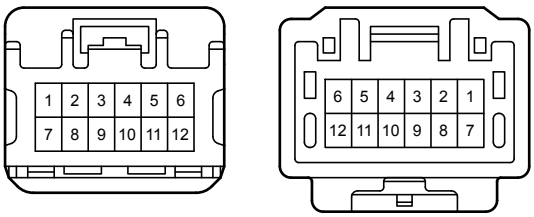

EL5
White



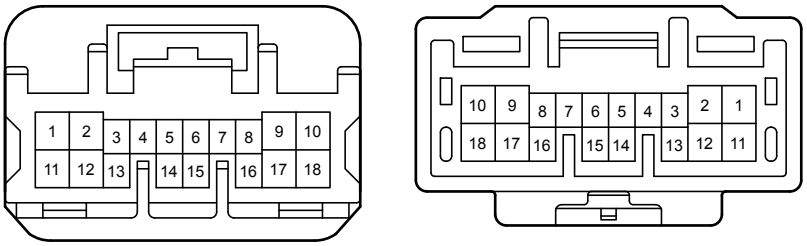
KL2
White



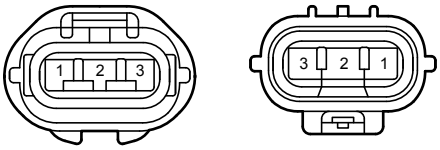

SK3
Blue



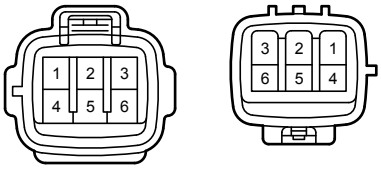

SK5
White




hL1
Black




hL2
Gray




hL3
White

