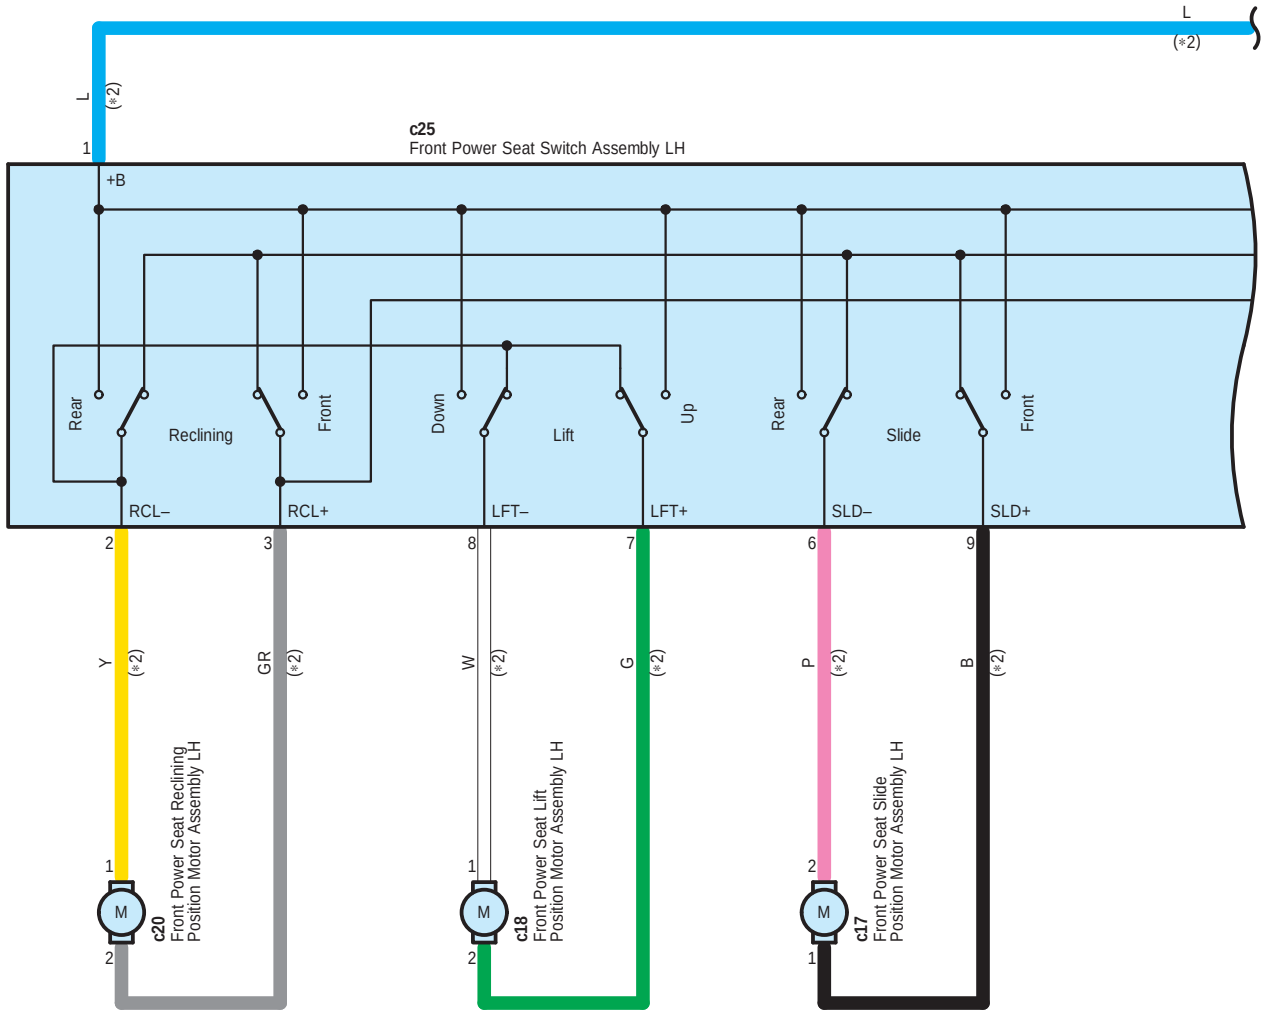
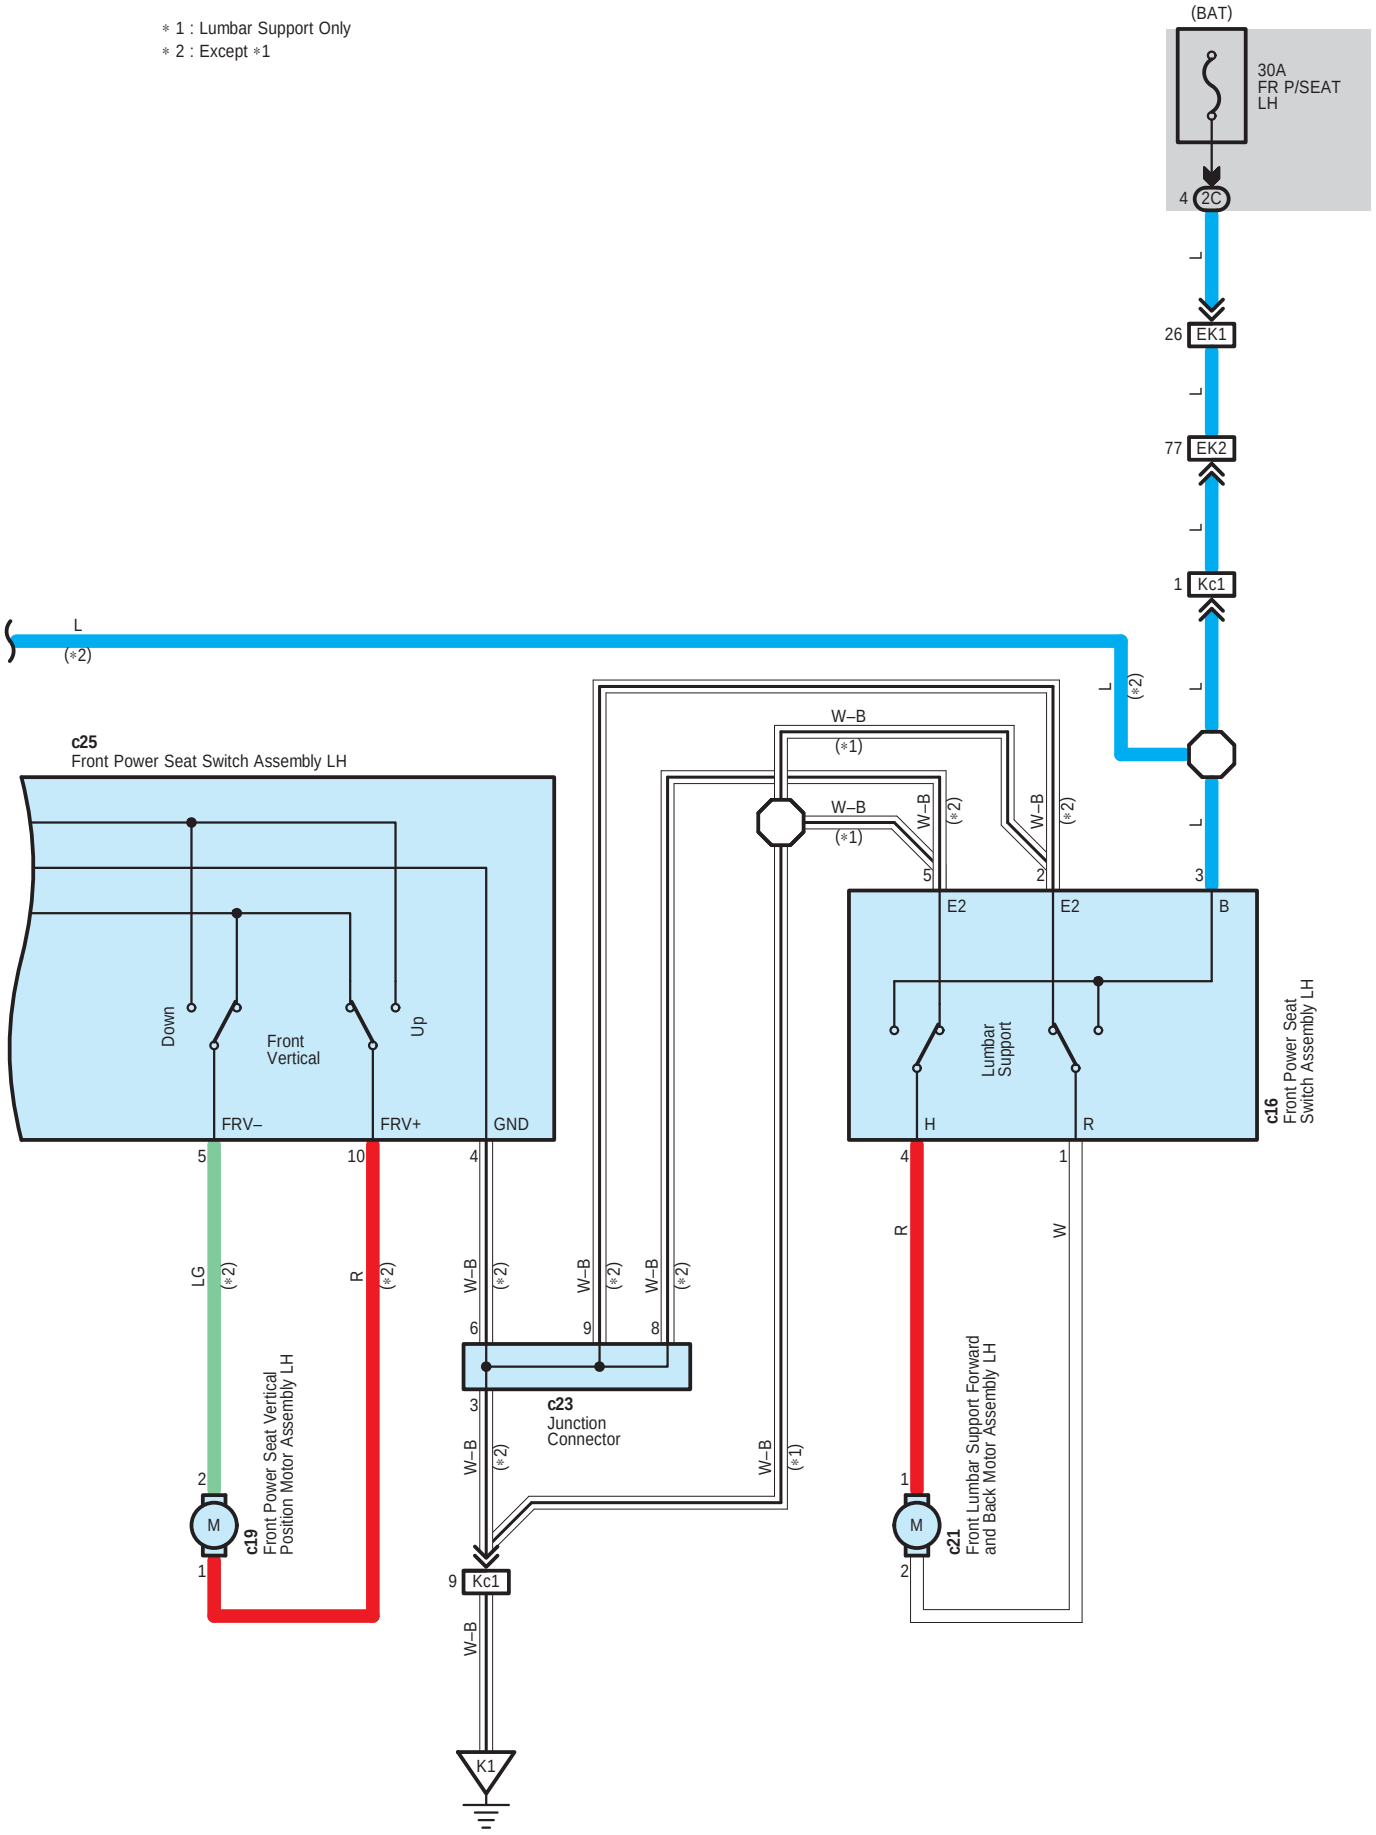
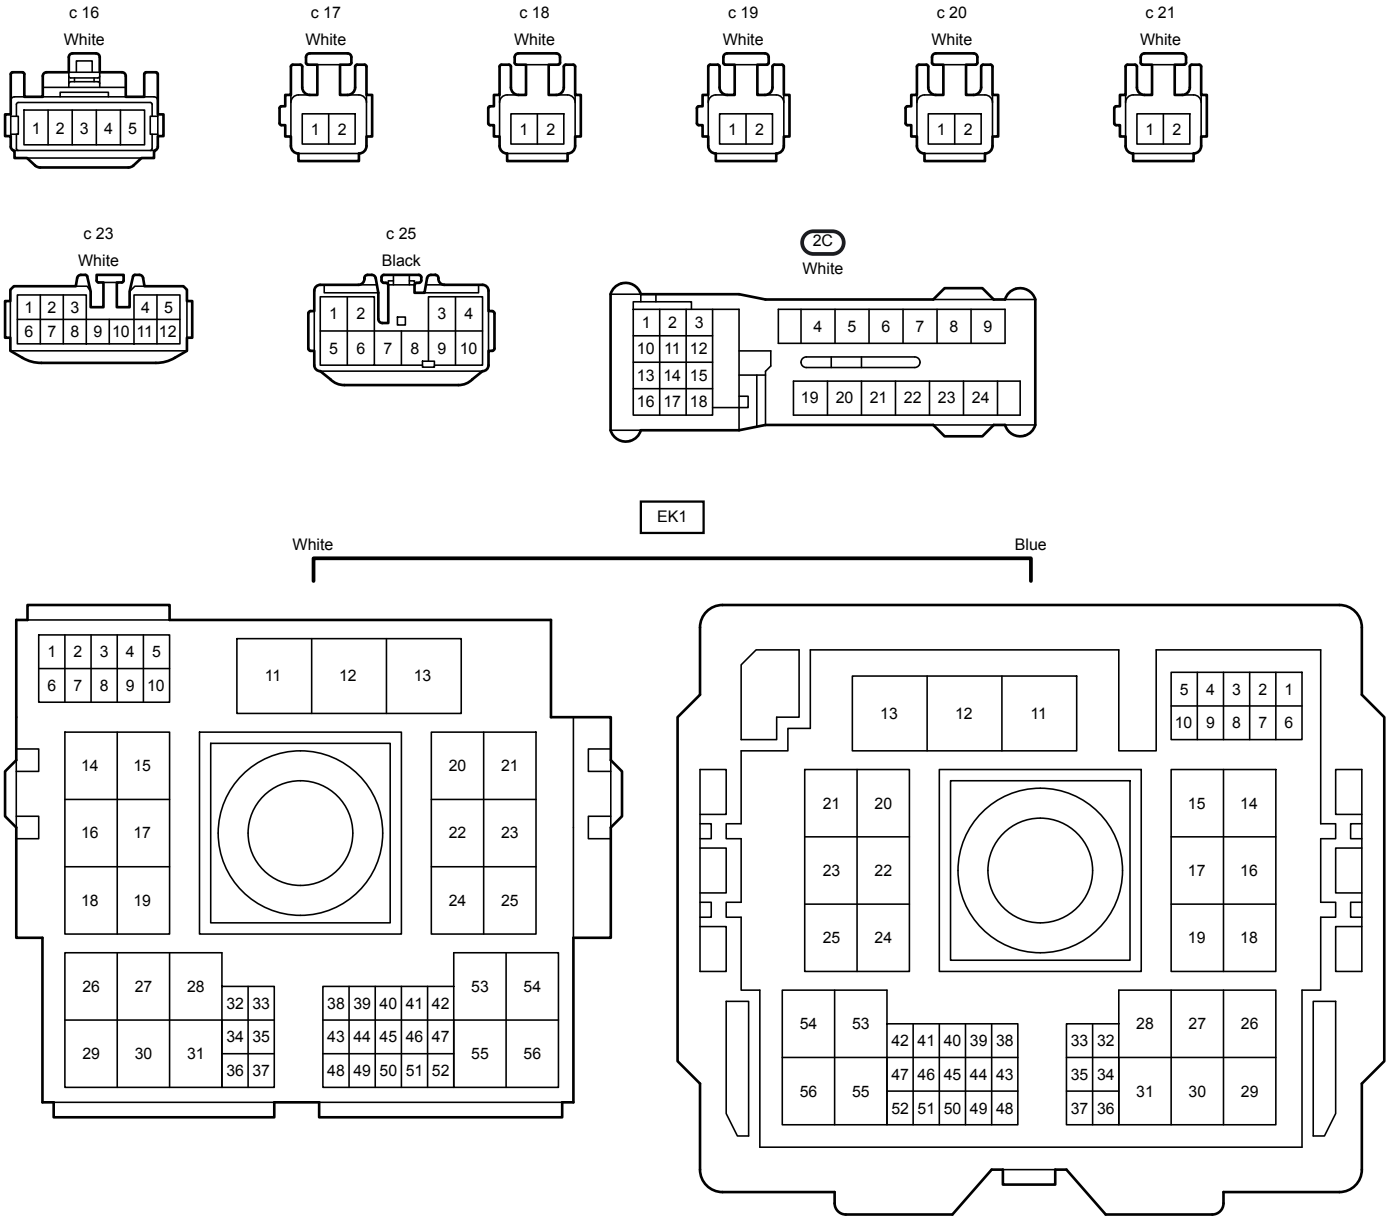
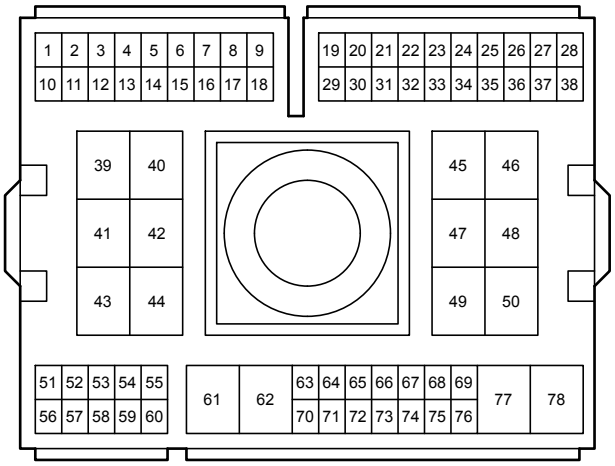
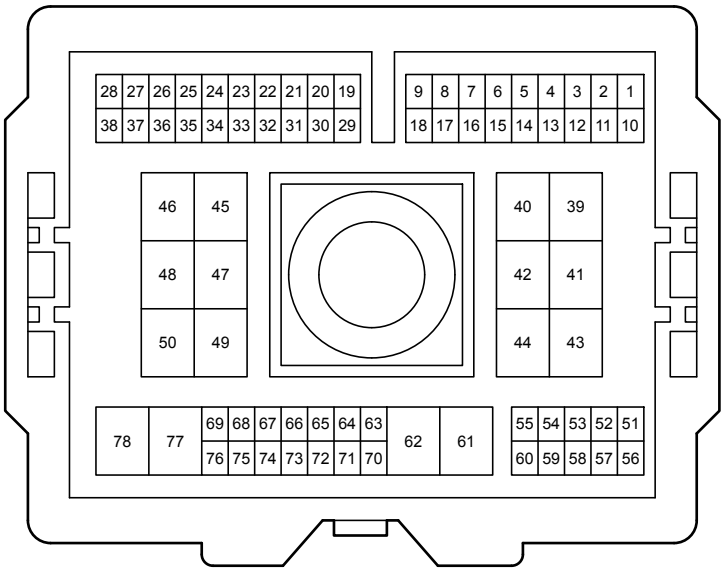

L
(*2)
L
(*2)
1
c25
Front Power Seat Switch Assembly LH
+B
Rear
Reclining
Front
Down
Lift
Up
Rear
Slide
Front
RCL–
RCL+
LFT–
LFT+
SLD–
SLD+
2
3
8
7
6
9
Y
(*2)
GR
(*2)
W
(*2)
G
(*2)
P
(*2)
B
(*2)
1
2
M
c20
Front Power Seat Reclining Position Motor Assembly LH
1
2
M
c18
Front Power Seat Lift Position Motor Assembly LH
2
1
M
c17
Front Power Seat Slide Position Motor Assembly LH


∗ 1 : Lumbar Support Only
∗ 2 : Except ∗1
(BAT)
30A
FR P/SEAT
LH
4 2C
L
26 EK1
L
77 EK2
L
1 Kc1
L
(∗2)
L
(∗2)
c25
Front Power Seat Switch Assembly LH
Down
Front
Vertical
Up
FRV–
FRV+
GND
5
10
4
LG
(∗2)
R
(∗2)
W–B
(∗2)
W–B
(∗2)
W–B
(∗2)
W–B
(∗1)
W–B
(∗1)
W–B
(∗2)
W–B
(∗2)
L
(∗2)
L
3
5
2
E2
E2
B
Lumbar
Support
H
R
c16
Front Power Seat
Switch Assembly LH
4
1
R
W
6
9
8
3
c23
Junction
Connector
W–B
(∗2)
W–B
(∗1)
2
M
1
c19
Front Power Seat Vertical
Position Motor Assembly LH
1
M
2
c21
Front Lumbar Support Forward
and Back Motor Assembly LH
9 Kc1
W–B
K1


c 16
White
1 2 3 4 5
c 17
White
1 2
c 18
White
1 2
c 19
White
1 2
c 20
White
1 2
c 21
White
1 2
c 23
White
1 2 3 4 5
6 7 8 9 10 11 12
c 25
Black
1 2 3 4
5 6 7 8 9 10
2C
White
1 2 3
10 11 12
13 14 15
16 17 18
4 5 6 7 8 9
19 20 21 22 23 24
EK1
White
Blue
1 2 3 4 5
6 7 8 9 10
11 12 13
14 15
16 17
18 19
20 21
22 23
24 25
26 27 28
29 30 31
32 33
34 35
36 37
38 39 40 41 42
43 44 45 46 47
48 49 50 51 52
53 54
55 56
13 12 11
21 20
23 22
25 24
5 4 3 2 1
10 9 8 7 6
15 14
17 16
19 18
54 53
56 55
42 41 40 39 38
47 46 45 44 43
52 51 50 49 48
33 32
35 34
37 36
28 27 26
31 30 29

EK2
White





Kc1
White

