




(BAT)
30A
FR P/SEAT LH
4 2C
26 EK1
77 EK2
1 Kc1
1
c25
Front Power Seat Switch Assembly LH
+B
Rear
Reclining
Front
Down
Lift
Up
RCL–
RCL+
LFT–
LFT+
2
3
8
7
Y
GR
W
G
1
M
2
c20
Front Power Seat Reclining Position Motor Assembly LH
c18
Front Power Seat Lift Position Motor Assembly LH


c25
Front Power Seat Switch Assembly LH
Rear
Slide
Front
Down
Front
Vertical
Up
SLD–
SLD+
FRV–
FRV+
GND
6
9
5
10
4
P
B
LG
R
W–B
6
c23
Junction
Connector
3
2
M
1
c17
Front Power Seat Slide
Position Motor Assembly LH
2
M
1
c19
Front Power Seat Vertical
Position Motor Assembly LH
W–B
9
Kc1
W–B
K1


c 17
White

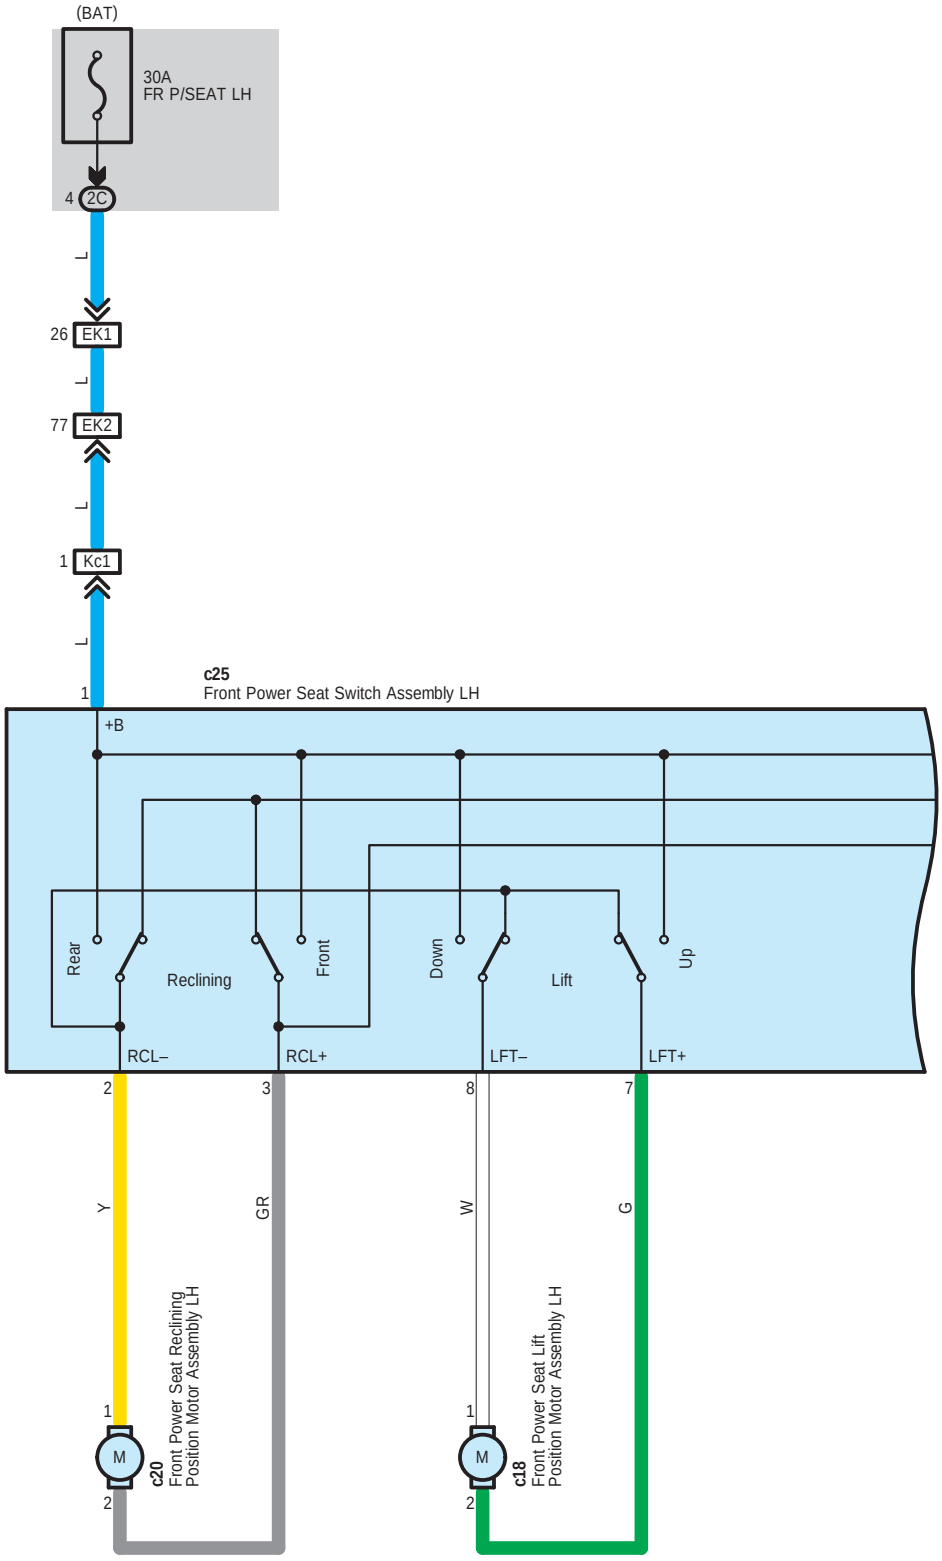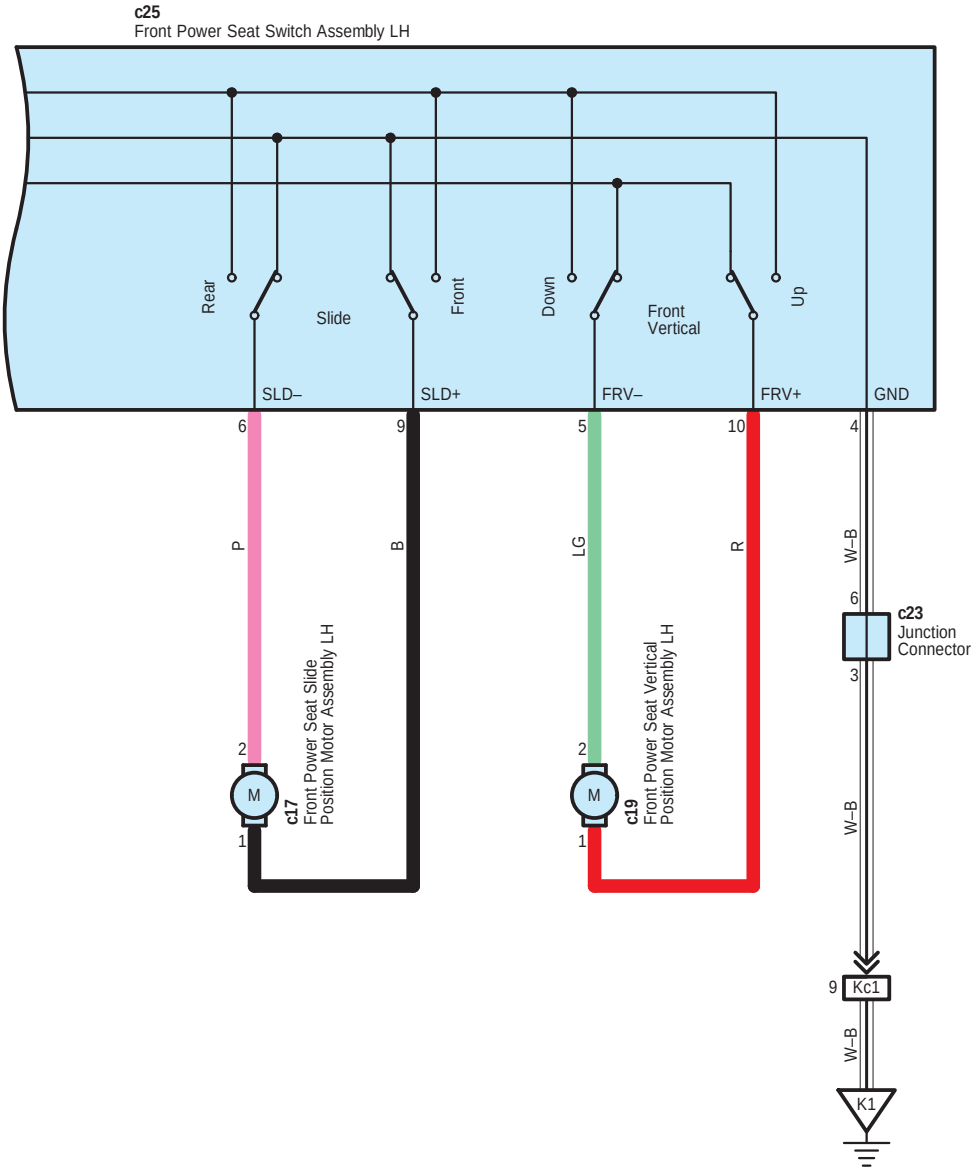


c 18
White




c 19
White




c 20
White




c 23
White



c 25
Black

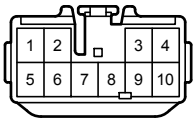


2C
White

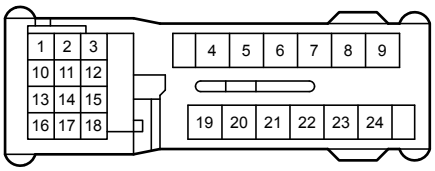


EK1


White


Blue

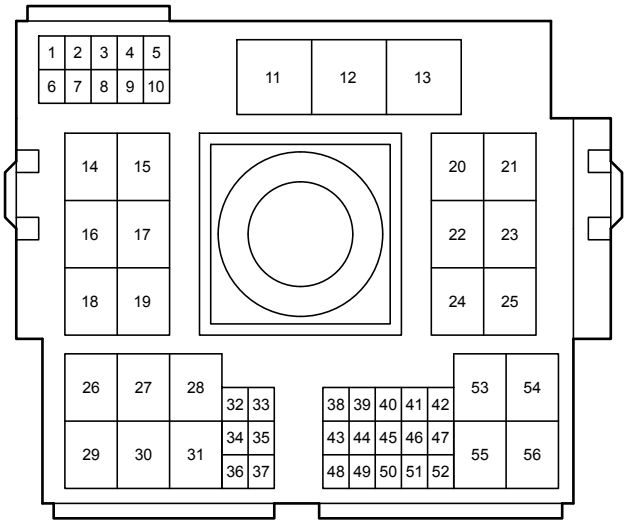

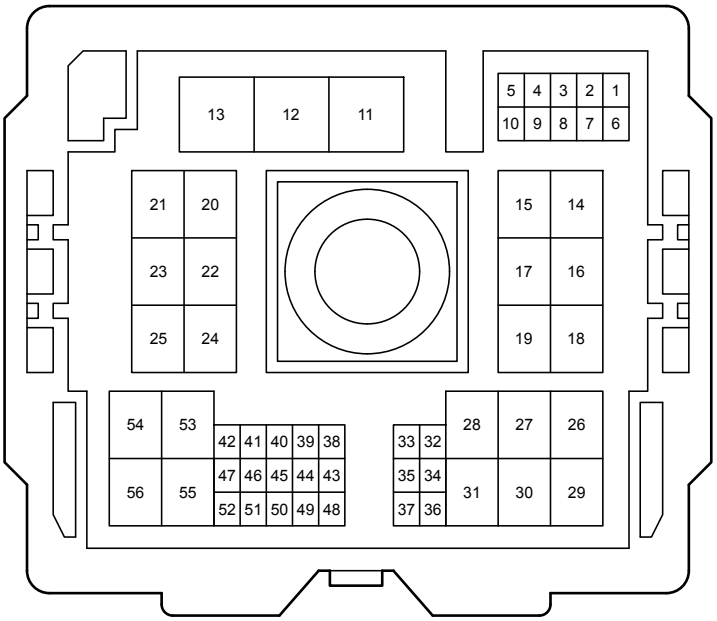

EK2
White

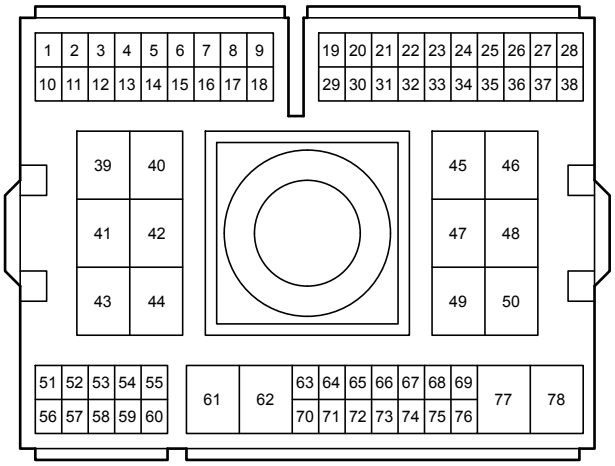

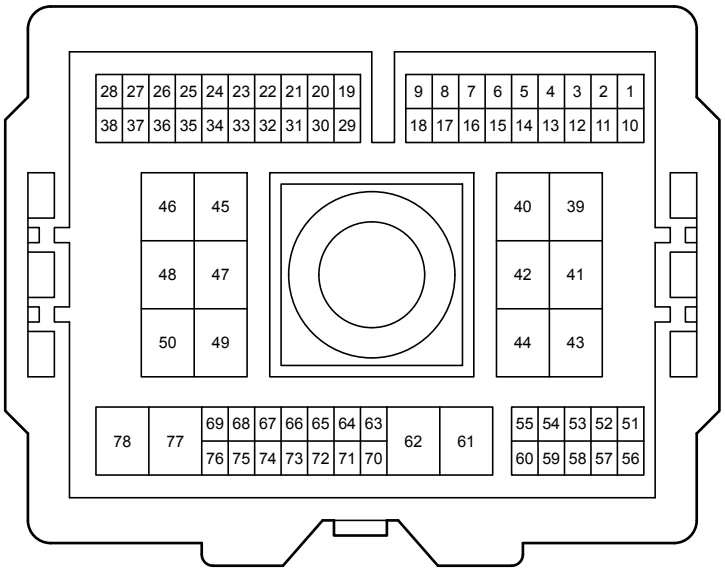

Kc1
White

