
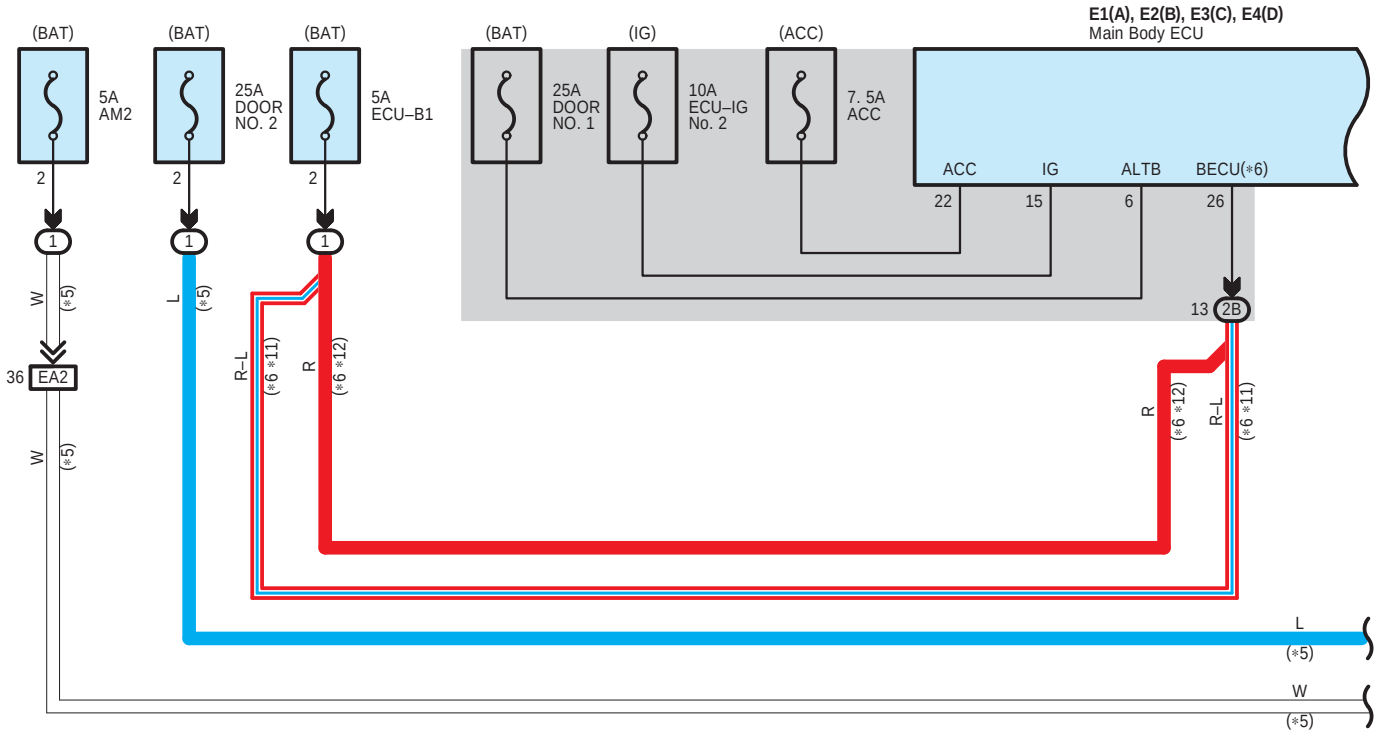
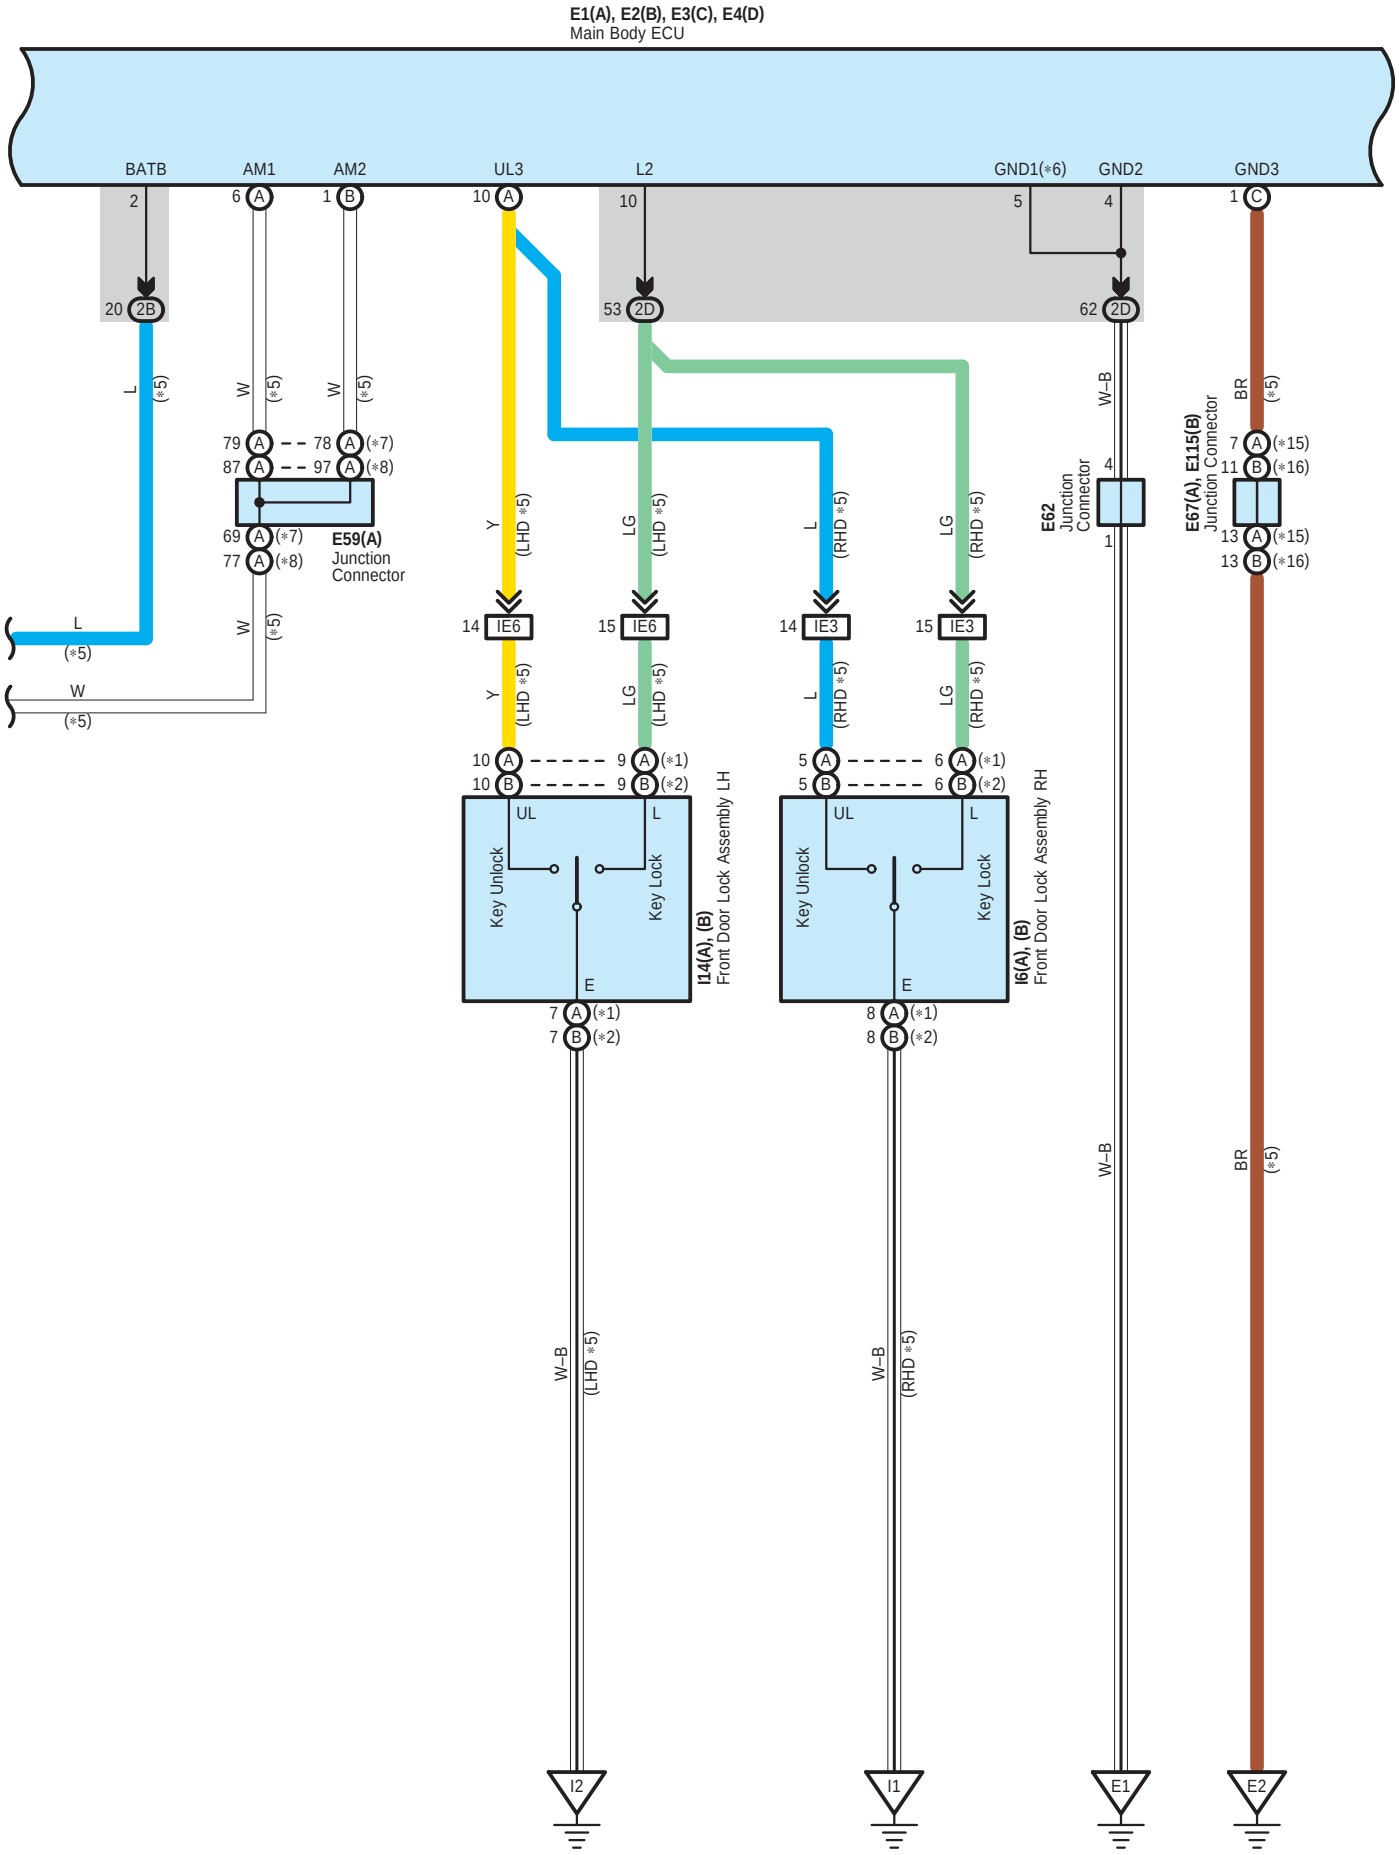
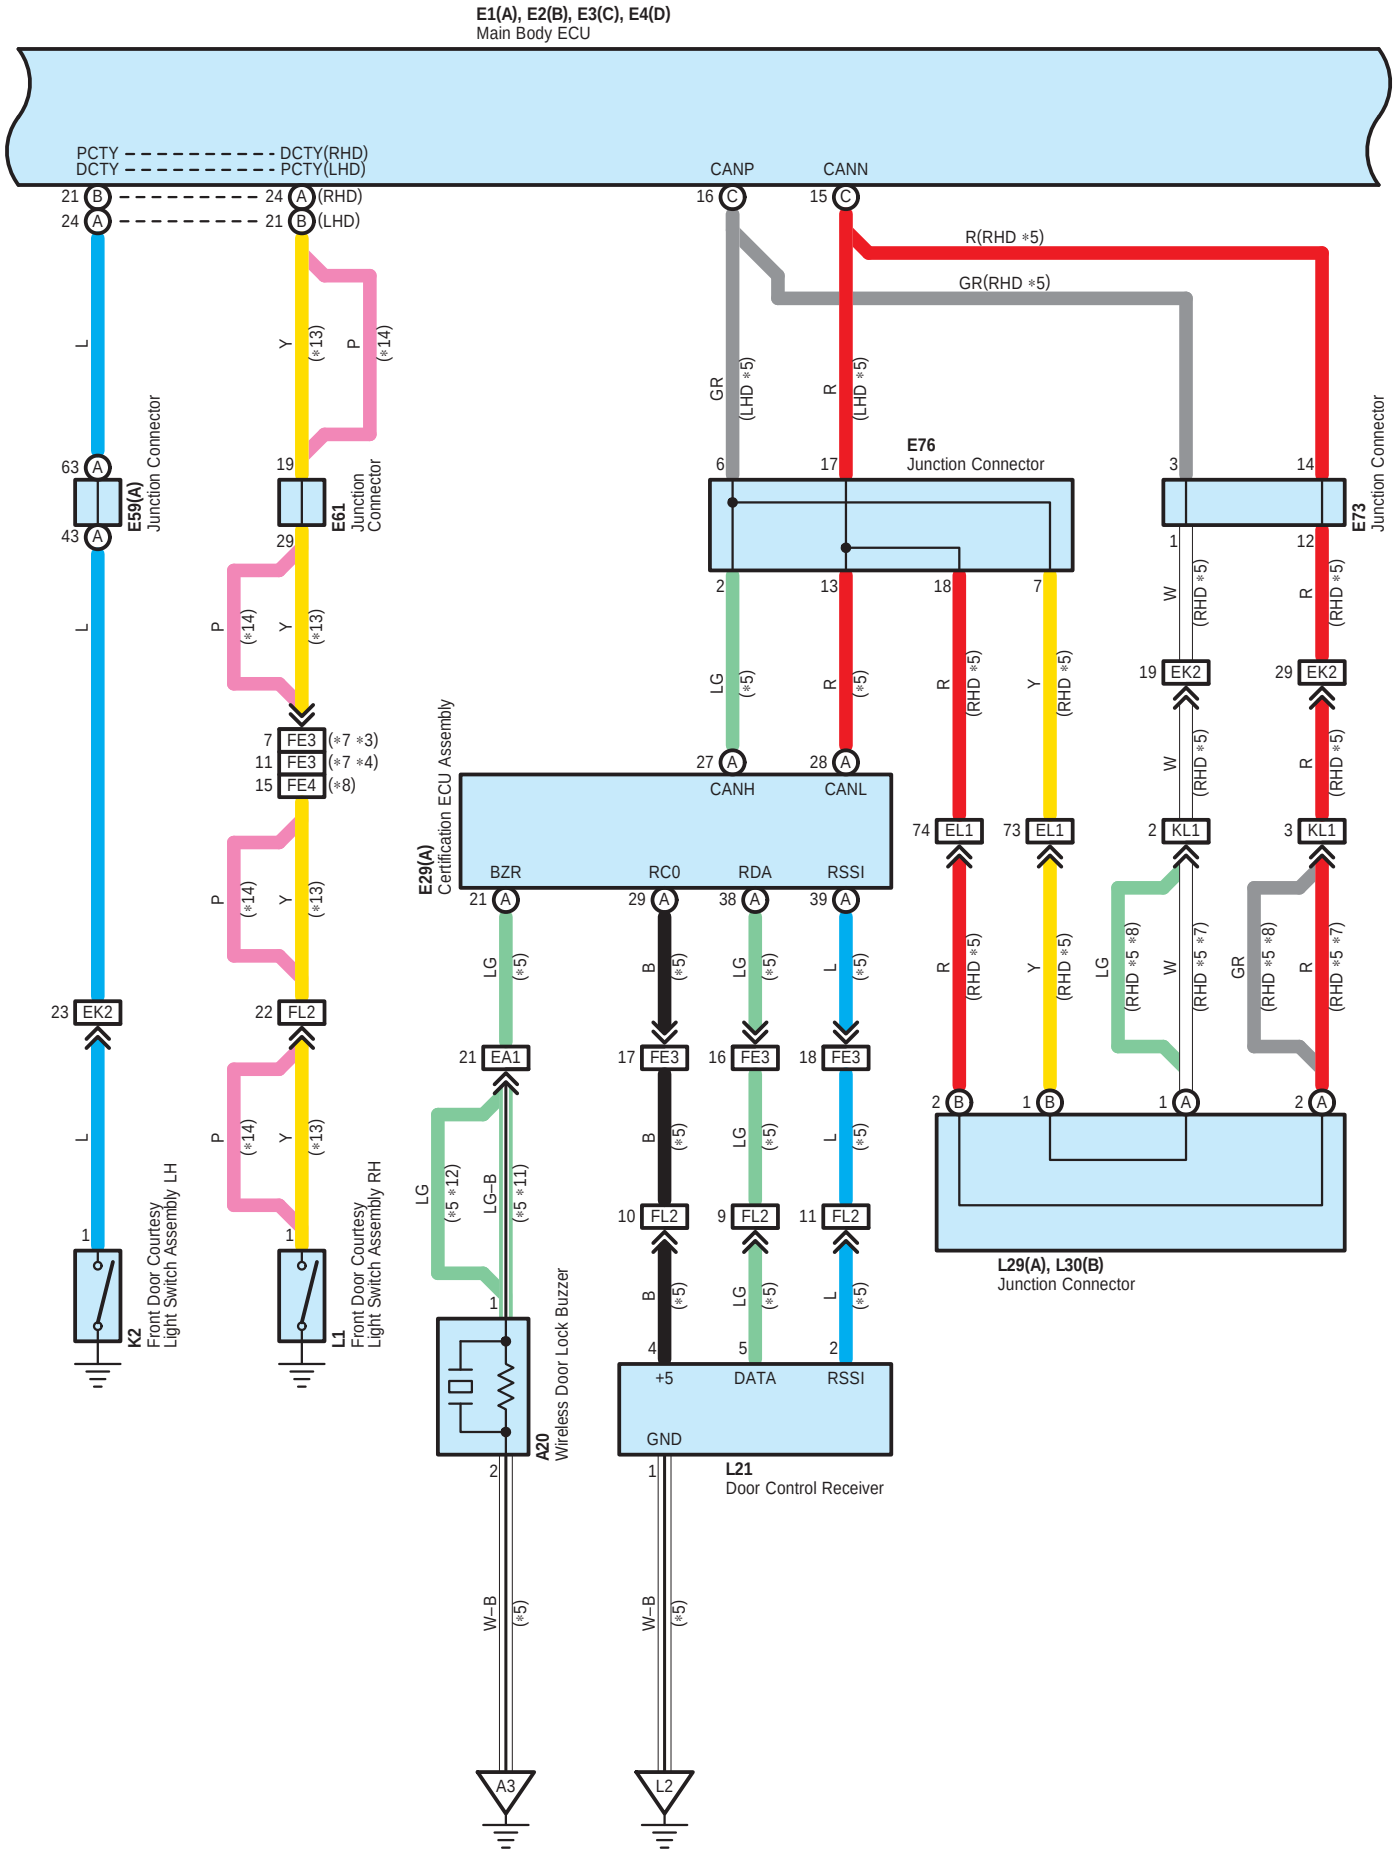



∗ 1 : w/ Double Locking
∗ 2 : w/o Double Locking
∗ 5 : w/ Entry & Start System
∗ 6 : w/o Entry & Start System
∗ 7 : Before Jan. 2012 Production
∗ 8 : From Jan. 2012 Production
∗11 : Before Jan. 2013 Production, From Jan. 2013 Production China
∗12 : From Jan. 2013 Production Except China
∗15 : LHD Before Aug. 2013 Production, RHD
∗16 : LHD From Aug. 2013 Production



E1(A), E2(B), E3(C), E4(D)
Main Body ECU
BATB
AM1
AM2
UL3
L2
GND1(*6)
GND2
GND3
2
20 2B
6 A
1 B
10 A
10
53 2D
5
4
62 2D
1 C
L
(*5)
W
(*5)
79 A
87 A
78 A (*7)
97 A (*8)
69 A (*7)
77 A (*8)
E59(A)
Junction Connector
Y
(LHD *5)
LG
(LHD *5)
L
(RHD *5)
LG
(RHD *5)
14 IE6
15 IE6
14 IE3
15 IE3
10 A
10 B
9 A (*1)
9 B (*2)
5 A
5 B
6 A (*1)
6 B (*2)
UL
L
Key Unlock
Key Lock
E
I14(A), (B)
Front Door Lock Assembly LH
I6(A), (B)
Front Door Lock Assembly RH
7 A (*1)
7 B (*2)
8 A (*1)
8 B (*2)
W–B
(LHD *5)
W–B
(RHD *5)
I2
I1
W–B
4
1
E62
Junction Connector
E1
BR
(*5)
7 A (*15)
11 B (*16)
13 A (*15)
13 B (*16)
E67(A), E115(B)
Junction Connector
BR
(*5)
E2



E1(A), E2(B), E3(C), E4(D)
Main Body ECU
PCTY
DCTY
DCTY(RHD)
PCTY(LHD)
CANP
CANN
R(RHD *5)
GR(RHD *5)
E59(A) Junction Connector
E61 Junction Connector
E76 Junction Connector
E73 Junction Connector
E29(A) Certification ECU Assembly
BZR
RC0
RDA
RSSI
CANH
CANL
K2 Front Door Courtesy Light Switch Assembly LH
L1 Front Door Courtesy Light Switch Assembly RH
A20 Wireless Door Lock Buzzer
L21 Door Control Receiver
L29(A), L30(B) Junction Connector
+5
DATA
GND
A3
L2

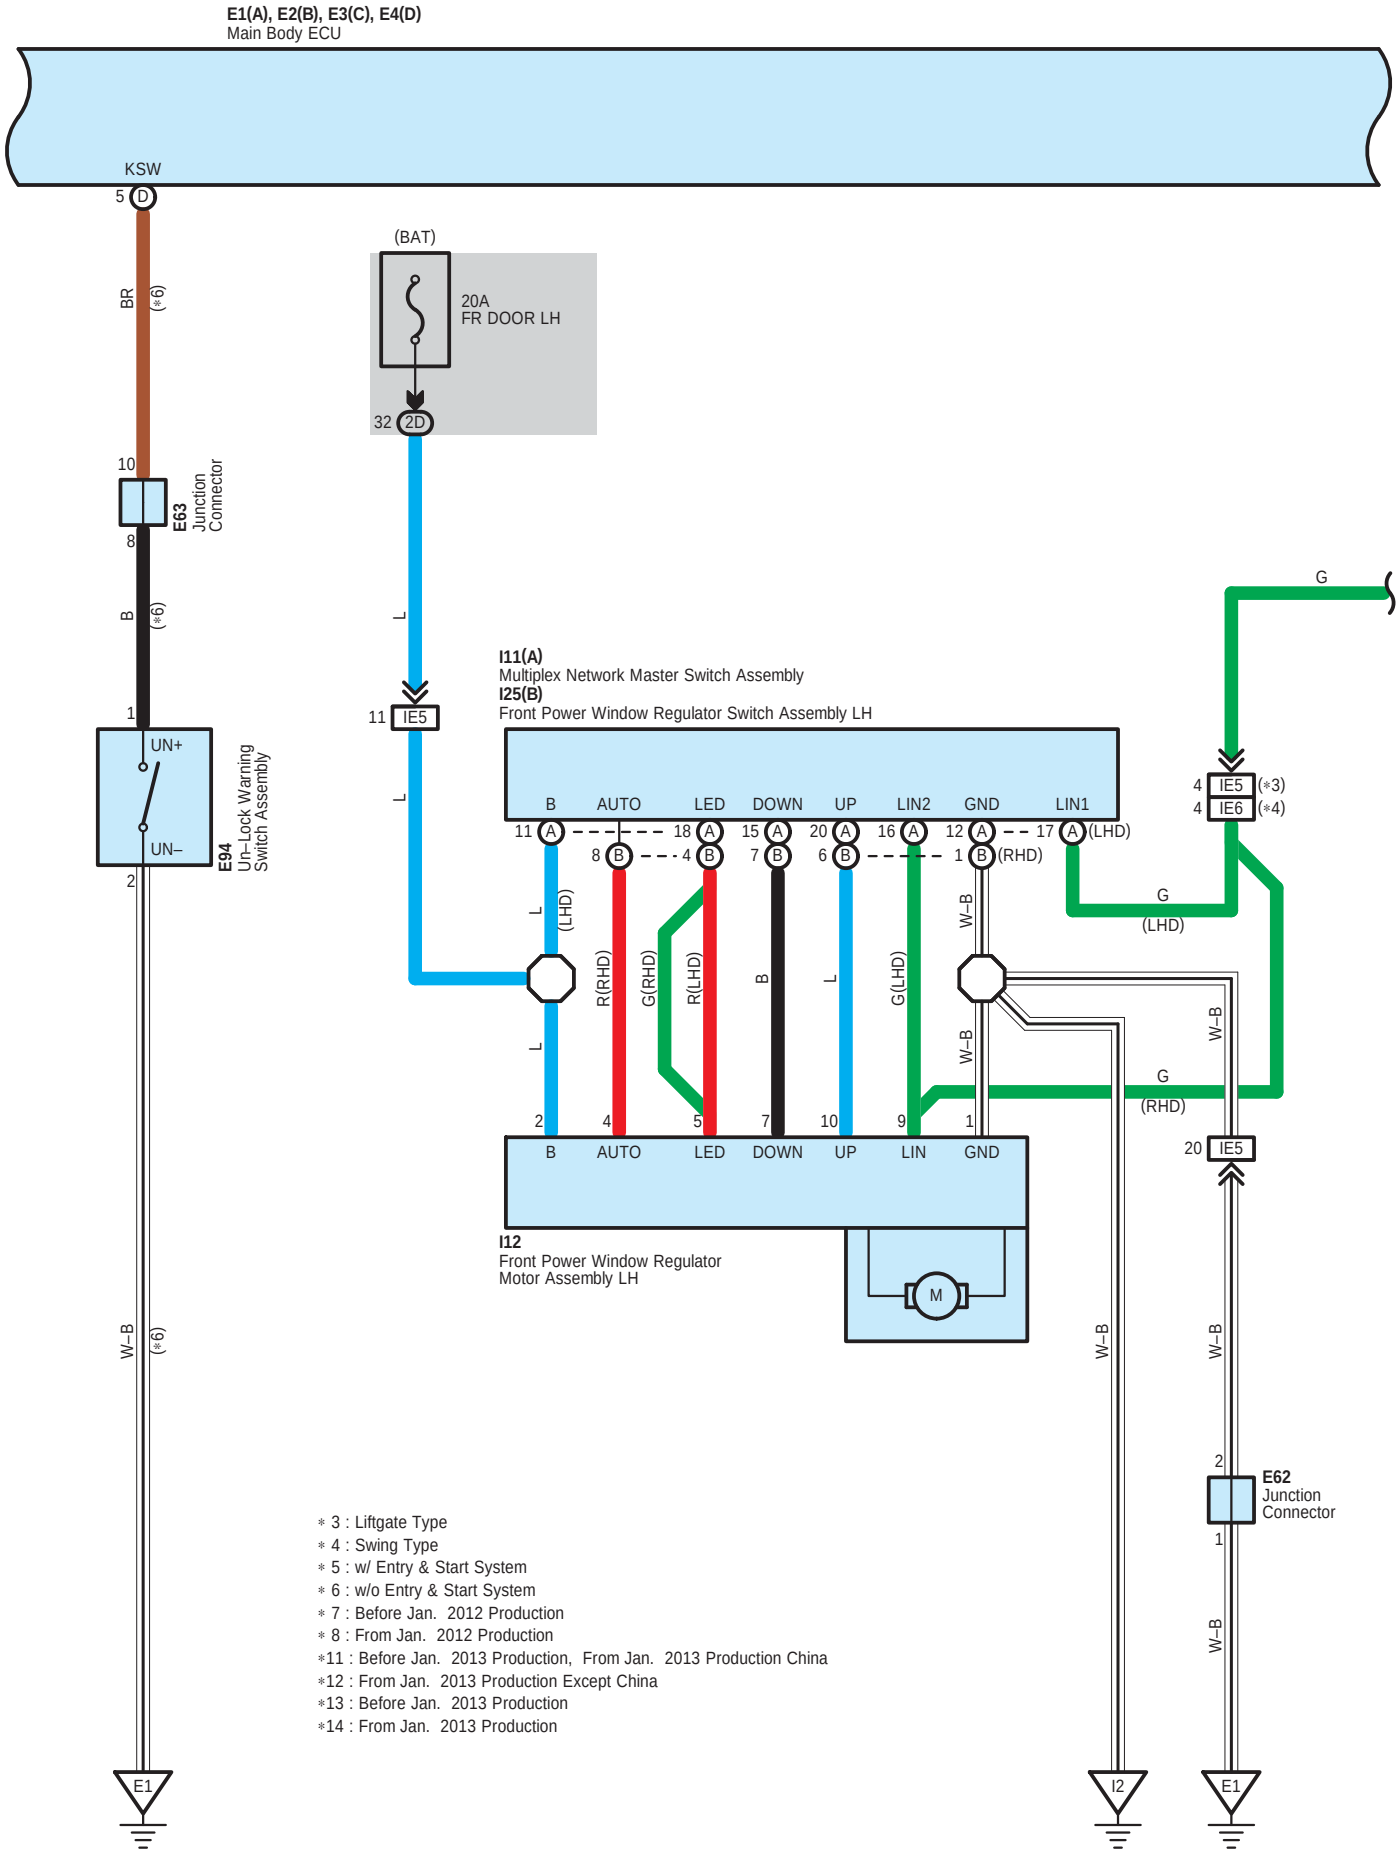


∗ 3 : Liftgate Type
∗ 4 : Swing Type
∗ 5 : w/ Entry & Start System
∗ 6 : w/o Entry & Start System
∗ 7 : Before Jan. 2012 Production
∗ 8 : From Jan. 2012 Production
∗11 : Before Jan. 2013 Production, From Jan. 2013 Production China
∗12 : From Jan. 2013 Production Except China
∗13 : Before Jan. 2013 Production
∗14 : From Jan. 2013 Production

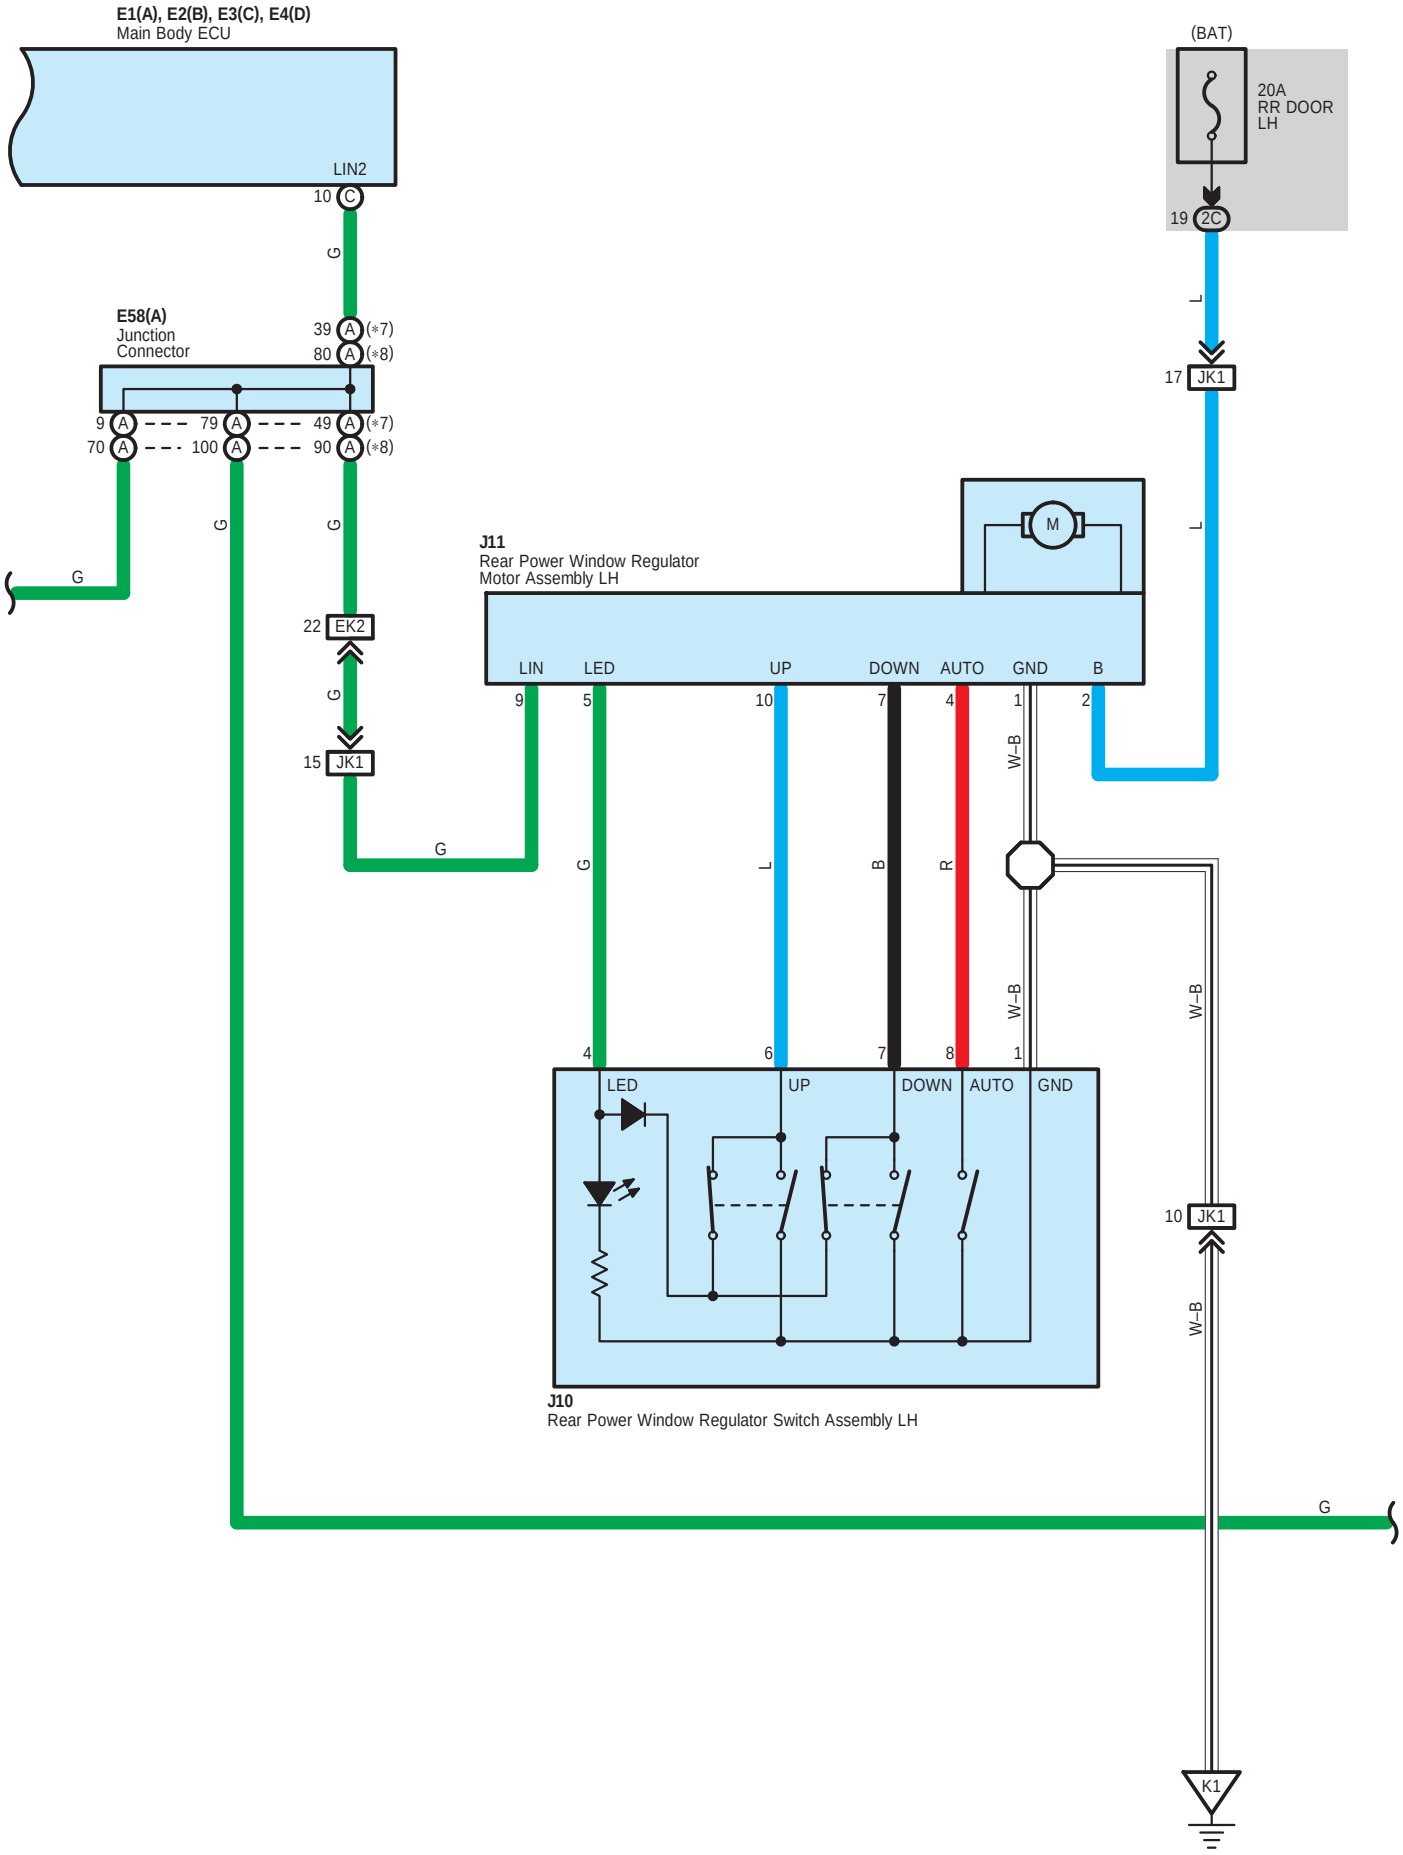
E1(A), E2(B), E3(C), E4(D)
Main Body ECU
LIN2
10 C
G
E58(A)
Junction
Connector
39 A (*7)
80 A (*8)
9 A 79 A 49 A (*7)
70 A 100 A 90 A (*8)
G
G
G
22 EK2
G
15 JK1
G
(BAT)
20A
RR DOOR
LH
19 2C
L
17 JK1
L
M
J11
Rear Power Window Regulator
Motor Assembly LH
LIN LED UP DOWN AUTO GND B
9 5 10 7 4 1 2
G L B R W-B
W-B
4 6 7 8 1
LED UP DOWN AUTO GND
J10
Rear Power Window Regulator Switch Assembly LH
W-B
10 JK1
W-B
G
K1

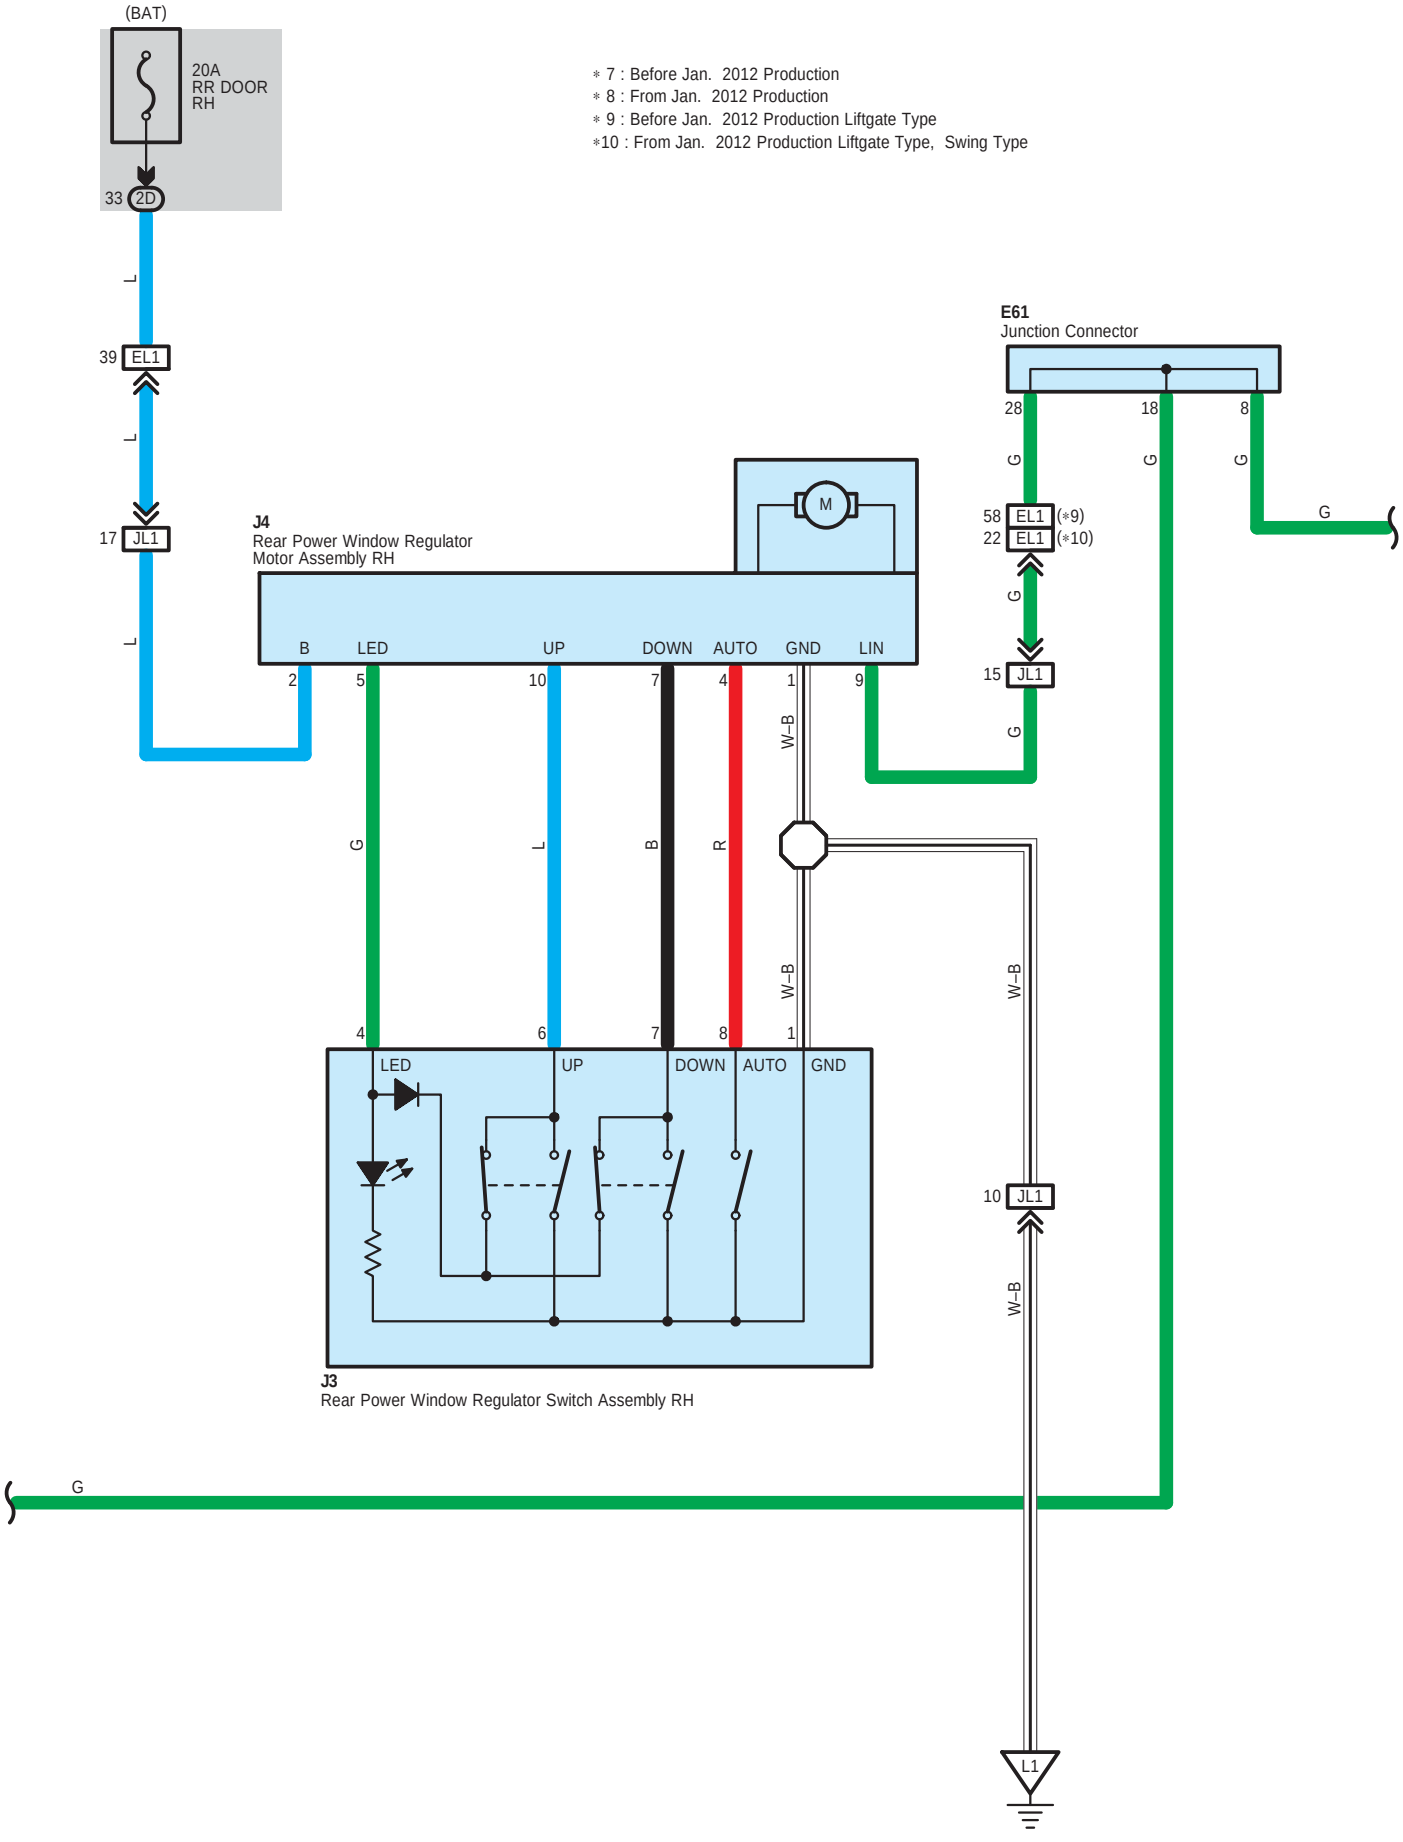

(BAT)
20A
RR DOOR
RH
33 2D
L
39 EL1
L
17 JL1
L
∗ 7 : Before Jan. 2012 Production
∗ 8 : From Jan. 2012 Production
∗ 9 : Before Jan. 2012 Production Liftgate Type
∗10 : From Jan. 2012 Production Liftgate Type, Swing Type
E61
Junction Connector
28
18
8
G
G
G
G
58 EL1 (∗9)
22 EL1 (∗10)
G
15 JL1
G
J4
Rear Power Window Regulator
Motor Assembly RH
M
B
LED
UP
DOWN
AUTO
GND
LIN
2
5
10
7
4
1
9
G
L
B
R
W–B
W–B
W–B
4
6
7
8
1
LED
UP
DOWN
AUTO
GND
10 JL1
W–B
J3
Rear Power Window Regulator Switch Assembly RH
G
L1

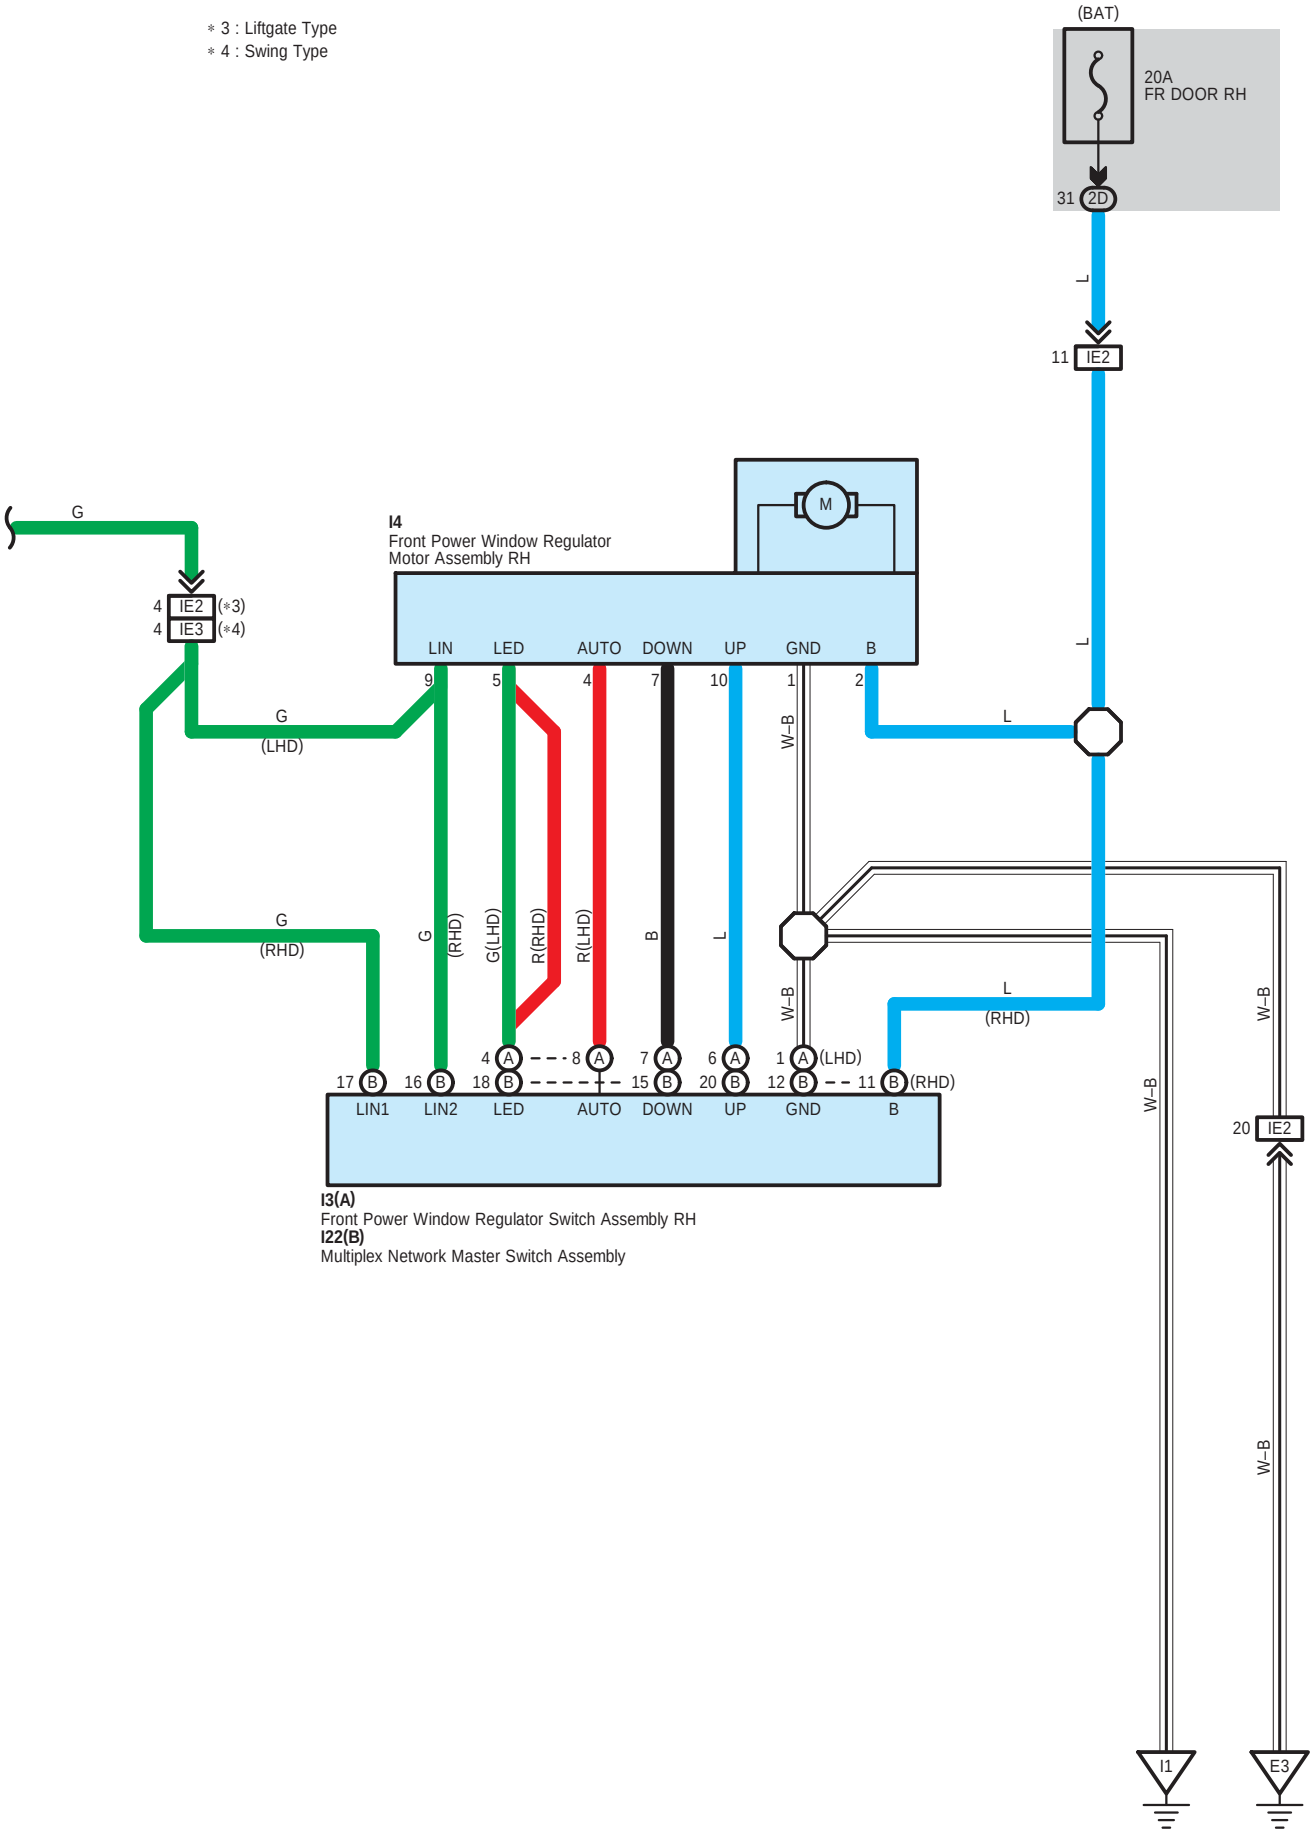
∗ 3 : Liftgate Type
∗ 4 : Swing Type
(BAT)
20A
FR DOOR RH
31 2D
L
11 IE2
M
I4
Front Power Window Regulator
Motor Assembly RH
LIN LED AUTO DOWN UP GND B
9 5 4 7 10 1 2
G
4 IE2 (∗3)
4 IE3 (∗4)
G
(LHD)
G
(RHD)
G(RHD)
R(RHD)
R(LHD)
B
L
W–B
L
L
(RHD)
W–B
W–B
W–B
4 A 8 A 7 A 6 A 1 A (LHD)
17 B 16 B 18 B 15 B 20 B 12 B 11 B (RHD)
LIN1 LIN2 LED AUTO DOWN UP GND B
20 IE2
I3(A)
Front Power Window Regulator Switch Assembly RH
I22(B)
Multiplex Network Master Switch Assembly
I1
E3


A 20
Black




E 1
White

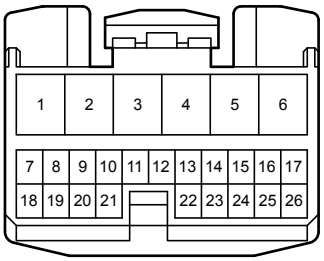


E 2
White

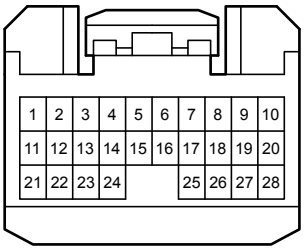


E 3
White

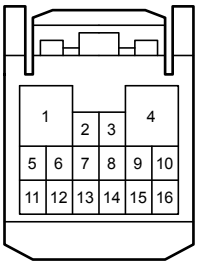


E 4
White

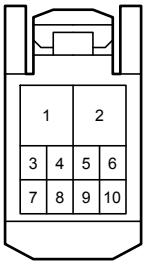


E 29
White

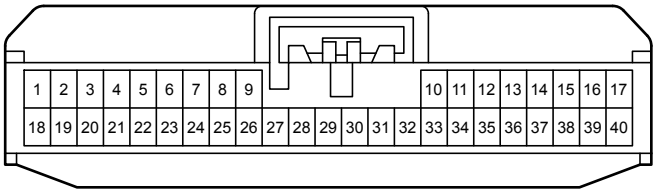


E 58

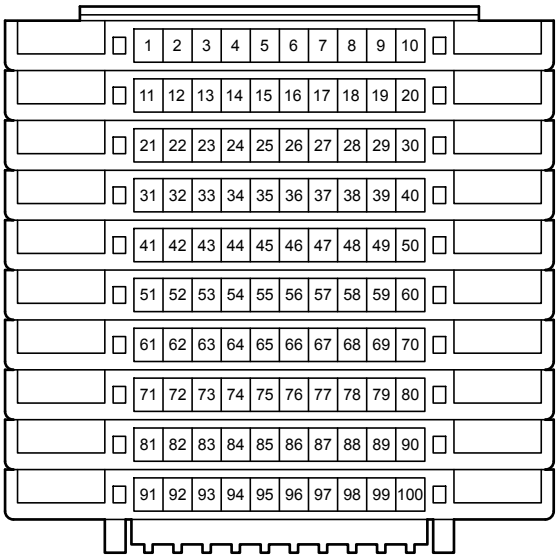


E 59

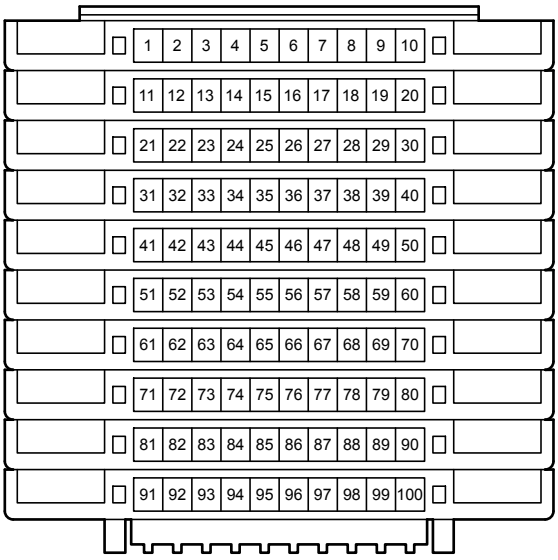


E 61

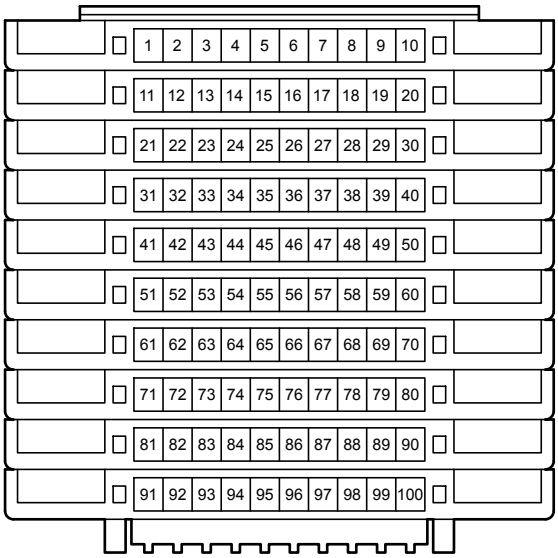


E 62
White

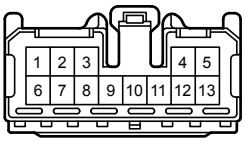


E 63
Gray




E 67
White

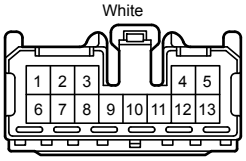


E 73
Gray

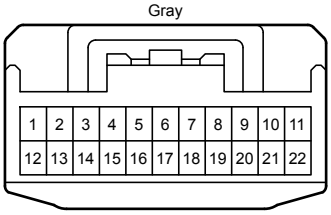


E 76
Gray

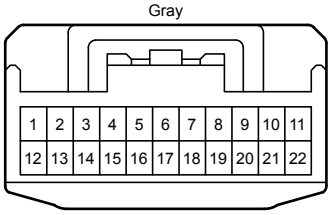


E 94
White




E115
White

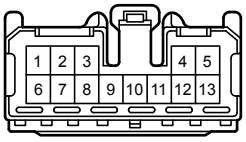


I 3
White

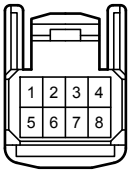


I 4
White

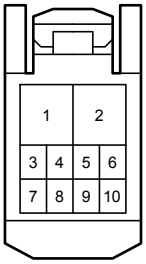


I 6
White

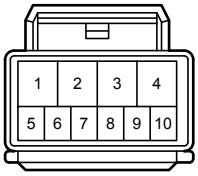


I 11
White

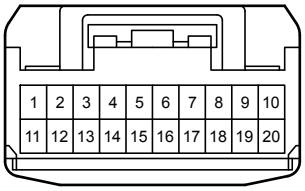


I 12
White

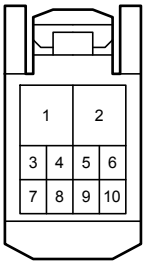


I 14
White

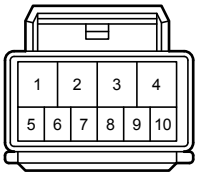


I 22
White

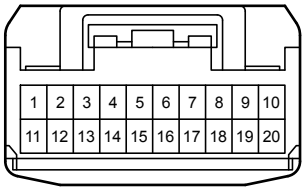


I 25
White

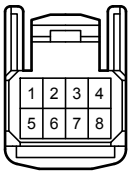


J 3
White

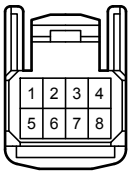


J 4
White

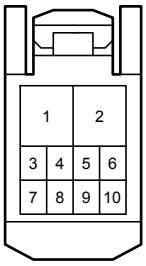

J 10
White

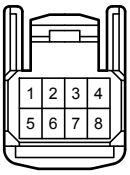

J 11
White

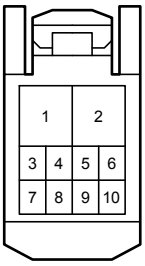


K 2
White




L 1
White




L 21
White

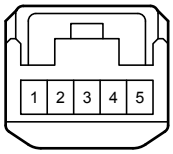


L 29
White




L 30
White




2B
White

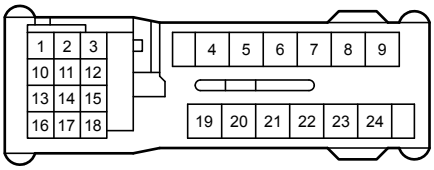


2C
White

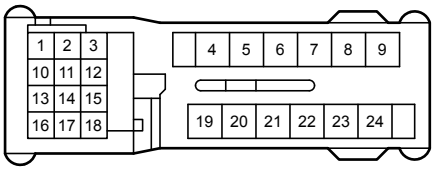

2D
White

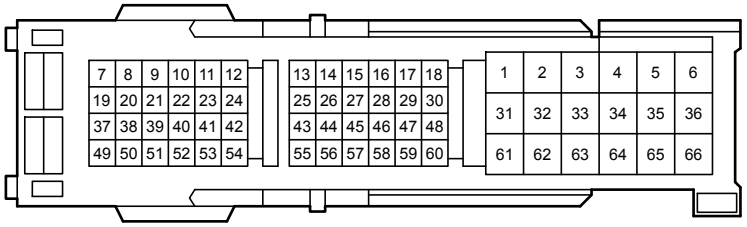


EA1
White

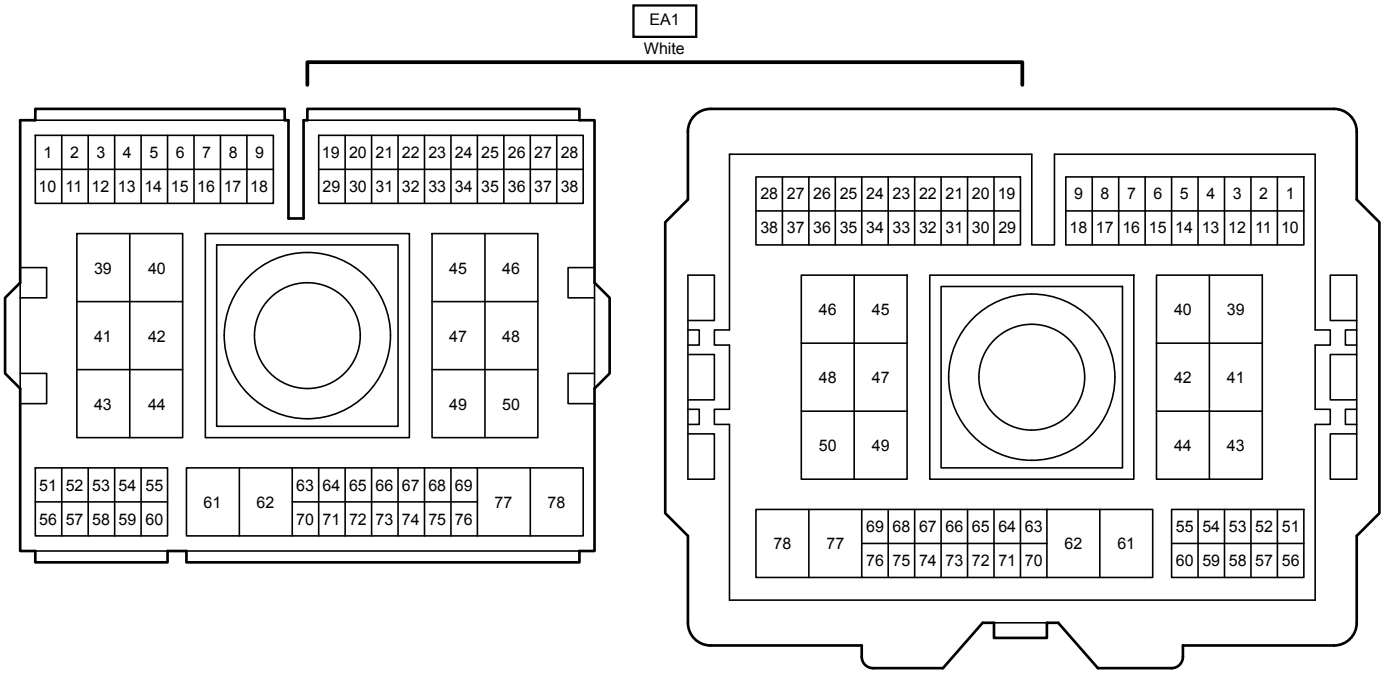

EA2


White

Gray

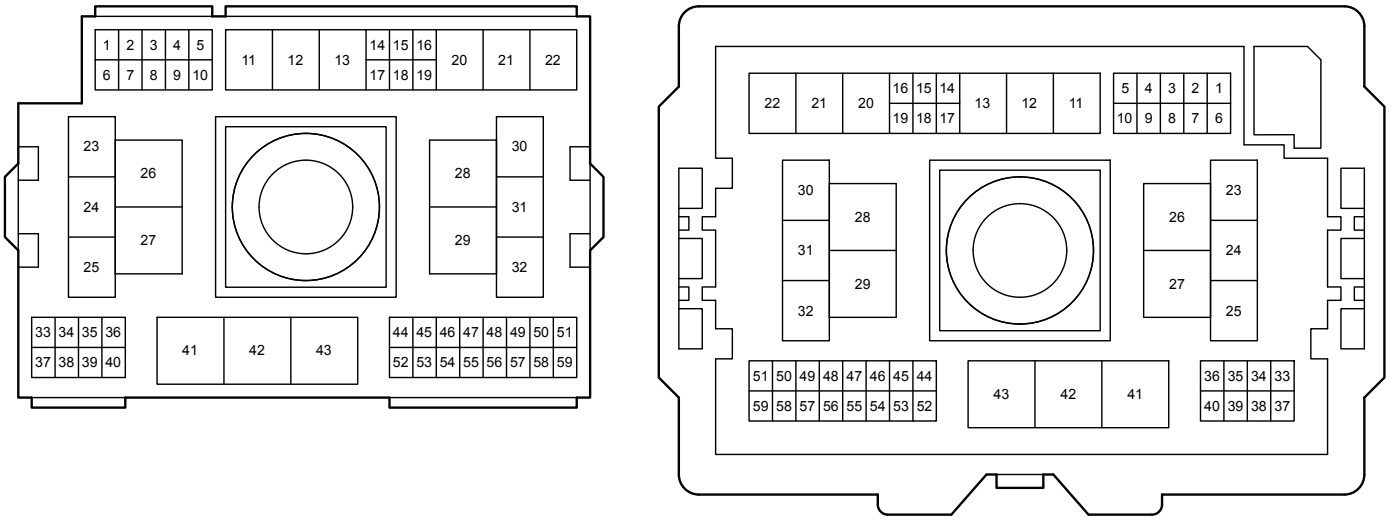



EK2

White

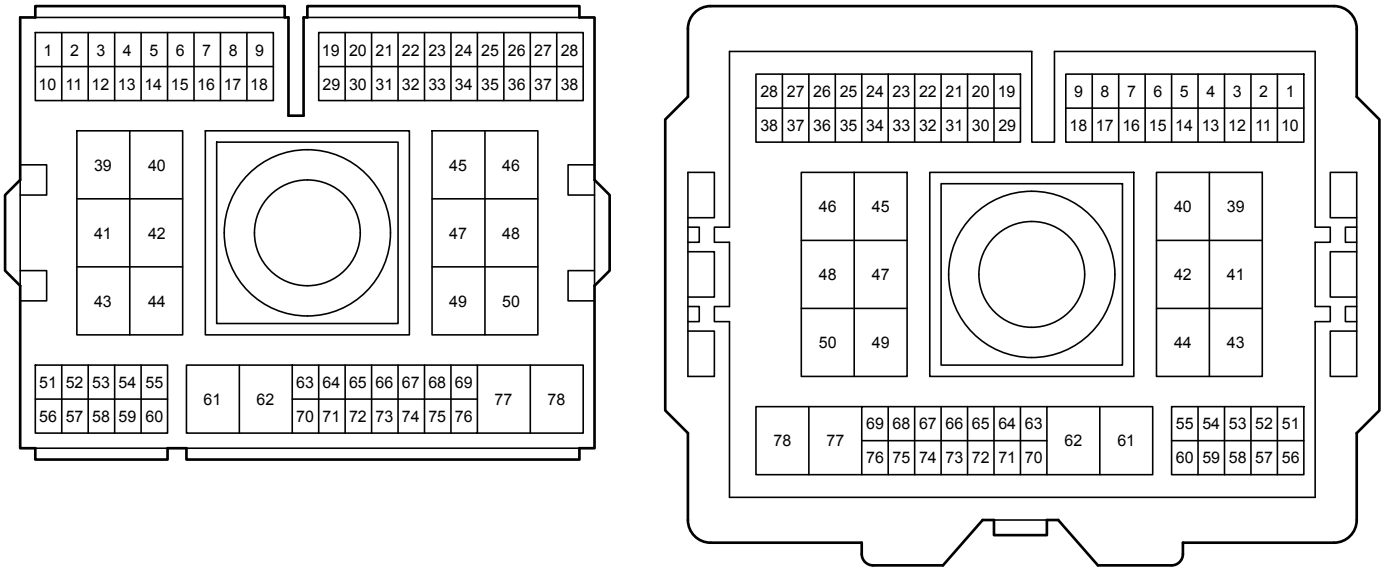


EL1
White

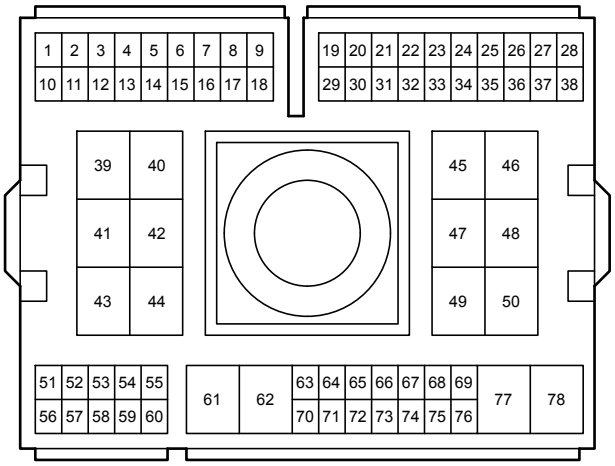


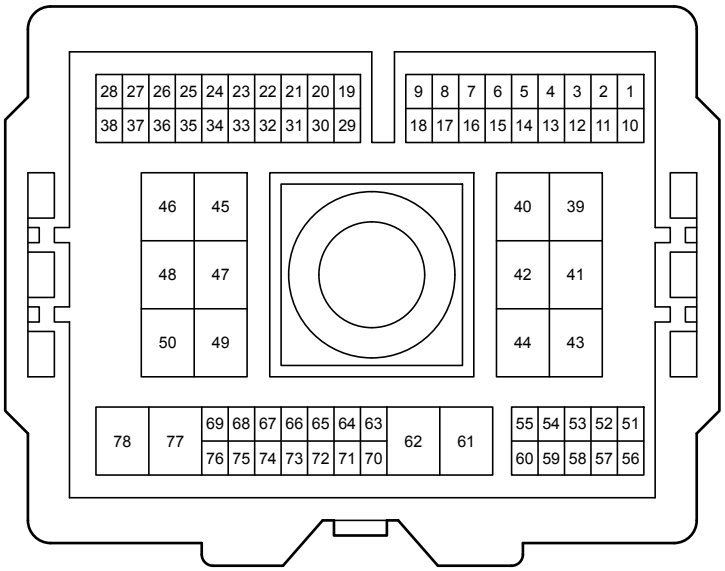


FE3
White

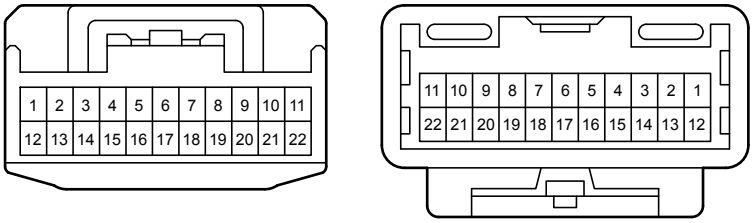


FE4
White

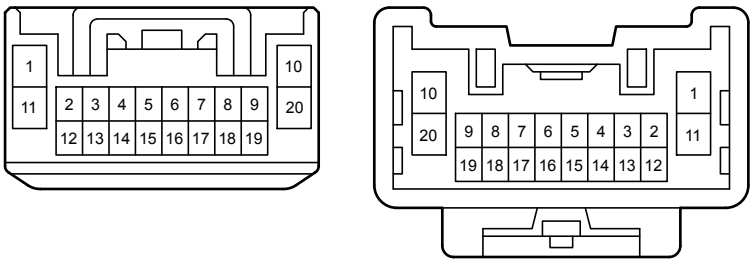


FL2
Blue

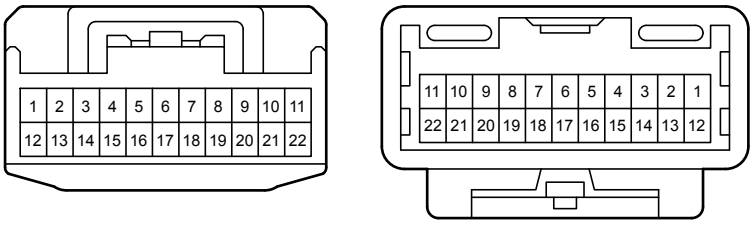


IE2
Blue

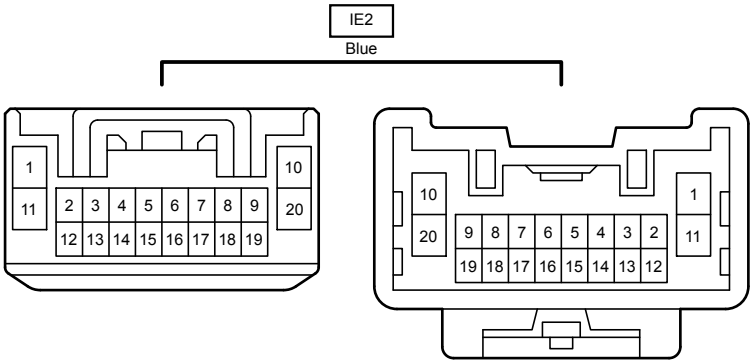


IE3
White

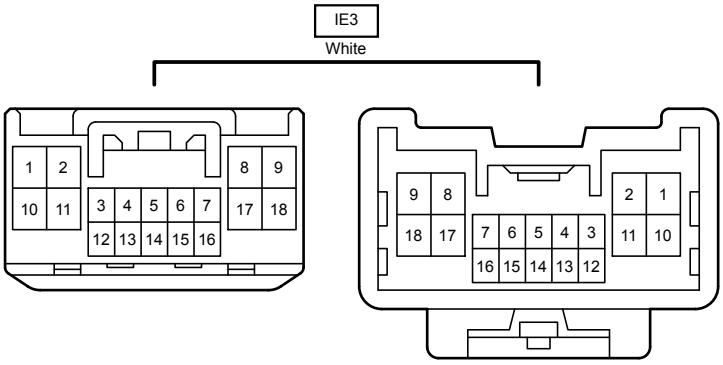


IE5
Blue

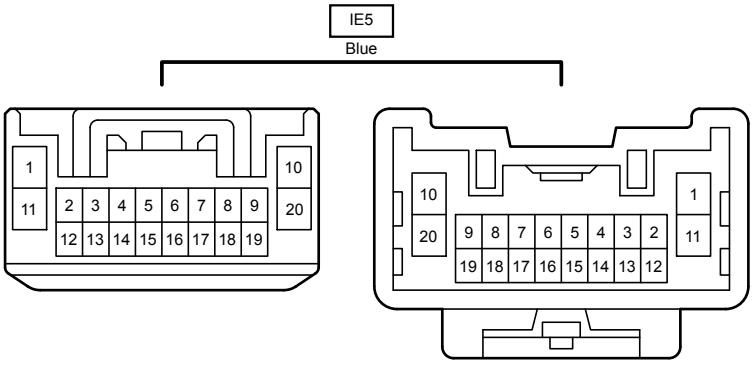


IE6
White

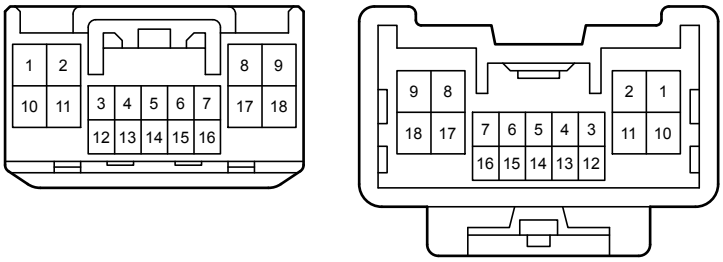

JK1
White

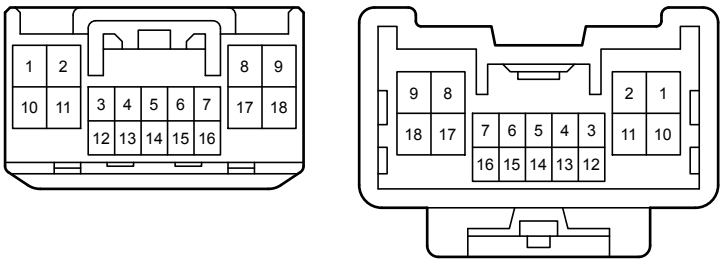

JL1
White

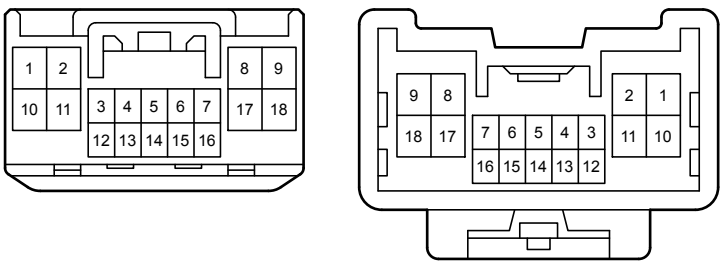

KL1
White

