



(IG)
20A
SEAT–HTR
3 3B
10 3C
G
G
17 EK1
G
17 Kc1
c13
Front Seat Heater Assembly LH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
B
E
THL
SWL
4
G
6
W–B
5
BR
1
B
(IG)
5A
LH–IG
55 2D
G
100
E58
Junction
Connector
60
G
24 Kc1
BR
18 Kc1
B
c23
Junction Connector
4
3
43 EK1
44 EK1
BR
B
15 VE2
14 VE2
13 VE2
BR
B
G
3
4
2
RV
SW
IG
E
9 Kc1
7
V1
Seat Heater Switch
W–B
1 VE1 (*1)
1 VE3 (*2)
W–B
9
E66
Junction
Connector
1
W–B
K1
E2

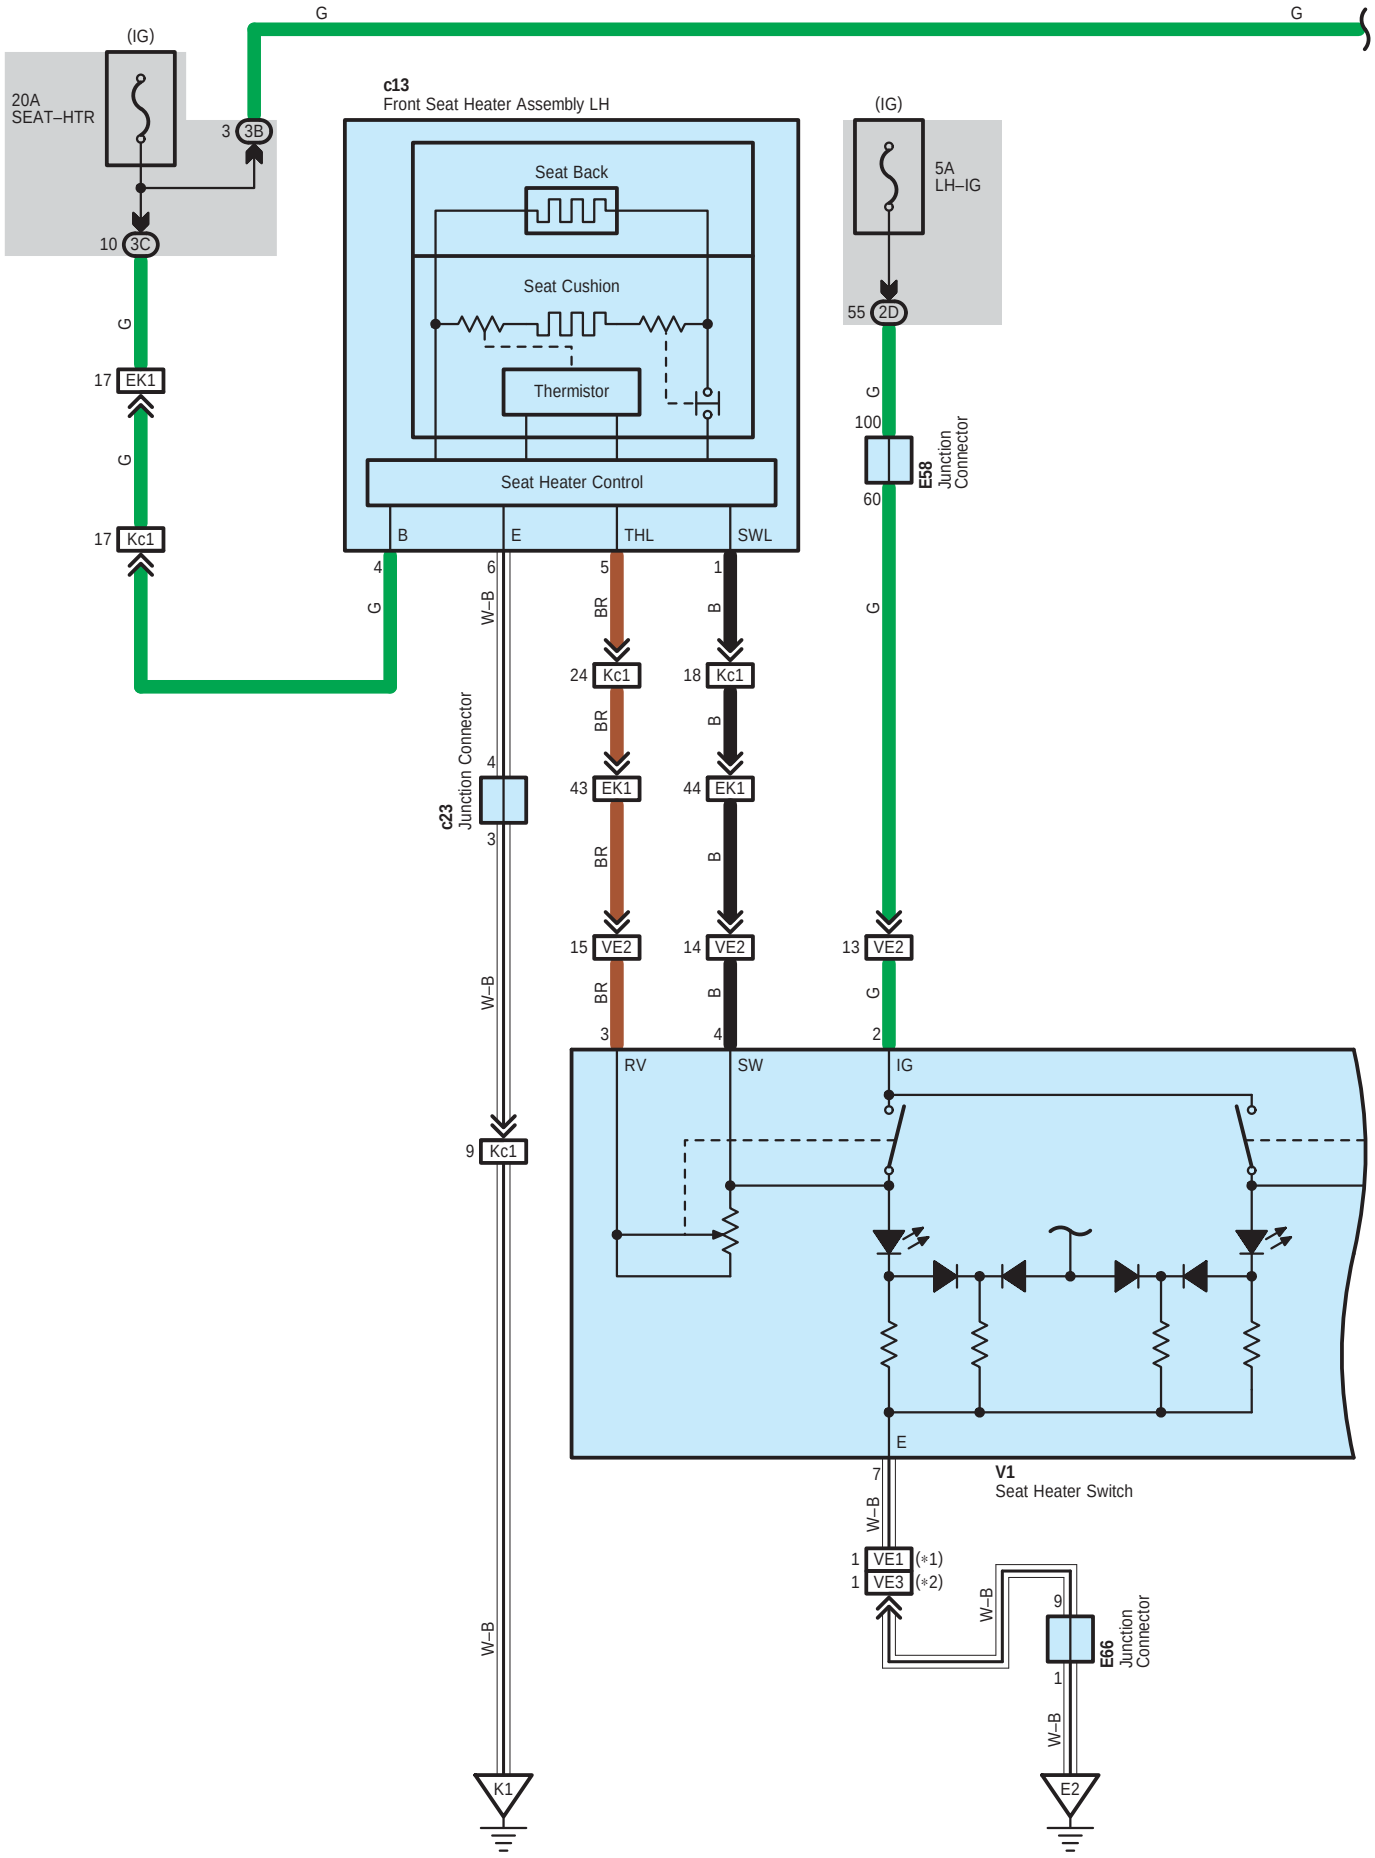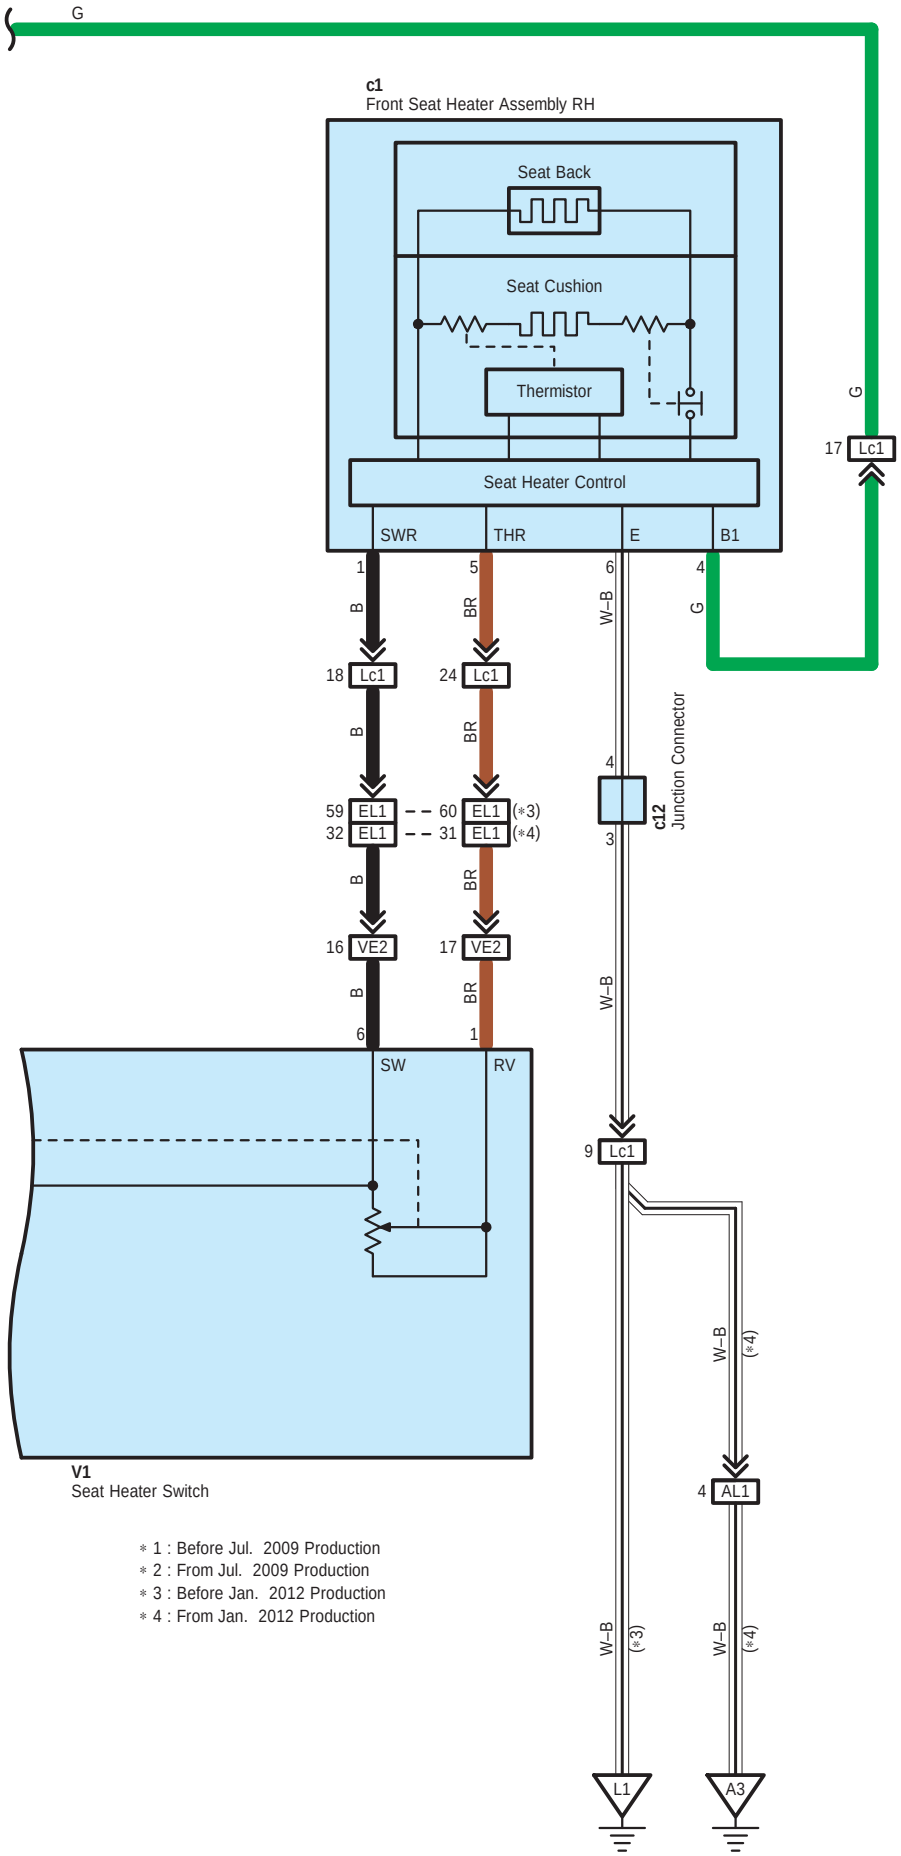


* 1 : Before Jul. 2009 Production
* 2 : From Jul. 2009 Production
* 3 : Before Jan. 2012 Production
* 4 : From Jan. 2012 Production

E 58

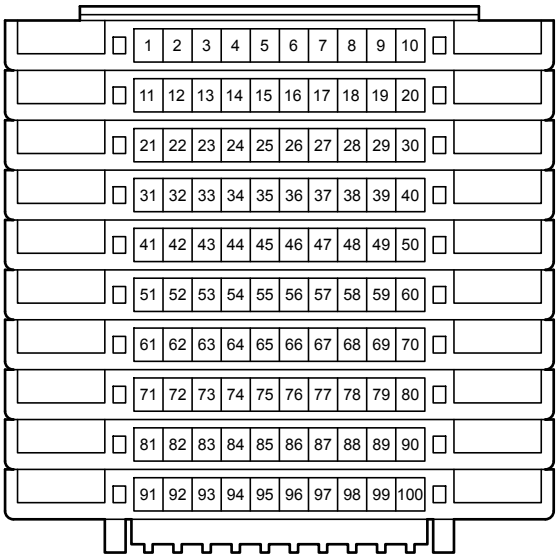


E 66

White

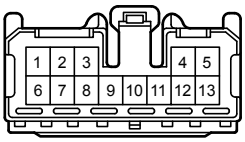


V 1

White

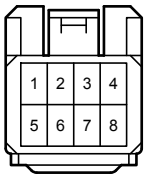


c 1

White

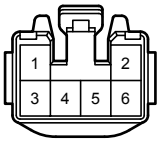


c 12

White




c 13

White

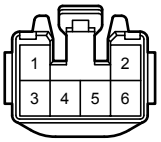


c 23

White




2D

White

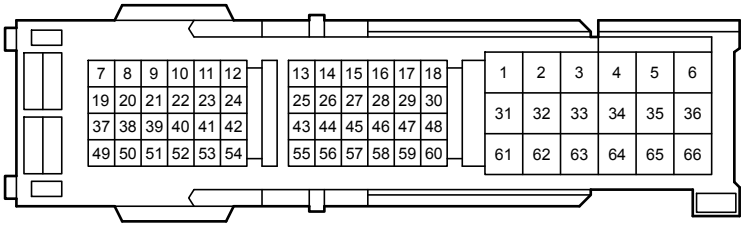


3B

Gray




3C


White

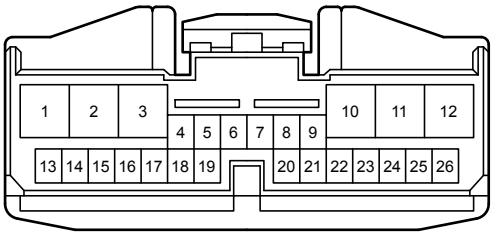


AL1


White

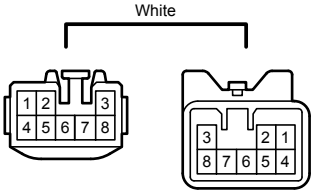

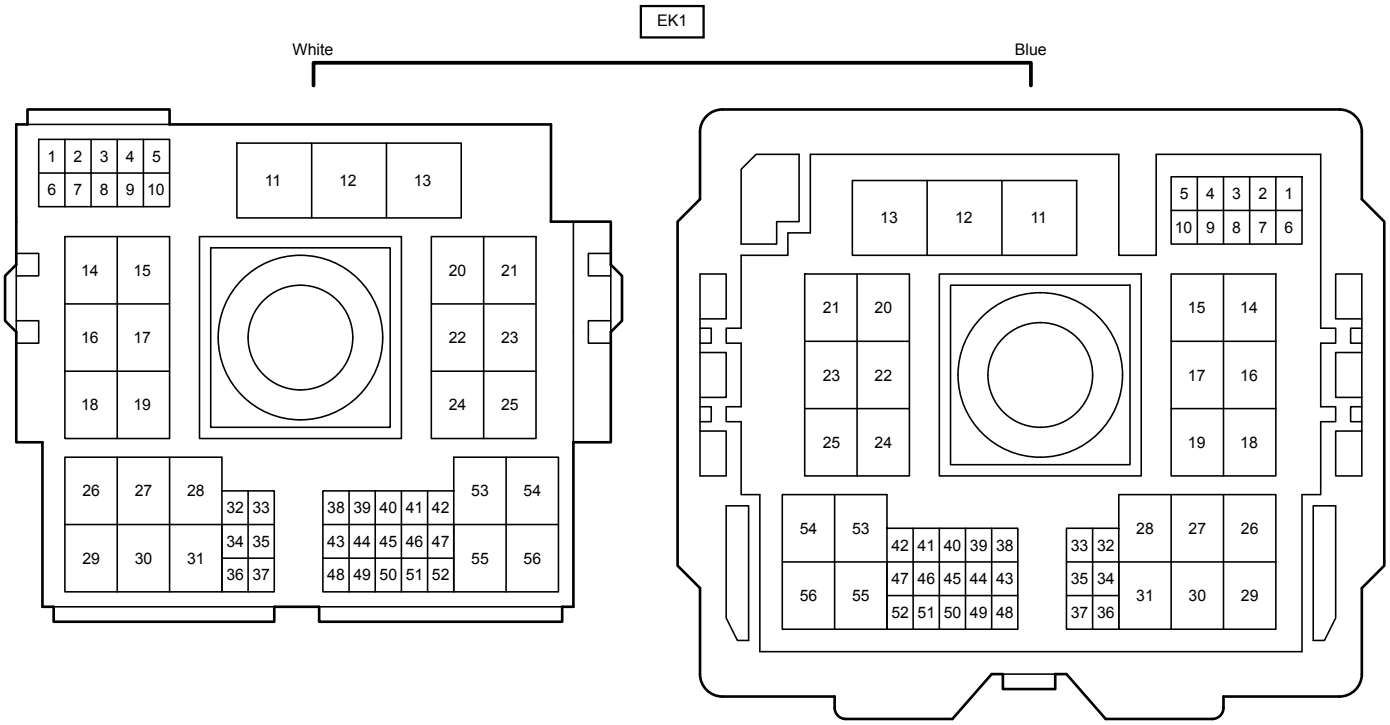

EK1
White
Blue
1 2 3 4 5
6 7 8 9 10
11 12 13
14 15
16 17
18 19
20 21
22 23
24 25
26 27 28
29 30 31
32 33
34 35
36 37
38 39 40 41 42
43 44 45 46 47
48 49 50 51 52
53 54
55 56
13 12 11
5 4 3 2 1
10 9 8 7 6
21 20
23 22
25 24
15 14
17 16
19 18
54 53
56 55
42 41 40 39 38
47 46 45 44 43
52 51 50 49 48
33 32
35 34
37 36
28 27 26
31 30 29

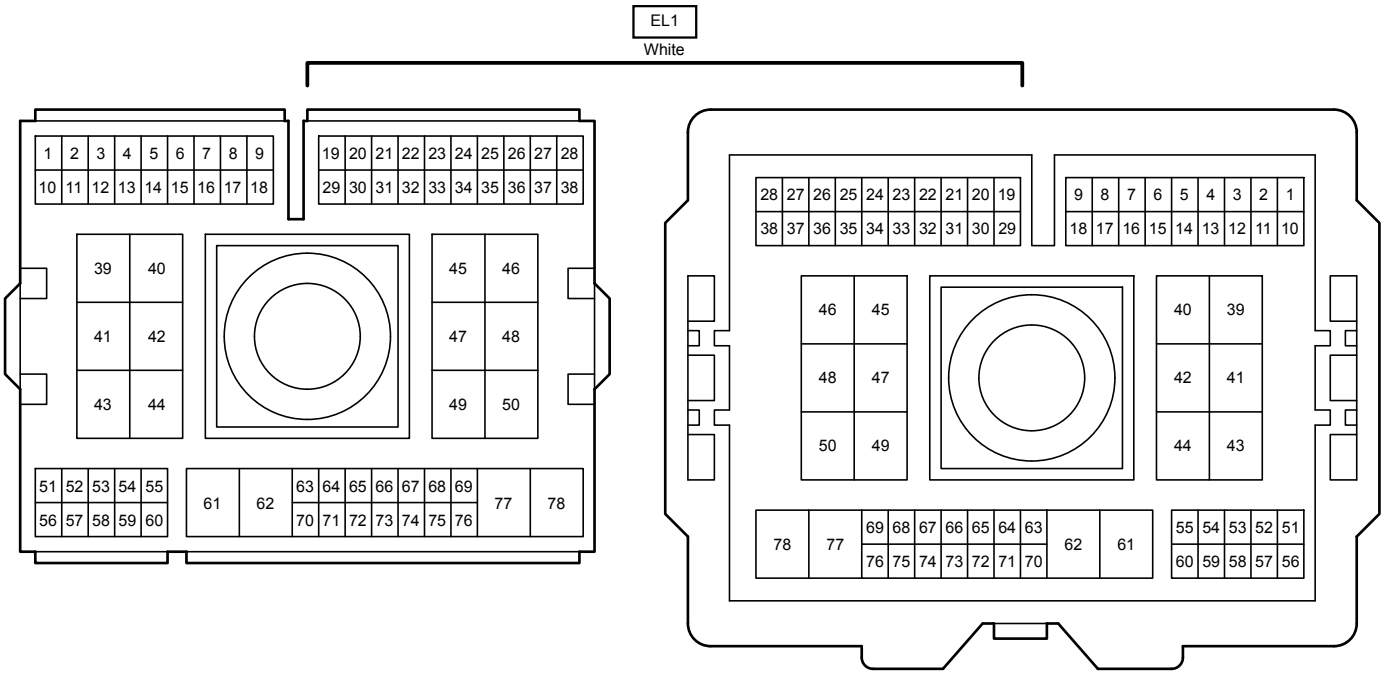
EL1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40
41 42
43 44
45 46
47 48
49 50
51 52 53 54 55
56 57 58 59 60
61 62
63 64 65 66 67 68 69
70 71 72 73 74 75 76
77 78
28 27 26 25 24 23 22 21 20 19
38 37 36 35 34 33 32 31 30 29
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
46 45
48 47
50 49
40 39
42 41
44 43
78 77
69 68 67 66 65 64 63
76 75 74 73 72 71 70
62 61
55 54 53 52 51
60 59 58 57 56


Kc1
White

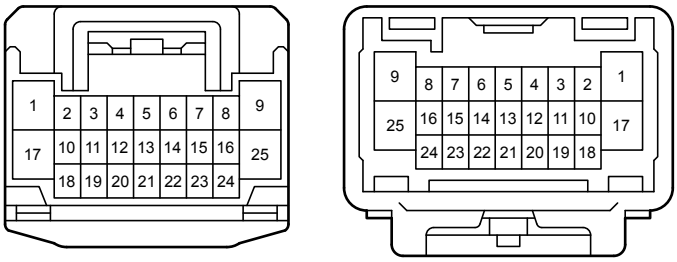


Lc1
White

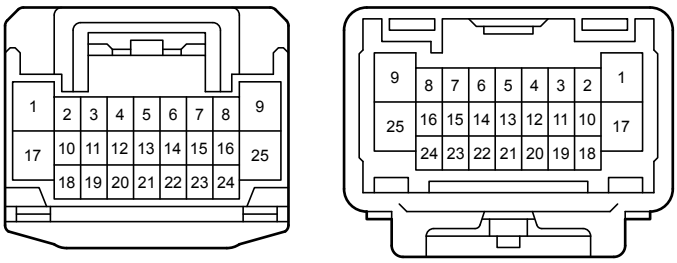

VE1
White

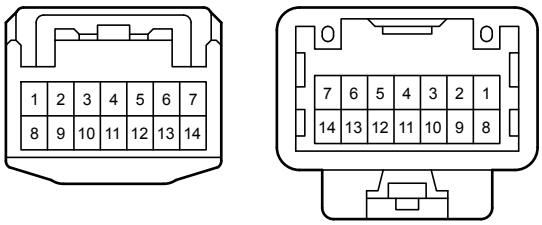

VE2
White

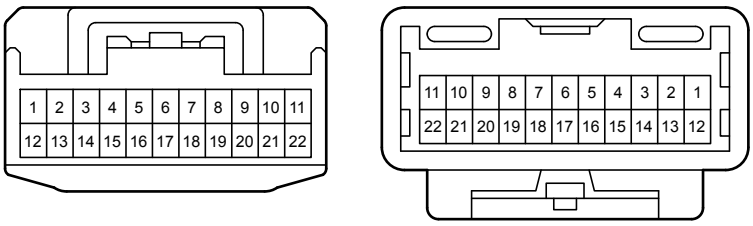

VE3
Gray

