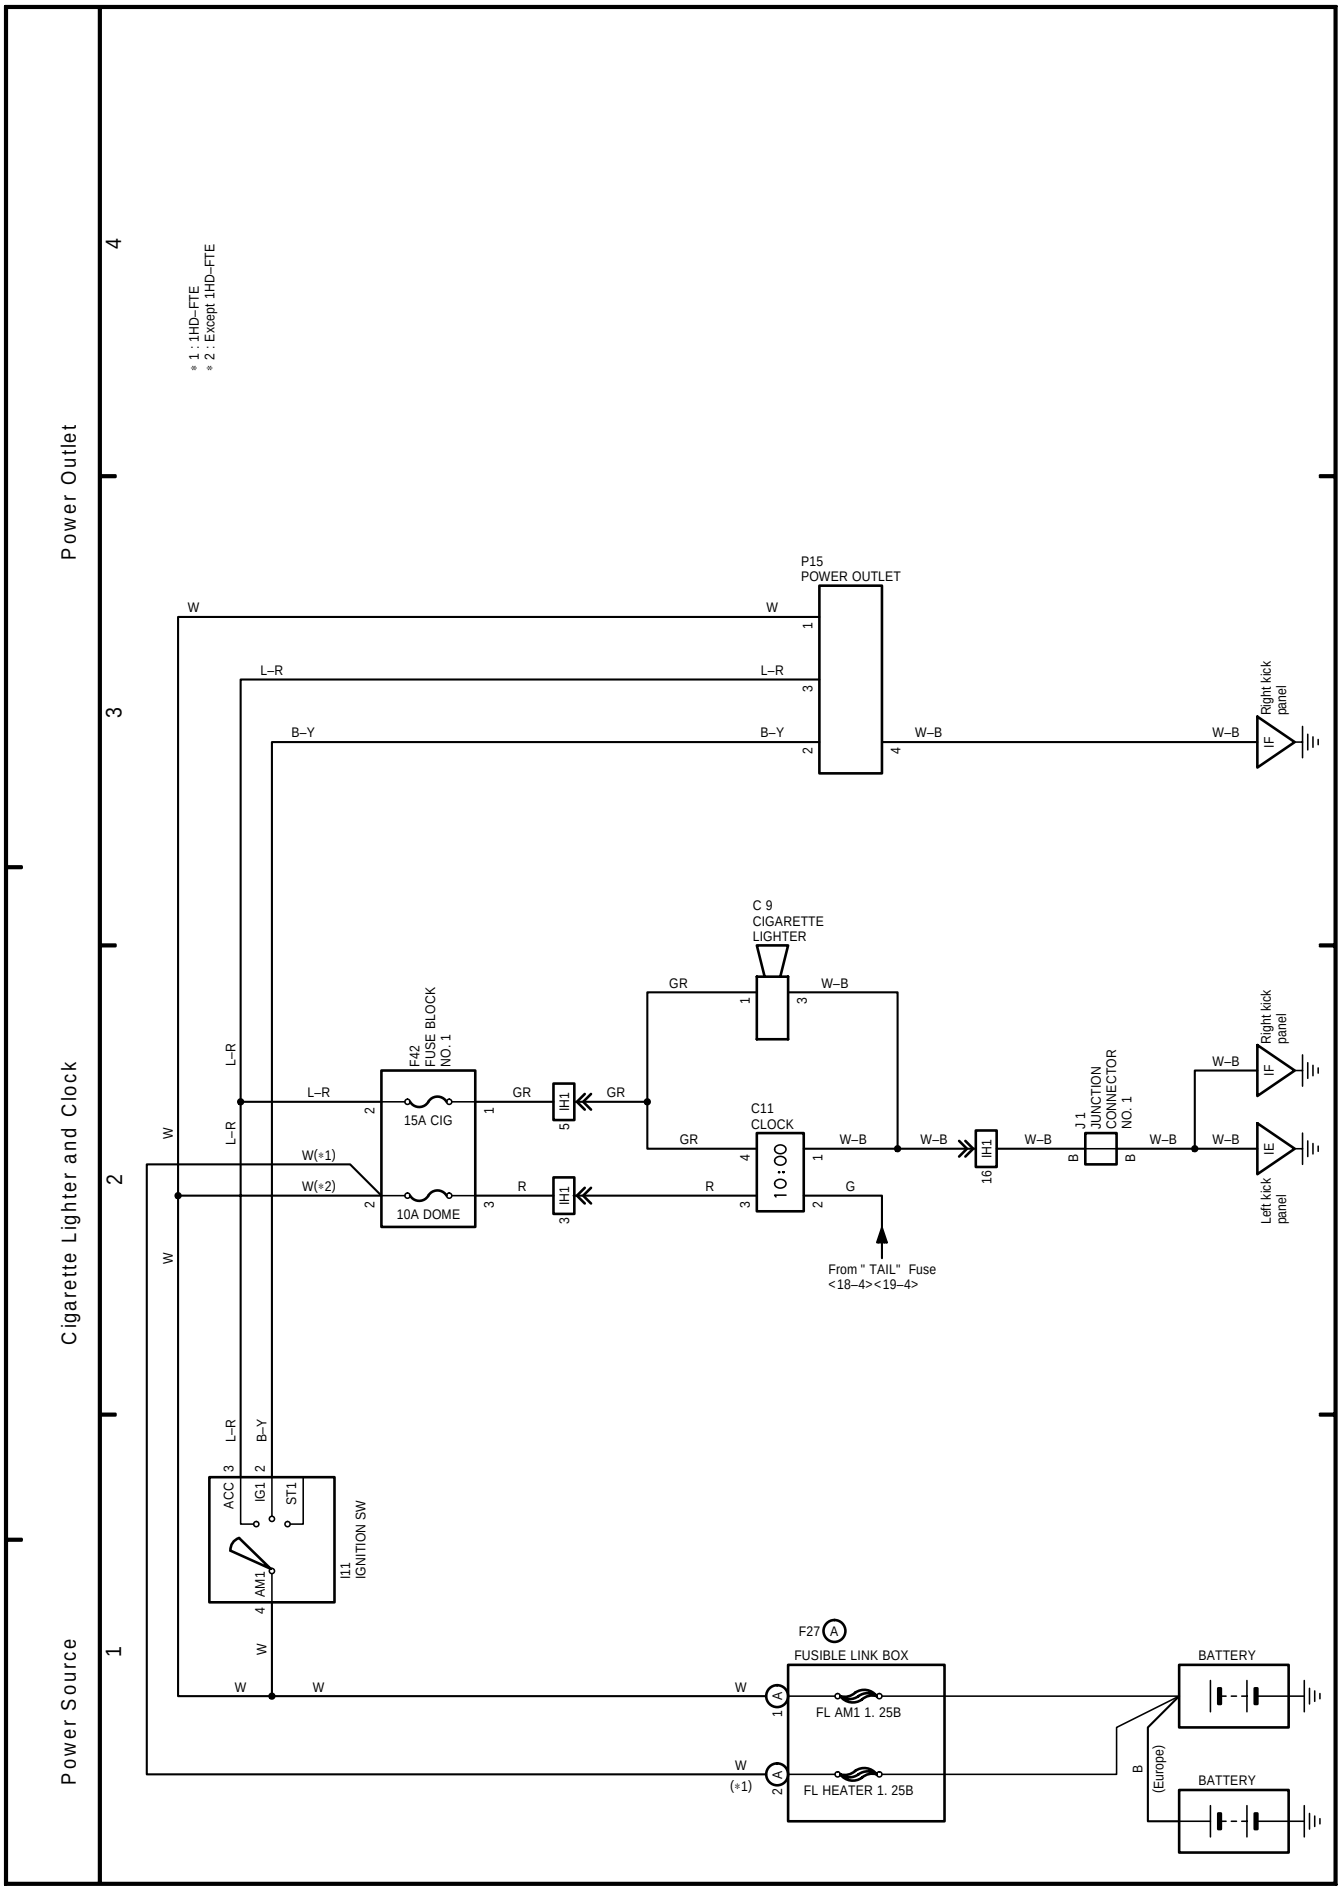

Power Source
Cigarette Lighter and Clock
Power Outlet
1
2
3
4
* 1 : 1HD–FTE
* 2 : Except 1HD–FTE
P15
POWER OUTLET
C 9
CIGARETTE
LIGHTER
C11
CLOCK
10:00
F42
FUSE BLOCK
NO. 1
15A CIG
10A DOME
IH1
J 1
JUNCTION
CONNECTOR
NO. 1
IF
IE
Right kick
panel
Left kick
panel
I11
IGNITION SW
ACC
IG1
ST1
AM1
F27
FUSIBLE LINK BOX
FL AM1 1. 25B
FL HEATER 1. 25B
BATTERY
(Europe)
From " TAIL" Fuse
<18–4><19–4>
W
L–R
B–Y
GR
R
G
W–B
B
W(*1)
W(*2)