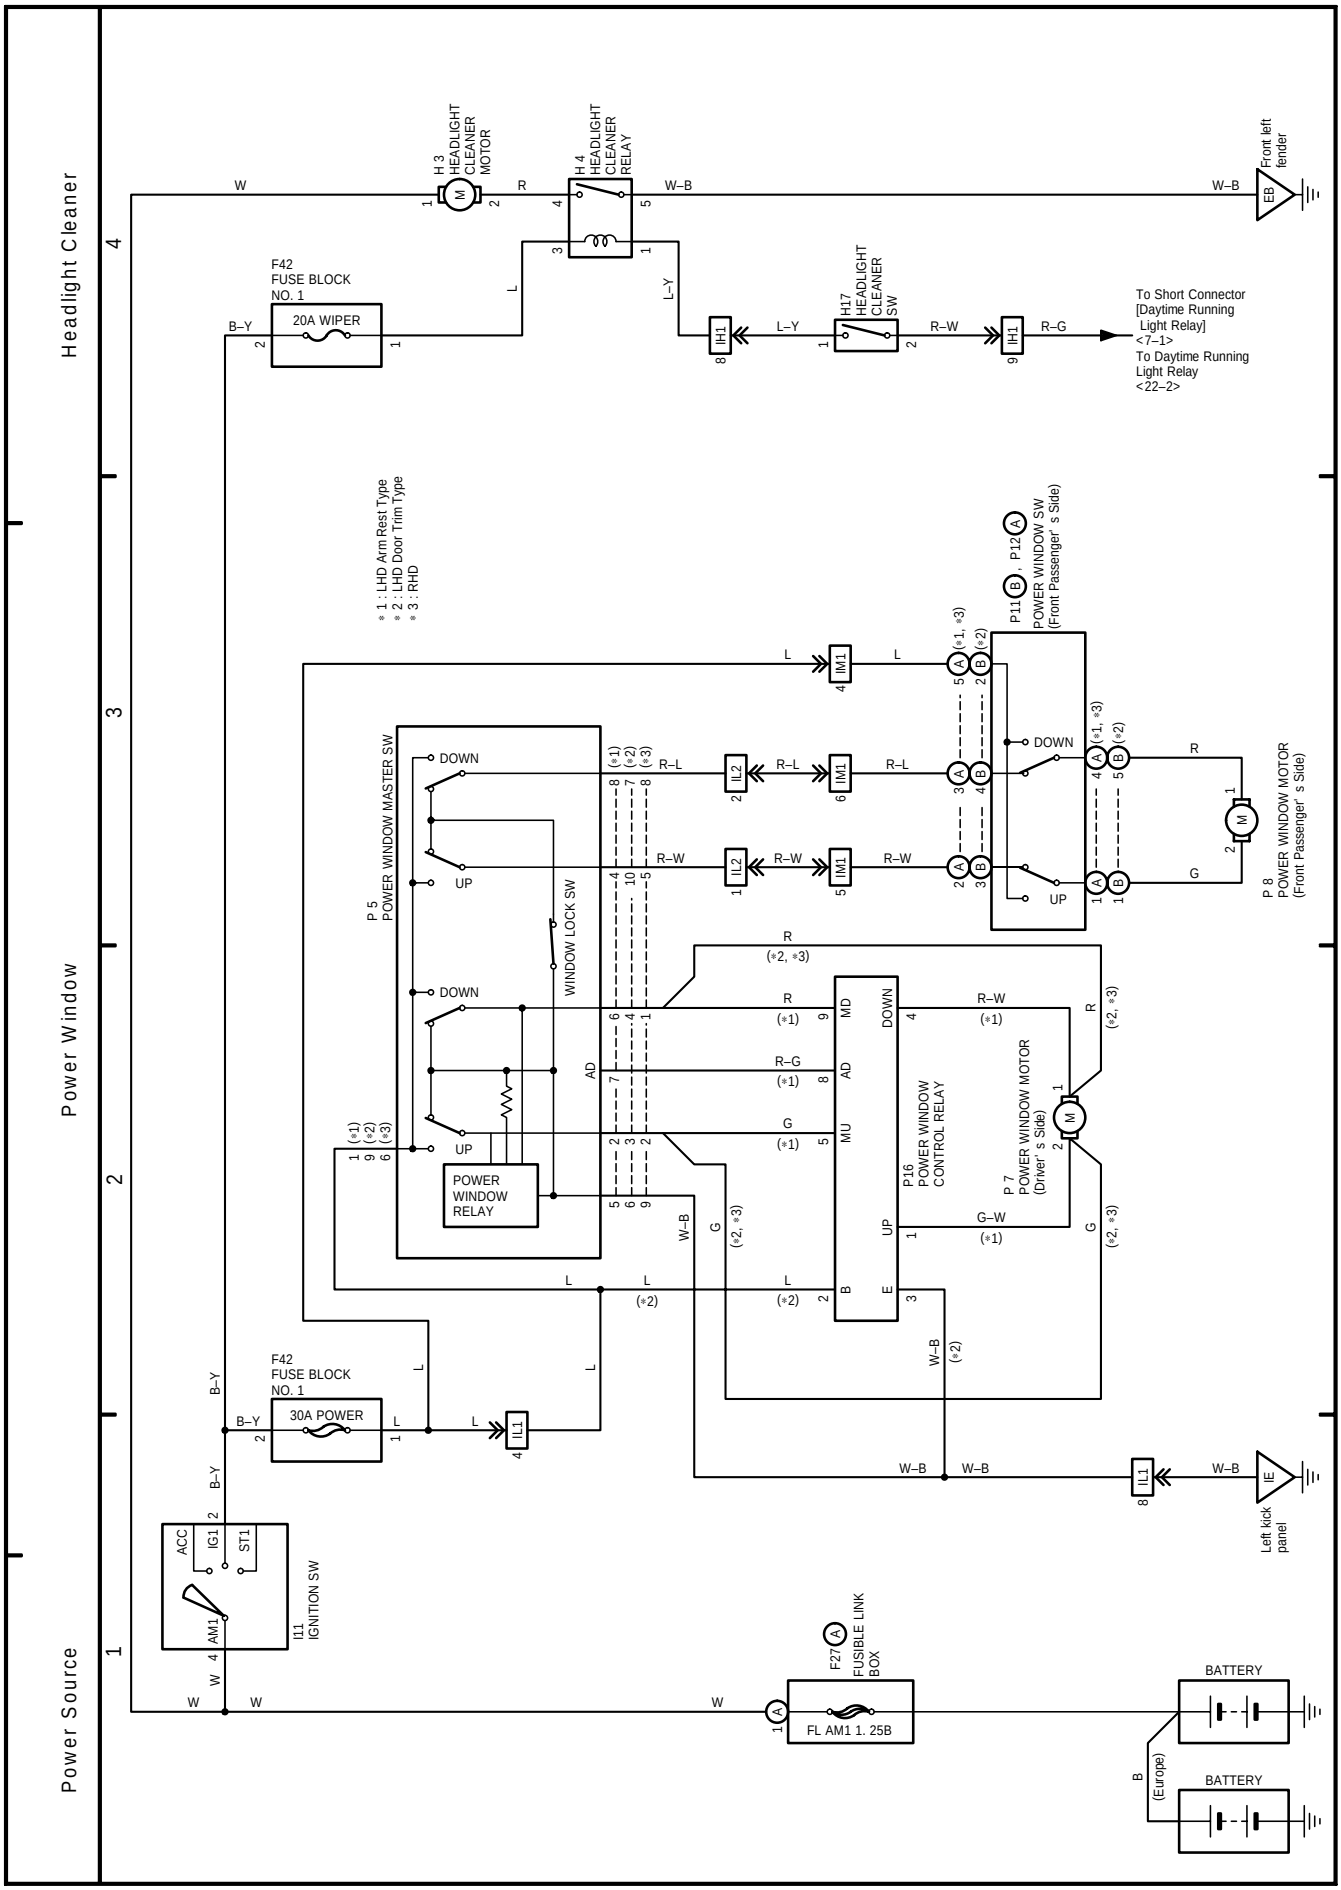

Power Source
Power Window
Headlight Cleaner
1
2
3
4
BATTERY
BATTERY
(Europe)
FL AM1 1. 25B
F27 FUSIBLE LINK BOX
I11 IGNITION SW
ACC
IG1
ST1
AM1
F42 FUSE BLOCK NO. 1
30A POWER
20A WIPER
IL1
Left kick panel
IE
EB
Front left fender
H 3 HEADLIGHT CLEANER MOTOR
H 4 HEADLIGHT CLEANER RELAY
H17 HEADLIGHT CLEANER SW
IH1
To Short Connector [Daytime Running Light Relay] <7–1>
To Daytime Running Light Relay <22–2>
P 5 POWER WINDOW MASTER SW
WINDOW LOCK SW
DOWN
UP
POWER WINDOW RELAY
IL2
IM1
P11 (B), P12 (A) POWER WINDOW SW (Front Passenger' s Side)
P 8 POWER WINDOW MOTOR (Front Passenger' s Side)
P16 POWER WINDOW CONTROL RELAY
P 7 POWER WINDOW MOTOR (Driver' s Side)
MD
AD
MU
UP
DOWN
B
E
* 1 : LHD Arm Rest Type
* 2 : LHD Door Trim Type
* 3 : RHD