
Europe


Recommended Viscosity (SAE):

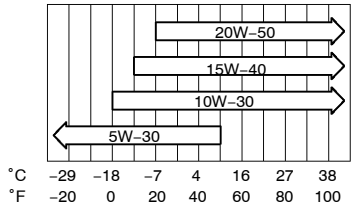

TEMPERATURE RANGE ANTICIPATED BEFORE NEXT OIL CHANGE

Except Europe

Recommended Viscosity (SAE):

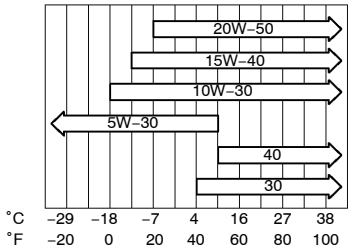

TEMPERATURE RANGE ANTICIPATED BEFORE NEXT OIL CHANGE

B01537
B01538

B01667

OIL AND FILTER

LU0FI–01

INSPECTION

1. CHECK ENGINE OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is visibly poor, replace the oil.

Oil grade:

API CF–4 (You may also use API CF, CE or CD)

If you use SAE 10W–30 or higher viscosity oil in extremely low temperatures, the engine may became difficult to start, so SAE 5W–30 engine oil is recommended.

2. CHECK ENGINE OIL LEVEL

After warming up the engine and then 5 minutes after the engine stop, oil level should be between ”L” and ”F” of the dipstick.

If low, check for leakage and add oil up to ”F” mark.

NOTICE:

Do not fill with engine oil above the ”F” mark.