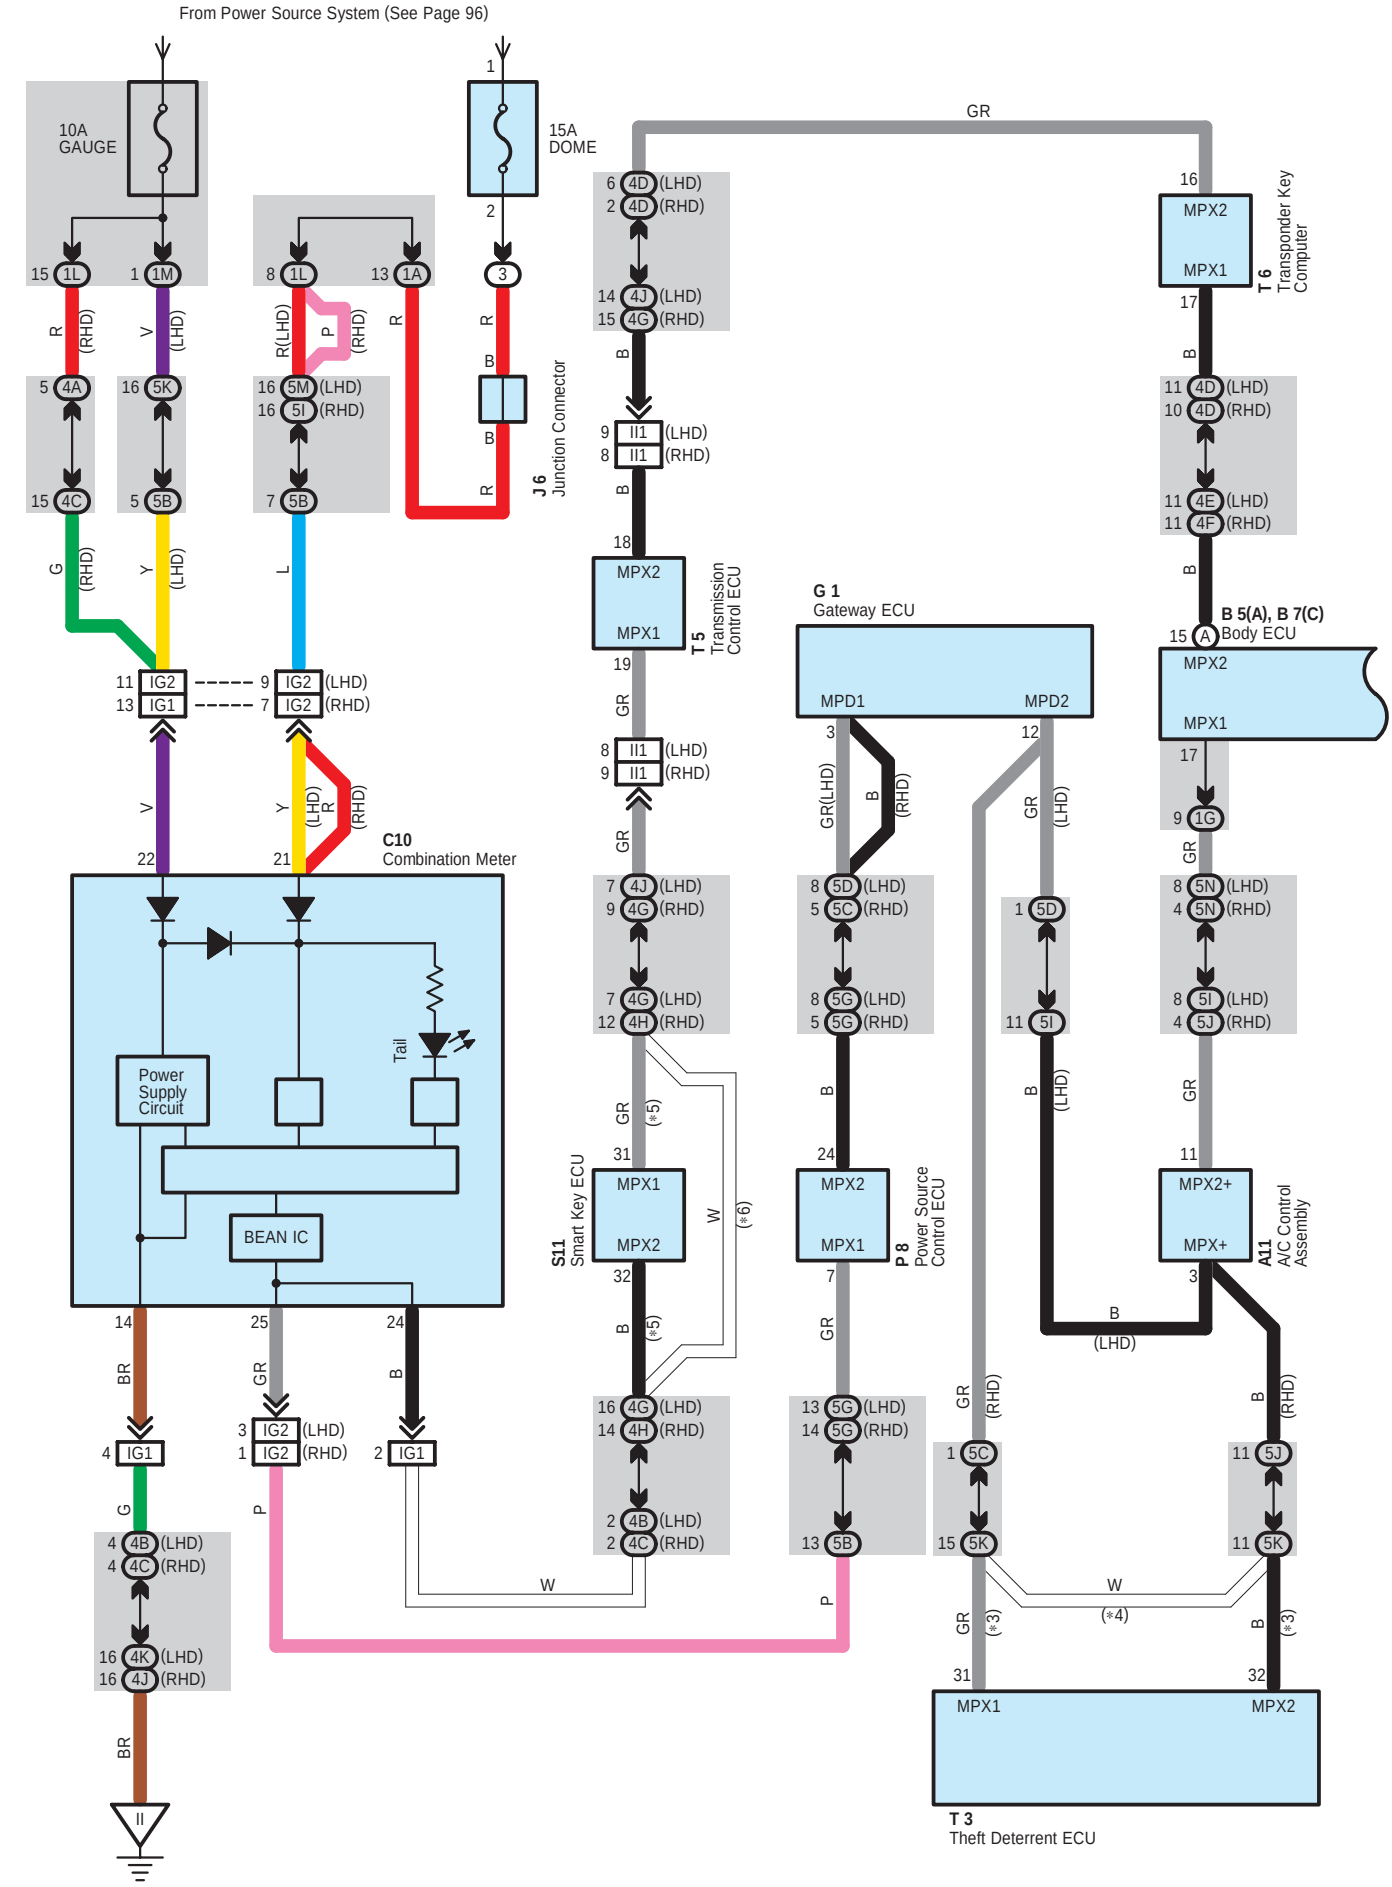
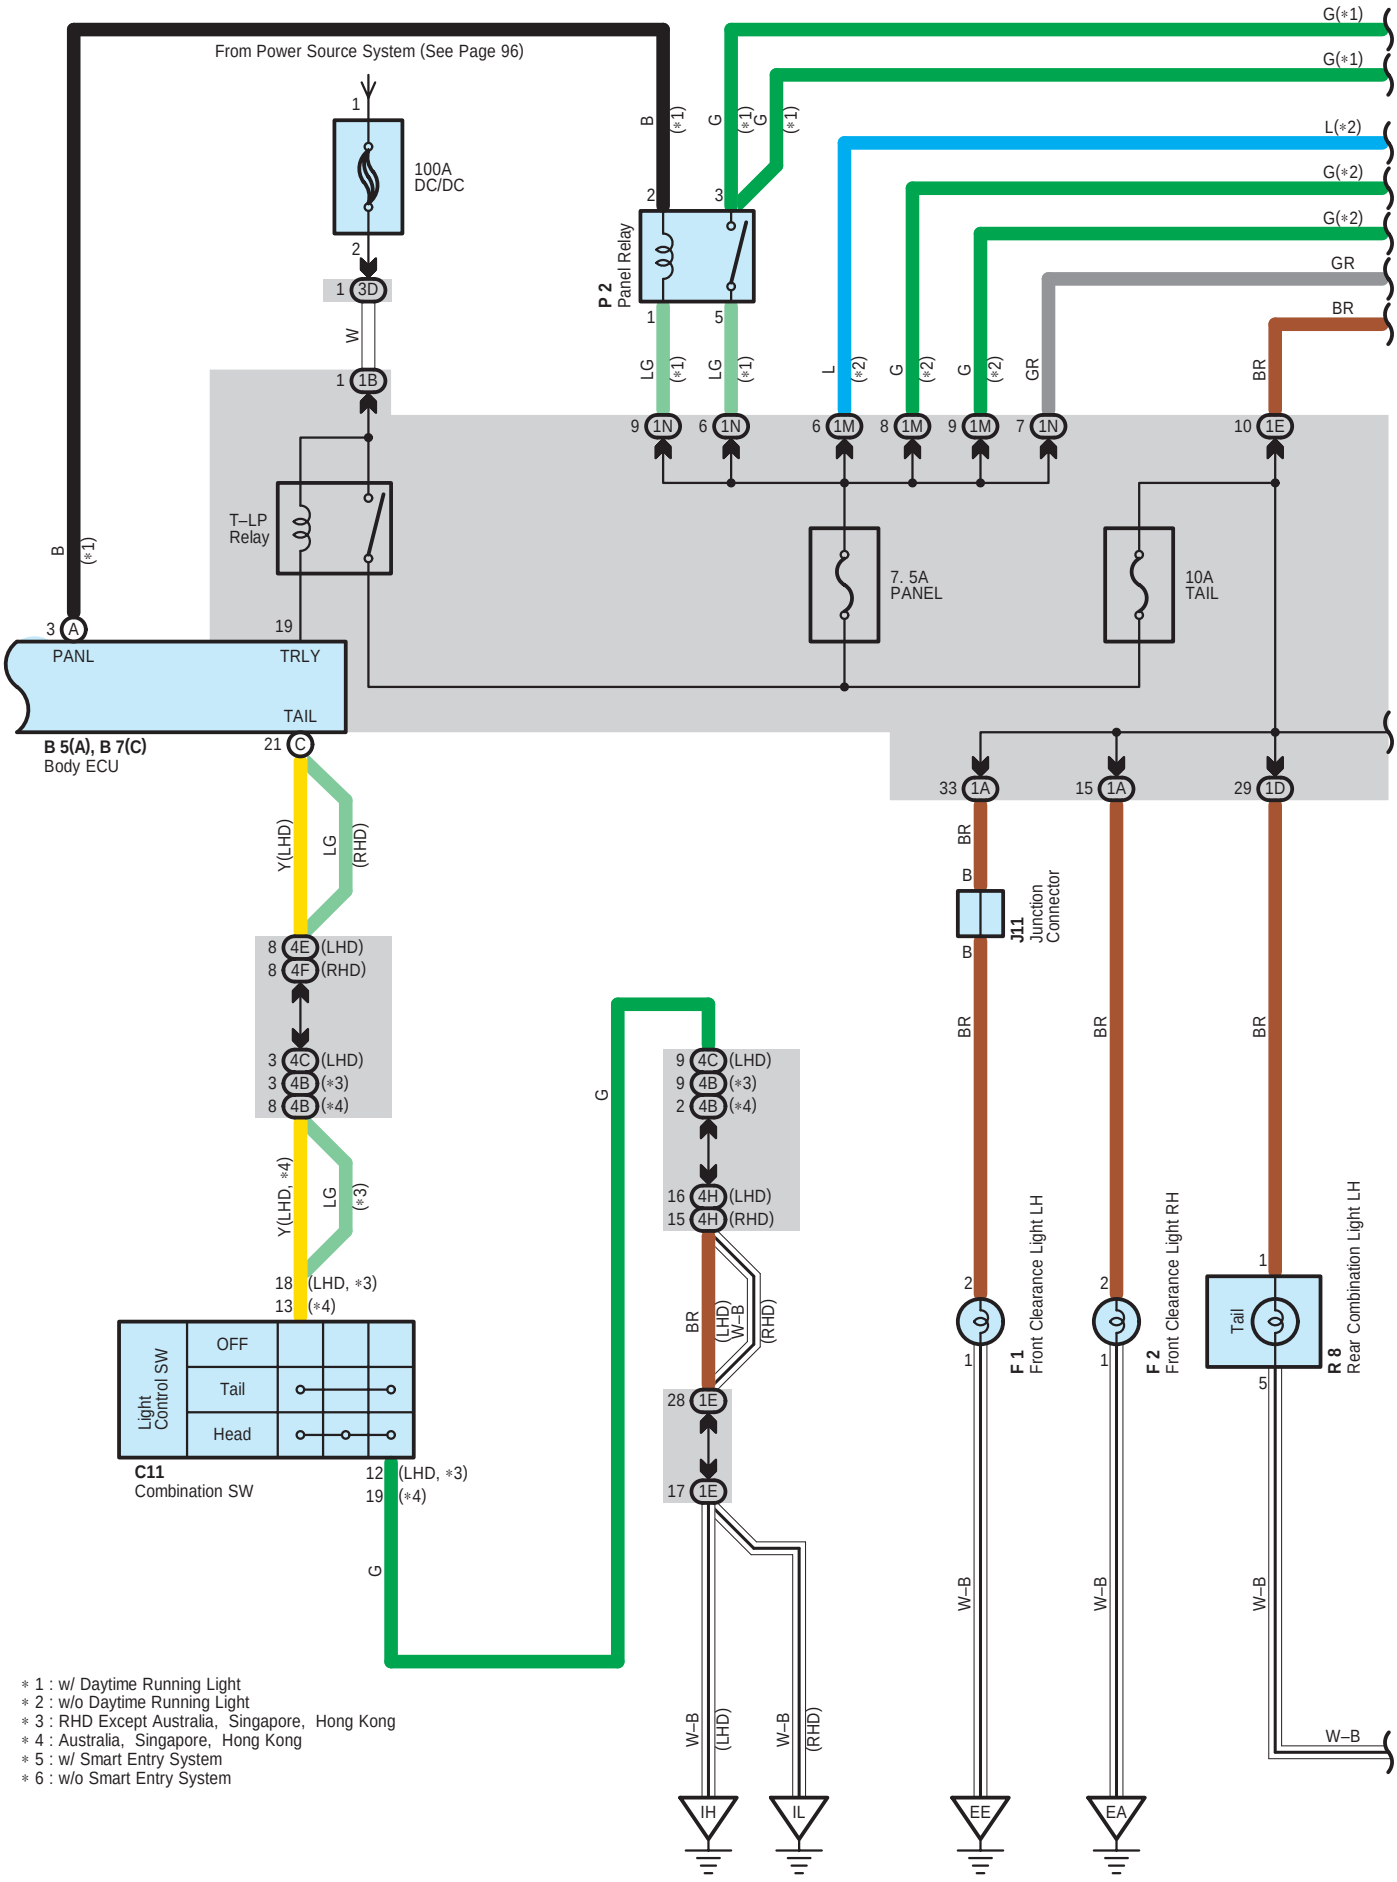
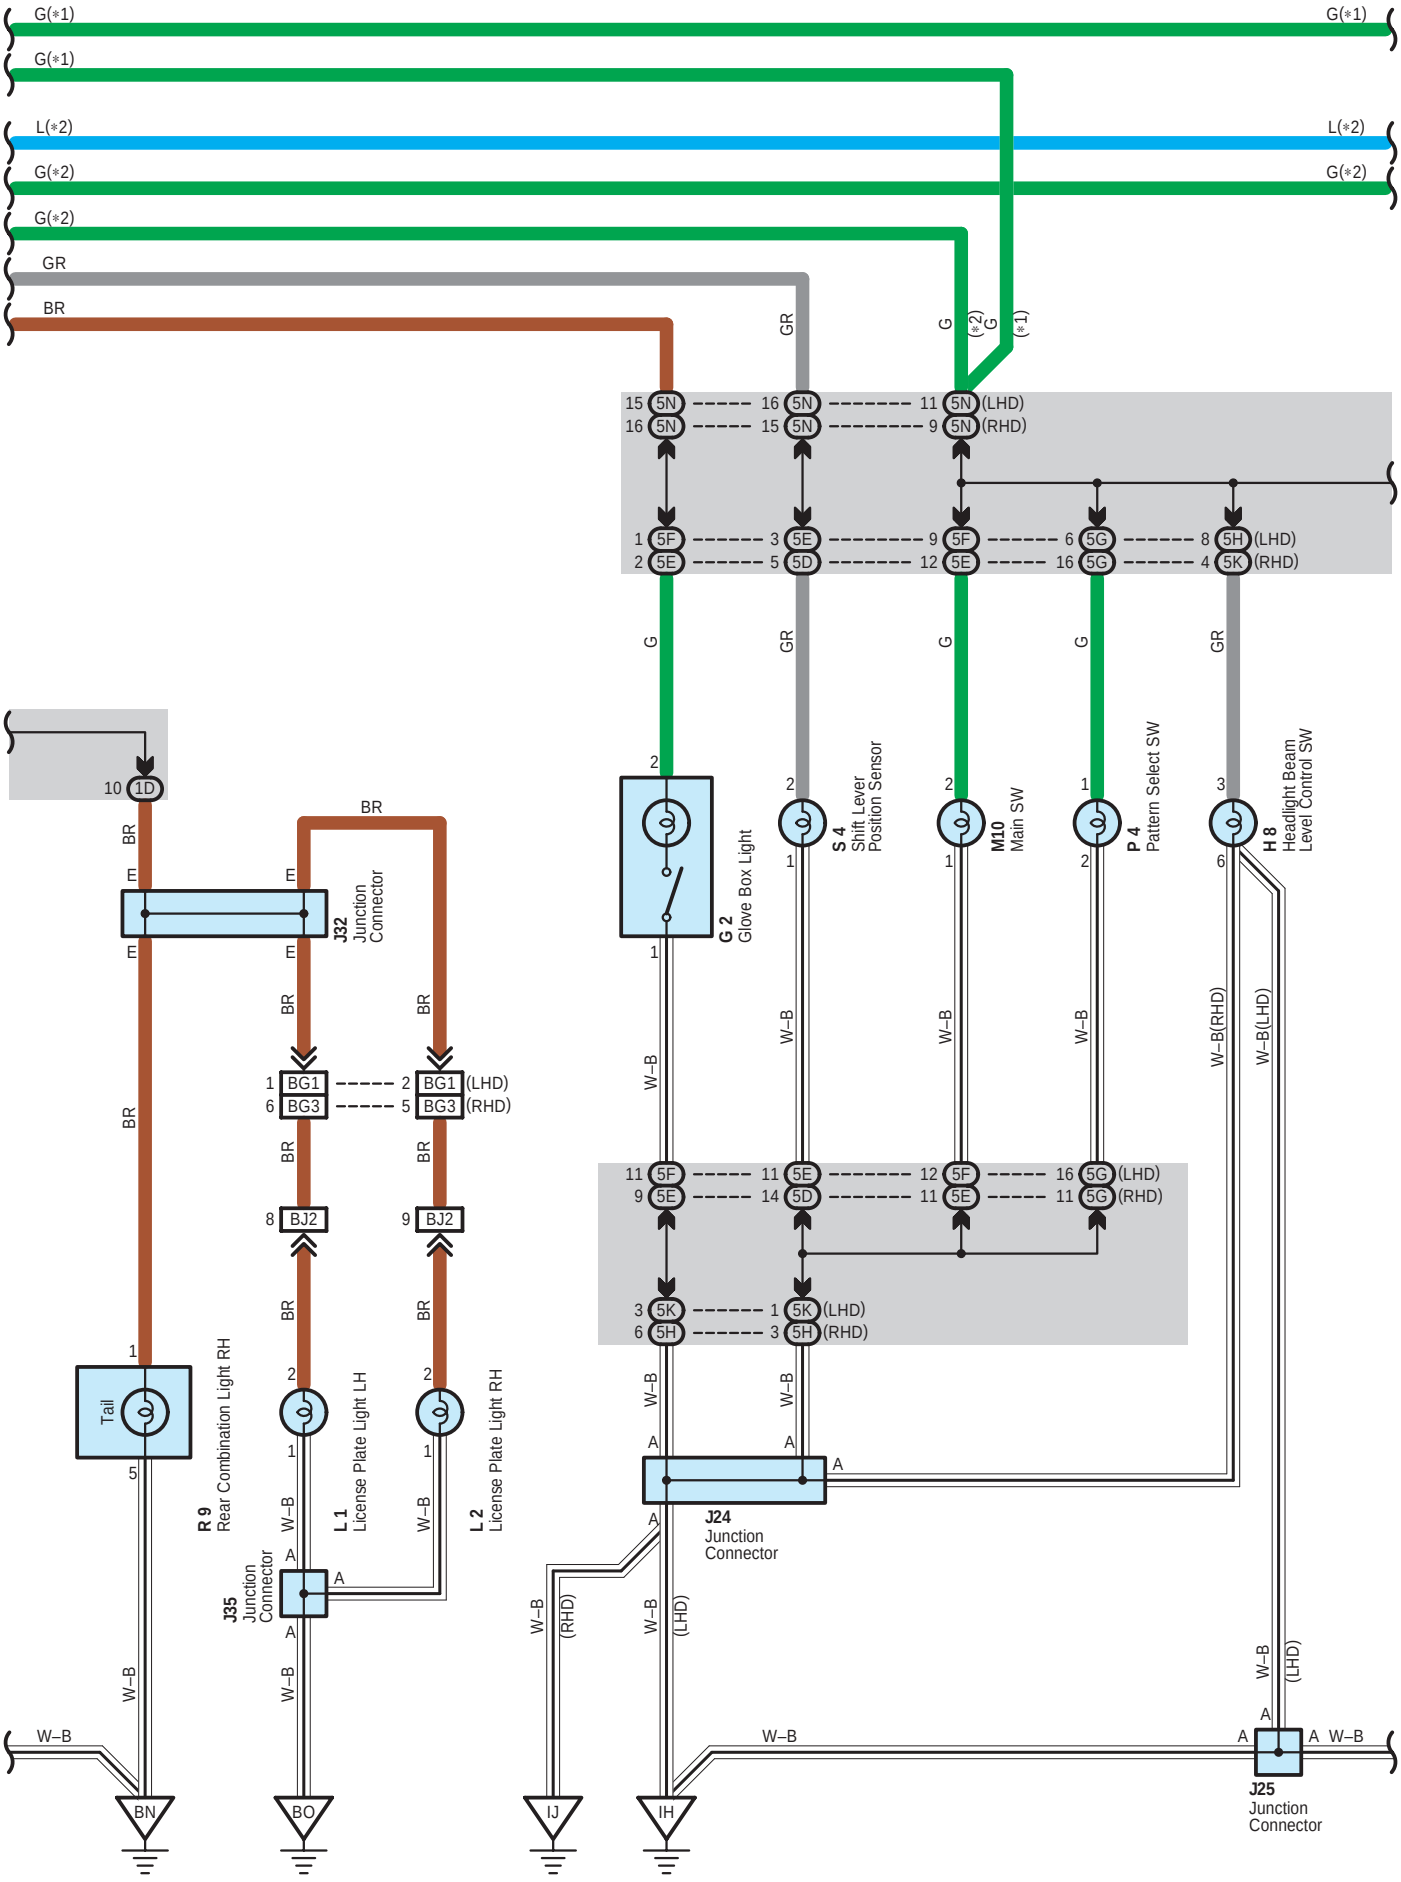
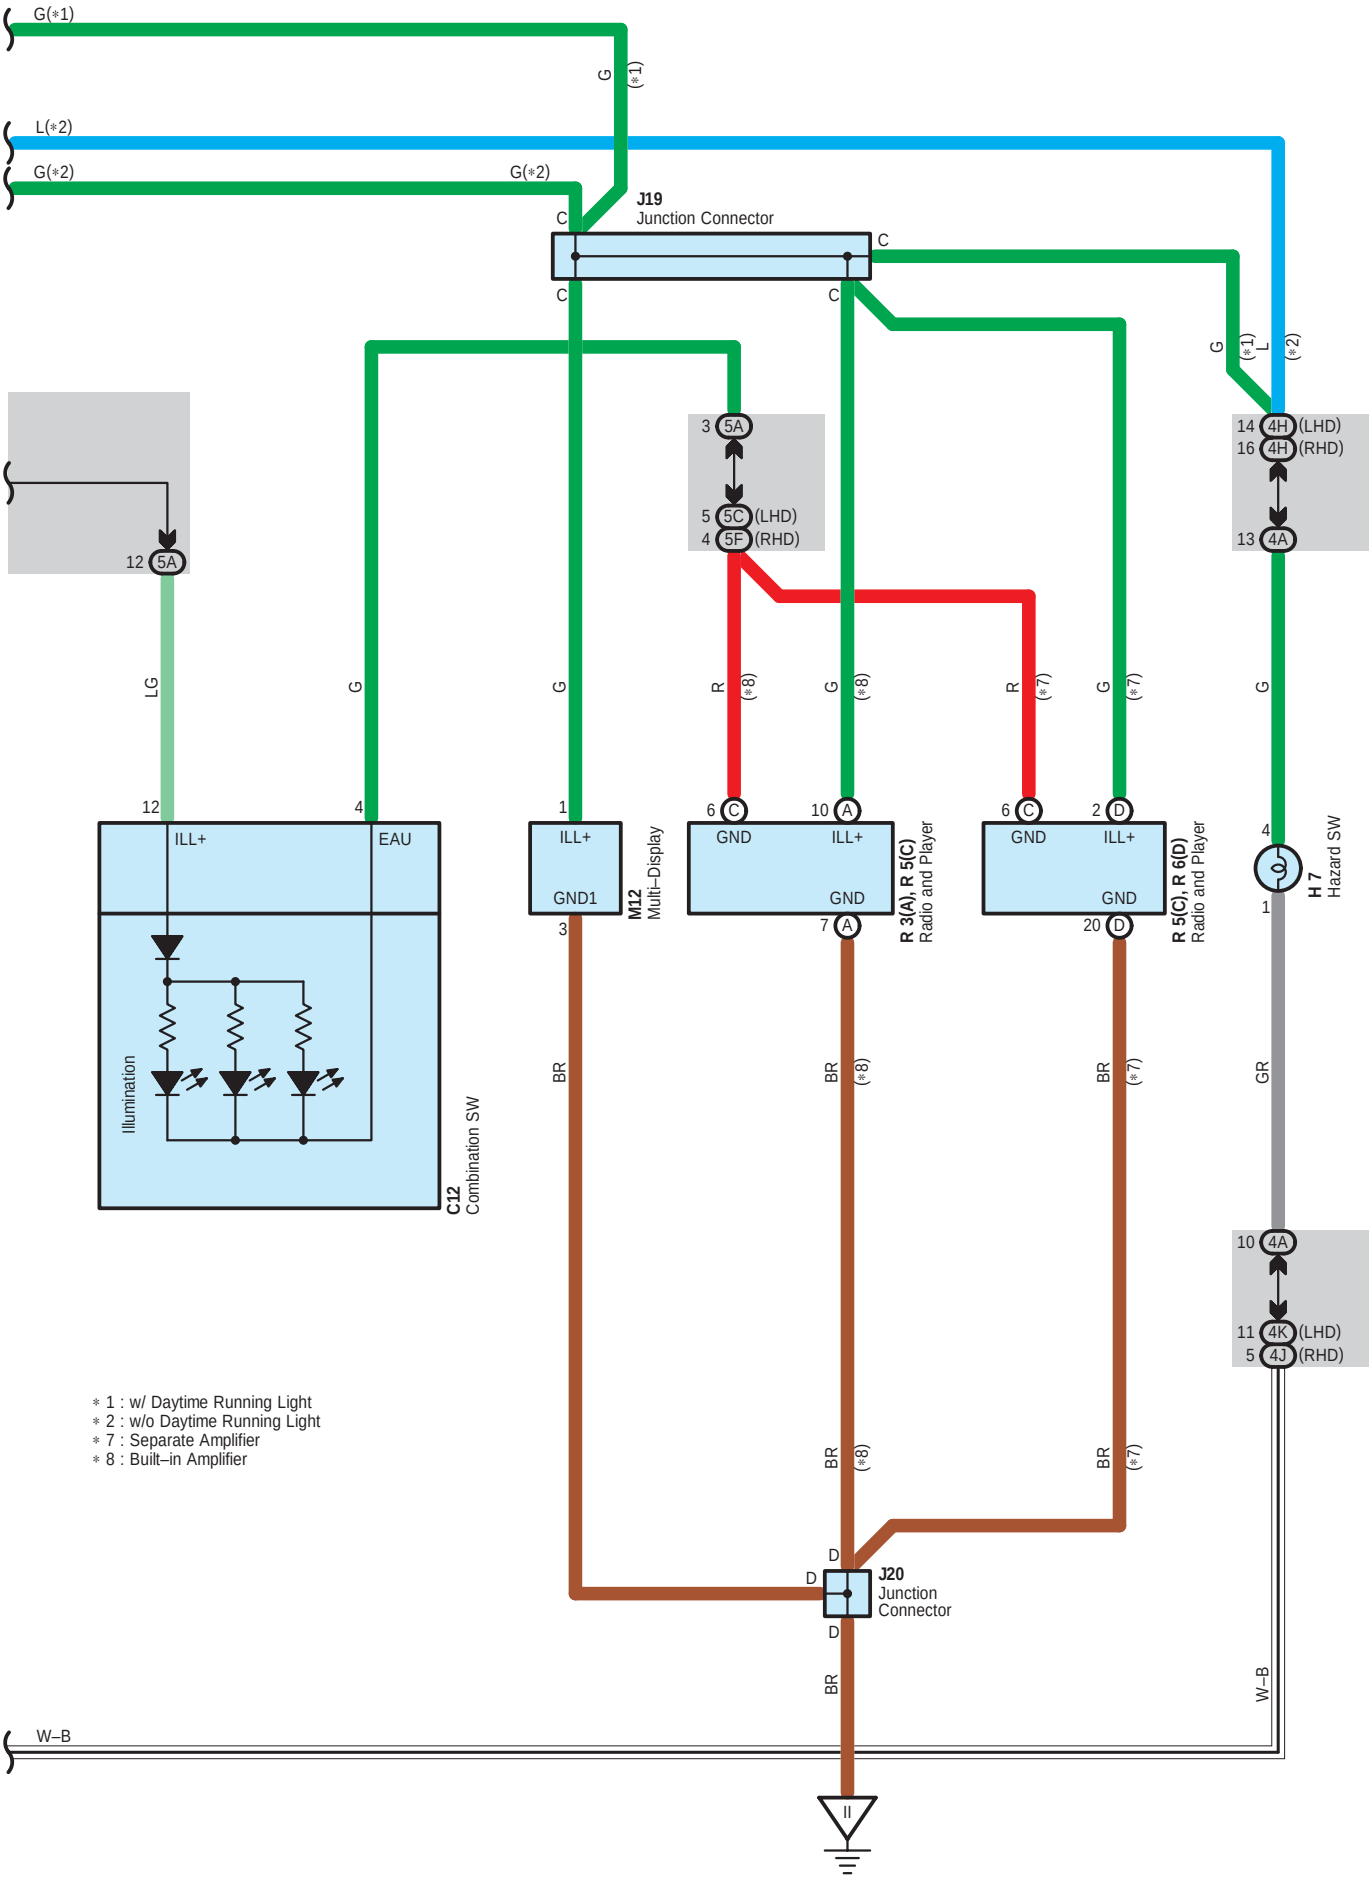

From Power Source System (See Page 96)
10A GAUGE
15A DOME
J6 Junction Connector
C10 Combination Meter
Power Supply Circuit
Tail
BEAN IC
S11 Smart Key ECU
T5 Transmission Control ECU
G 1 Gateway ECU
P 8 Power Source Control ECU
T6 Transponder Key Computer
B 5(A), B 7(C) Body ECU
A11 A/C Control Assembly
T 3 Theft Deterrent ECU
MPD1
MPD2
MPX1
MPX2
MPX2+
MPX+
(LHD)
(RHD)
(*3)
(*4)
(*5)
(*6)


From Power Source System (See Page 96)
100A DC/DC
P 2 Panel Relay
T–LP Relay
7. 5A PANEL
10A TAIL
PANL
TRLY
TAIL
B 5(A), B 7(C)
Body ECU
C11
Combination SW
Light Control SW
OFF
Tail
Head
J11 Junction Connector
F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
R 8 Rear Combination Light LH
Tail
IH
IL
EE
EA
G(*1)
L(*2)
G(*2)
GR
BR
Y(LHD)
LG (RHD)
Y(LHD, *4)
LG (*3)
W–B
(LHD)
(RHD)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : RHD Except Australia, Singapore, Hong Kong
* 4 : Australia, Singapore, Hong Kong
* 5 : w/ Smart Entry System
* 6 : w/o Smart Entry System

Taillight and Illumination




G(*1)
L(*2)
G(*2)
G(*2)
J19
Junction Connector
C
C
C
C
G (*1)
L (*2)
3 5A
5 5C (LHD)
4 5F (RHD)
14 4H (LHD)
16 4H (RHD)
13 4A
12 5A
LG
G
G
R (*8)
G (*8)
R (*7)
G (*7)
G
12
4
1
6 C
10 A
6 C
2 D
4
ILL+
EAU
ILL+
GND1
GND
ILL+
GND
ILL+
GND
GND
M12 Multi-Display
R 3(A), R 5(C) Radio and Player
R 5(C), R 6(D) Radio and Player
H 7 Hazard SW
1
3
7 A
20 D
Illumination
C12 Combination SW
BR
BR (*8)
BR (*7)
GR
10 4A
11 4K (LHD)
5 4J (RHD)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 7 : Separate Amplifier
* 8 : Built–in Amplifier
D
D
J20
Junction Connector
D
BR
W–B
W–B