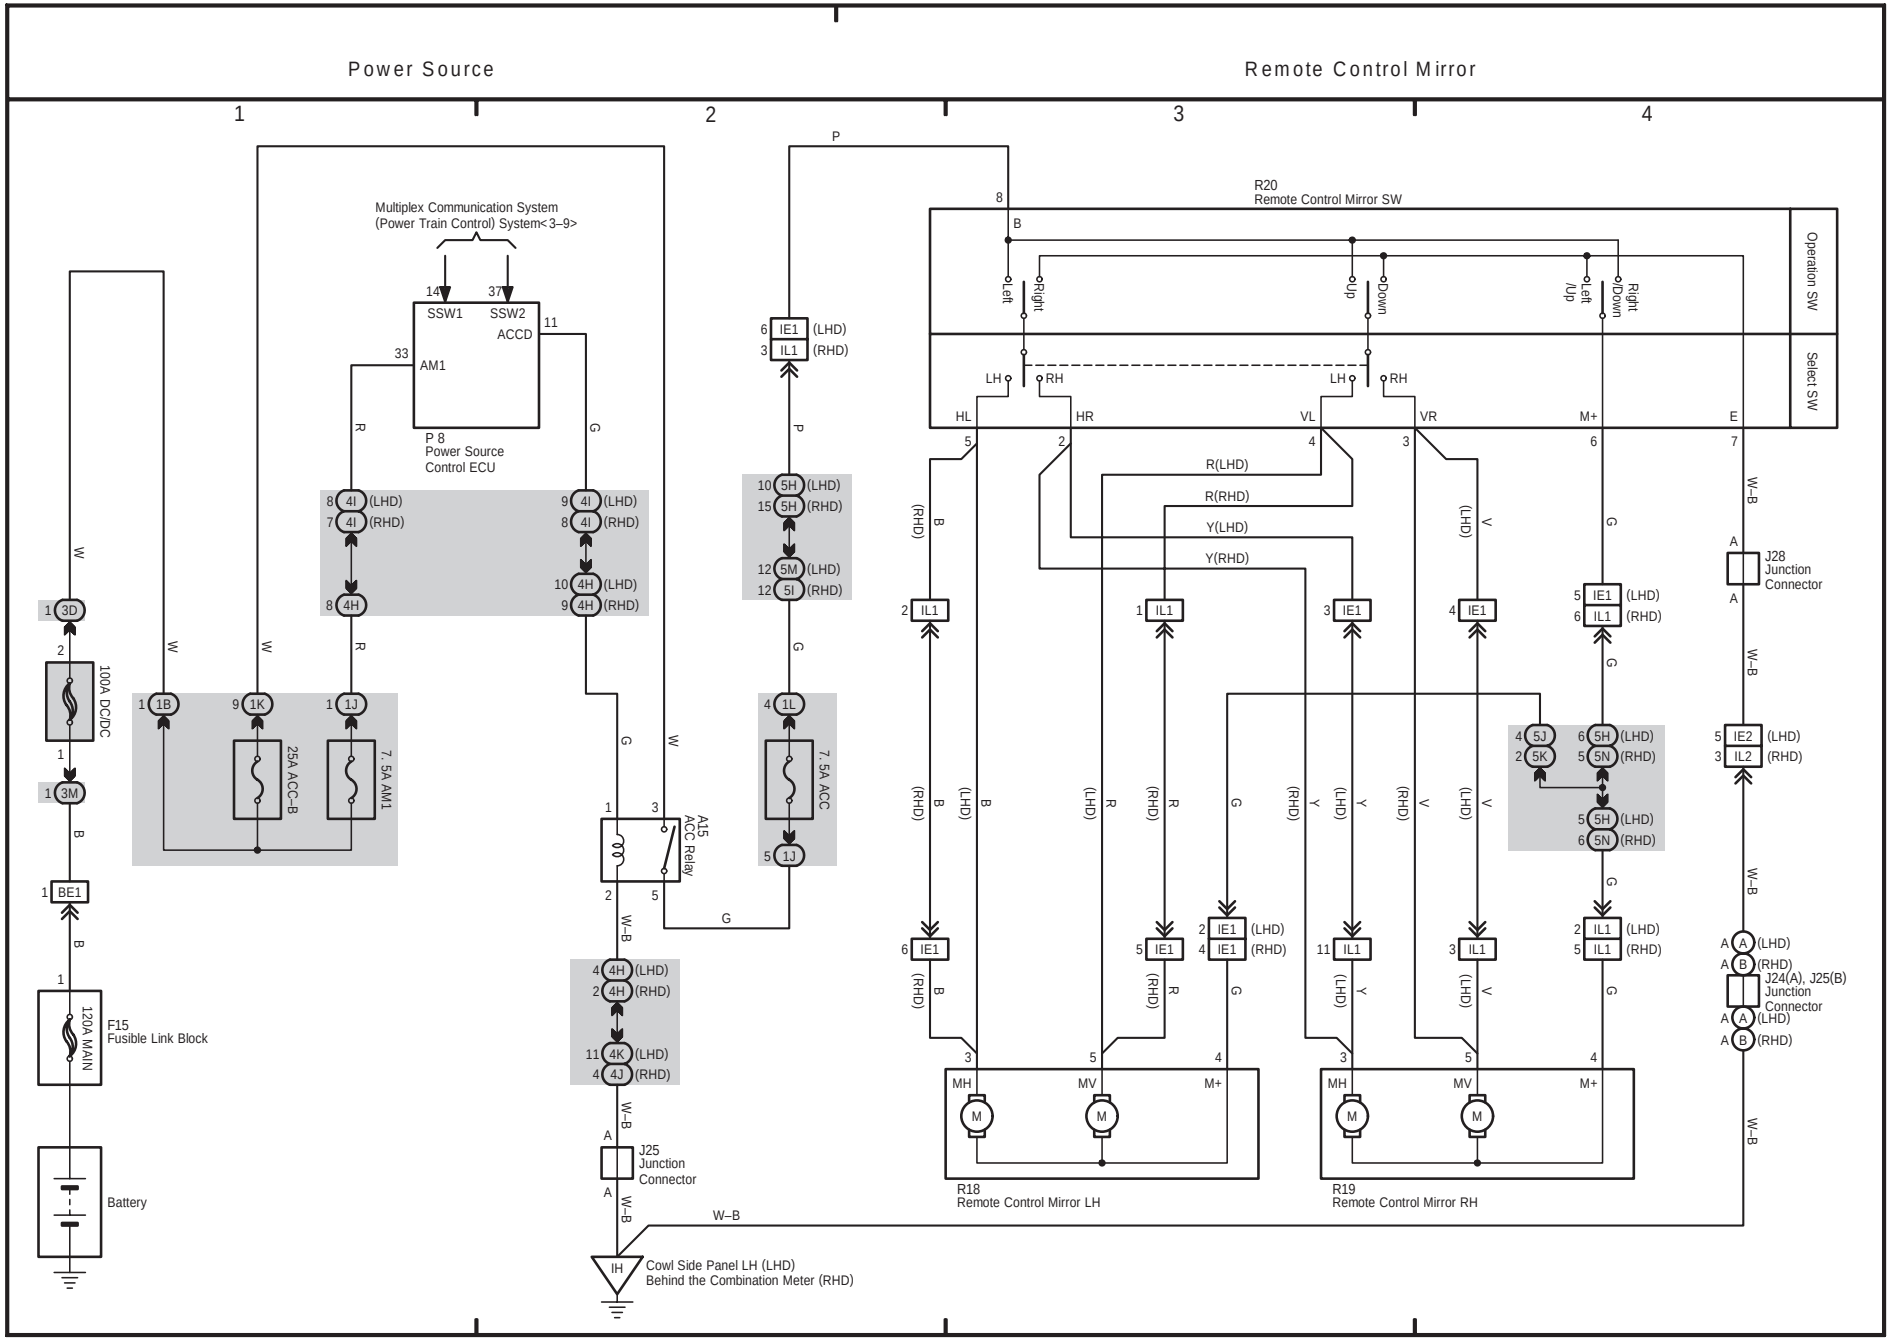

Power Source
Remote Control Mirror
1
2
3
4
Multiplex Communication System
(Power Train Control) System< 3–9>
SSW1
SSW2
ACCD
AM1
P 8
Power Source
Control ECU
100A DC/DC
F15
Fusible Link Block
120A MAIN
Battery
25A ACC–B
7. 5A AM1
7. 5A ACC
A15
ACC Relay
J25
Junction
Connector
Cowl Side Panel LH (LHD)
Behind the Combination Meter (RHD)
R20
Remote Control Mirror SW
Operation SW
Select SW
Left
Right
Up
Down
Left
/Up
Right
/Down
LH
RH
HL
HR
VL
VR
M+
E
R(LHD)
R(RHD)
Y(LHD)
Y(RHD)
J28
Junction
Connector
J24(A), J25(B)
Junction
Connector
R18
Remote Control Mirror LH
R19
Remote Control Mirror RH
MH
MV
M+
W–B