THEFT DETERRENT SYSTEM


■DESCRIPTION

- This system has been provided as standard equipment on European RHD models.
- The theft deterrent system uses the door lock control system and wireless door lock remote control system parts. The theft deterrent system will operate when somebody attempts to forcibly enter the vehicle, open the engine hood, or when the battery terminals are removed and reconnected.
- The control of this system is effected by the theft deterrent ECU.
- An intrusion sensor has been adopted. This sensor improves the system performance in case an attempt is made to enter the vehicle by breaking a window glass.
- The warning specifications of this system are listed below:

▶ Warning Specifications ◀

Model		European RHD
Warning Method	Interior Light	Illuminates
	Hazard Light	Flashing
	Headlights	—
	Taillights	—
	Vehicle Horn	Sounds a warning at approx. 0.4 second cycles
	Security Horn	—
	Self-Power Siren	Sounds a warning at the cycle of the self-power siren it self
	Door Lock Motor	Locking
Warning Time		27.5 sec.

▶ System Diagram ◀

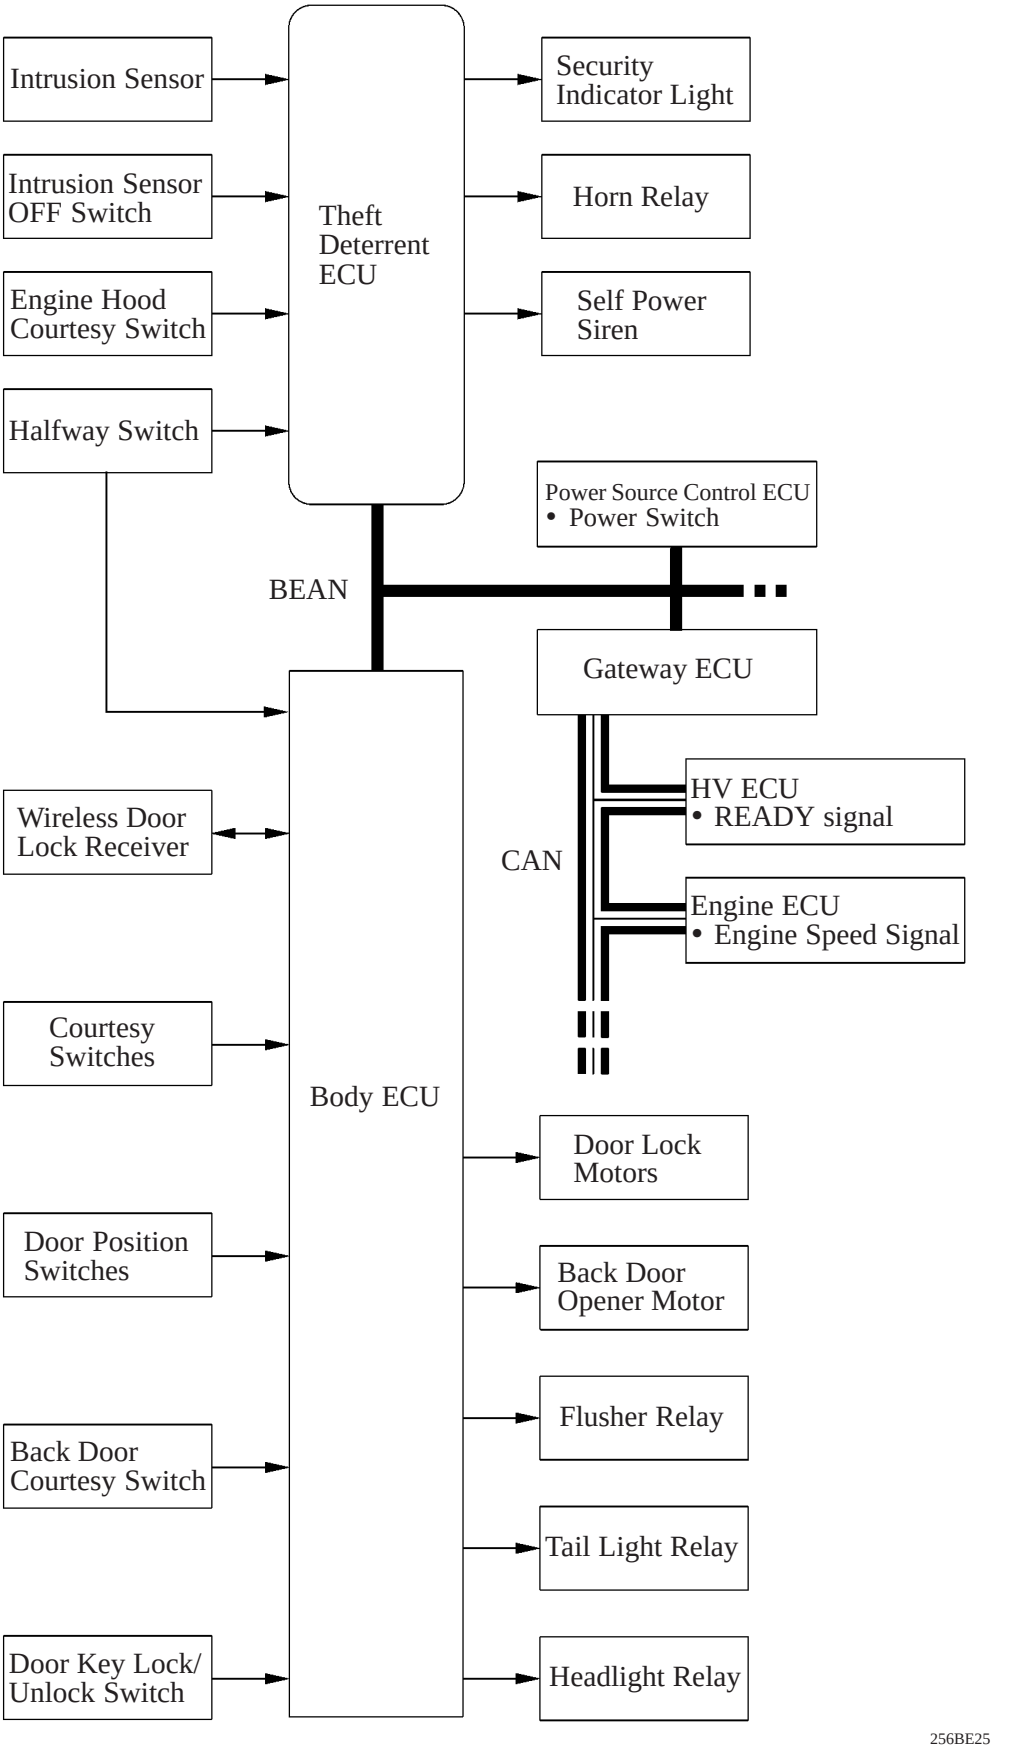

256BE25