
SPEED SIGNAL CIRCUIT (MULTI–DISPLAY – COMBINATION METER ASSY

CIRCUIT DESCRIPTION

The multi–display performs the switch operation control during running by receiving the vehicle speed signal from the combination meter assy.


WIRING DIAGRAM

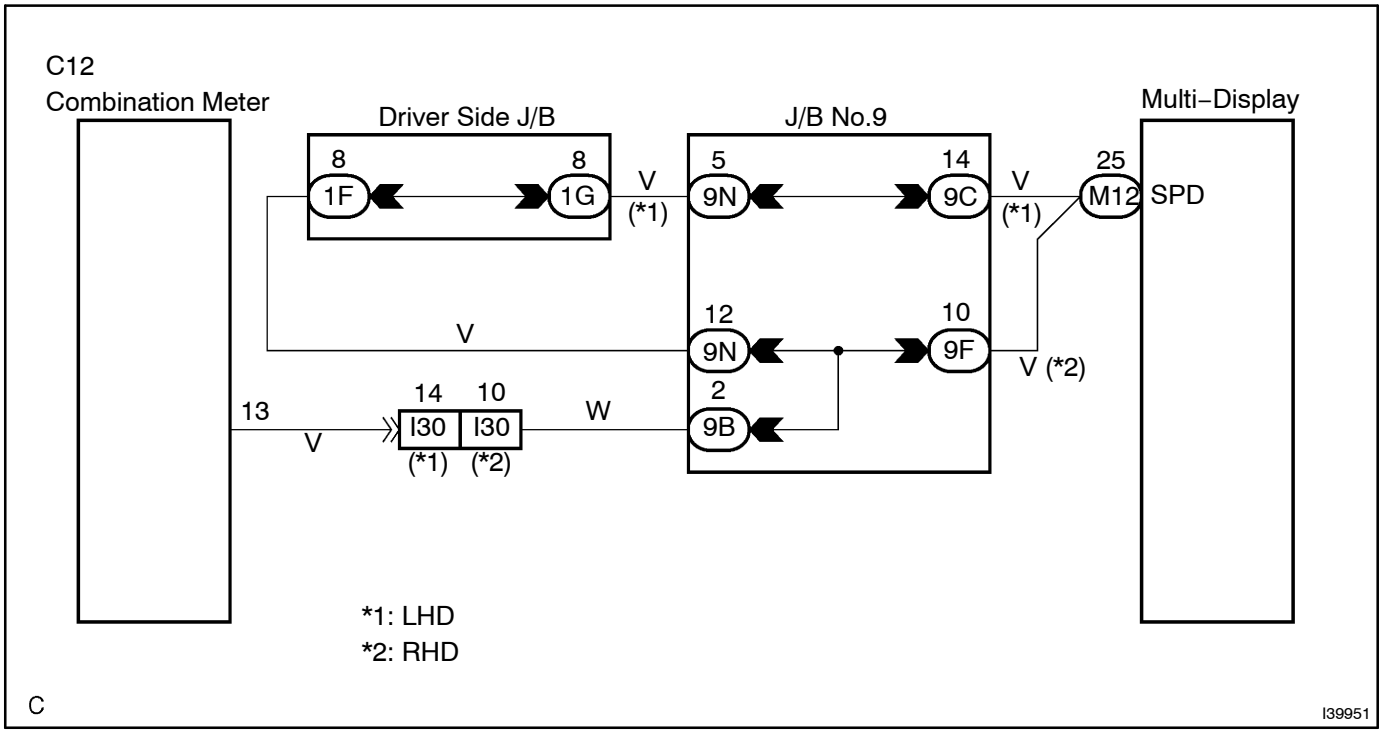


INSPECTION PROCEDURE

1	CHECK HARNESS AND CONNECTOR(COMBINATION METER ASSY – MULTI–DISPLAY)

Multi–Display:

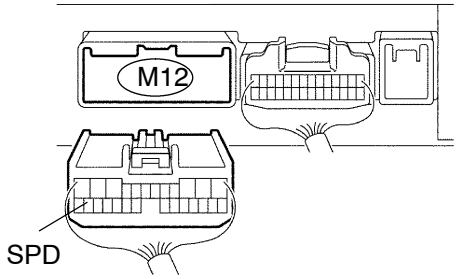

Combination Meter Assy:

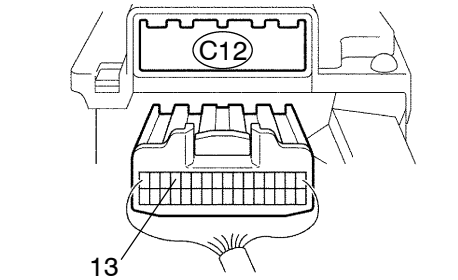

(a) Disconnect the connector from the multi–display M12 and combination meter assy C12.

(b) Measure the resistance according to the value(s) in the table below.

Standard:


Tester connection	Condition	Specified condition
SPD – C12–13	Always	Below 1 Ω
SPD – Body ground	Always	10 kΩ or higher

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

2	INSPECT COMBINATION METER ASSY

Combination Meter Assy:

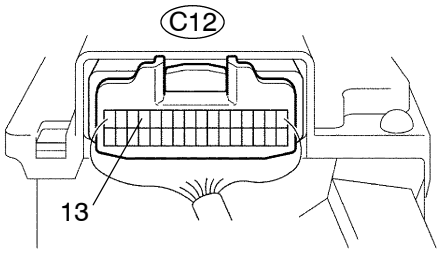

(a) Connect the combination meter assy connector C12.

(b) Measure voltage.


(1) Adjust the shift lever to the neutral position.

(2) Jack up either one of the front wheels.

(3) Turn power switch to the ON (IG) position.

(4) Measure the voltage between terminal 13 and body ground of combination meter assy when the front wheels are turned slowly.

OK: Voltage is pulsed as shown below.

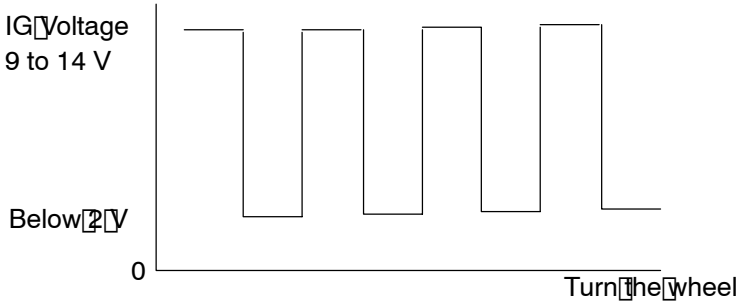

NG	GO TO COMBINATION METER SYSTEM (SEE PAGE 05–1573)

OK

REPLACE MULTI–DISPLAY (SEE PAGE 67–7)