
05ICC–01

SYSTEM DIAGRAM

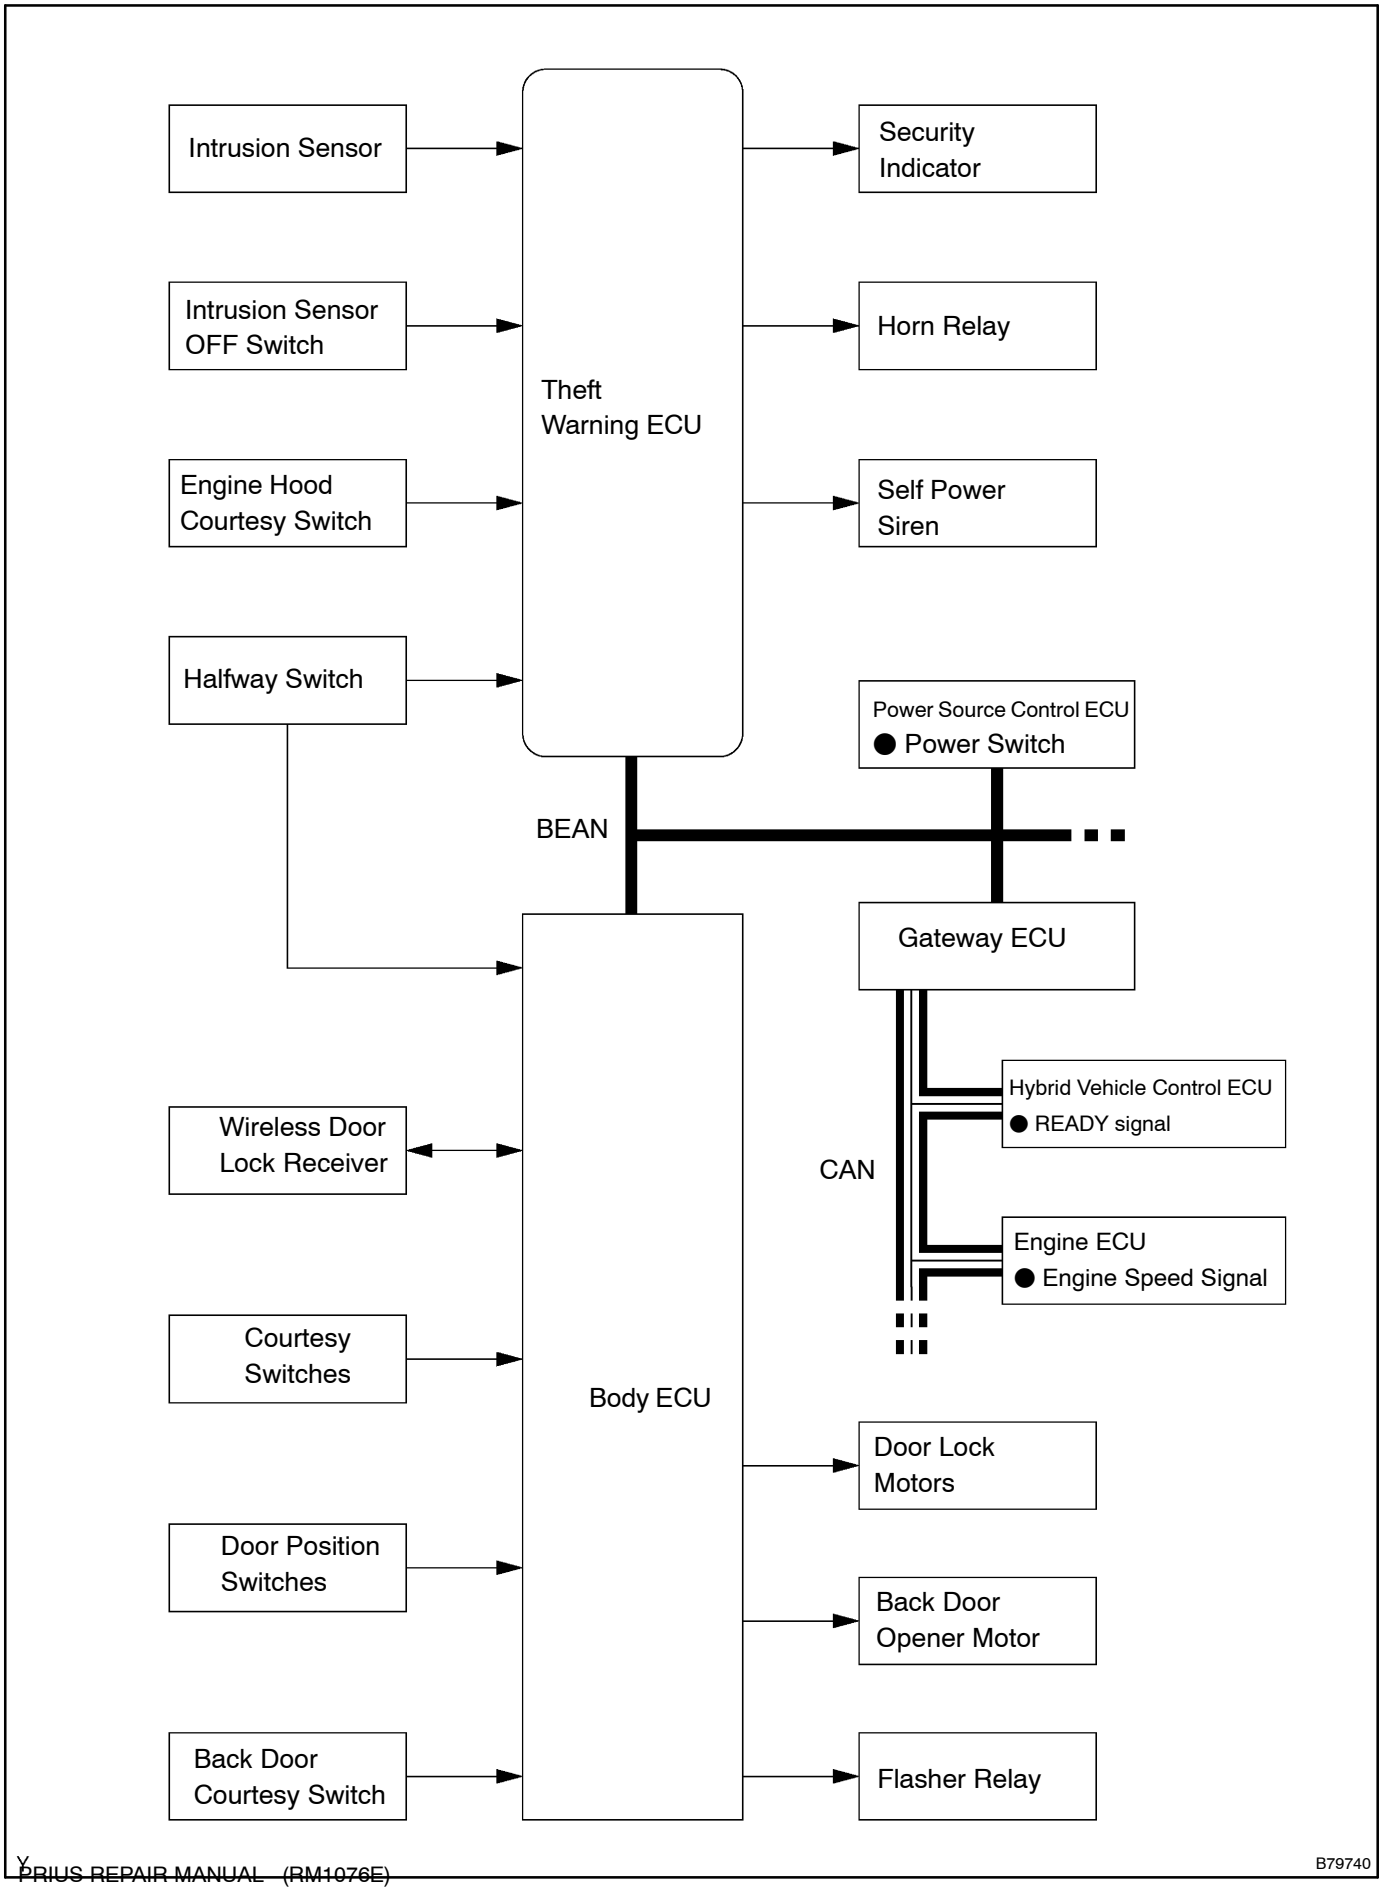

Communication Table:

Sender	Receiver	Signal	Line
Body ECU	Theft Warning ECU	• Door lock system signal (smart and wireless operation) • Driver door key–linked switch signal (lock and unlock operation) • Diagnosis erasure signal • Diagnosis tool request • Door status signal (door lock, courtesy switch) • Vehicle specification signal • Wireless signal • IG and ACC switch signal • All doors courtesy switch signal	BEAN
Theft Warning ECU	Body ECU	Security signal (door lock and unlock, head lamp, hazard lamp, horn, dome lamp and tail lamp)	BEAN
Theft Warning ECU	Power Source Control ECU	Power switch signal	BEAN
Theft Warning ECU	ECM	Engine switch signal	BEAN/CAN
Theft Warning ECU	Hybrid Vehicle Control ECU	Drive OK display signal	BEAN/CAN