
CYLINDER HEAD GASKET (1NZ–FXE)

COMPONENTS


141OD–01

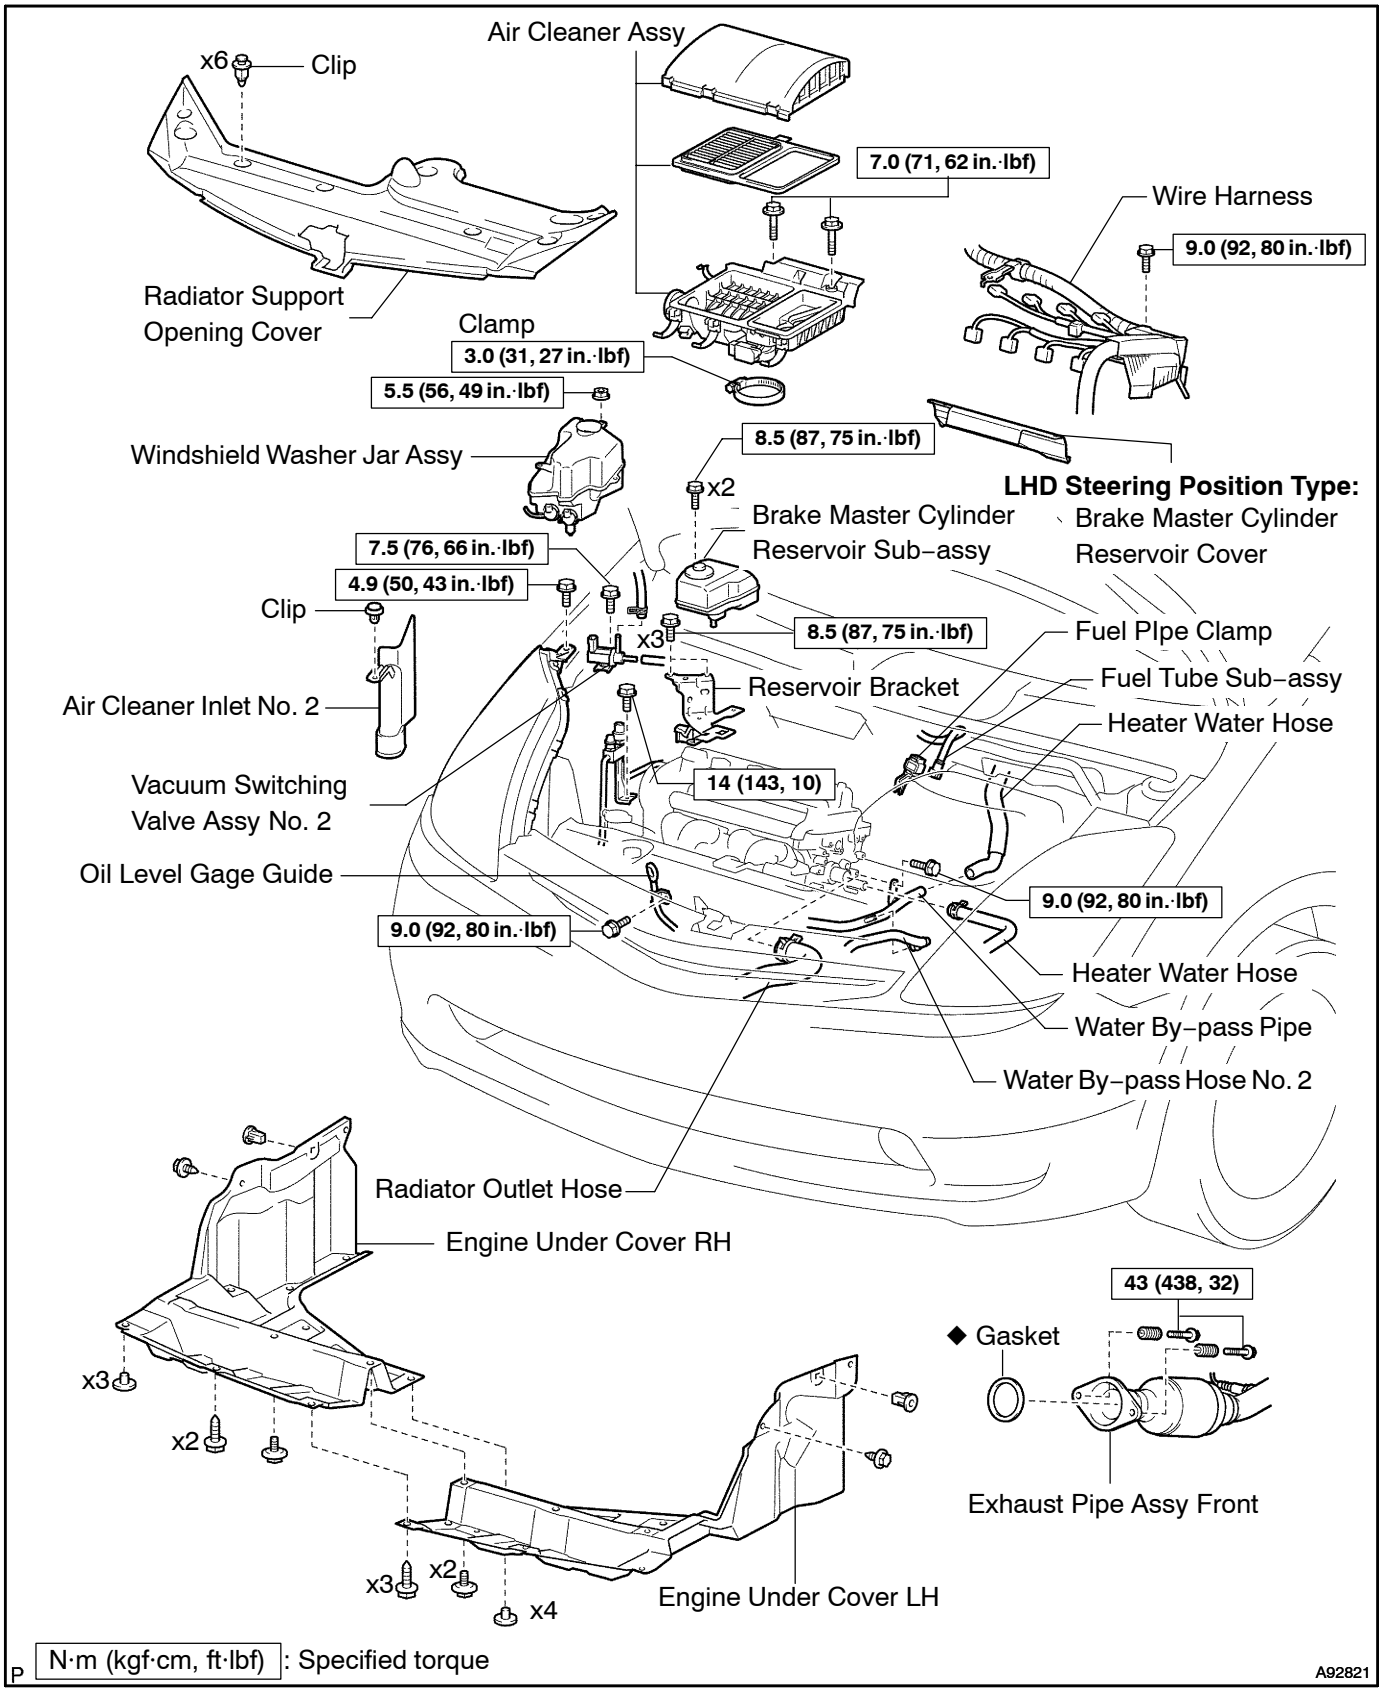

P N·m (kgf·cm, ft·lbf) : Specified torque

A92821

LHD Steering Position Type:

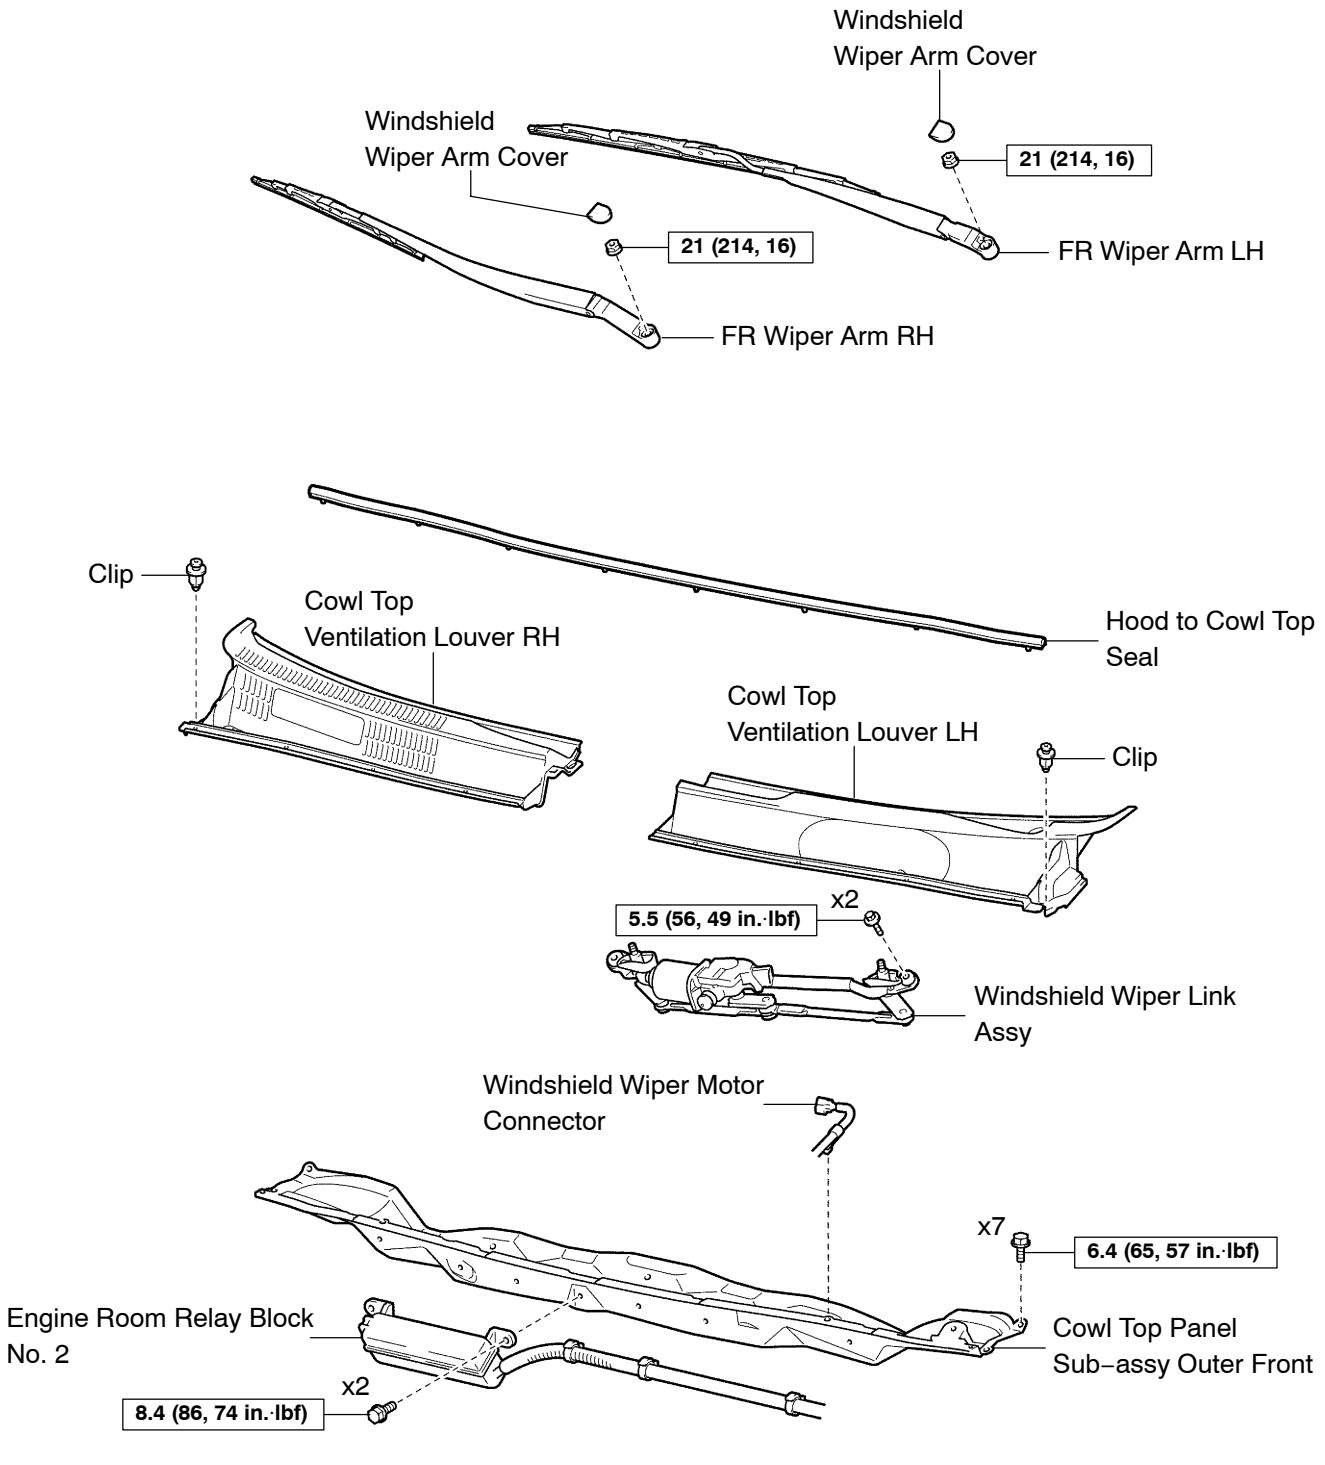


N·m (kgf·cm, ft·lbf) : Specified torque

P


A86311


RHD Steering Position Type:

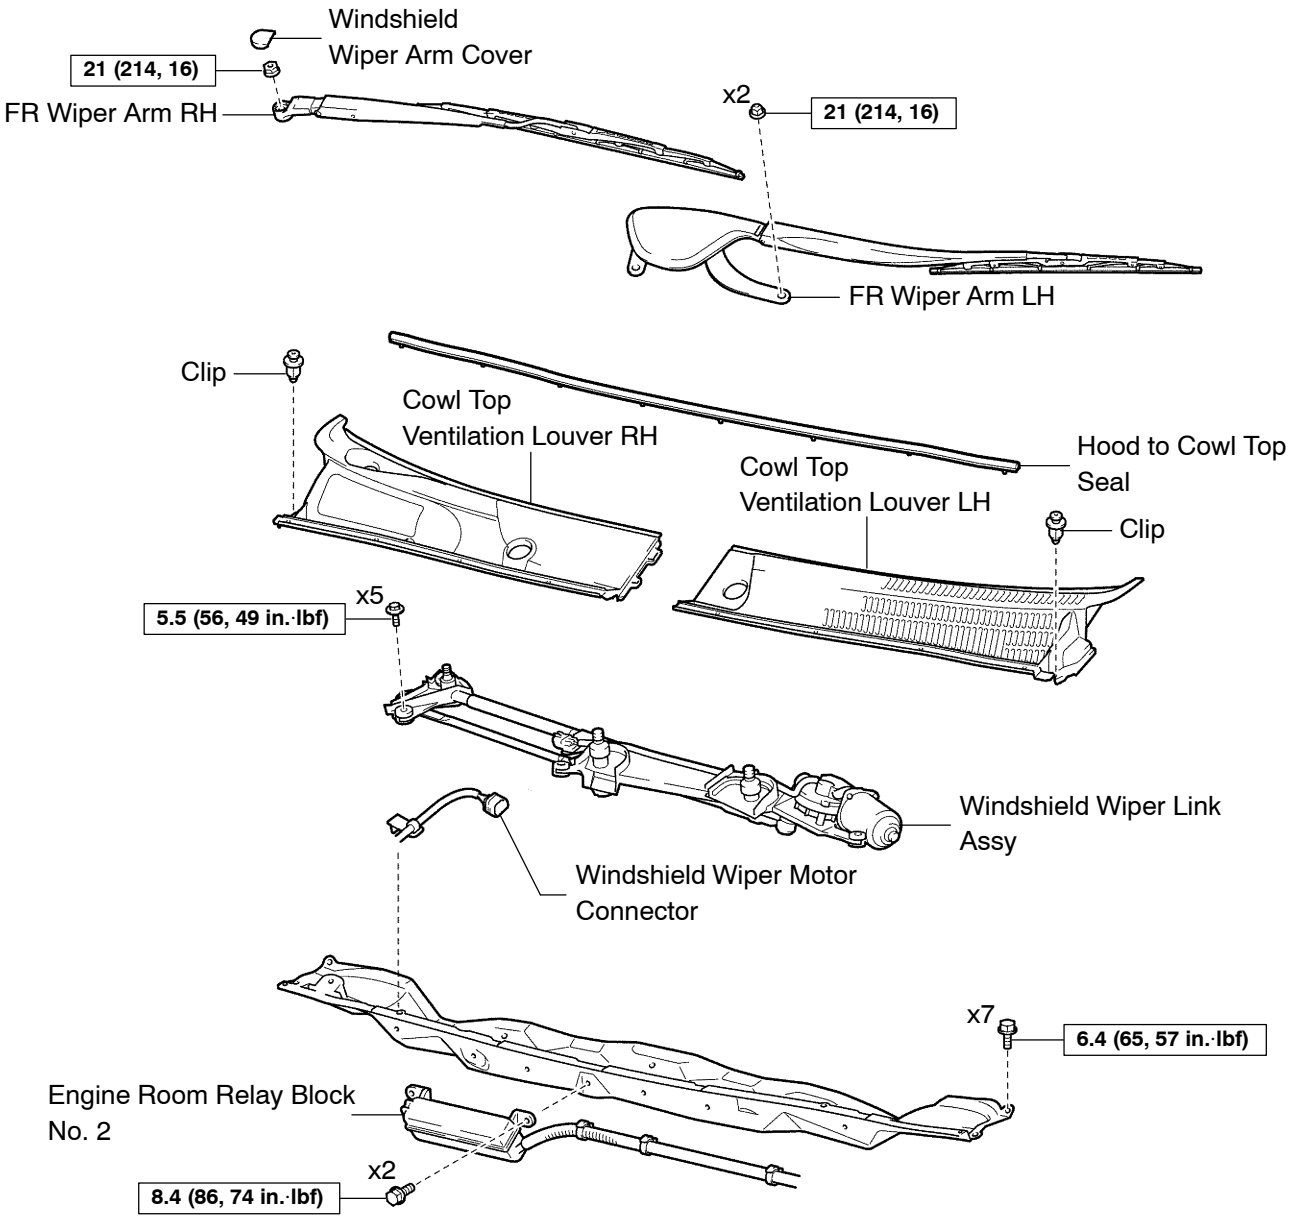

N·m (kgf·cm, ft·lbf) : Specified torque


A86312

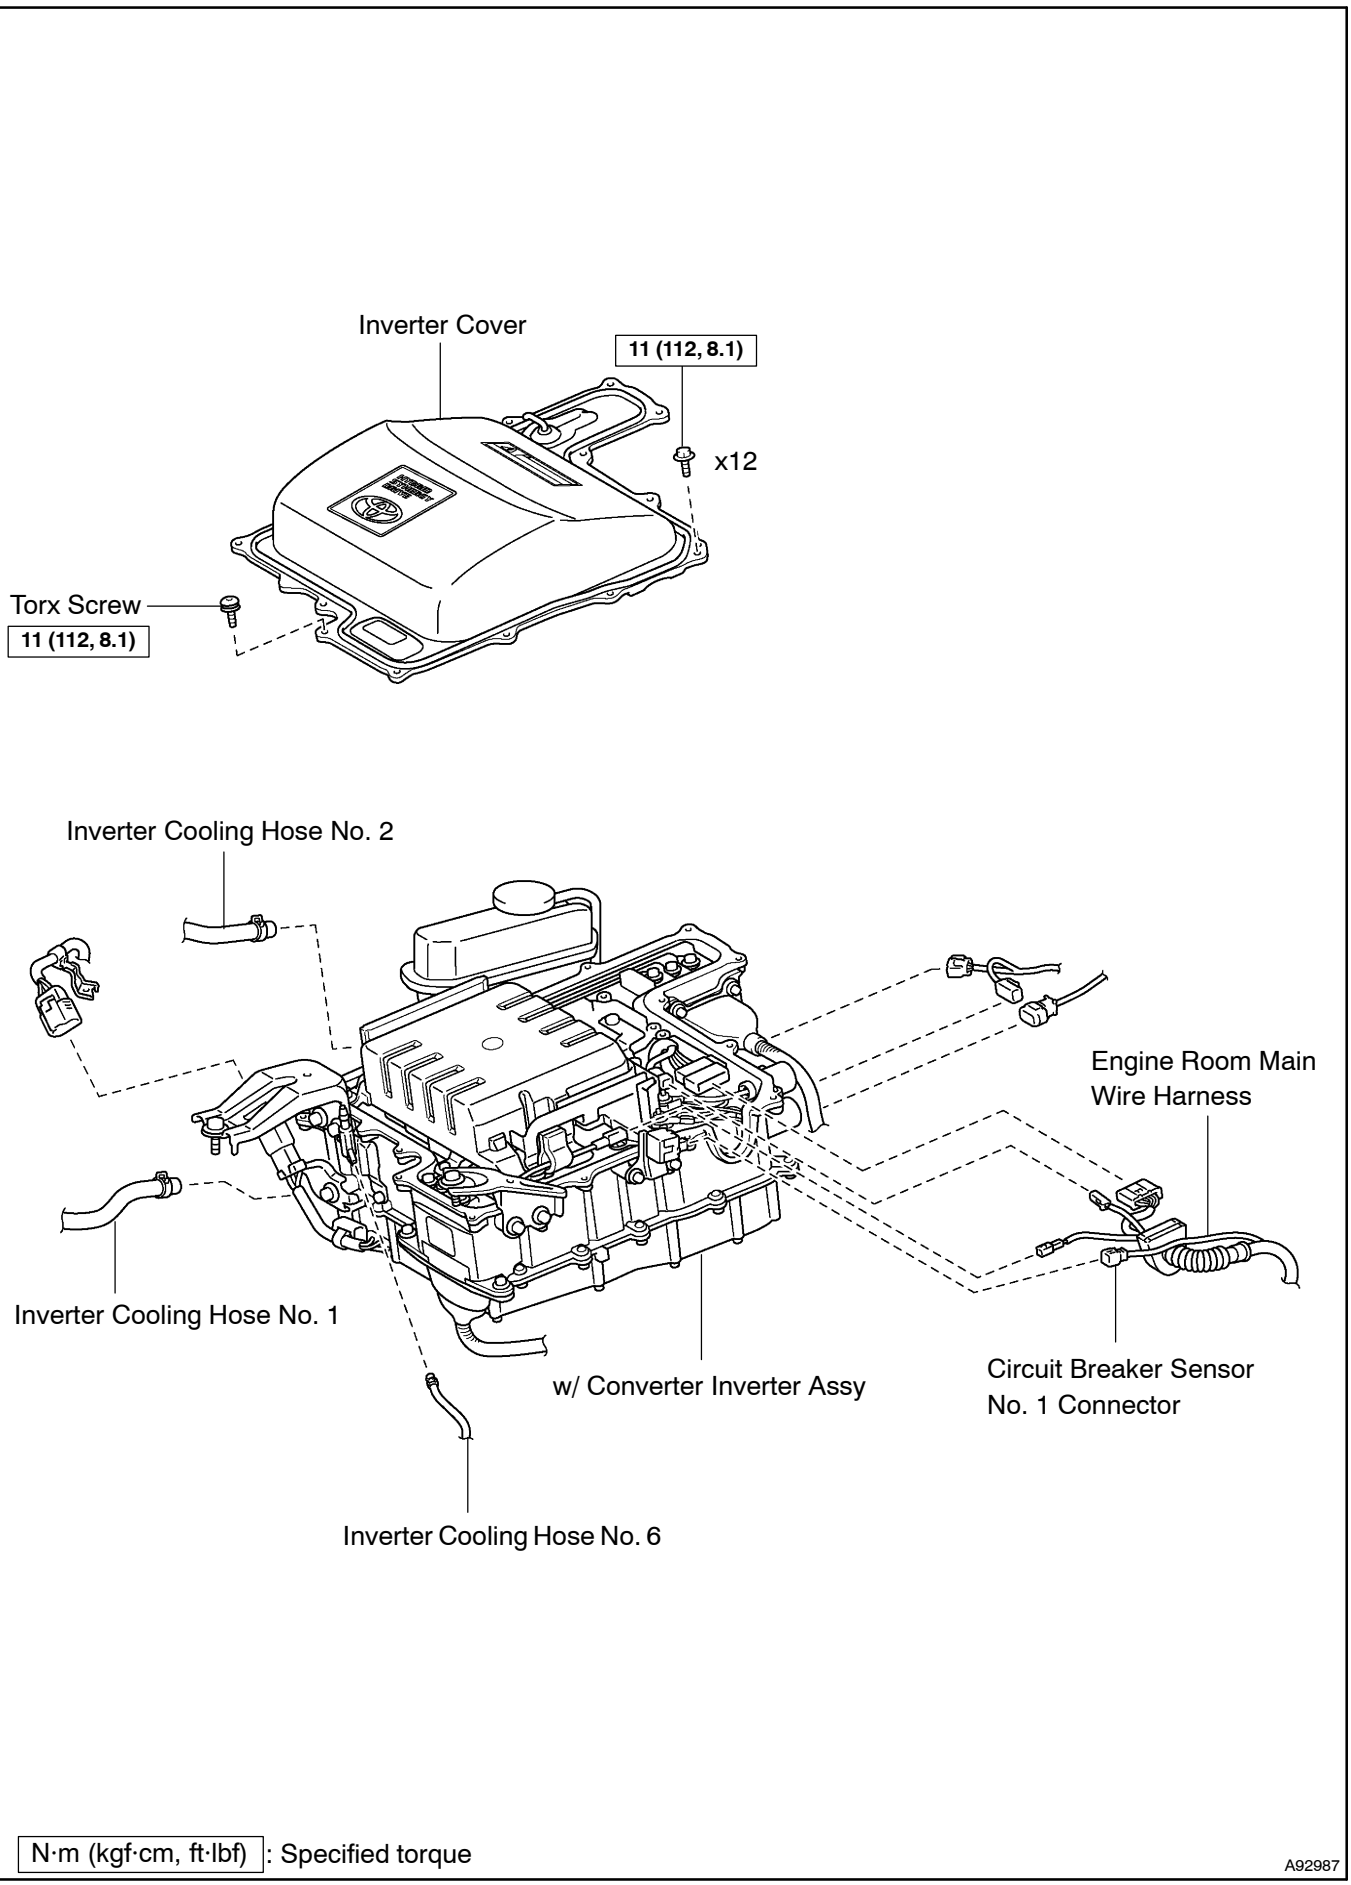

Inverter Cover
11 (112, 8.1)
x12
Torx Screw
11 (112, 8.1)
Inverter Cooling Hose No. 2
Engine Room Main
Wire Harness
Inverter Cooling Hose No. 1
w/ Converter Inverter Assy
Circuit Breaker Sensor
No. 1 Connector
Inverter Cooling Hose No. 6
N·m (kgf·cm, ft·lbf) : Specified torque
A92987

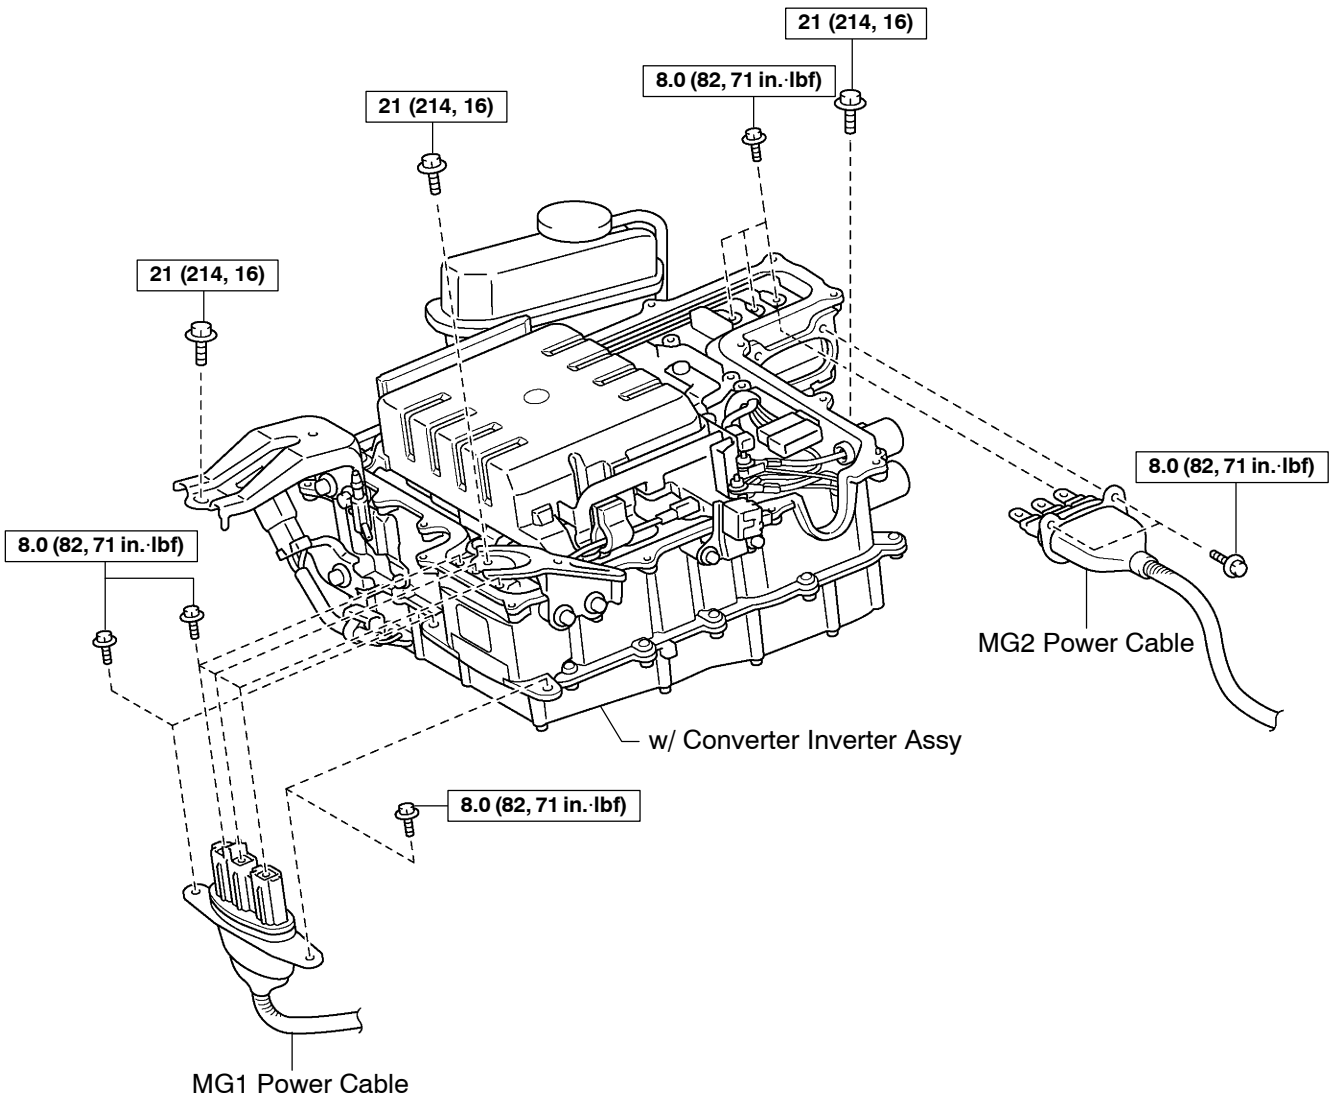


H N·m (kgf·cm, ft·lbf) : Specified torque

A83631

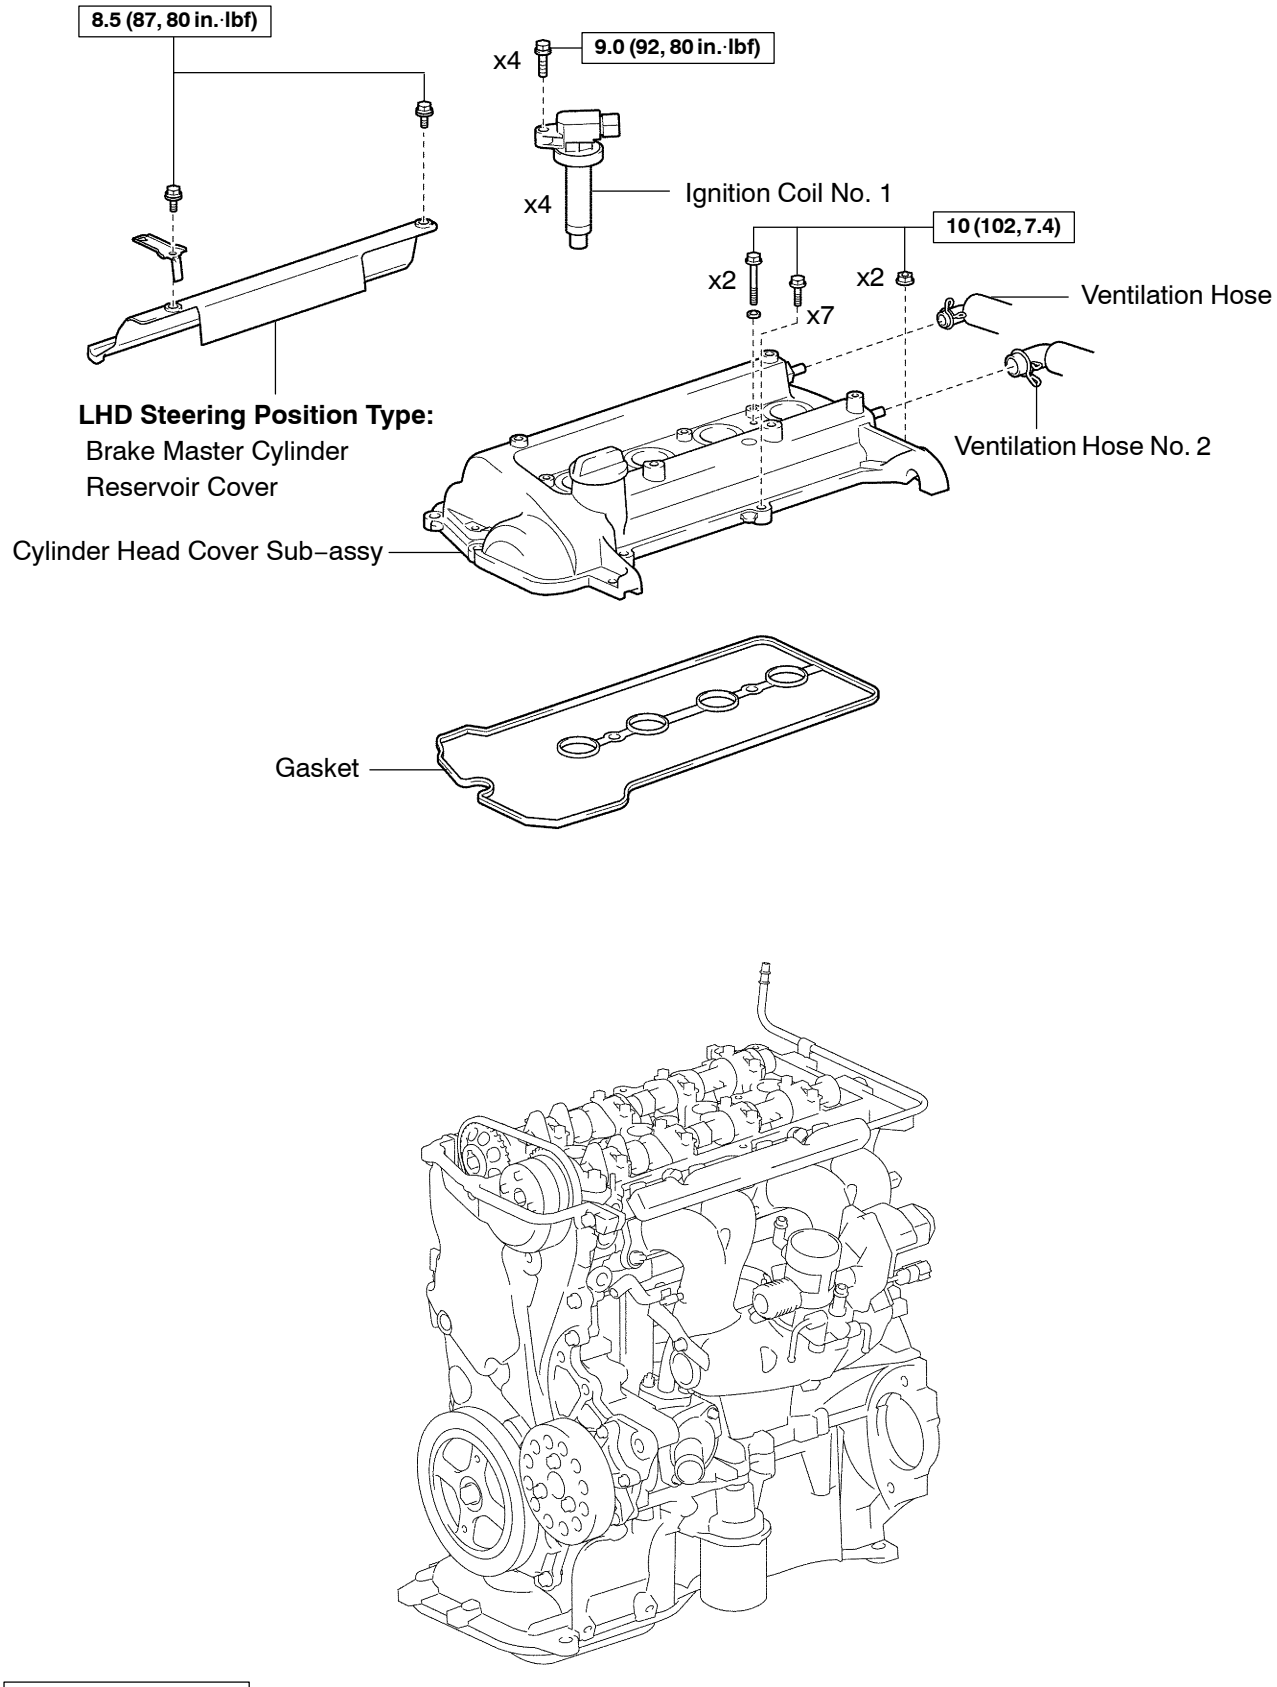

8.5 (87, 80 in.·lbf)
x4
9.0 (92, 80 in.·lbf)
x4
Ignition Coil No. 1
10 (102, 7.4)
x2
x2
x7
Ventilation Hose
Ventilation Hose No. 2
LHD Steering Position Type:
Brake Master Cylinder
Reservoir Cover
Cylinder Head Cover Sub–assy
Gasket
N·m (kgf·cm, ft·lbf): Specified torque
P
A92981

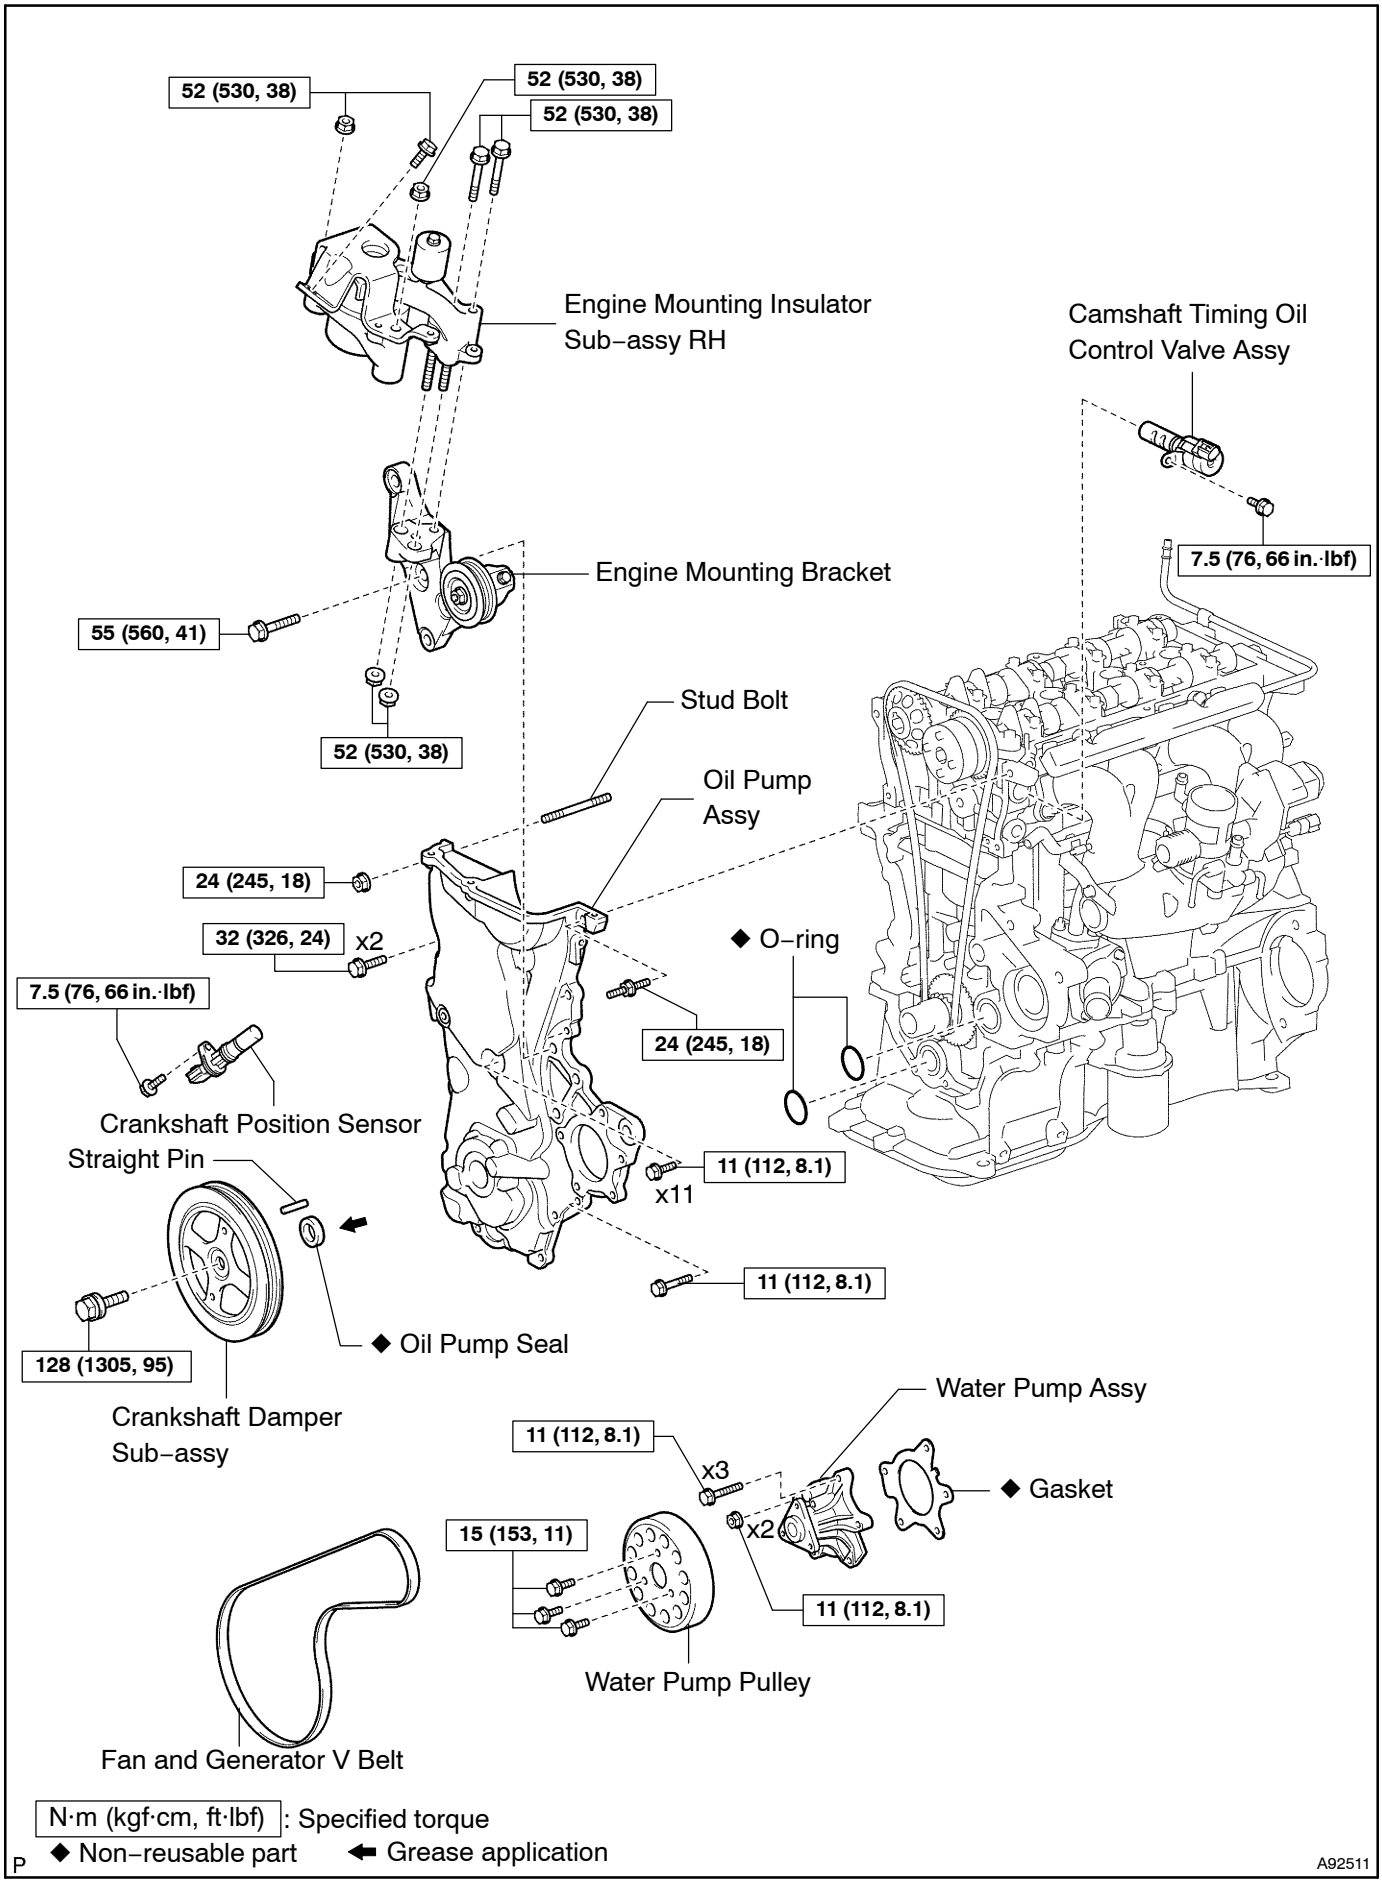
52 (530, 38)
52 (530, 38)
52 (530, 38)
Engine Mounting Insulator Sub–assy RH
Camshaft Timing Oil Control Valve Assy
7.5 (76, 66 in.·lbf)
Engine Mounting Bracket
55 (560, 41)
52 (530, 38)
Stud Bolt
Oil Pump Assy
24 (245, 18)
32 (326, 24)
x2
◆ O–ring
7.5 (76, 66 in.·lbf)
24 (245, 18)
Crankshaft Position Sensor
Straight Pin
11 (112, 8.1)
x11
11 (112, 8.1)
◆ Oil Pump Seal
128 (1305, 95)
Crankshaft Damper Sub–assy
Water Pump Assy
11 (112, 8.1)
x3
◆ Gasket
15 (153, 11)
x2
11 (112, 8.1)
Water Pump Pulley
Fan and Generator V Belt
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
Grease application
P
A92511

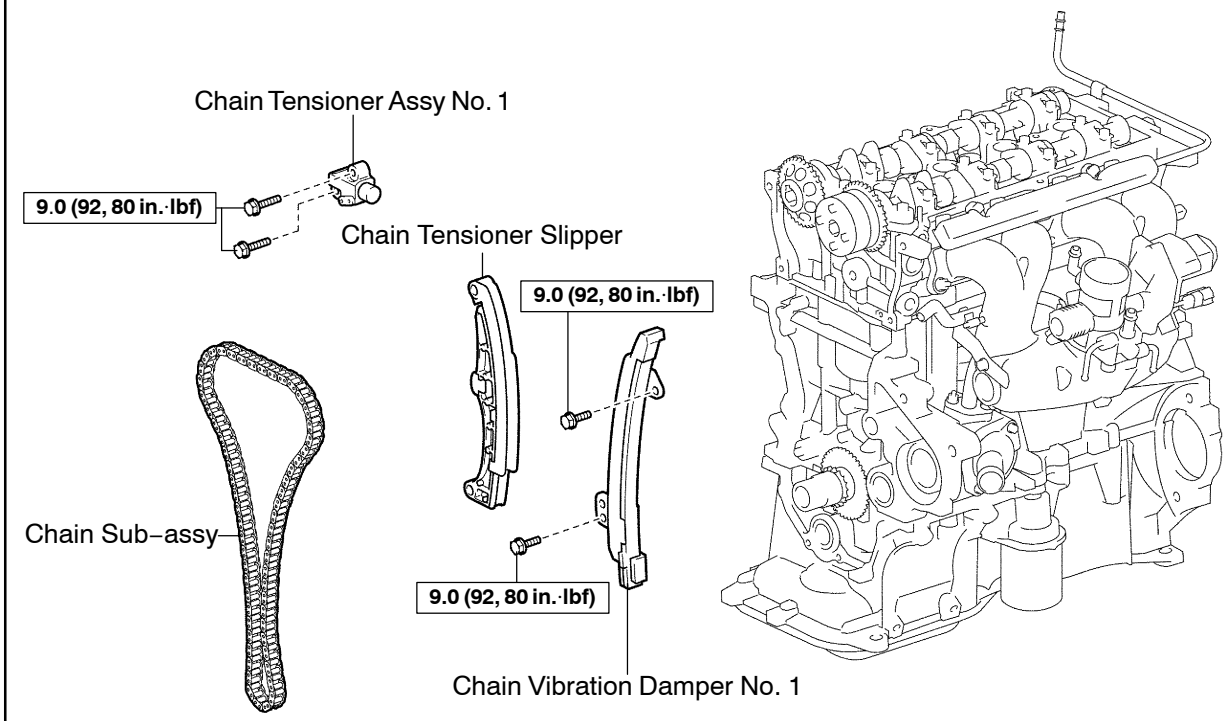

P N·m (kgf·cm, ft·lbf) : Specified torque

A92985

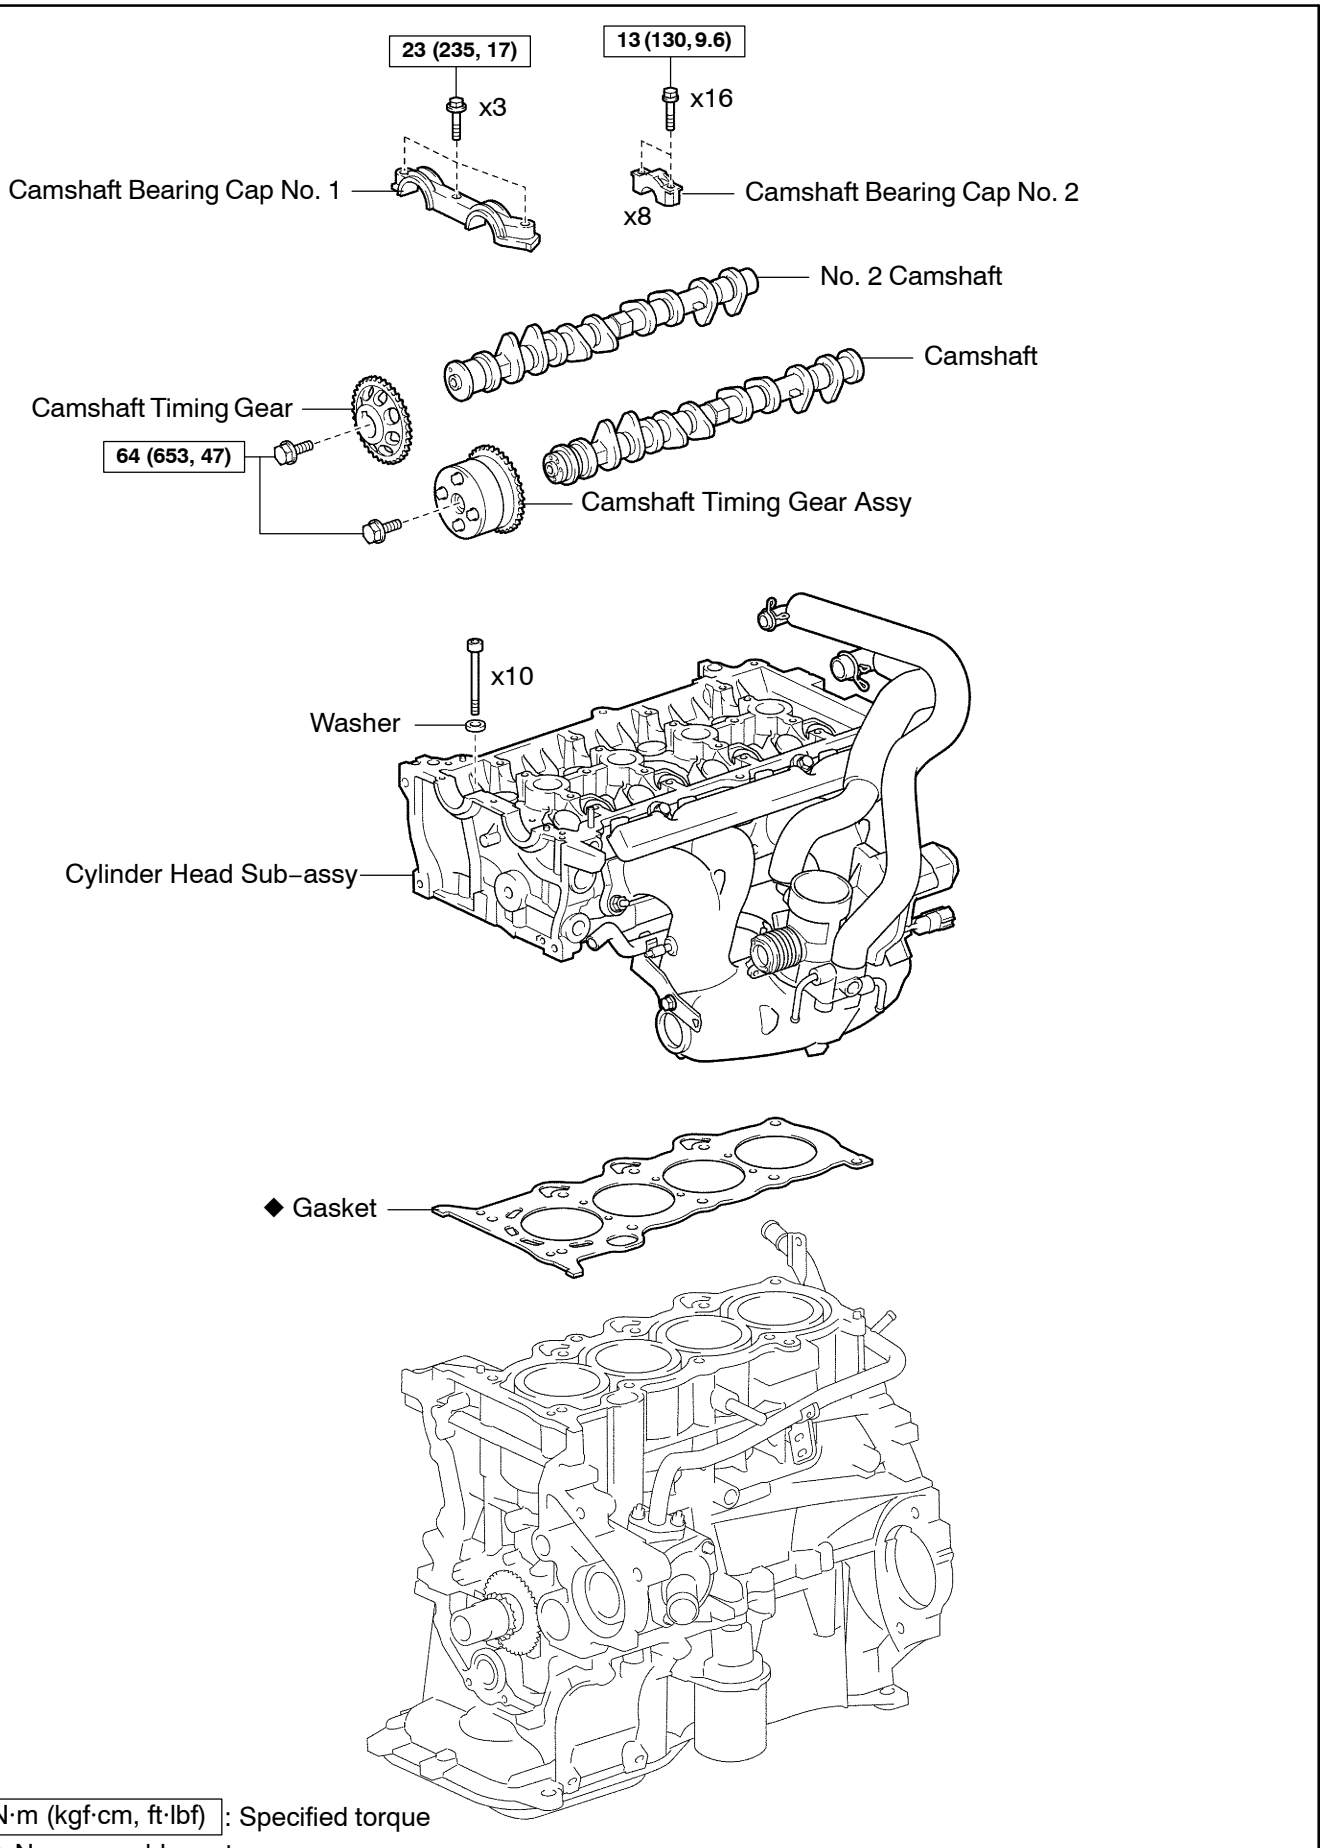
23 (235, 17)
x3
13 (130, 9.6)
x16
Camshaft Bearing Cap No. 1
Camshaft Bearing Cap No. 2
x8
No. 2 Camshaft
Camshaft
Camshaft Timing Gear
64 (653, 47)
Camshaft Timing Gear Assy
x10
Washer
Cylinder Head Sub–assy
◆ Gasket
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A92986