

ACCELERATOR PEDAL ROD ASSY

2103B–01

REPLACEMENT

1. REMOVE REAR FLOOR BOARD NO.2 (See page 21–120)
2. REMOVE DECK FLOOR BOX REAR (See page 21–120)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 21–120)
4. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 21–120)

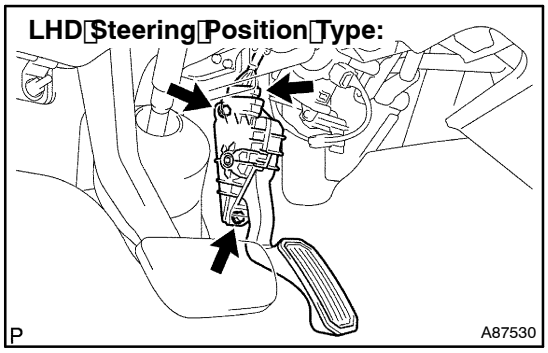

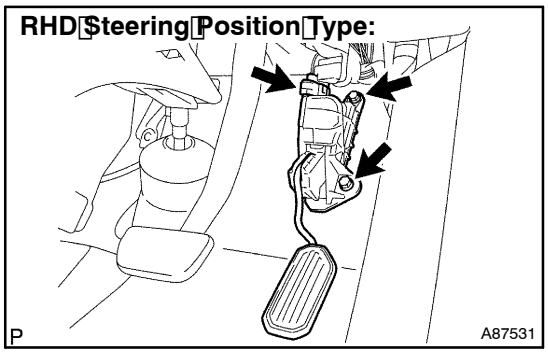

5. REMOVE ACCELERATOR PEDAL ROD ASSY
   (a) Disconnect the accelerator position sensor connector.
   (b) Remove the 2 bolts and accelerator pedal rod.

6. INSTALL ACCELERATOR PEDAL ROD ASSY
   Torque: 7.5 N·m (77 kgf·cm, 66 in.·lbf)
7. CONNECT BATTERY NEGATIVE TERMINAL
   Torque: 6.0 N·m (61 kgf·cm, 53 in.·lbf)
8. INSTALL REAR FLOOR BOARD NO.3
9. INSTALL DECK FLOOR BOX REAR
10. INSTALL REAR FLOOR BOARD NO.2
11. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01–29)