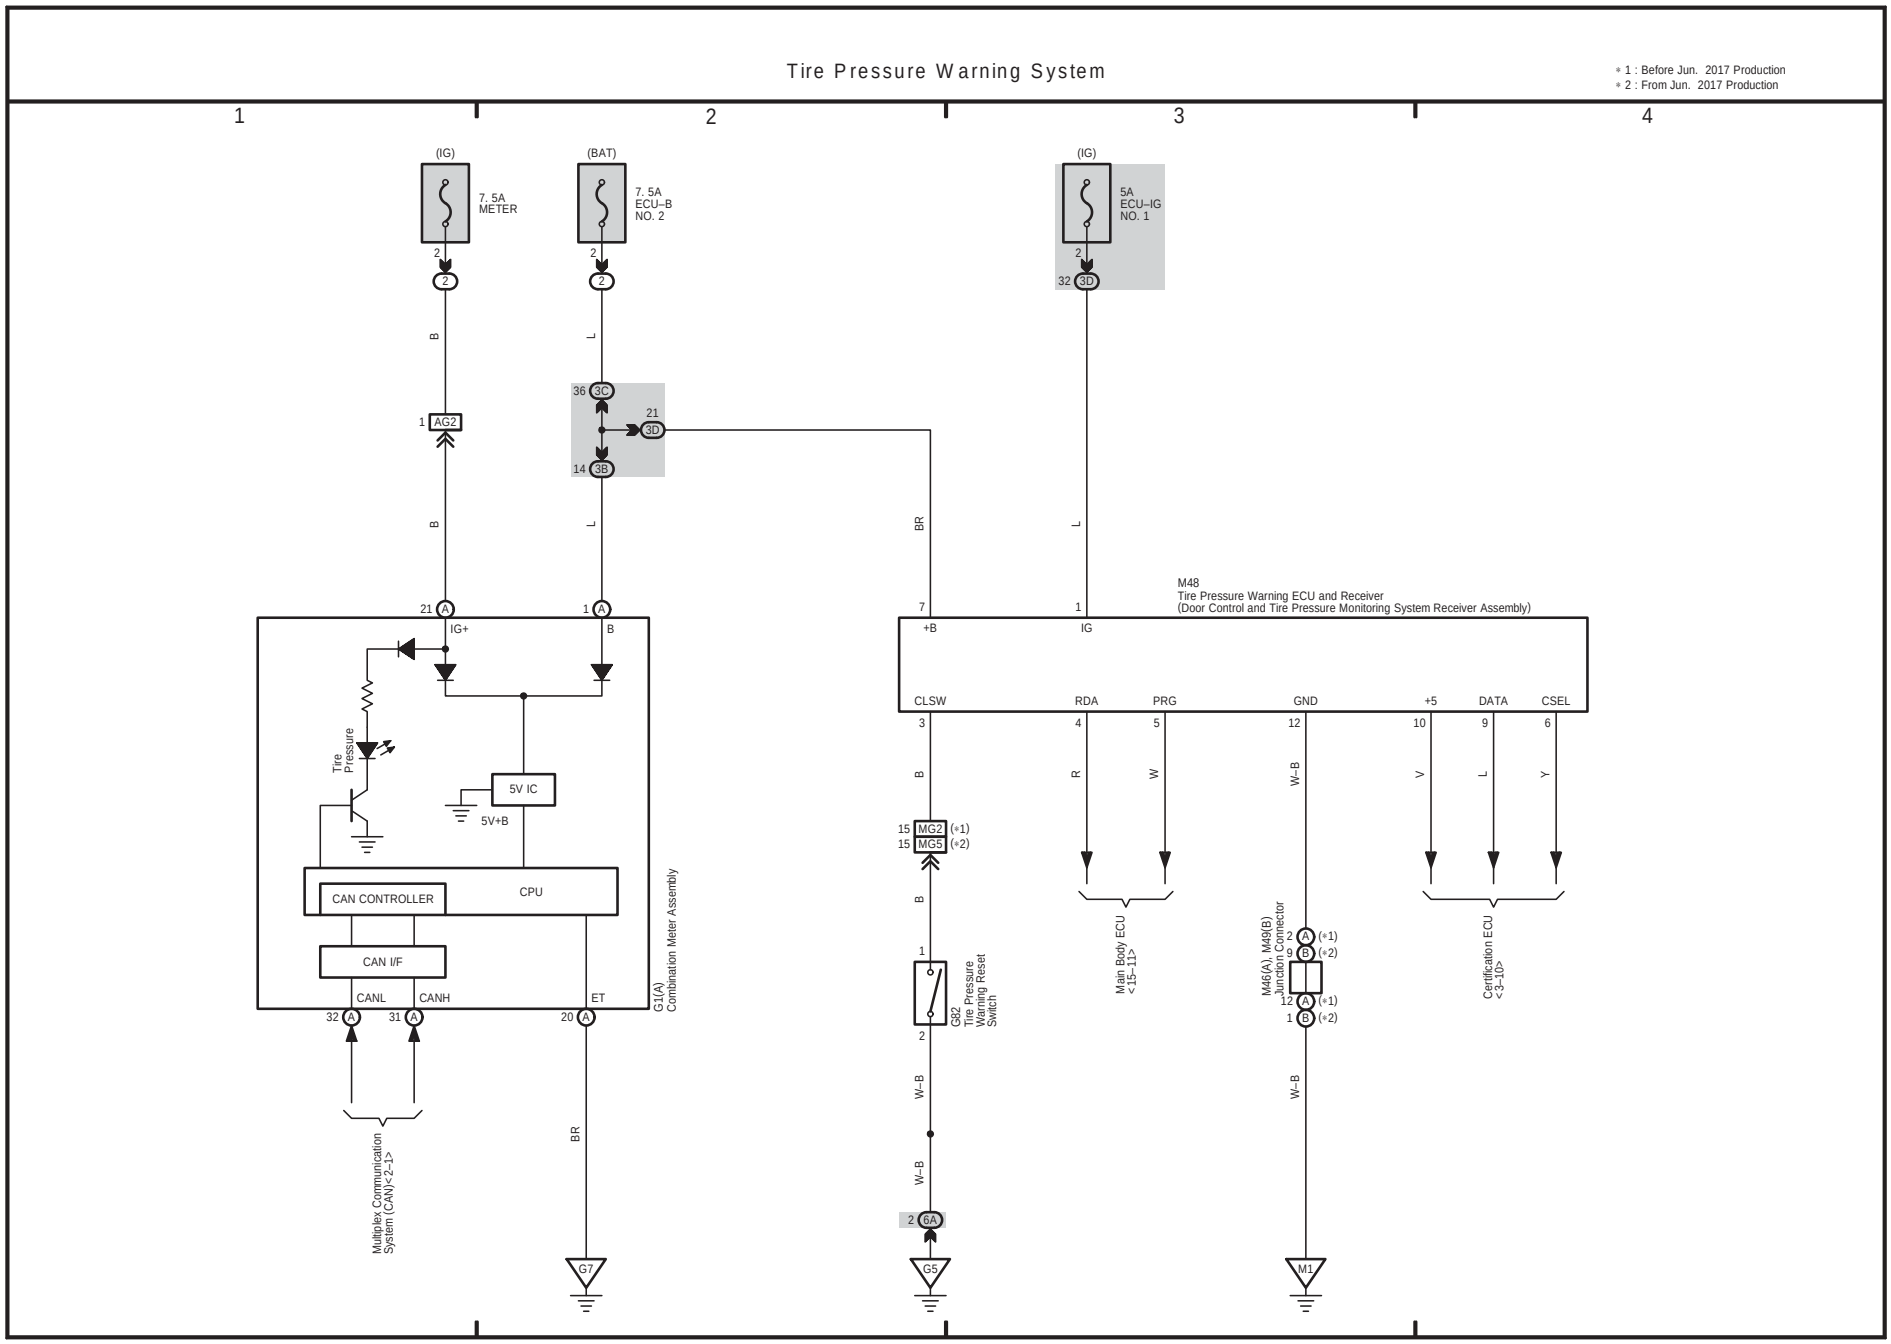

Tire Pressure Warning System
* 1 : Before Jun. 2017 Production
* 2 : From Jun. 2017 Production
1
2
3
4
(IG)
7. 5A
METER
(BAT)
7. 5A
ECU–B
NO. 2
(IG)
5A
ECU–IG
NO. 1
AG2
36 3C
21 3D
14 3B
32 3D
M48
Tire Pressure Warning ECU and Receiver
(Door Control and Tire Pressure Monitoring System Receiver Assembly)
+B
IG
CLSW
RDA
PRG
GND
+5
DATA
CSEL
IG+
B
Tire Pressure
5V IC
5V+B
CAN CONTROLLER
CPU
CAN I/F
CANL
CANH
ET
G1(A)
Combination Meter Assembly
MG2 (*1)
MG5 (*2)
G82
Tire Pressure Warning Reset Switch
6A
G5
G7
M1
Main Body ECU
<15–11>
M46(A), M49(B)
Junction Connector
Certification ECU
<3–10>
Multiplex Communication System (CAN)<2–1>