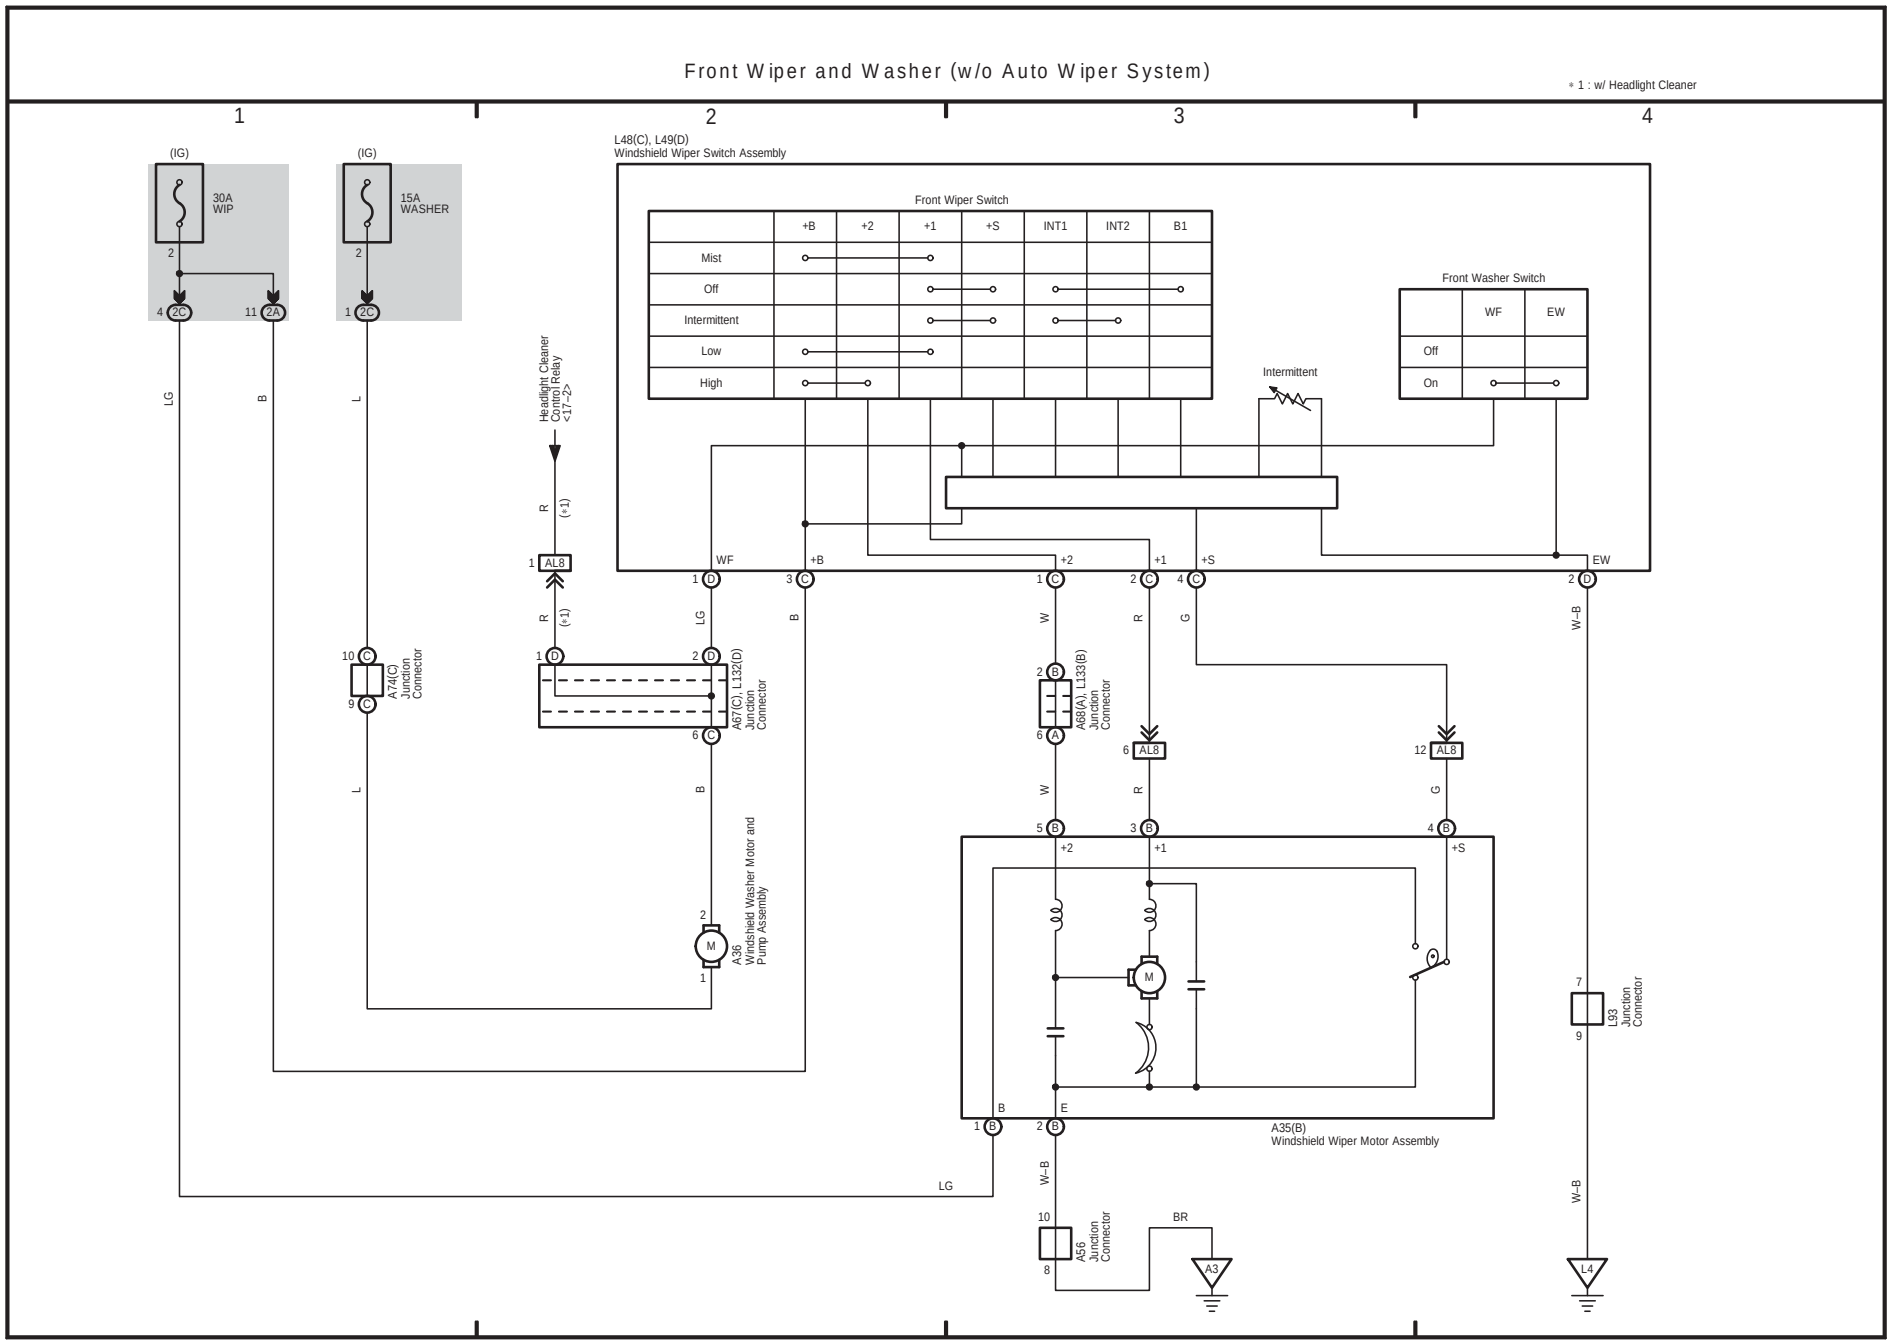

Front Wiper and Wash (w/o Auto Wiper System)
* 1 : w/ Headlight Cleaner
1
2
3
4
(IG)
30A WIP
15A WASHER
L48(C), L49(D)
Windshield Wiper Switch Assembly
Front Wiper Switch
+B
+2
+1
+S
INT1
INT2
B1
Mist
Off
Intermittent
Low
High
Front Washer Switch
WF
EW
Off
On
Intermittent
Headlight Cleaner Control Relay <17-2>
(*1)
AL8
A74(C) Junction Connector
A67(C), L132(D) Junction Connector
A68(A), L133(B) Junction Connector
A36 Windshield Washer Motor and Pump Assembly
A35(B) Windshield Wiper Motor Assembly
A55 Junction Connector
L93 Junction Connector
A3
L4
BR
LG
B
L
R
W
G
W-B