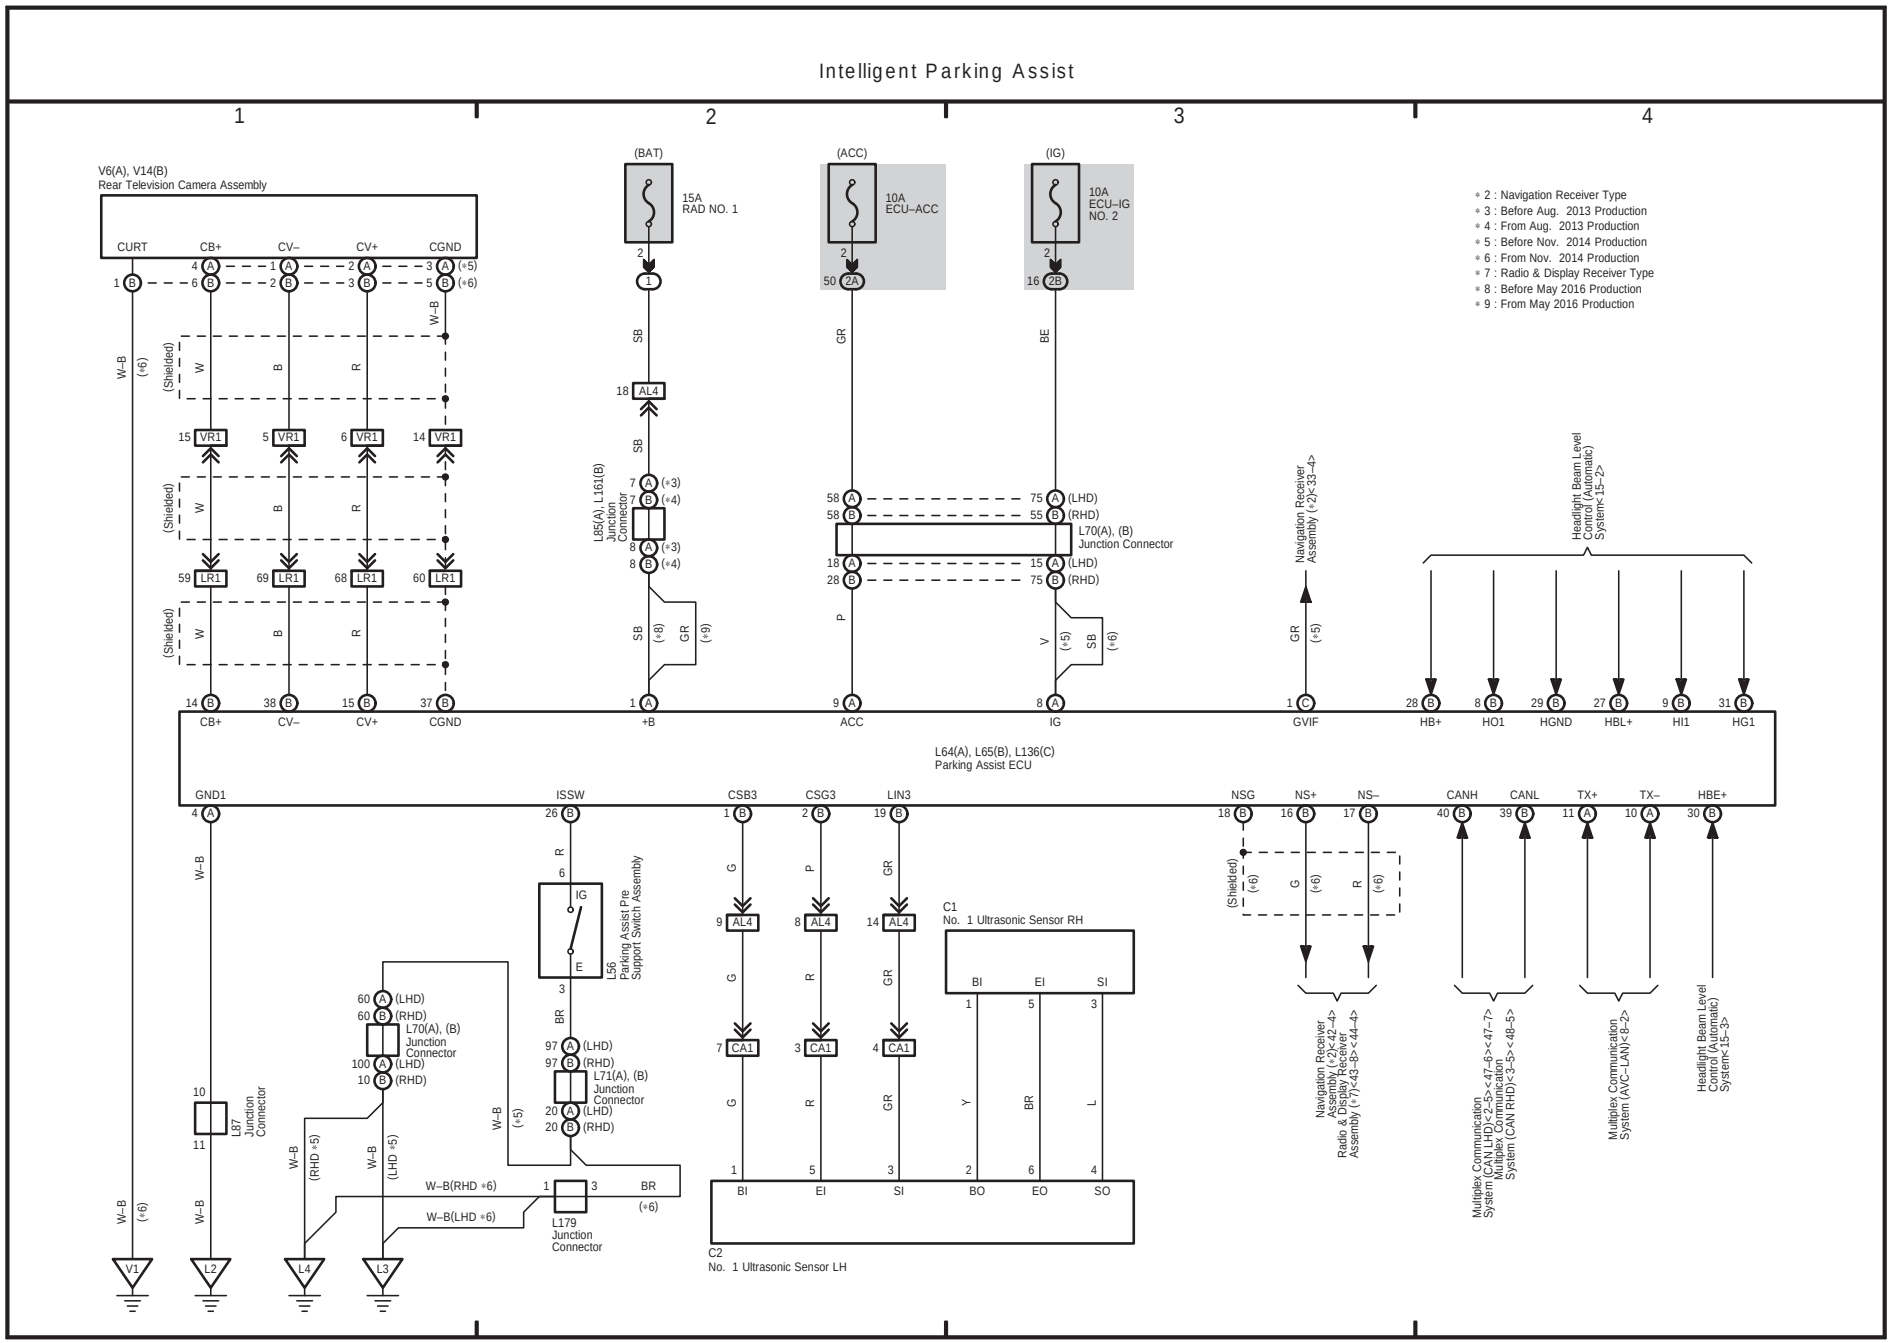

Intelligent Parking Assist
1
2
3
4
V6(A), V14(B)
Rear Television Camera Assembly
CURT
CB+
CV–
CV+
CGND
(BAT)
15A
RAD NO. 1
(ACC)
10A
ECU–ACC
(IG)
10A
ECU–IG
NO. 2
* 2 : Navigation Receiver Type
* 3 : Before Aug. 2013 Production
* 4 : From Aug. 2013 Production
* 5 : Before Nov. 2014 Production
* 6 : From Nov. 2014 Production
* 7 : Radio & Display Receiver Type
* 8 : Before May 2016 Production
* 9 : From May 2016 Production
L85(A), L161(B)
Junction
Connector
L70(A), (B)
Junction Connector
Navigation Receiver
Assembly (*2)<33–4>
Headlight Beam Level
Control (Automatic)
System<15–2>
HB+
HO1
HGND
HBL+
HI1
HG1
+B
ACC
IG
GVIF
L64(A), L65(B), L136(C)
Parking Assist ECU
GND1
ISSW
CSB3
CSG3
LIN3
NSG
NS+
NS–
CANH
CANL
TX+
TX–
HBE+
L56
Parking Assist Pre
Support Switch Assembly
L87
Junction
Connector
L71(A), (B)
Junction
Connector
L179
Junction
Connector
C1
No. 1 Ultrasonic Sensor RH
C2
No. 1 Ultrasonic Sensor LH
Navigation Receiver
Assembly (*2)<44–4>
Radio & Display Receiver
Assembly (*7)<43–3><44–4>
Multiplex Communication
System (CAN LHD)<2–5><47–6><47–7>
Multiplex Communication
System (CAN RHD)<3–5><48–5>
Multiplex Communication
System (AVC–LAN)<6–2>
Headlight Beam Level
Control (Automatic)
System<15–3>
V1
L2
L4
L3