

(Cont. next page)

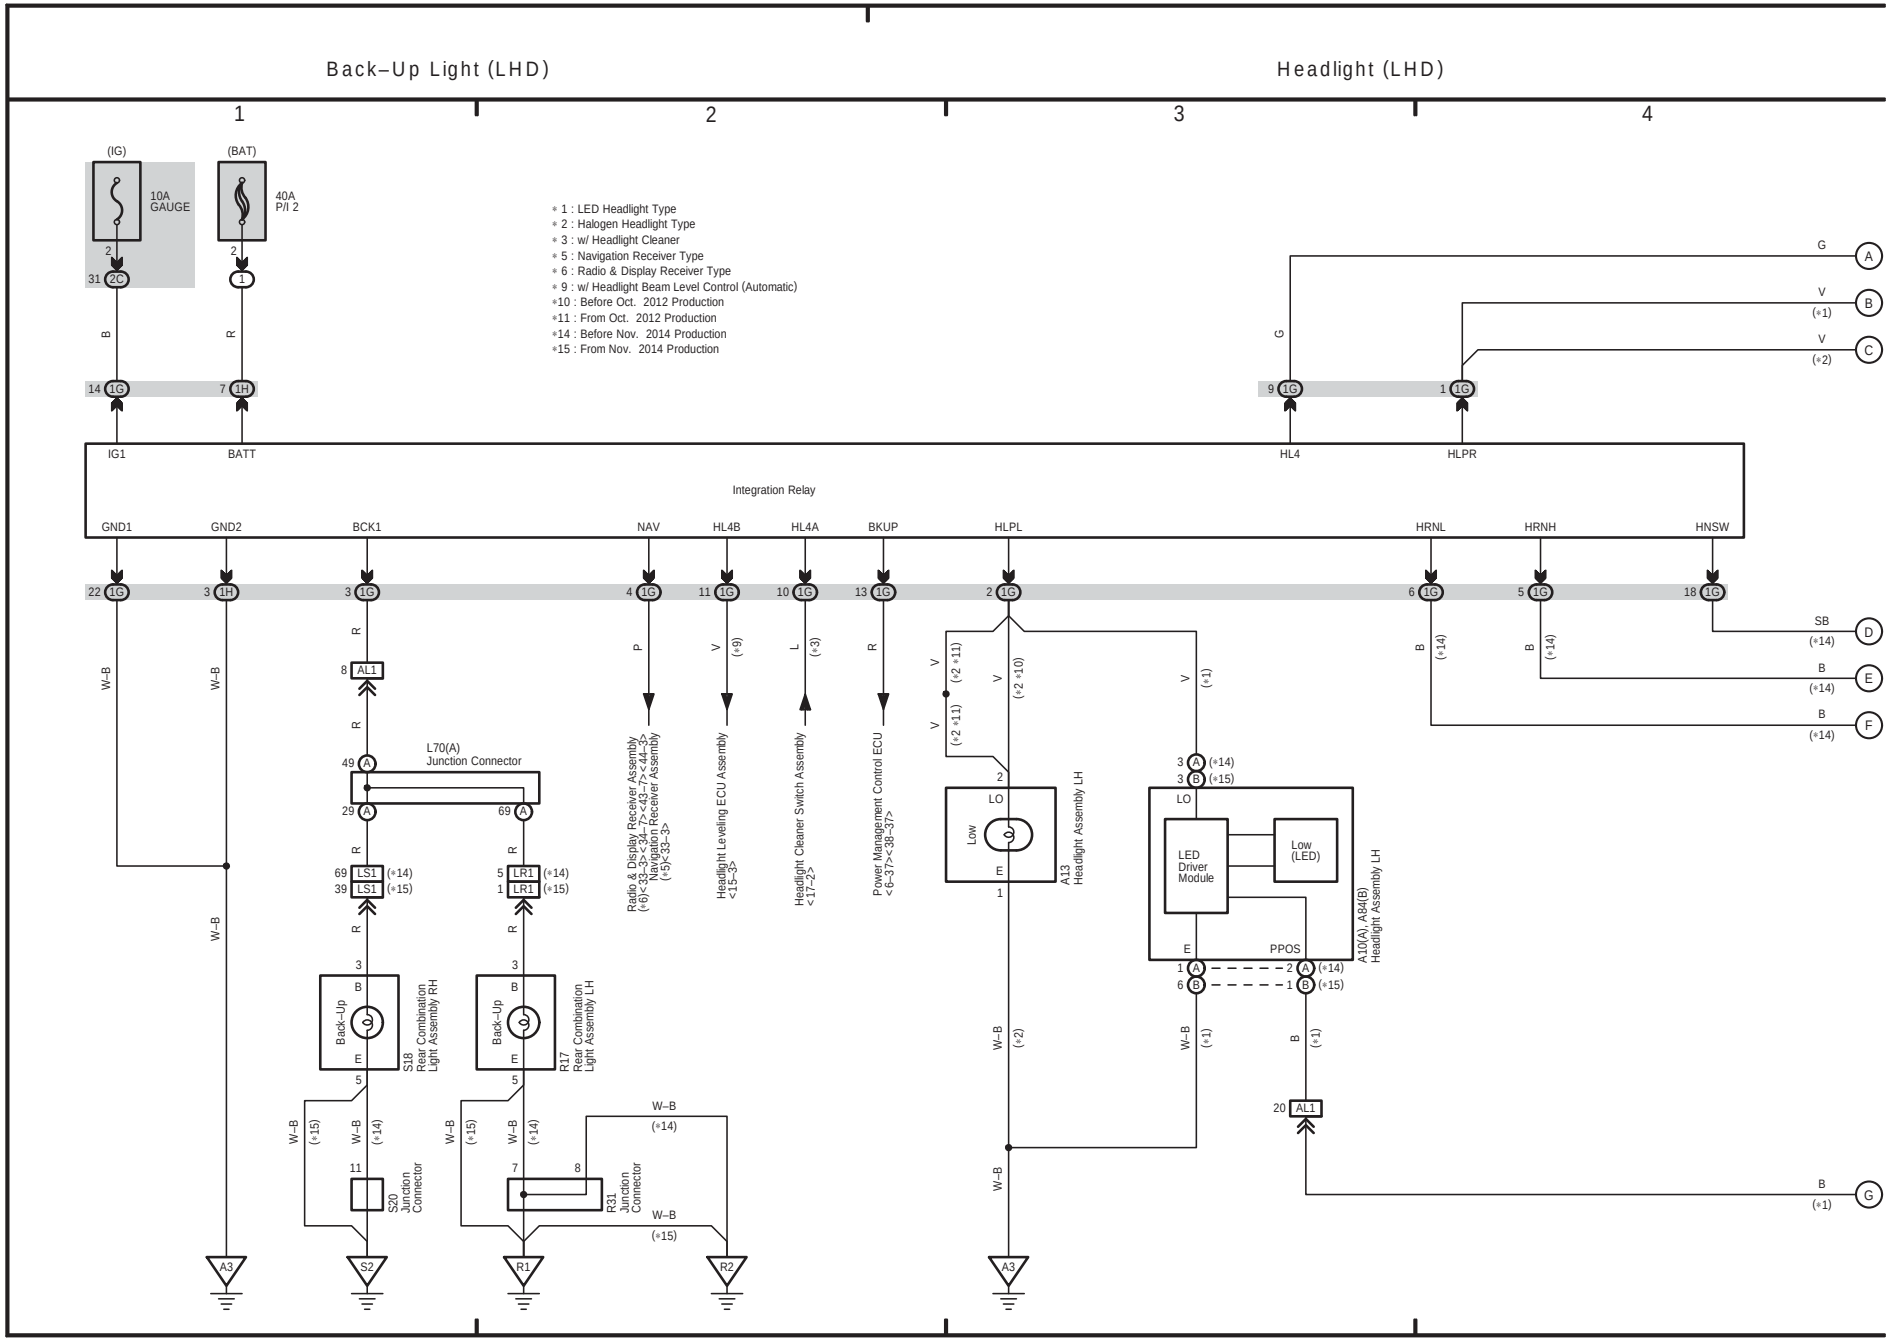


(Cont. next page)

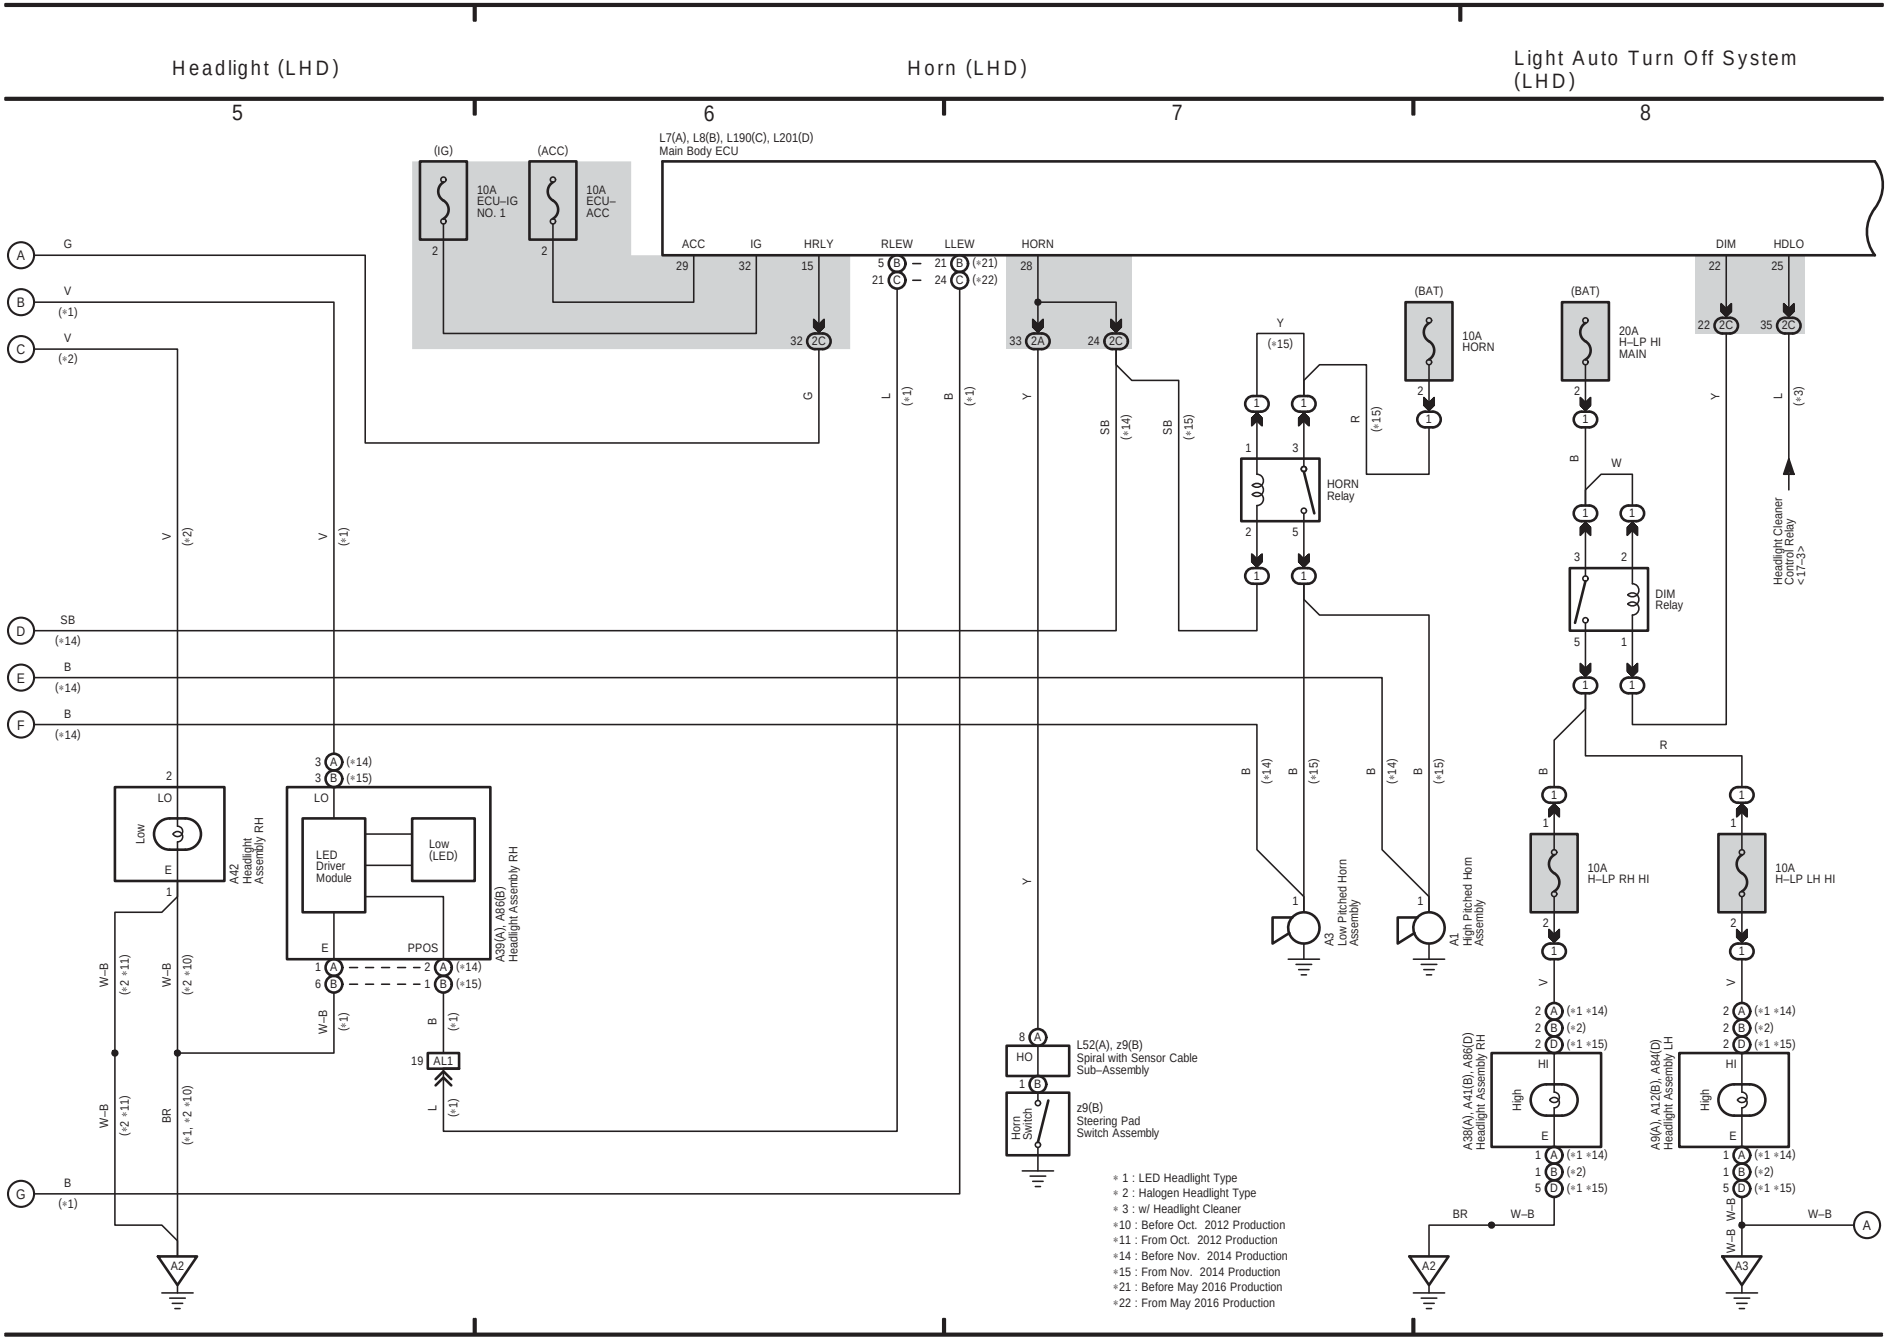

(Cont. next page)

Light Auto Turn Off System (LHD)

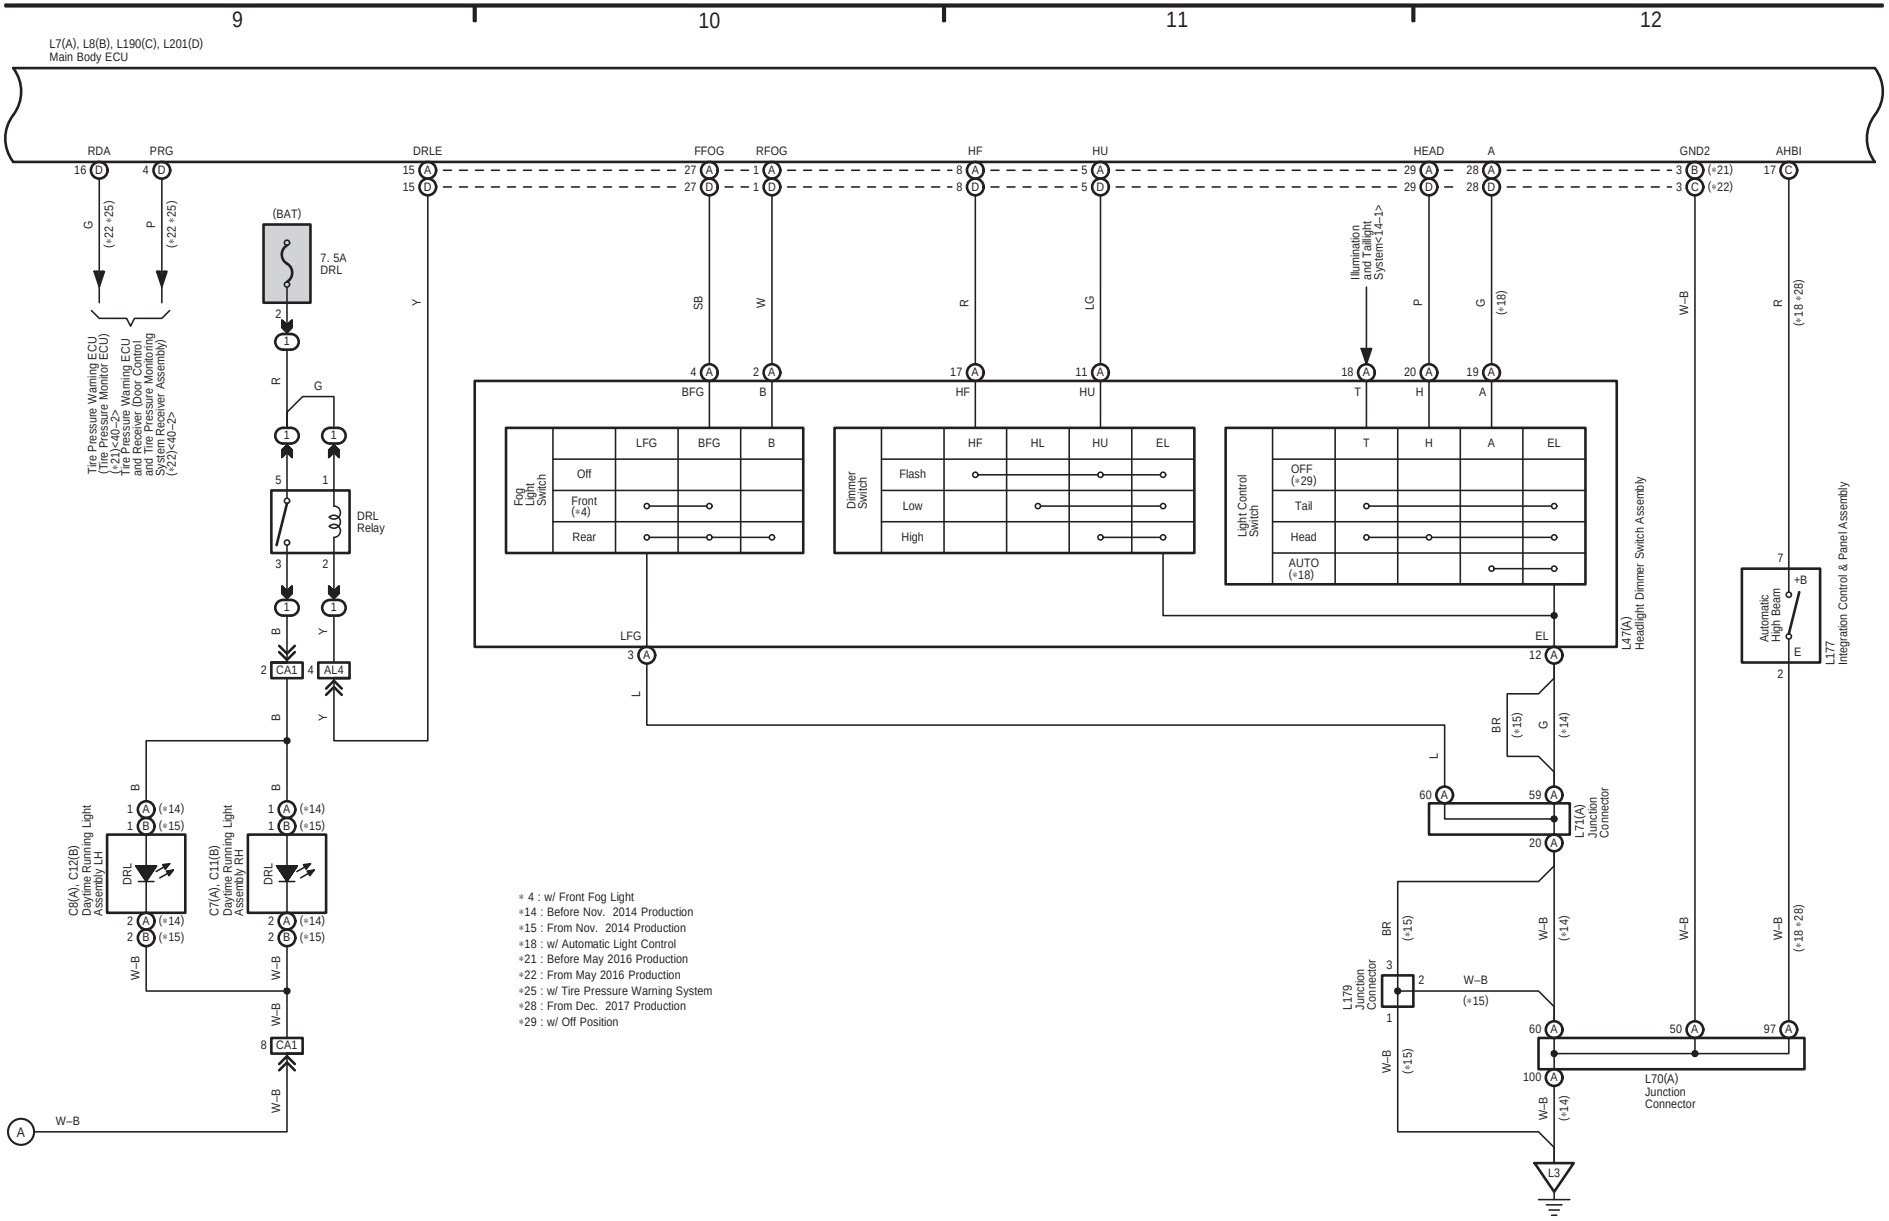

(Cont. next page)

Light Auto Turn Off System (LHD) | Front Fog Light (LHD) | Rear Fog Light (LHD) | Automatic Light Control (LHD)

13 | 14 | 15 | 16

L7(A), L8(B), L190(C), L201(D)
Main Body ECU

PKB | BDSU | IND | TAIL | TRLY | FFGO | RFGO | CLTB | CLTE | CLTS

12 | 23 (A) (*21) 23 (D) (*22) | 23 | 30 (A) (*21) 30 (D) (*32) 17 (D) (*31) | 14 | 13 | 27 | 20 (A) (*21) 20 (D) (*22) | 22 (A) (*21) 22 (D) (*22) | 21 (A) (*21) 21 (D) (*22)

20 2C | 16 2A | 51 2A

R | Y | GR (*7) | G (*21)

1

A25
Parking Brake Switch Assembly

Navigation Receiver Assembly <43–23>
Radio & Display Receiver Assembly (*6)<33–4><34–7><43–6><44–4>

Back Door Opener Switch Assembly <6–56><38–60>

Combination Meter Assembly <6–54><38–58>

Illumination and Taillight System<14–1>

Illumination and Taillight System<14–3>

(BAT)

125A DC/DC

2 | 1 1D | W

LG (*4)

8 2C | 1 2E

1 CA1

1 | 1 | 1 | 2

7. 5A RR FOG

15A FR FOG (*14)
7. 5 FR FOG (*15)

TAIL Relay

FR FOG Relay

10A TAIL

2 | 1

C4 Front Fog Light Assembly LH

C6 Front Fog Light Assembly RH

W–B (*4)

8 CA1

A3

55 2A | 7 2B

V | G

41 (A) 11 (A)

L71(A) Junction Connector

26 2B

Y

BR

B

1 | 3 | 2 | 5

L153 Rear Fog Light Relay

CLTB | CLTE | CLTS

15 LI1 | 13 LI1 | 14 LI1

R (*18) | B (*18) | W (*18)

3 | 6 | 4

I1
Automatic Light Control Sensor

54 LR1 (*14)
55 LR1 (*15)

Rear Fog

R17
Rear Combination Light Assembly LH

W–B (*15) | W–B (*14)

7 | 8

R31
Junction Connector

R1 | R2


* 4 : w/ Front Fog Light
* 5 : Navigation Receiver Type
* 6 : Radio & Display Receiver Type
* 7 : Driver' s Door Only Entry & Start System
*14 : Before Nov. 2014 Production
*15 : From Nov. 2014 Production
*18 : w/ Automatic Light Control
*21 : Before May 2016 Production
*22 : From May 2016 Production
*31 : From Aug. 2020 Production
*32 : From May 2016 Production until Aug. 2020 Production

4 PRIUS + / PRIUS V / PRIUSα (Cont' d)

(Cont. next page)

*12 : Before Aug. 2013 Production
*13 : From Aug. 2013 Production
*21 : Before May 2016 Production
*22 : From May 2016 Production

Door Lock Control (LHD)

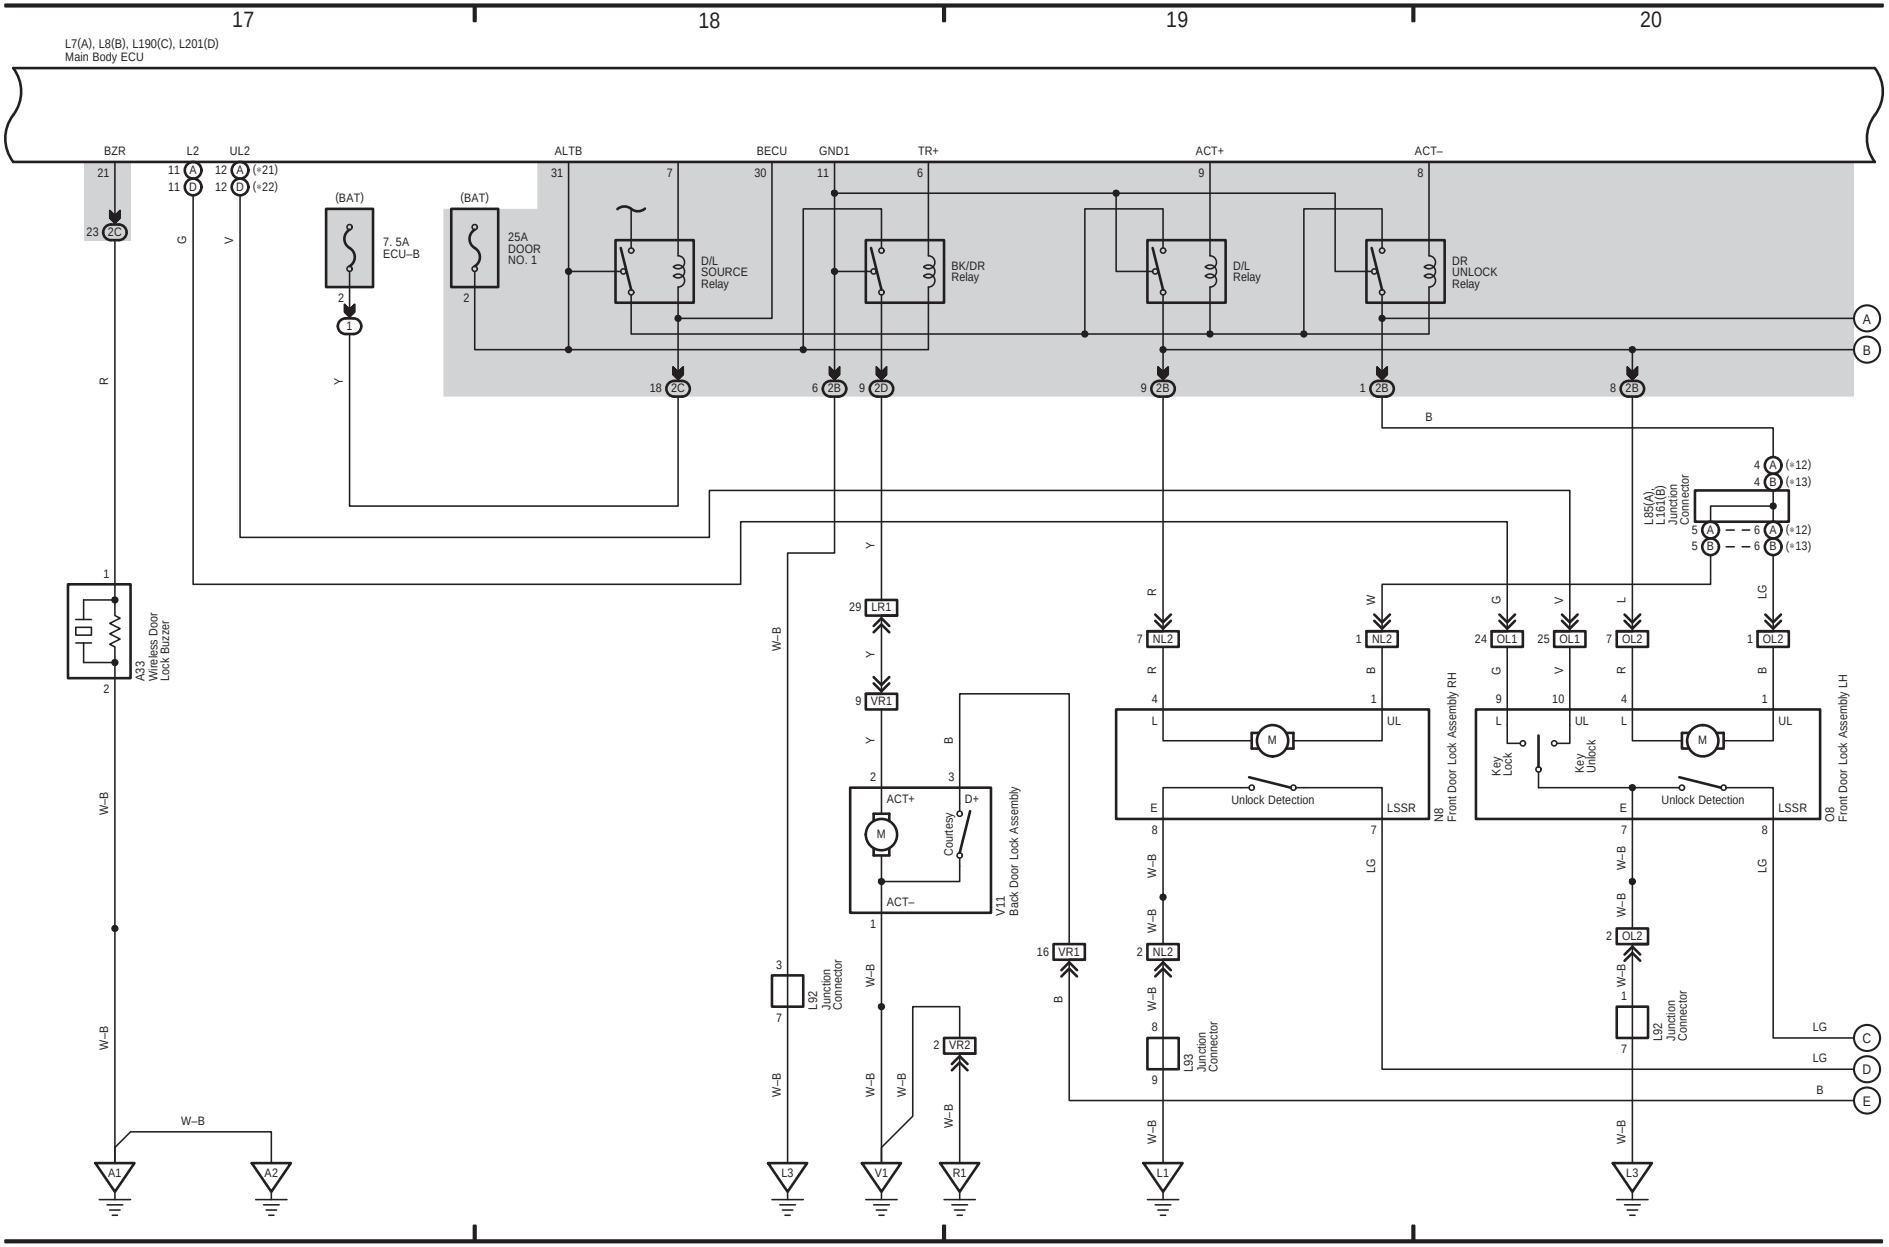


4 PRIUS + / PRIUS V / PRIUSα (Cont' d)

(Cont. next page)

Door Lock Control (LHD)


*21 : Before May 2016 Production
*22 : From May 2016 Production

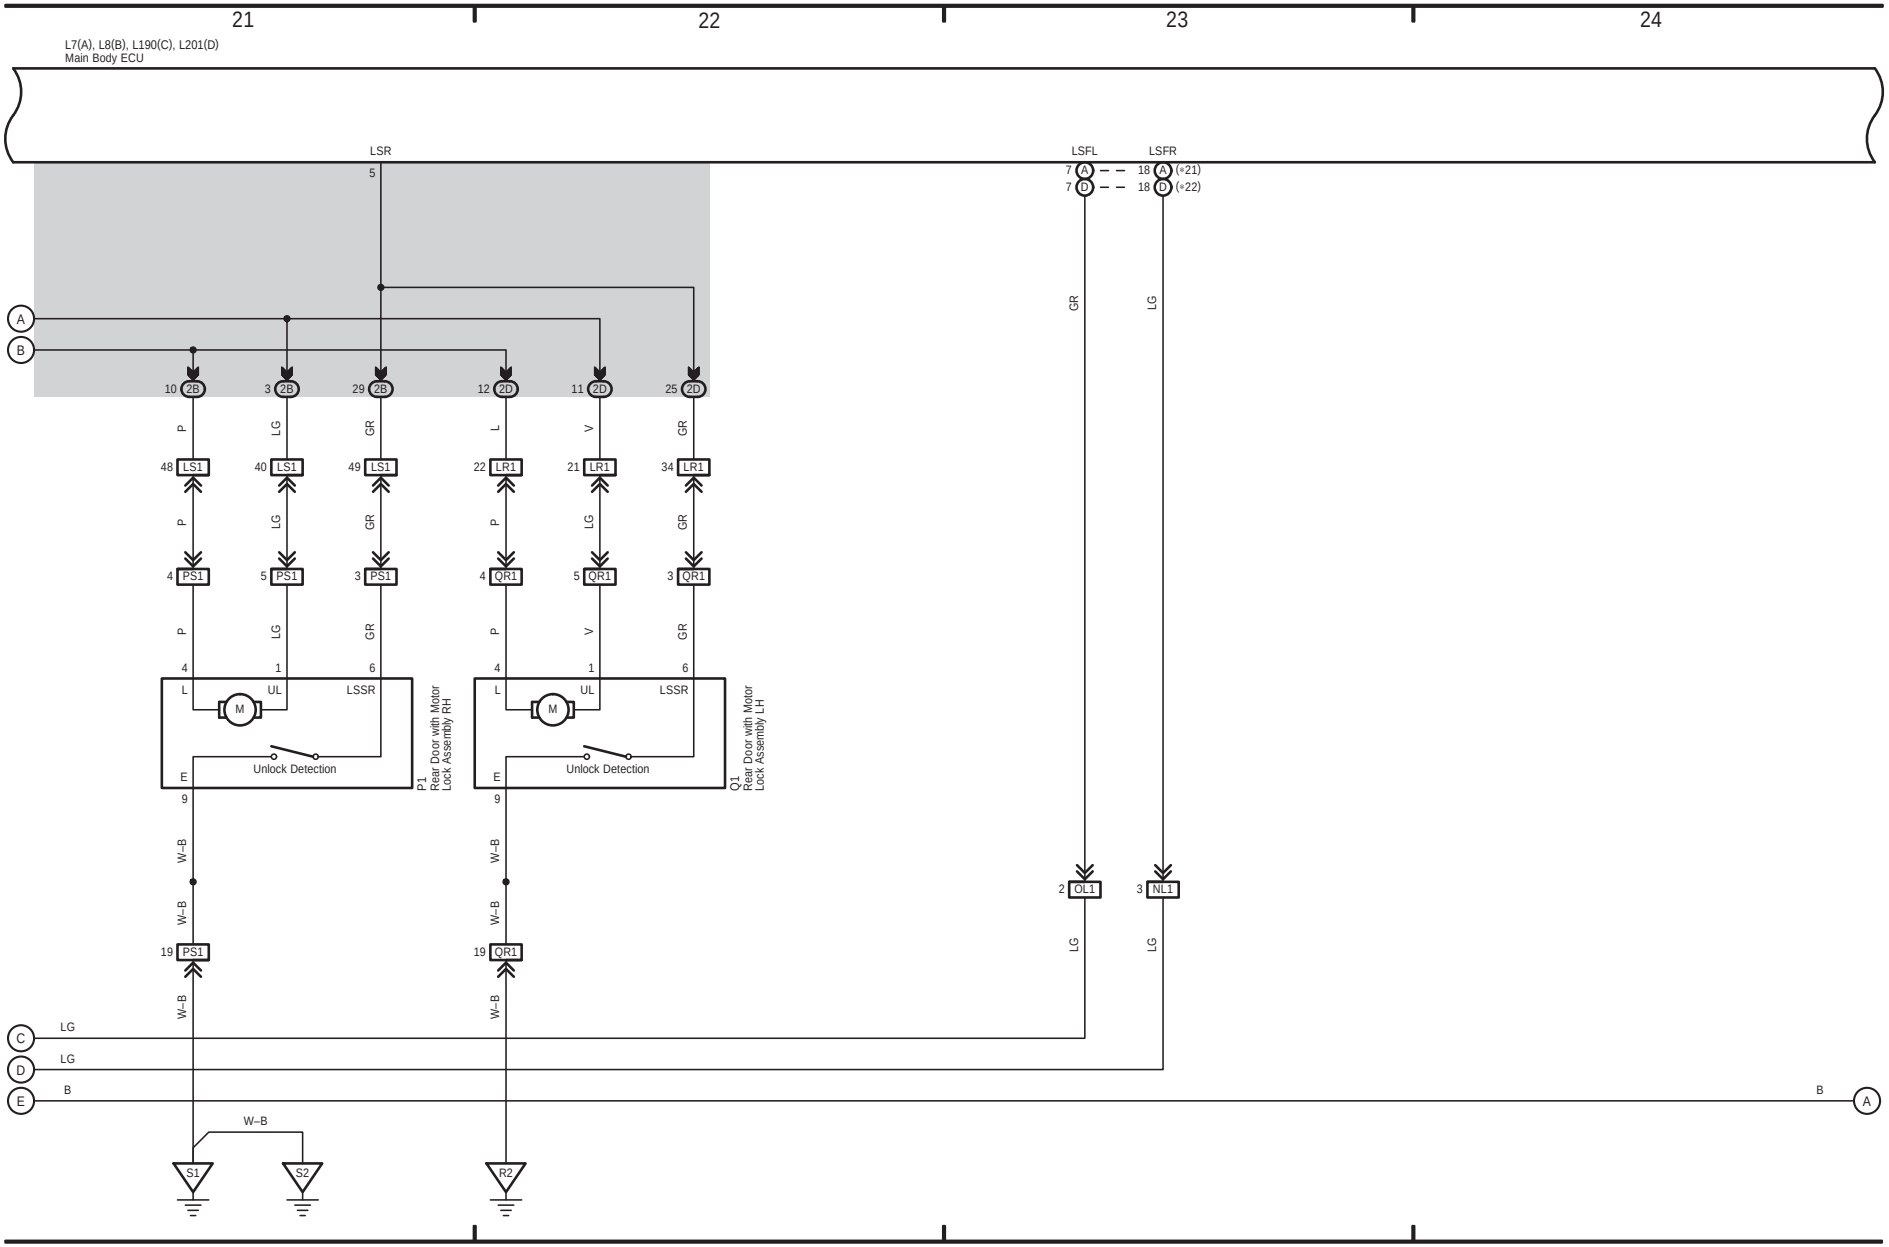

M


(Cont. next page)

Interior Light (LHD)

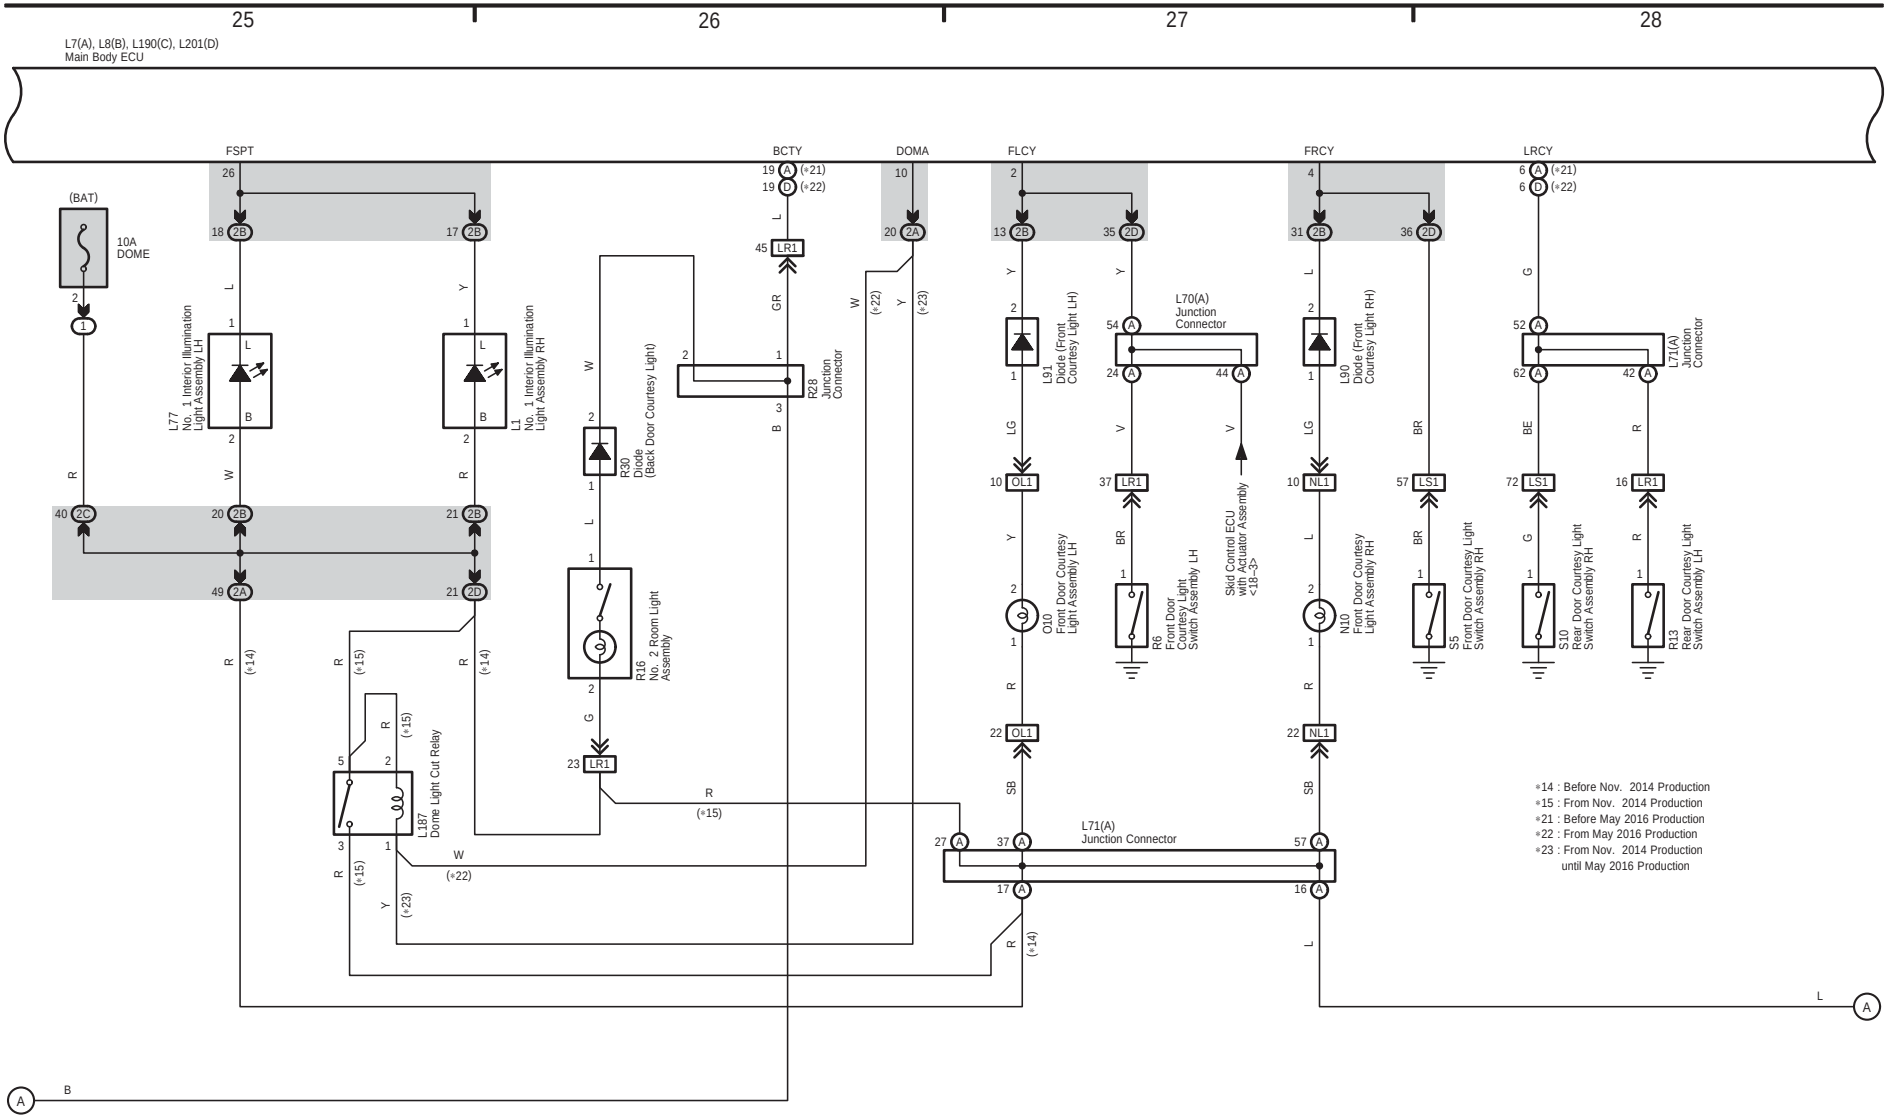

(Cont. next page)

Interior Light (LHD)

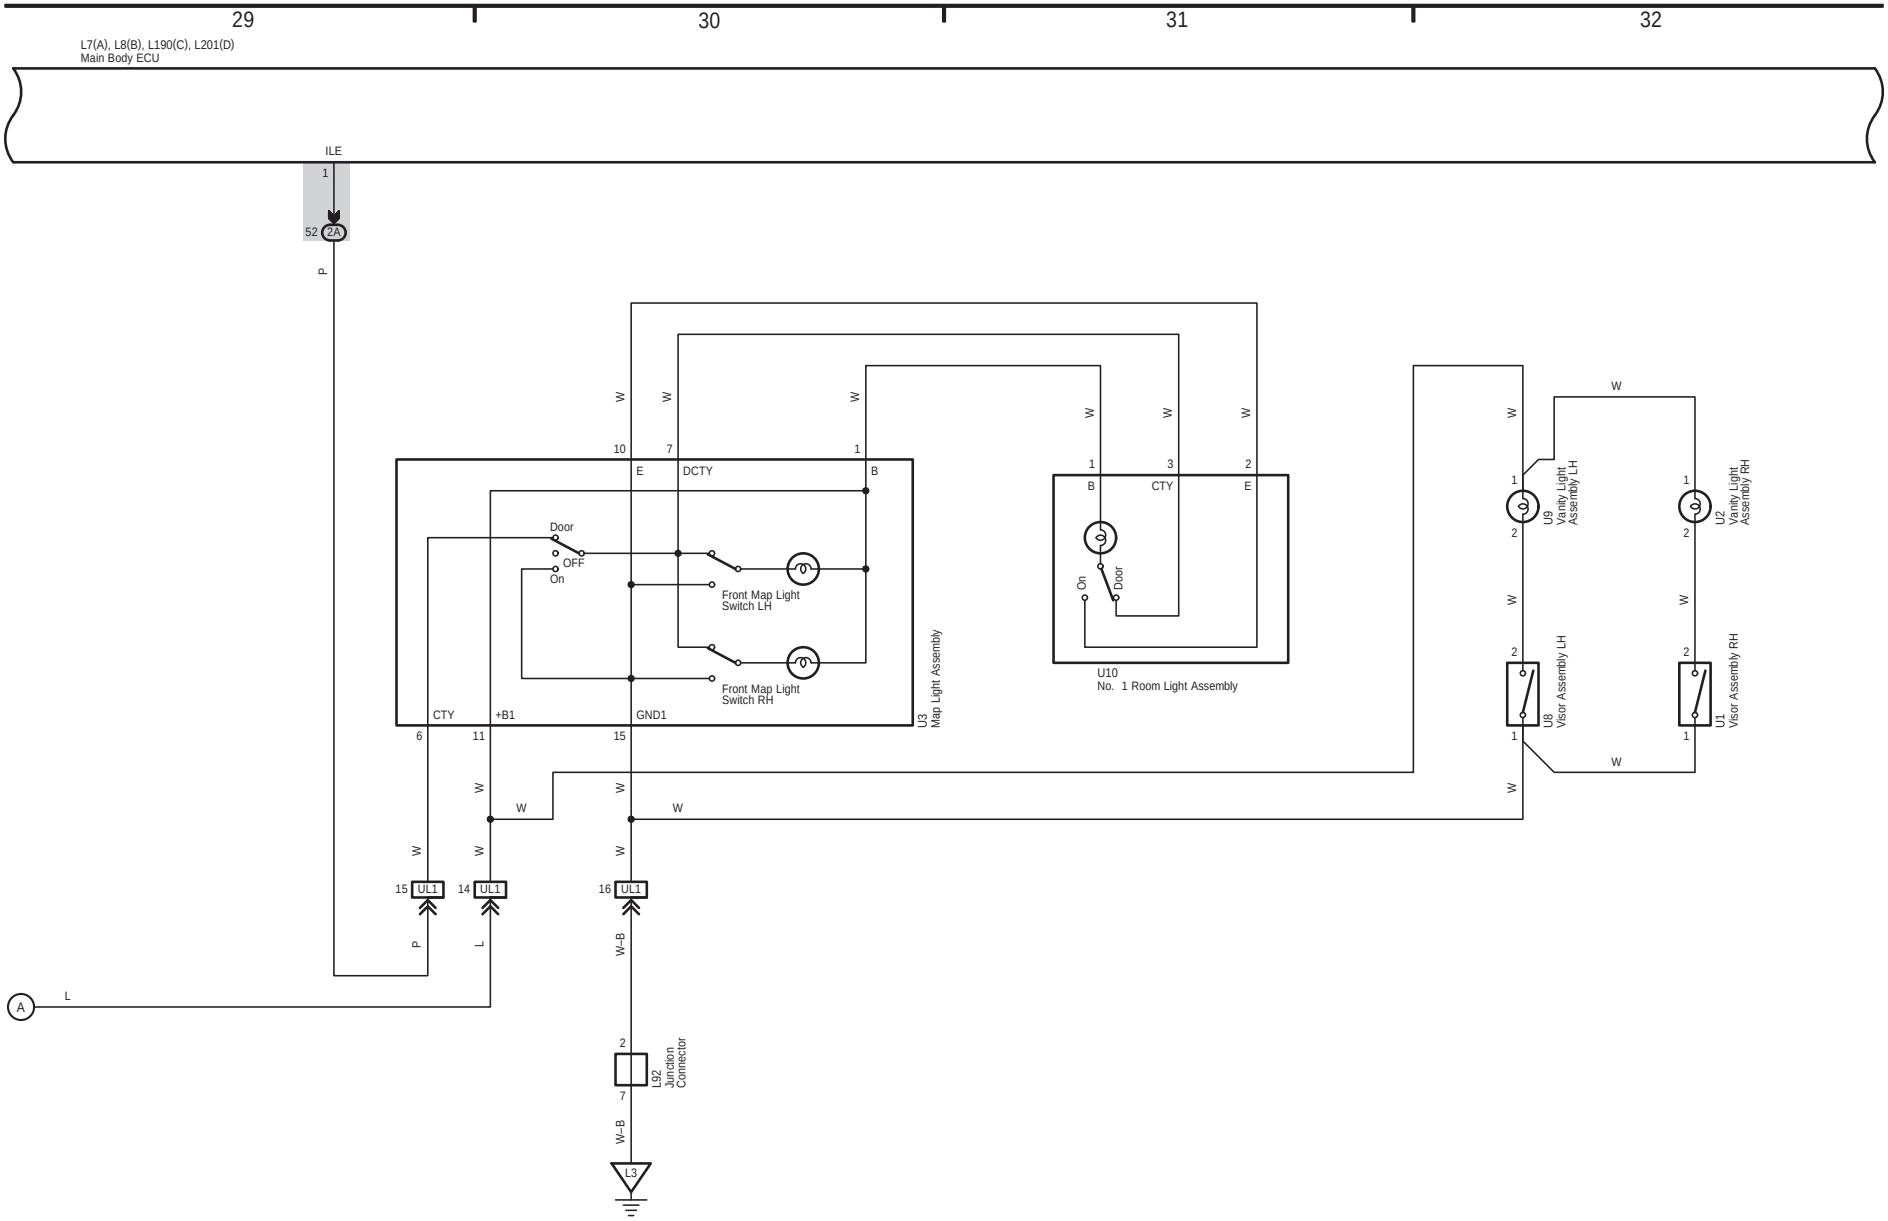

4 PRIUS + / PRIUS V / PRIUSα (Cont' d)


(Cont. next page)

Light Reminder (LHD)


*14 : Before Nov. 2014 Production

33 34 35 36

L7(A), L8(B), L190(C), L201(D)
Main Body ECU

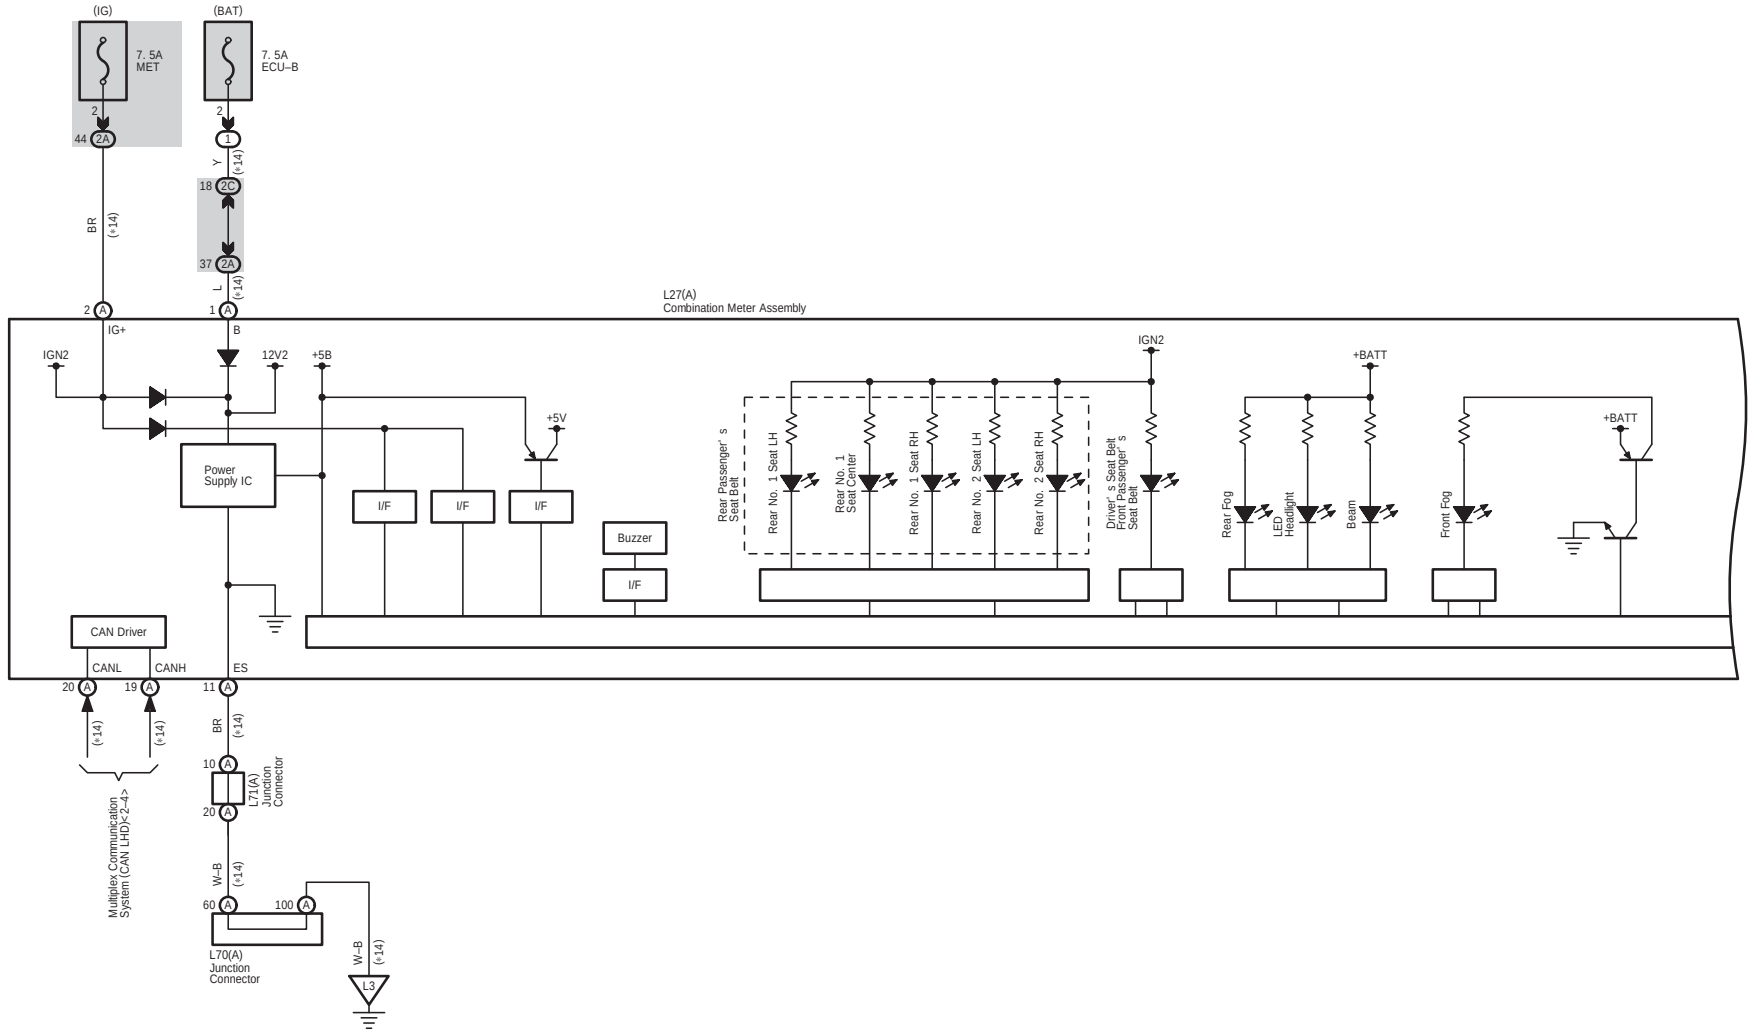


(Cont. next page)

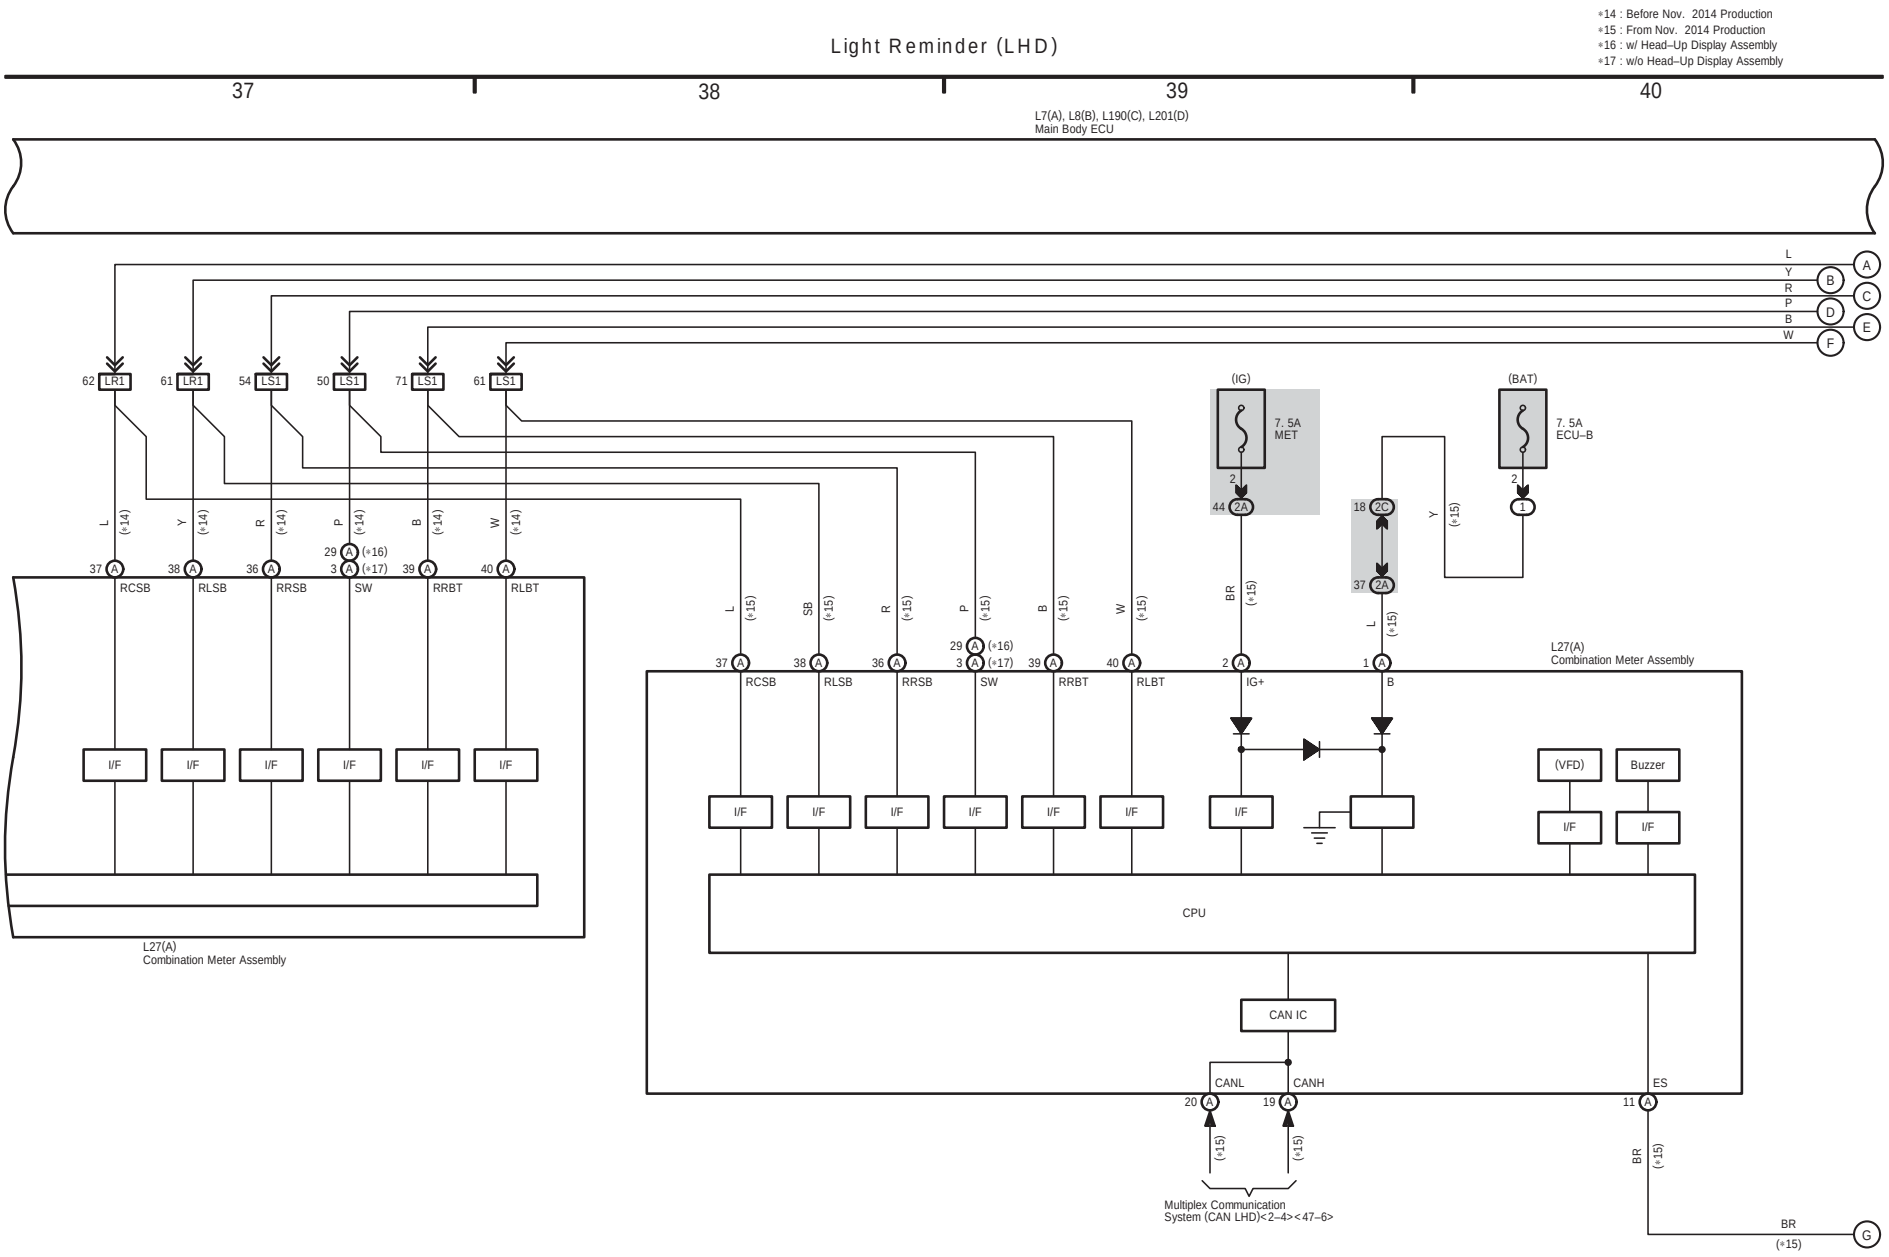

4 PRIUS + / PRIUS V / PRIUSα (Cont' d)


(Cont. next page)

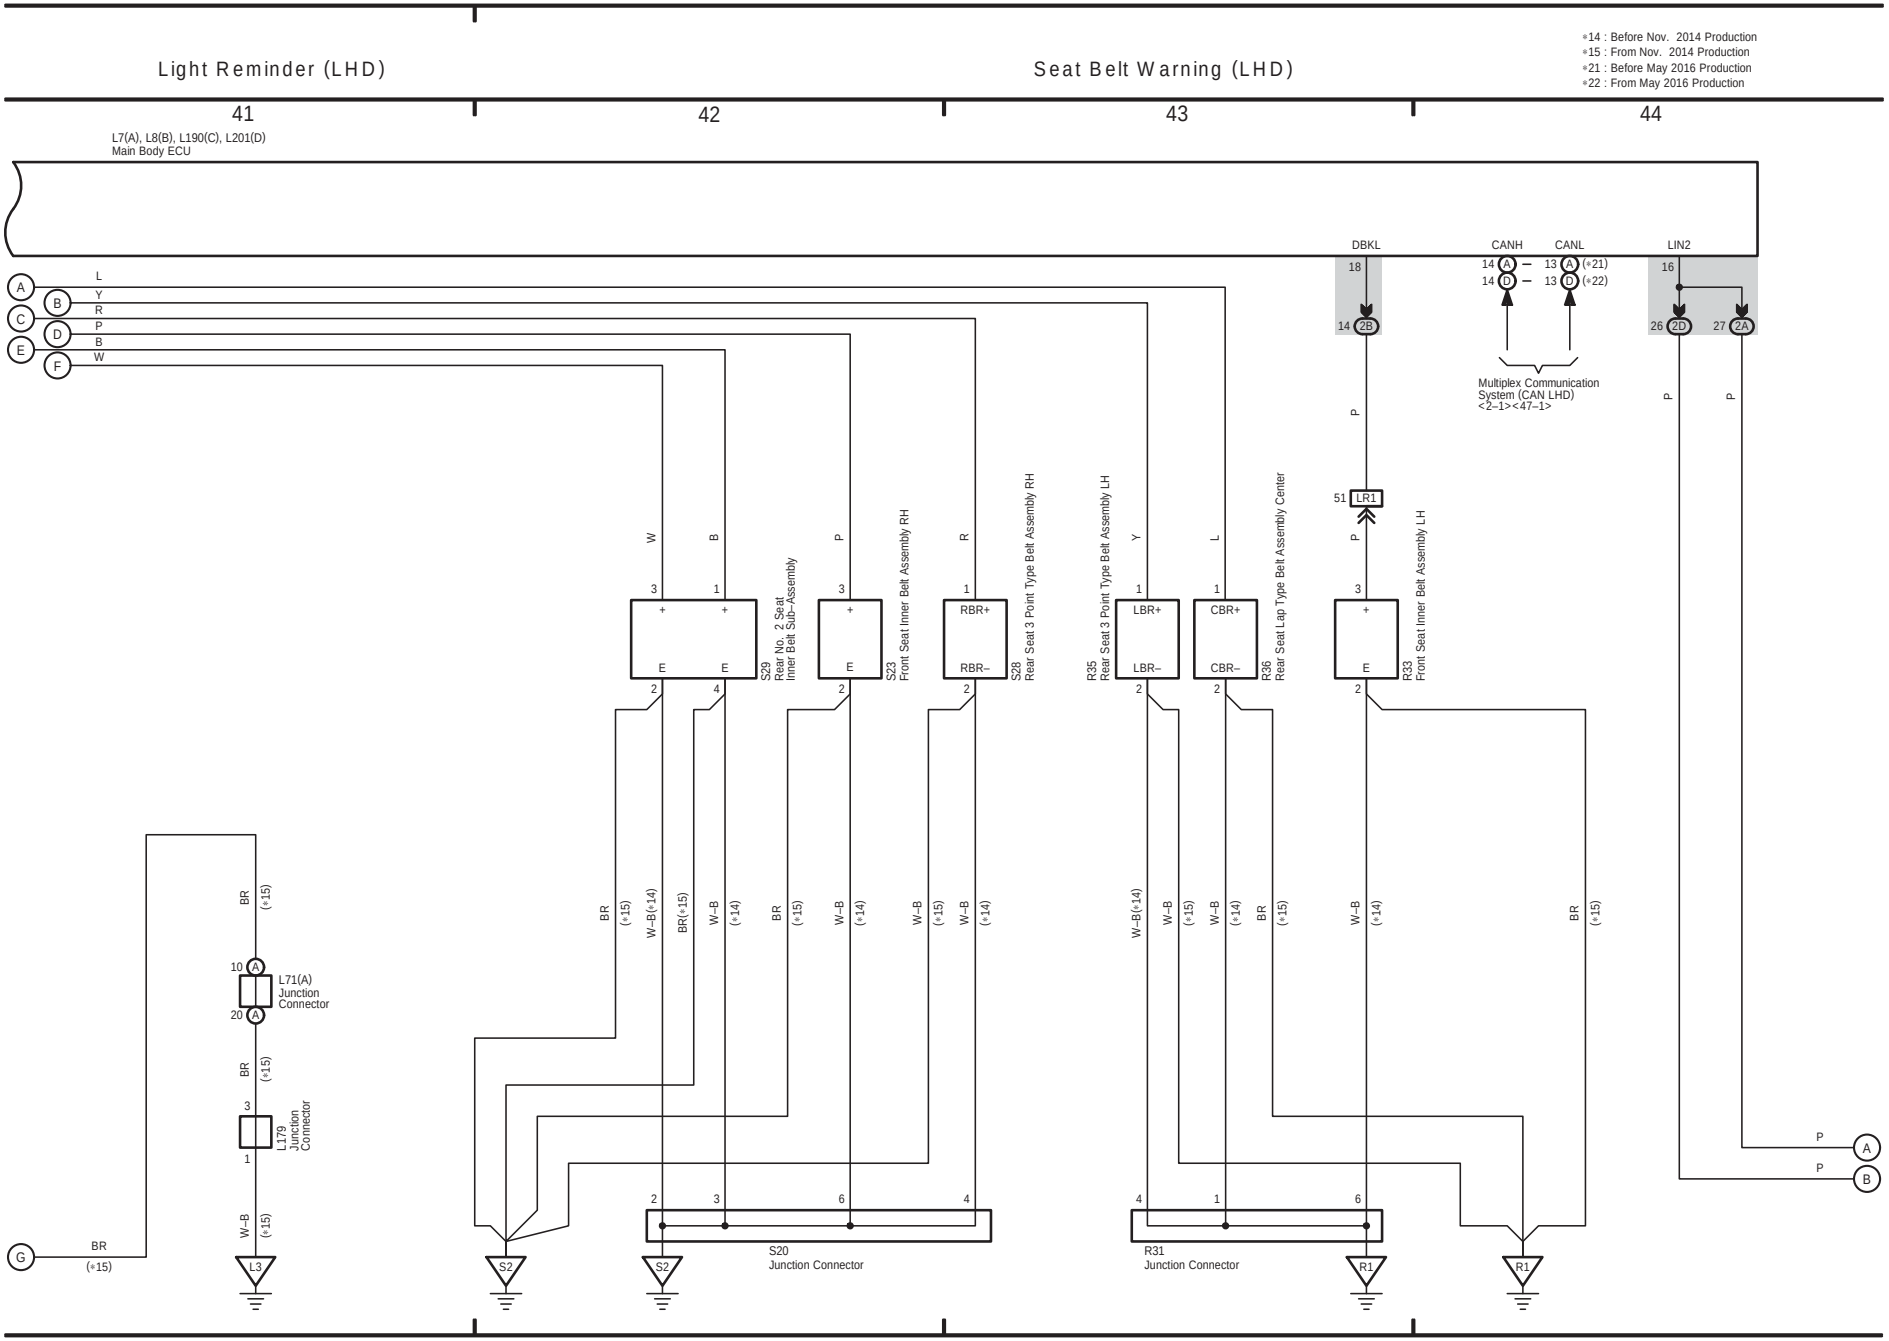

(Cont. next page)

Power Window (LHD)

∗20 : w/ Sliding Roof
∗27 : Before Dec. 2017 Production
∗28 : From Dec. 2017 Production

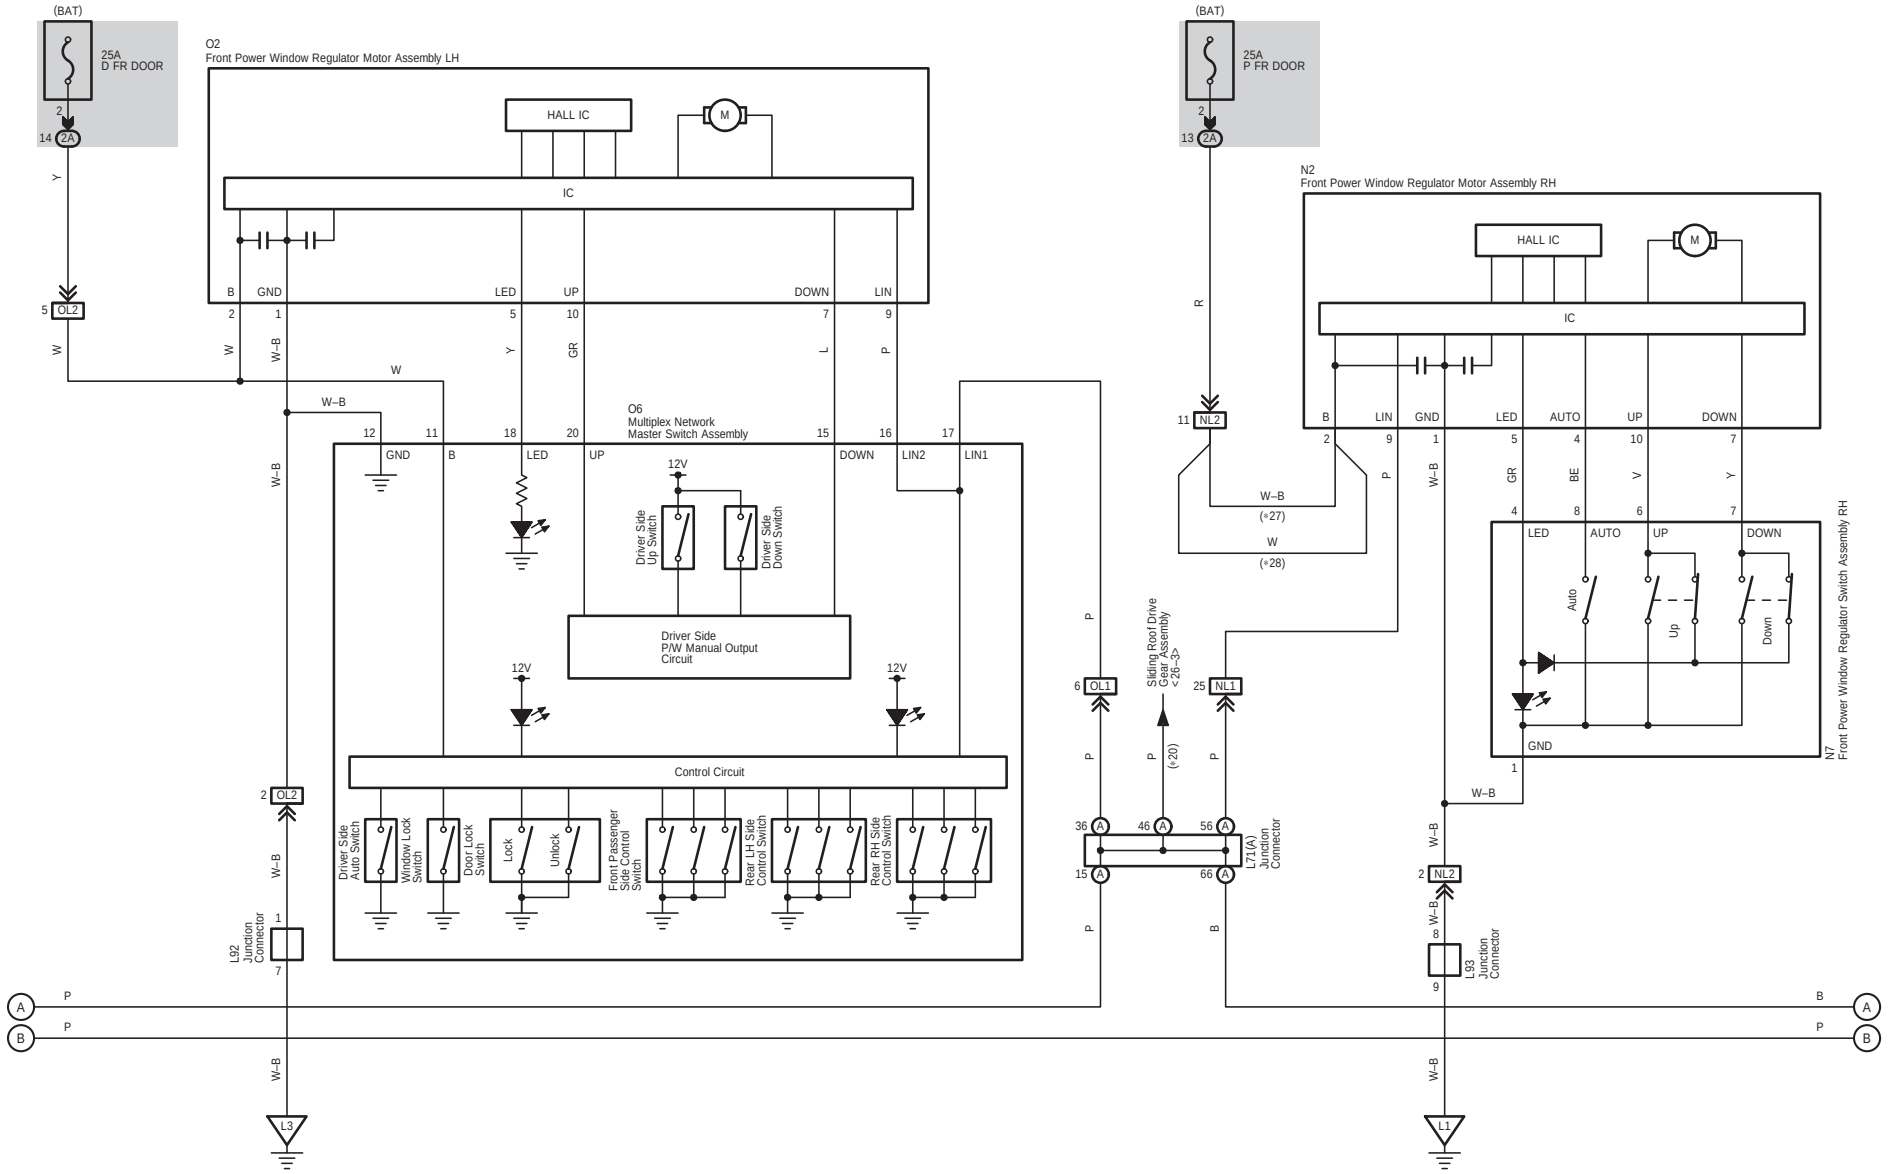

M

4 PRIUS + / PRIUS V / PRIUSα (Cont' d)

Power Window (LHD)

