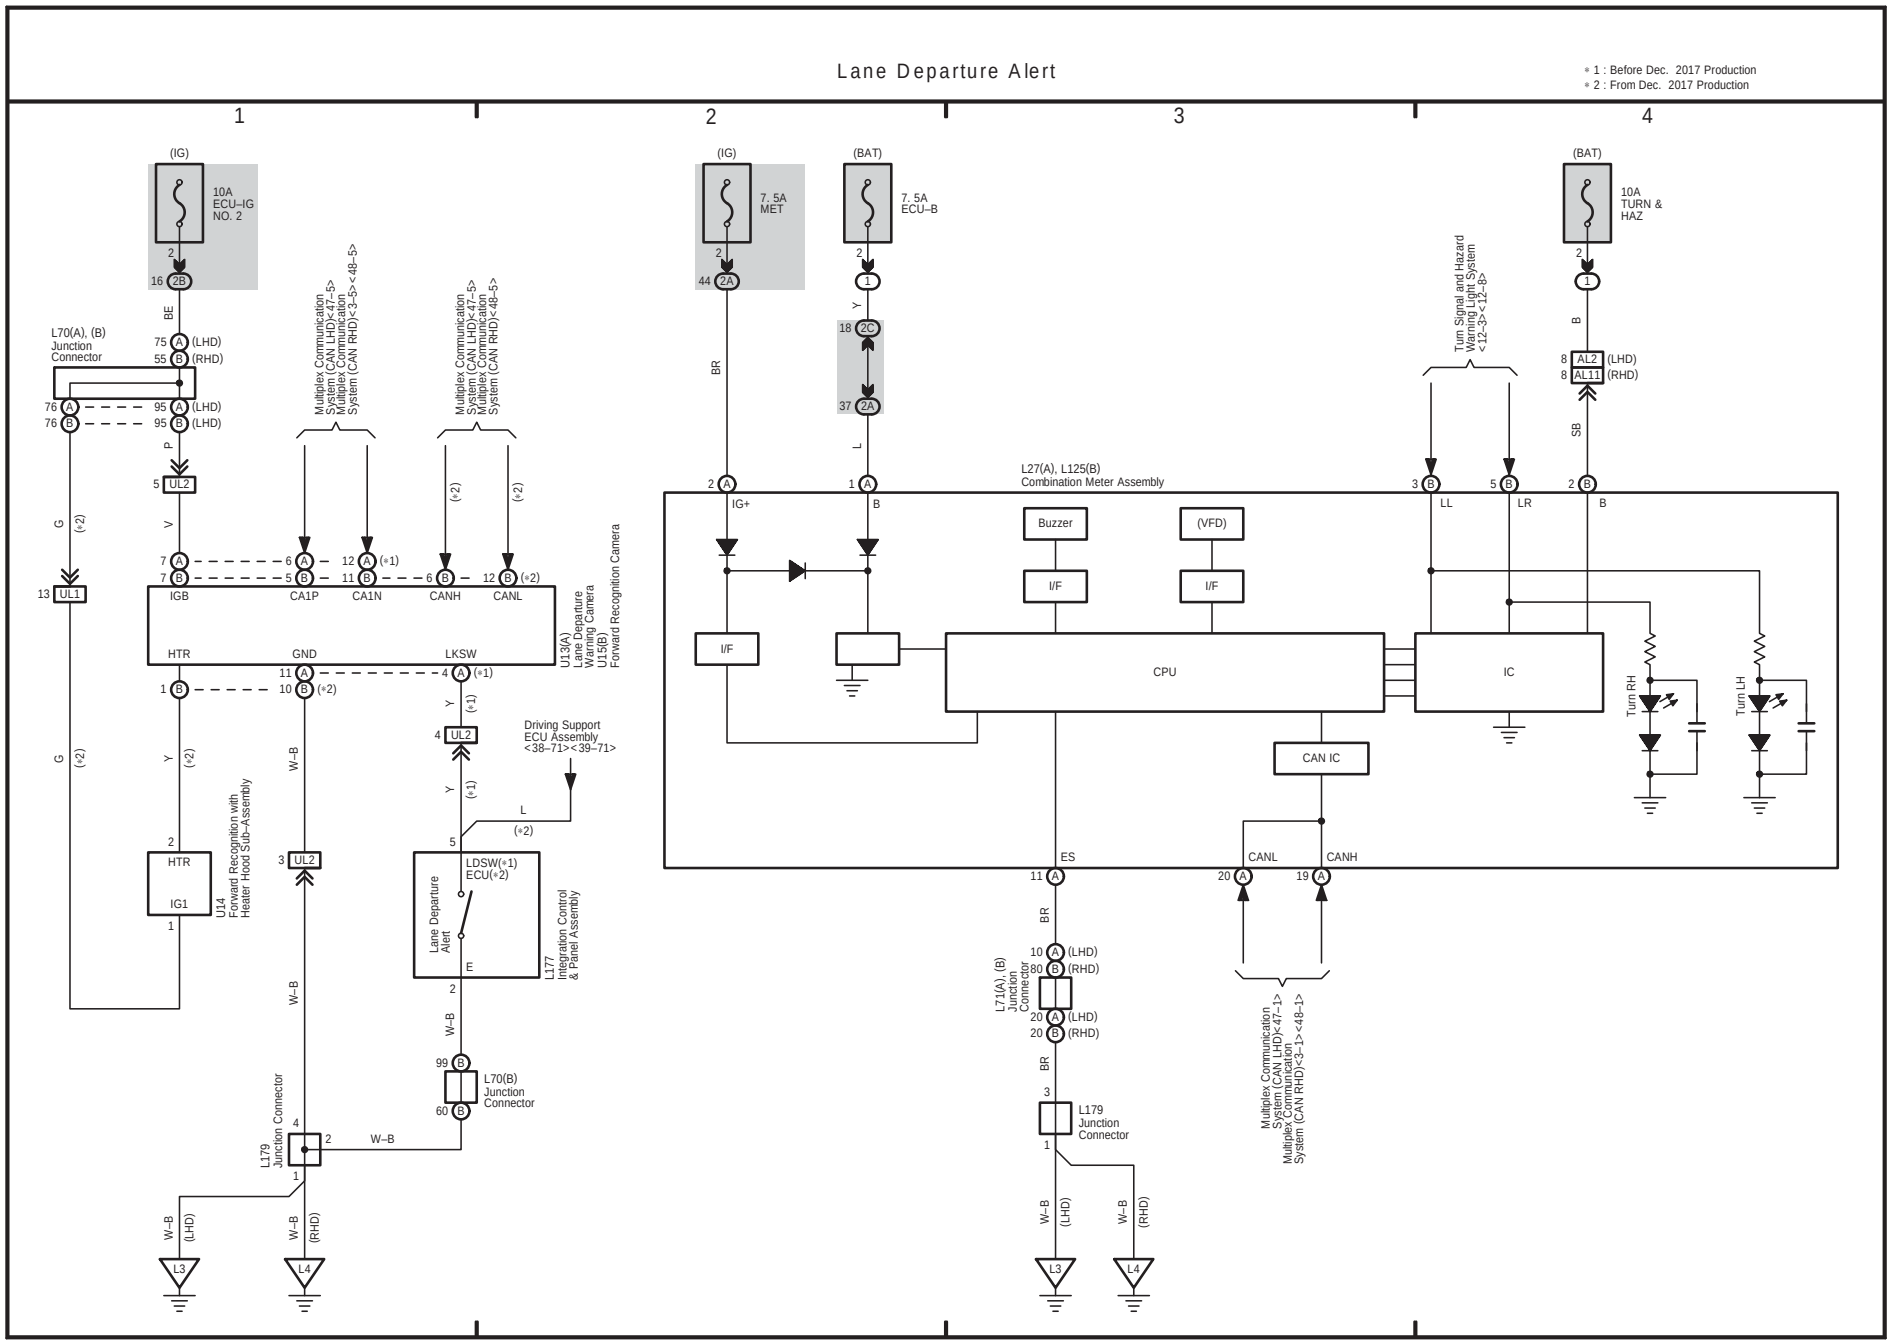

Lane Departure Alert
* 1 : Before Dec. 2017 Production
* 2 : From Dec. 2017 Production
1
2
3
4
(IG)
10A ECU–IG NO. 2
L70(A), (B) Junction Connector
Multiplex Communication System (CAN LHD)<47–5>
Multiplex Communication System (CAN RHD)<3–5><48–5>
IGB
CA1P
CA1N
CANH
CANL
HTR
GND
LKSW
U13(A) Lane Departure Warning Camera
U15(B) Forward Recognition Camera
Driving Support ECU Assembly <38–71><39–71>
LDSW(*1) ECU(*2)
Lane Departure Alert
L177 Integration Control & Panel Assembly
U14 Forward Recognition with Heater Hood Sub–Assembly
L179 Junction Connector
L70(B) Junction Connector
W–B (LHD)
W–B (RHD)
L3
L4
(BAT)
7. 5A MET
7. 5A ECU–B
10A TURN & HAZ
Turn Signal and Hazard Warning Light System <12–3><12–8>
L27(A), L125(B) Combination Meter Assembly
IG+
B
Buzzer
(VFD)
I/F
CPU
IC
CAN IC
LL
LR
Turn RH
Turn LH
ES
CANL
CANH
L71(A), (B) Junction Connector
Multiplex Communication System (CAN LHD)<47–1><48–1>
Multiplex Communication System (CAN RHD)<3–1><48–1>
L179 Junction Connector