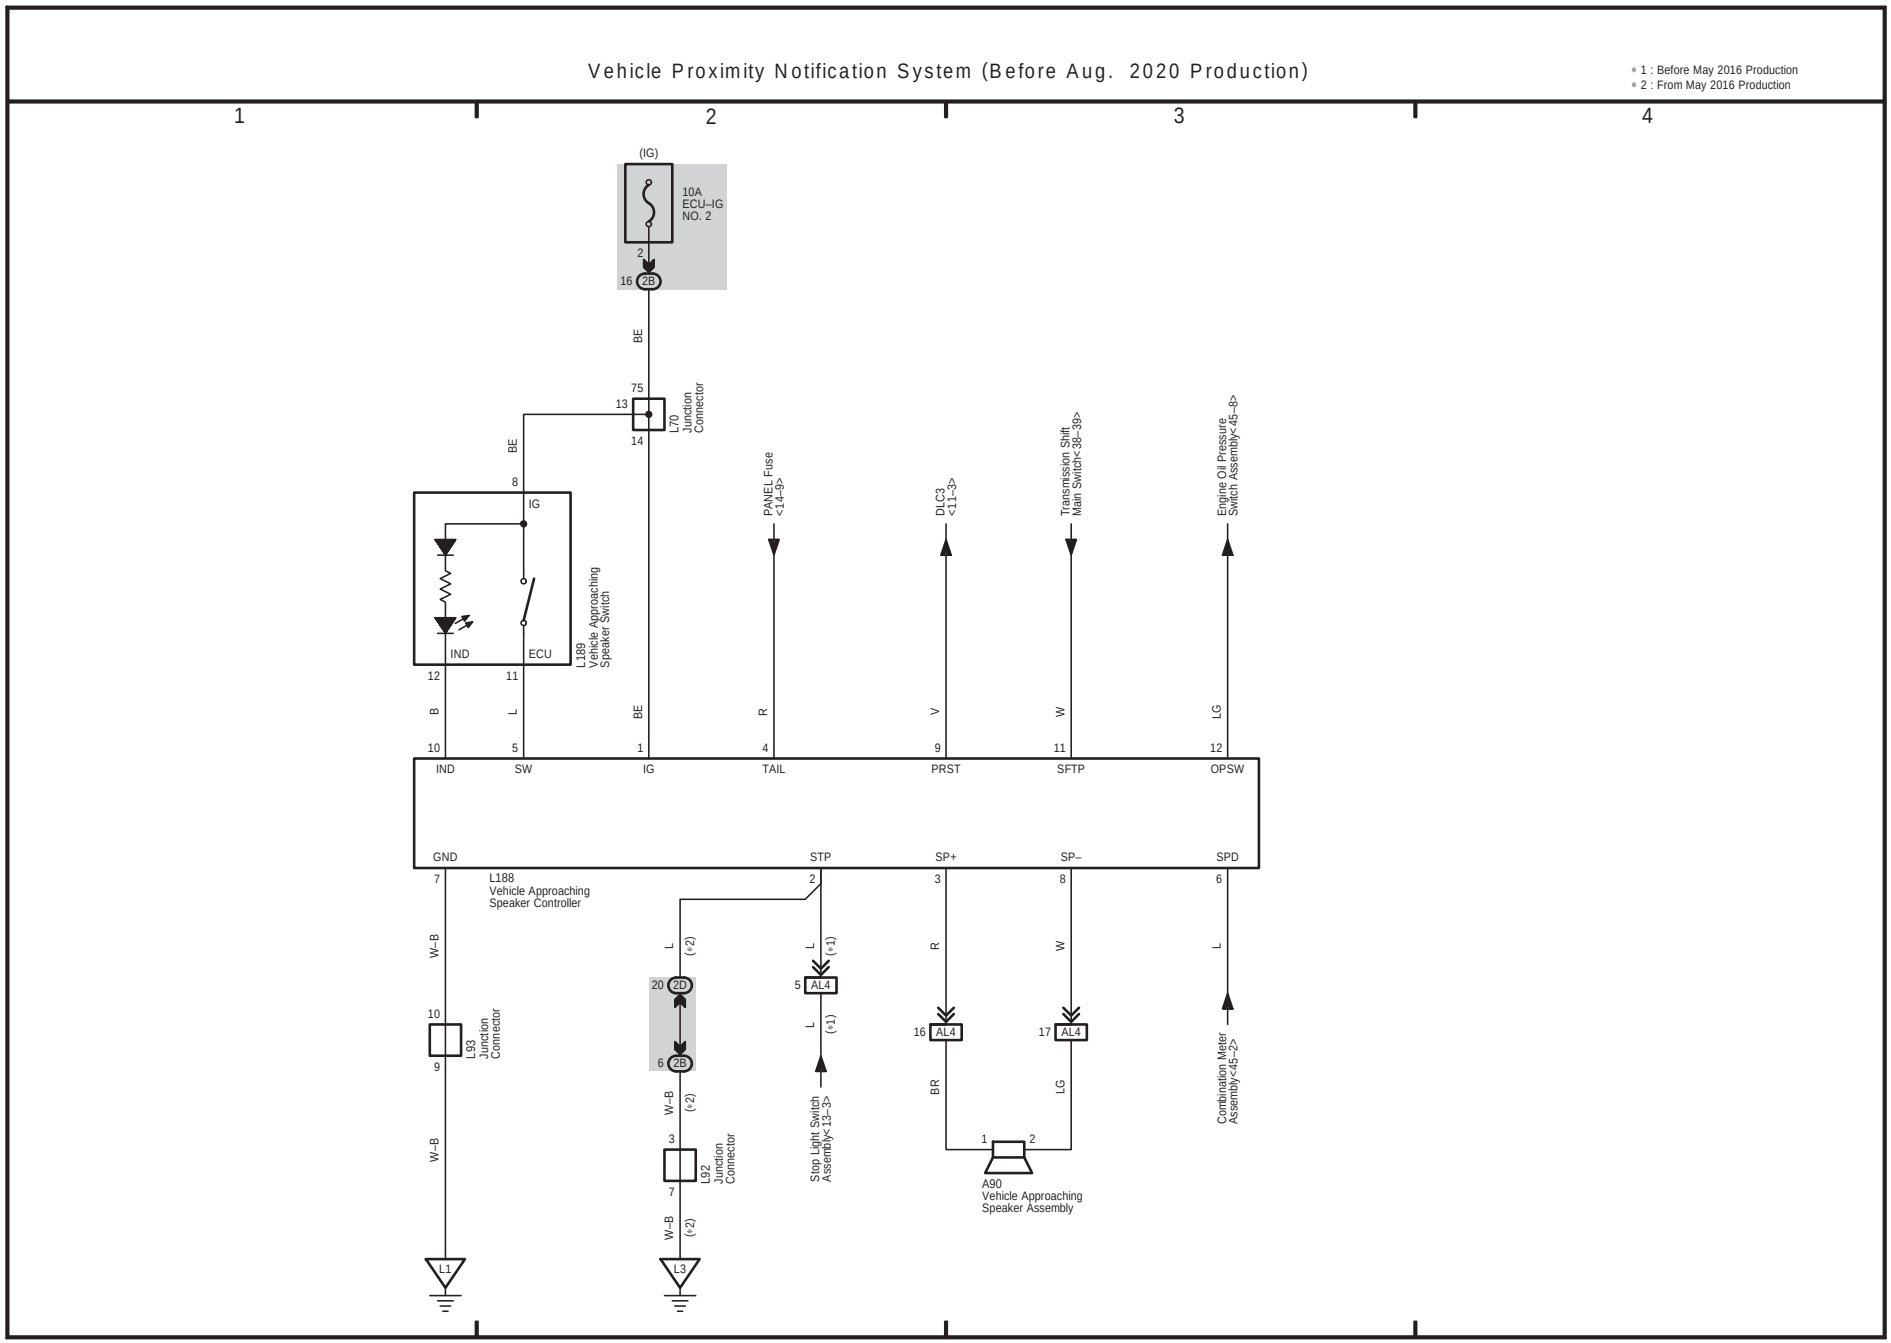

Vehicle Proximity Notification System (Before Aug. 2020 Production)
* 1 : Before May 2016 Production
* 2 : From May 2016 Production
1
2
3
4
(IG)
10A
ECU–IG
NO. 2
2
16 2B
BE
75
13
L70
Junction
Connector
14
BE
8
IG
IND
ECU
L189
Vehicle Approaching
Speaker Switch
12
11
B
L
10
5
BE
1
PANEL Fuse
<14–9>
R
4
DLC3
<11–3>
V
9
Transmission Shift
Main Switch<38–39>
W
11
Engine Oil Pressure
Switch Assembly<45–8>
LG
12
IND
SW
IG
TAIL
PRST
SFTP
OPSW
GND
STP
SP+
SP–
SPD
7
L188
Vehicle Approaching
Speaker Controller
2
3
8
6
W–B
L
(*2)
L
(*1)
R
W
L
10
L93
Junction
Connector
9
20 2D
6 2B
5 AL4
16 AL4
17 AL4
W–B
(*2)
L
(*1)
BR
LG
3
L92
Junction
Connector
7
Stop Light Switch
Assembly<13–3>
1
2
A90
Vehicle Approaching
Speaker Assembly
Combination Meter
Assembly<45–42>
W–B
(*2)
L1
L3