
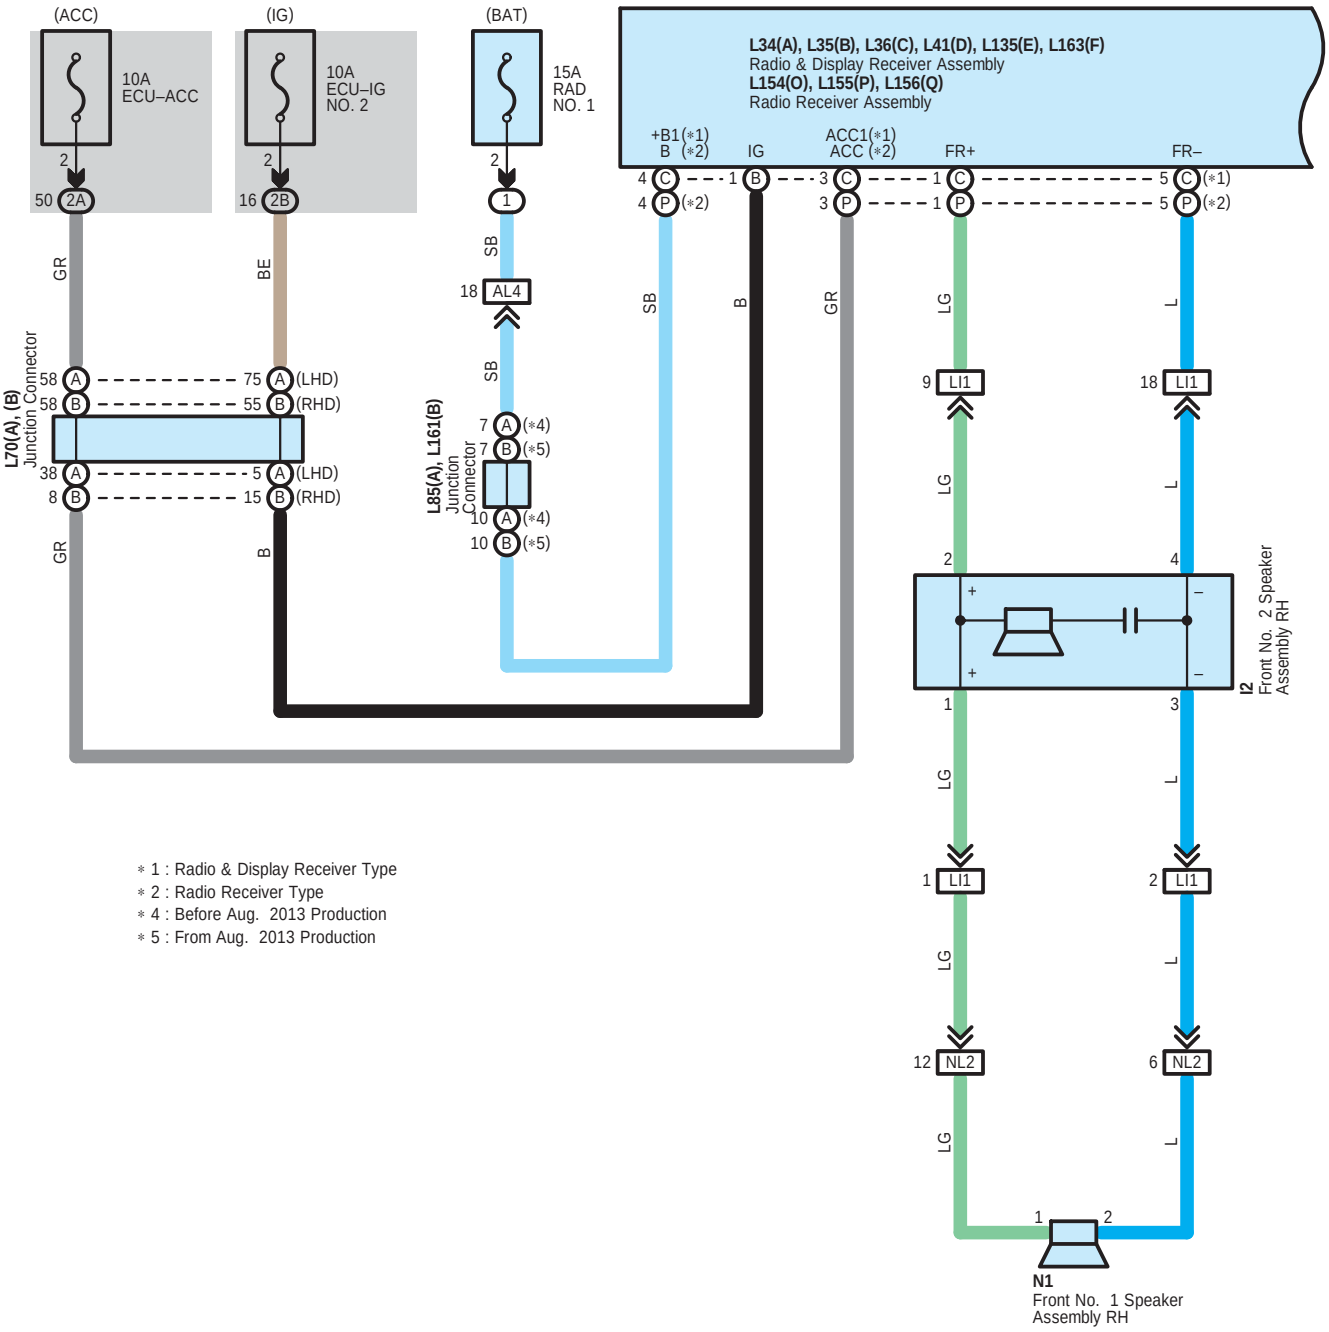
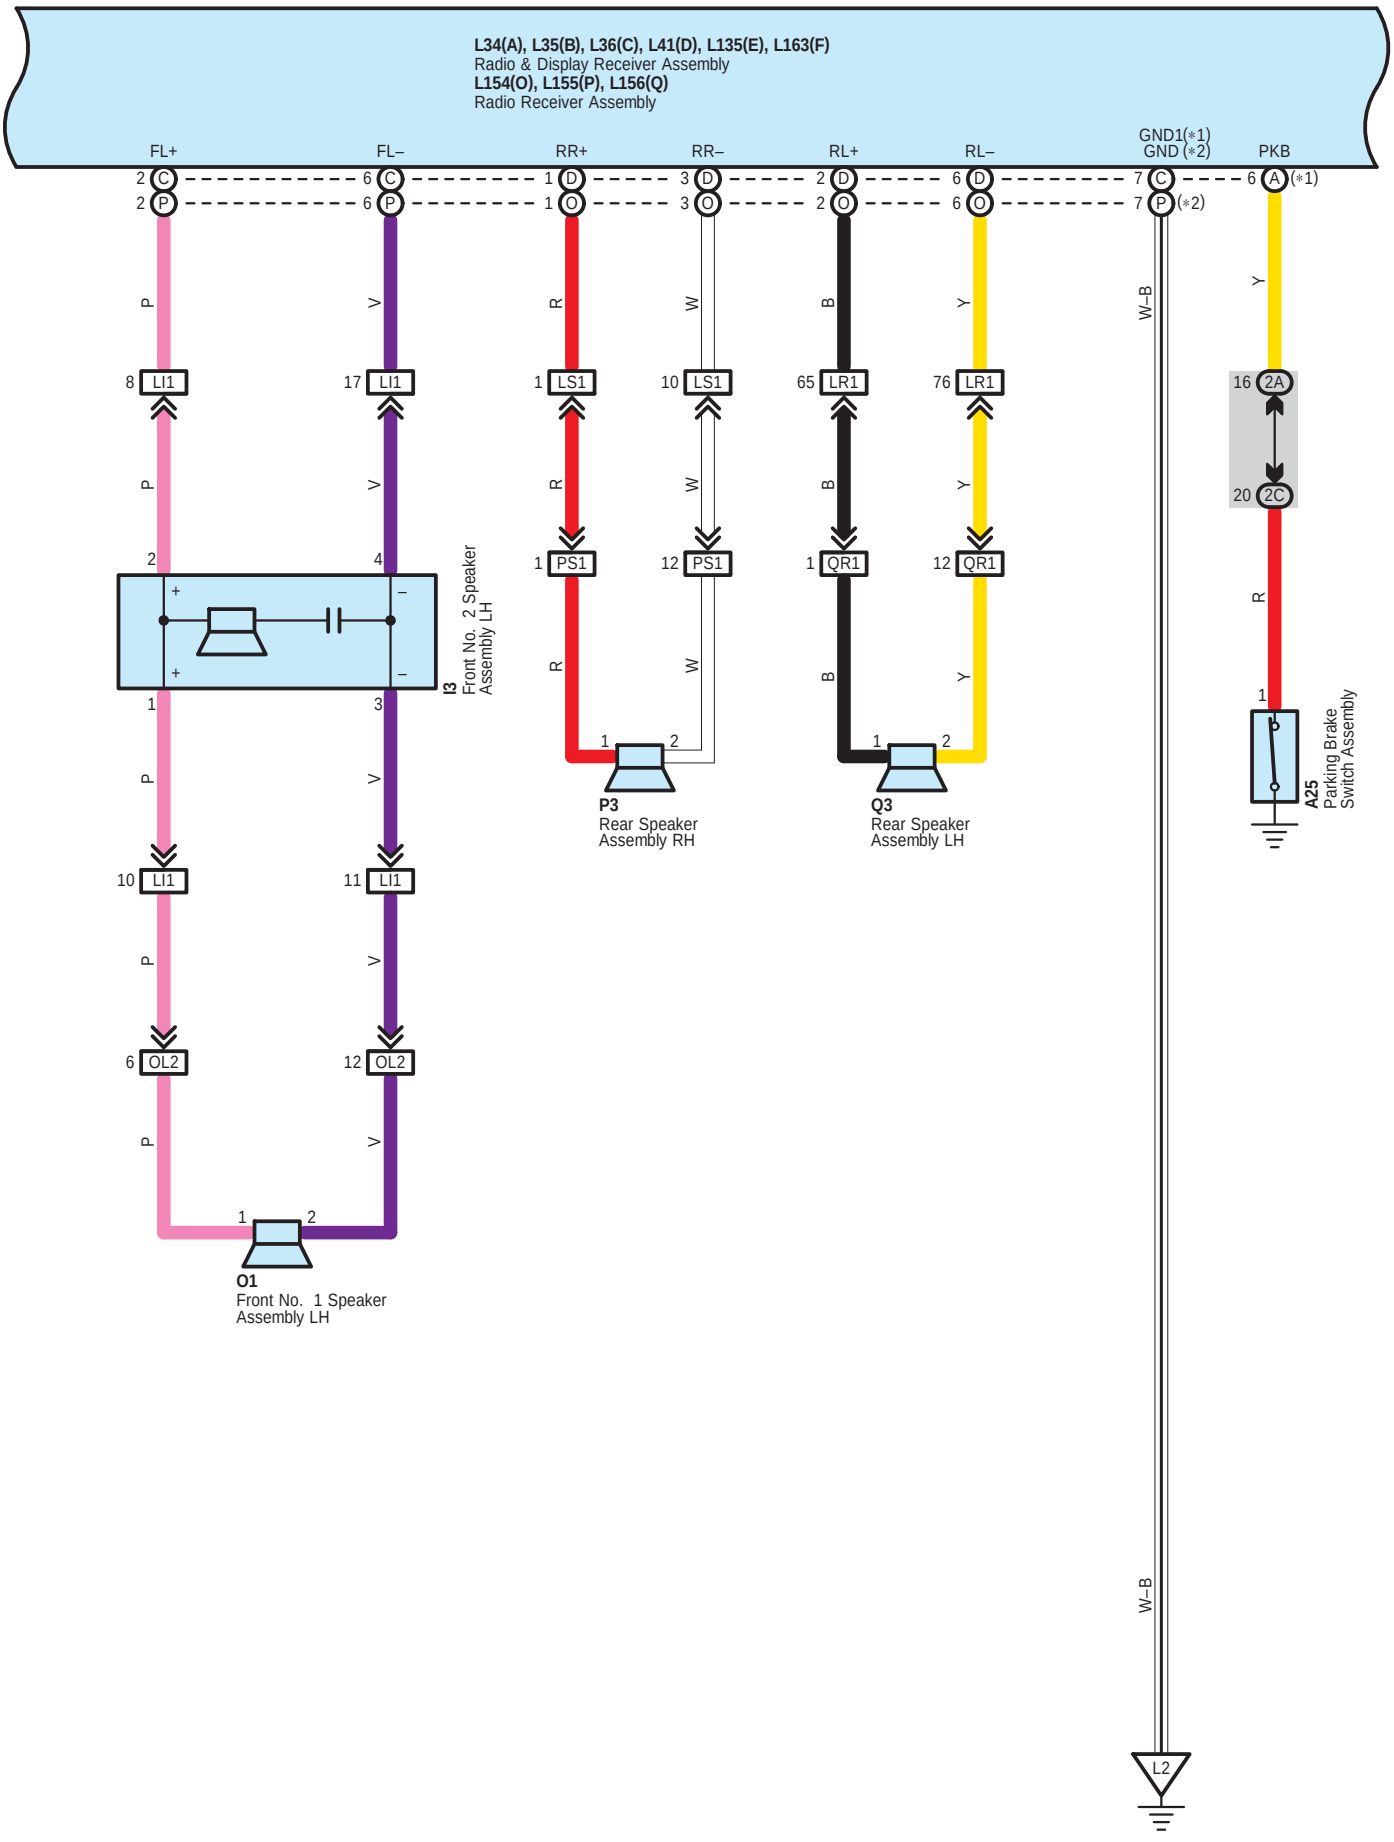
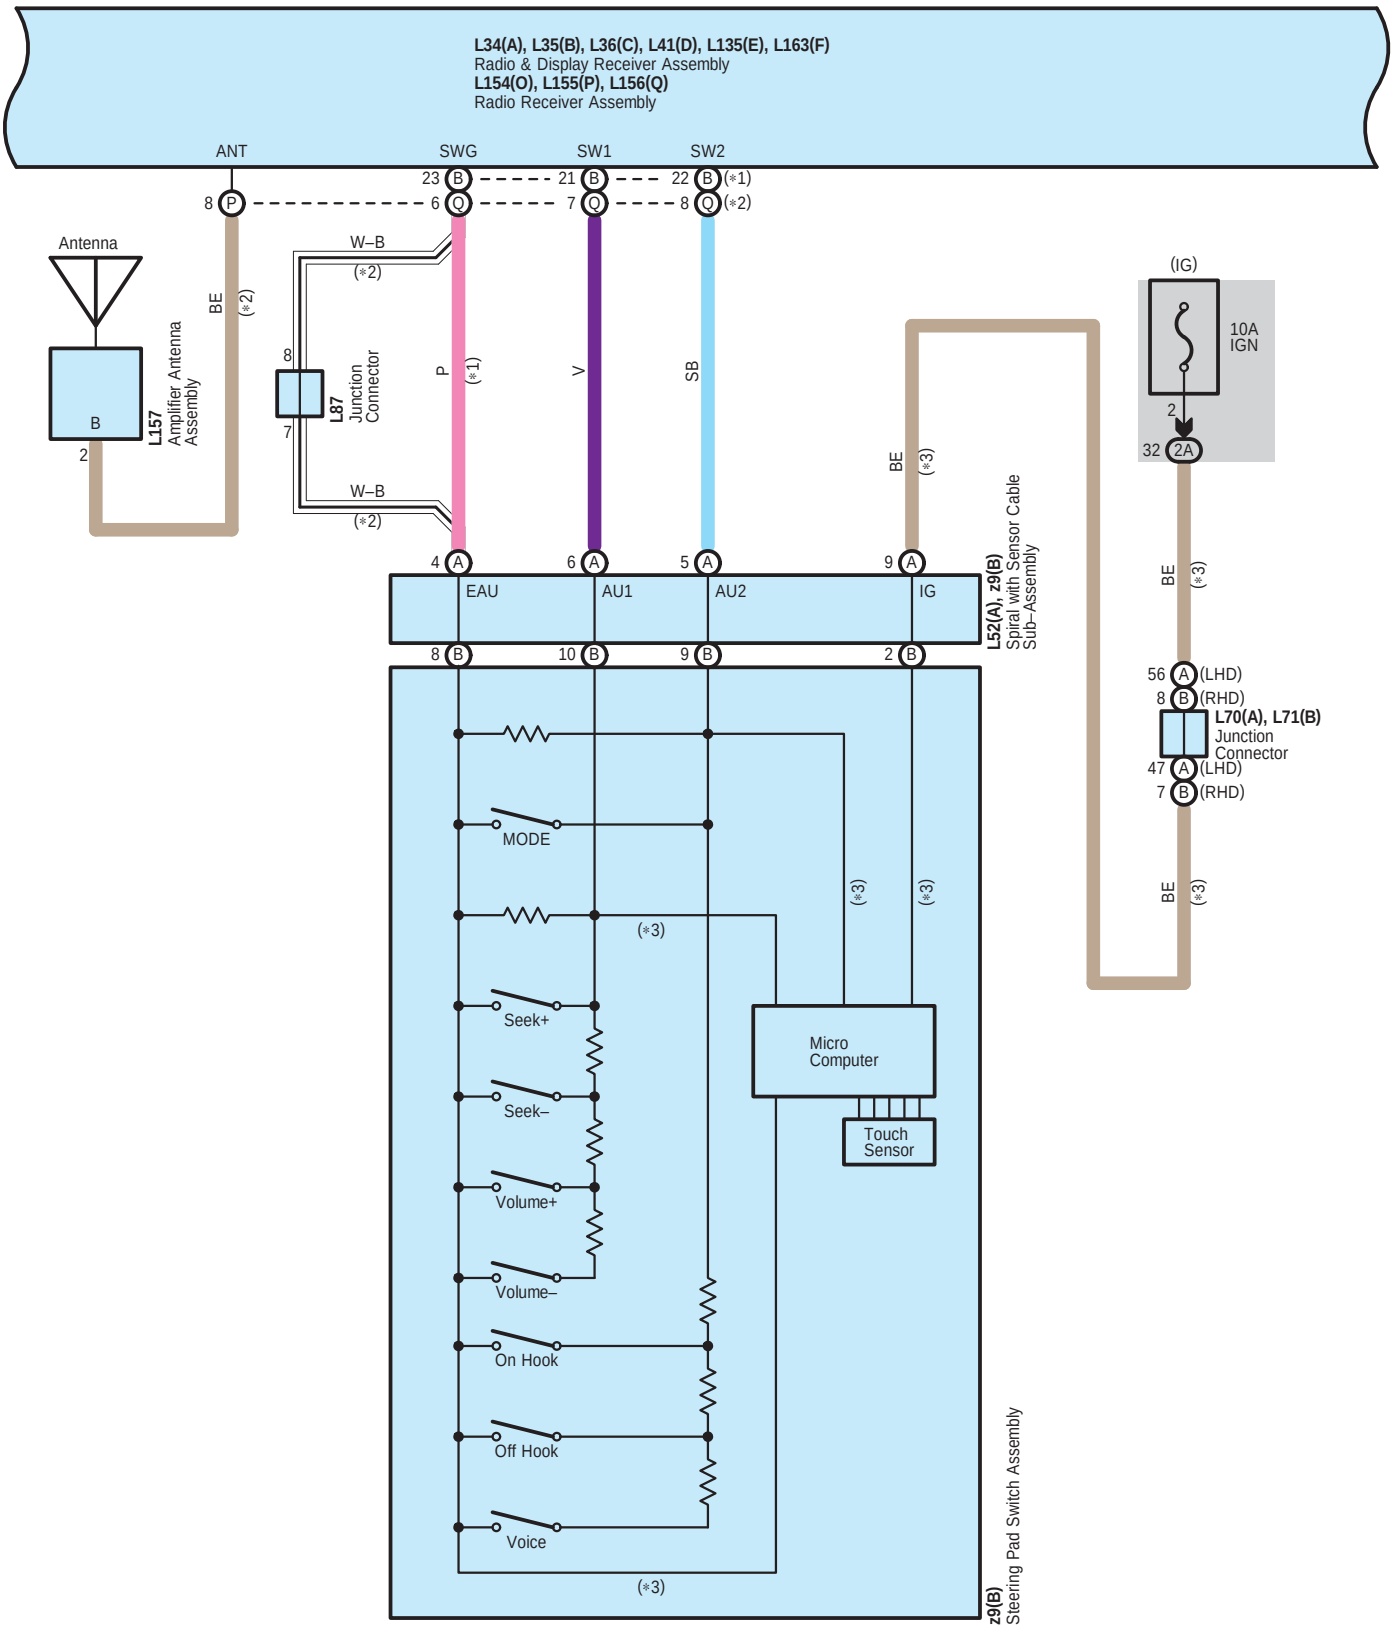



∗ 1 : Radio & Display Receiver Type
∗ 2 : Radio Receiver Type
∗ 4 : Before Aug. 2013 Production
∗ 5 : From Aug. 2013 Production



L34(A), L35(B), L36(C), L41(D), L135(E), L163(F)
Radio & Display Receiver Assembly
L154(O), L155(P), L156(Q)
Radio Receiver Assembly
FL+
FL–
RR+
RR–
RL+
RL–
GND1(*1)
GND (*2)
PKB
2 C
2 P
6 C
6 P
1 D
1 O
3 D
3 O
2 D
2 O
6 D
6 O
7 C
7 P
6 A (*1)
(*2)
P
V
R
W
B
Y
W–B
8 LI1
17 LI1
1 LS1
10 LS1
65 LR1
76 LR1
16 2A
20 2C
2
4
1
3
I3
Front No. 2 Speaker Assembly LH
1 PS1
12 PS1
1 QR1
12 QR1
P3
Rear Speaker Assembly RH
Q3
Rear Speaker Assembly LH
A25
Parking Brake Switch Assembly
10 LI1
11 LI1
6 OL2
12 OL2
O1
Front No. 1 Speaker Assembly LH
L2


L34(A), L35(B), L36(C), L41(D), L135(E), L163(F)
Radio & Display Receiver Assembly
L154(O), L155(P), L156(Q)
Radio Receiver Assembly
ANT
SWG
SW1
SW2
Antenna
L157
Amplifier Antenna Assembly
L87
Junction Connector
W–B
BE
P
V
SB
(*1)
(*2)
(*3)
(IG)
10A IGN
EAU
AU1
AU2
IG
L52(A), z9(B)
Spiral with Sensor Cable
Sub–Assembly
L70(A), L71(B)
Junction Connector
(LHD)
(RHD)
MODE
Seek+
Seek–
Volume+
Volume–
On Hook
Off Hook
Voice
Micro Computer
Touch Sensor
z9(B)
Steering Pad Switch Assembly

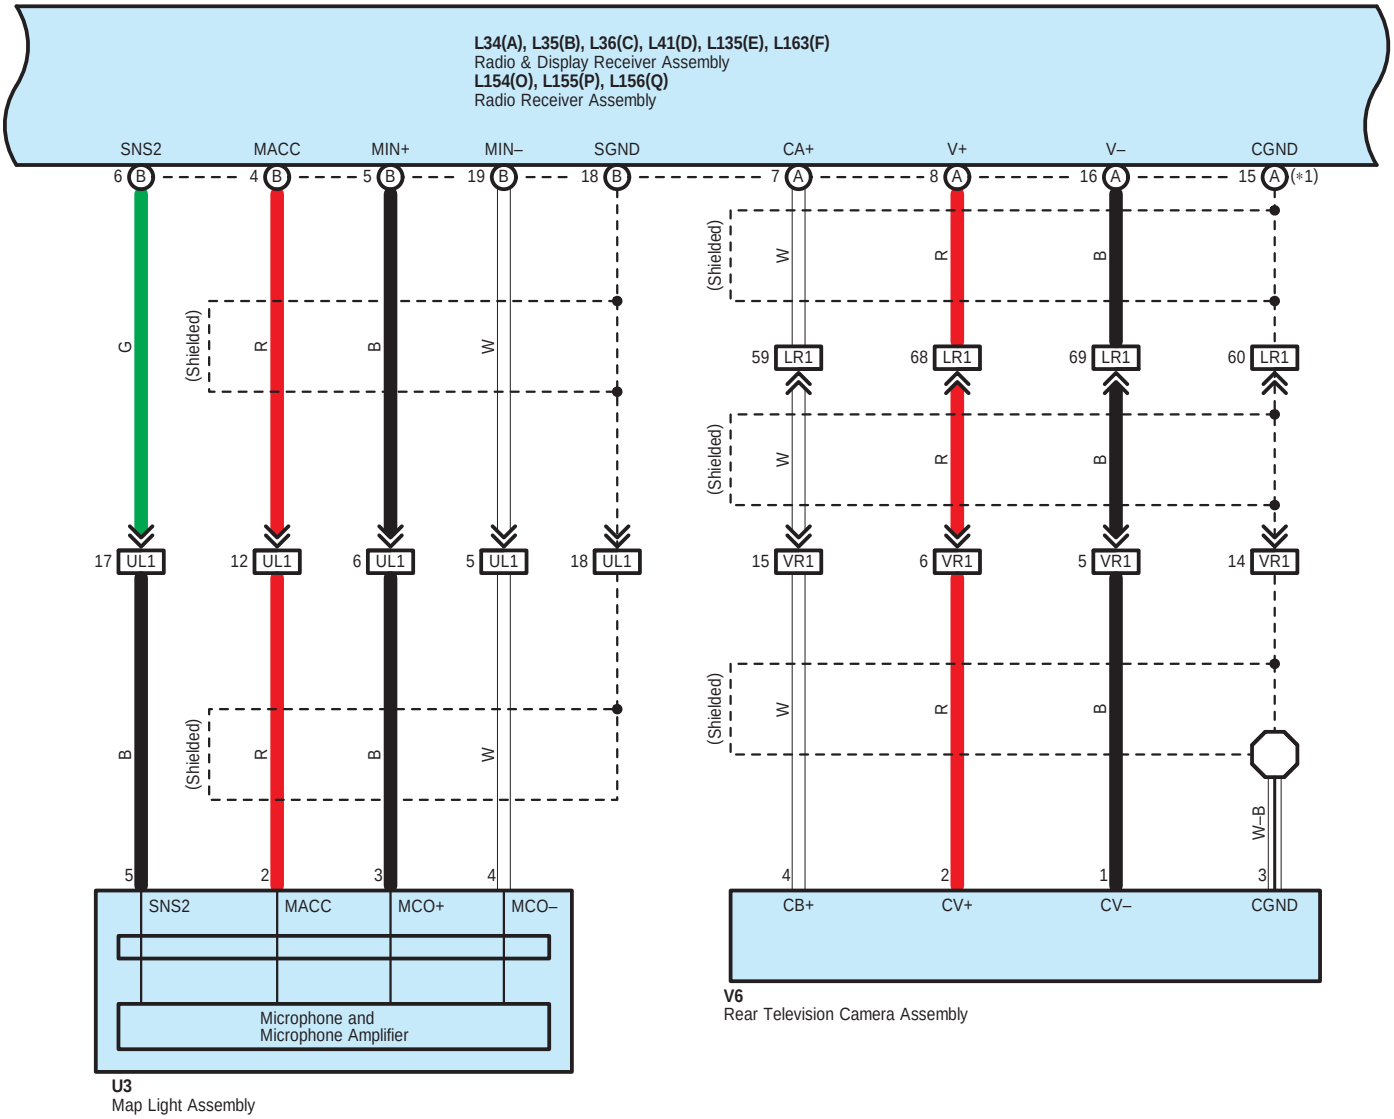


* 1 : Radio & Display Receiver Type
* 2 : Radio Receiver Type
* 3 : w/ Head–Up Display Assembly

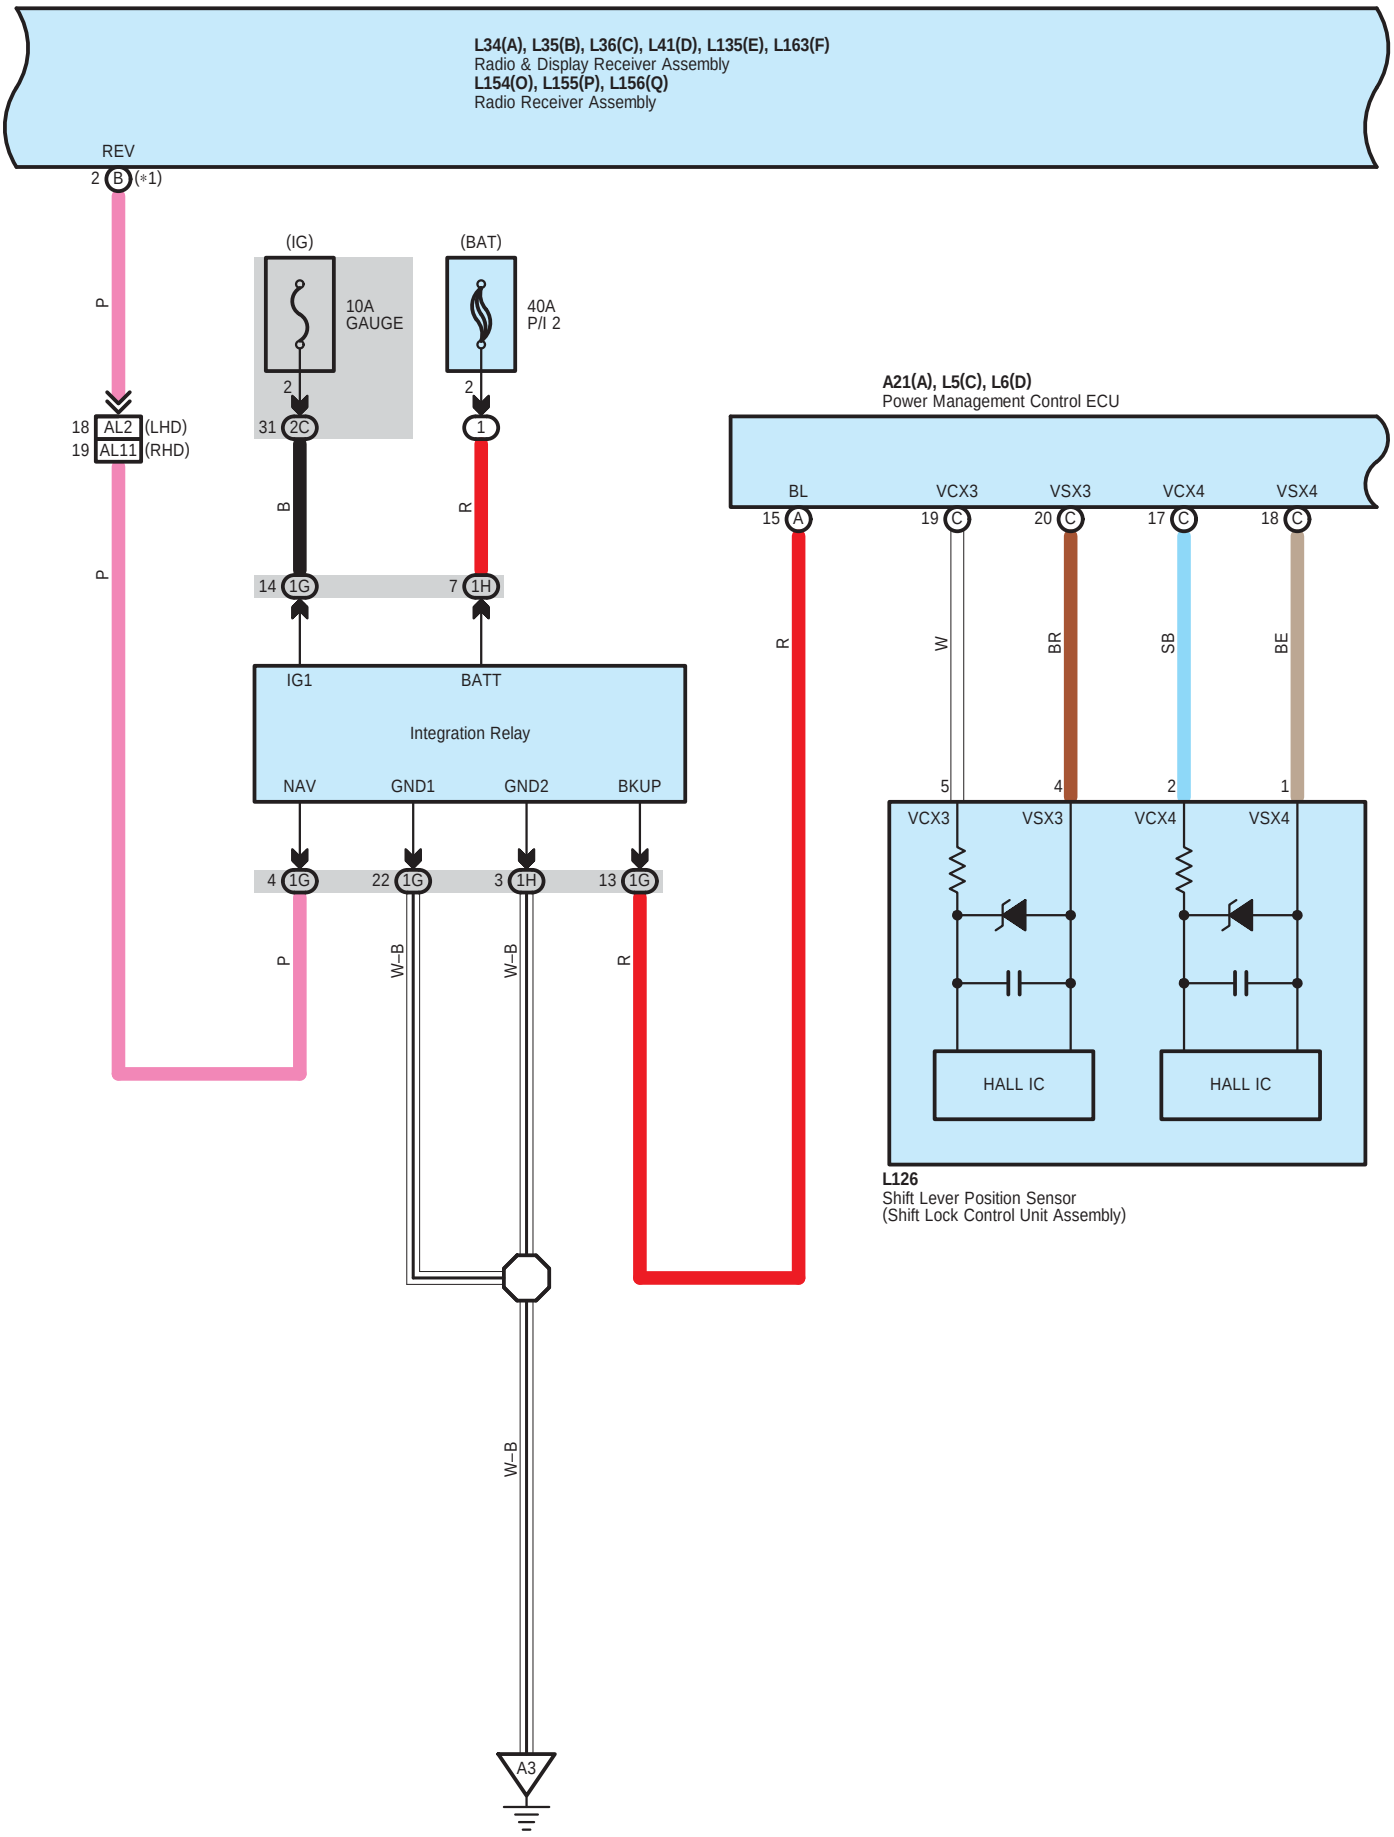
L34(A), L35(B), L36(C), L41(D), L135(E), L163(F)
Radio & Display Receiver Assembly
L154(O), L155(P), L156(Q)
Radio Receiver Assembly
REV
2 B (*1)
P
18 AL2 (LHD)
19 AL11 (RHD)
P
(IG)
10A
GAUGE
2
31 2C
B
14 1G
(BAT)
40A
P/I 2
2
1
R
7 1H
IG1
BATT
Integration Relay
NAV
GND1
GND2
BKUP
4 1G
22 1G
3 1H
13 1G
P
W–B
W–B
R
W–B
A3
A21(A), L5(C), L6(D)
Power Management Control ECU
BL
15 A
R
VCX3
19 C
W
VSX3
20 C
BR
VCX4
17 C
SB
VSX4
18 C
BE
5
4
2
1
VCX3
VSX3
VCX4
VSX4
HALL IC
HALL IC
L126
Shift Lever Position Sensor
(Shift Lock Control Unit Assembly)

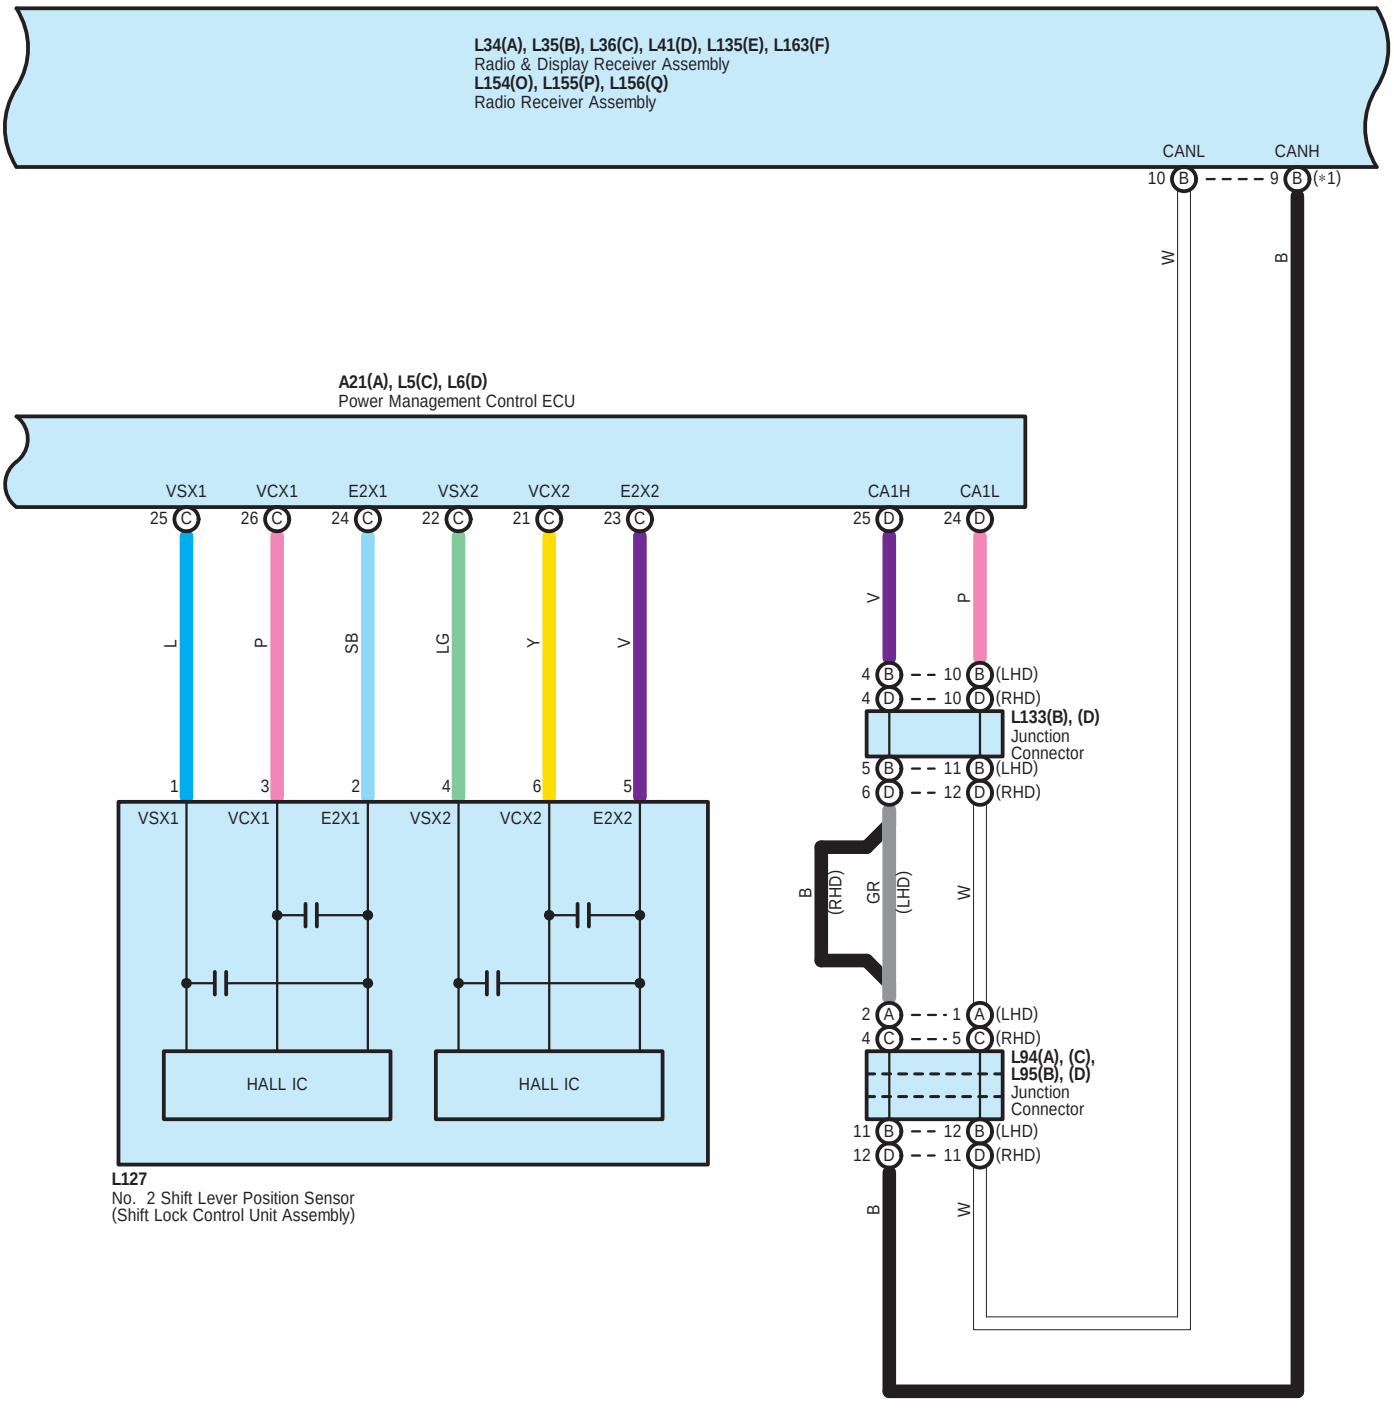



* 1 : Radio & Display Receiver Type

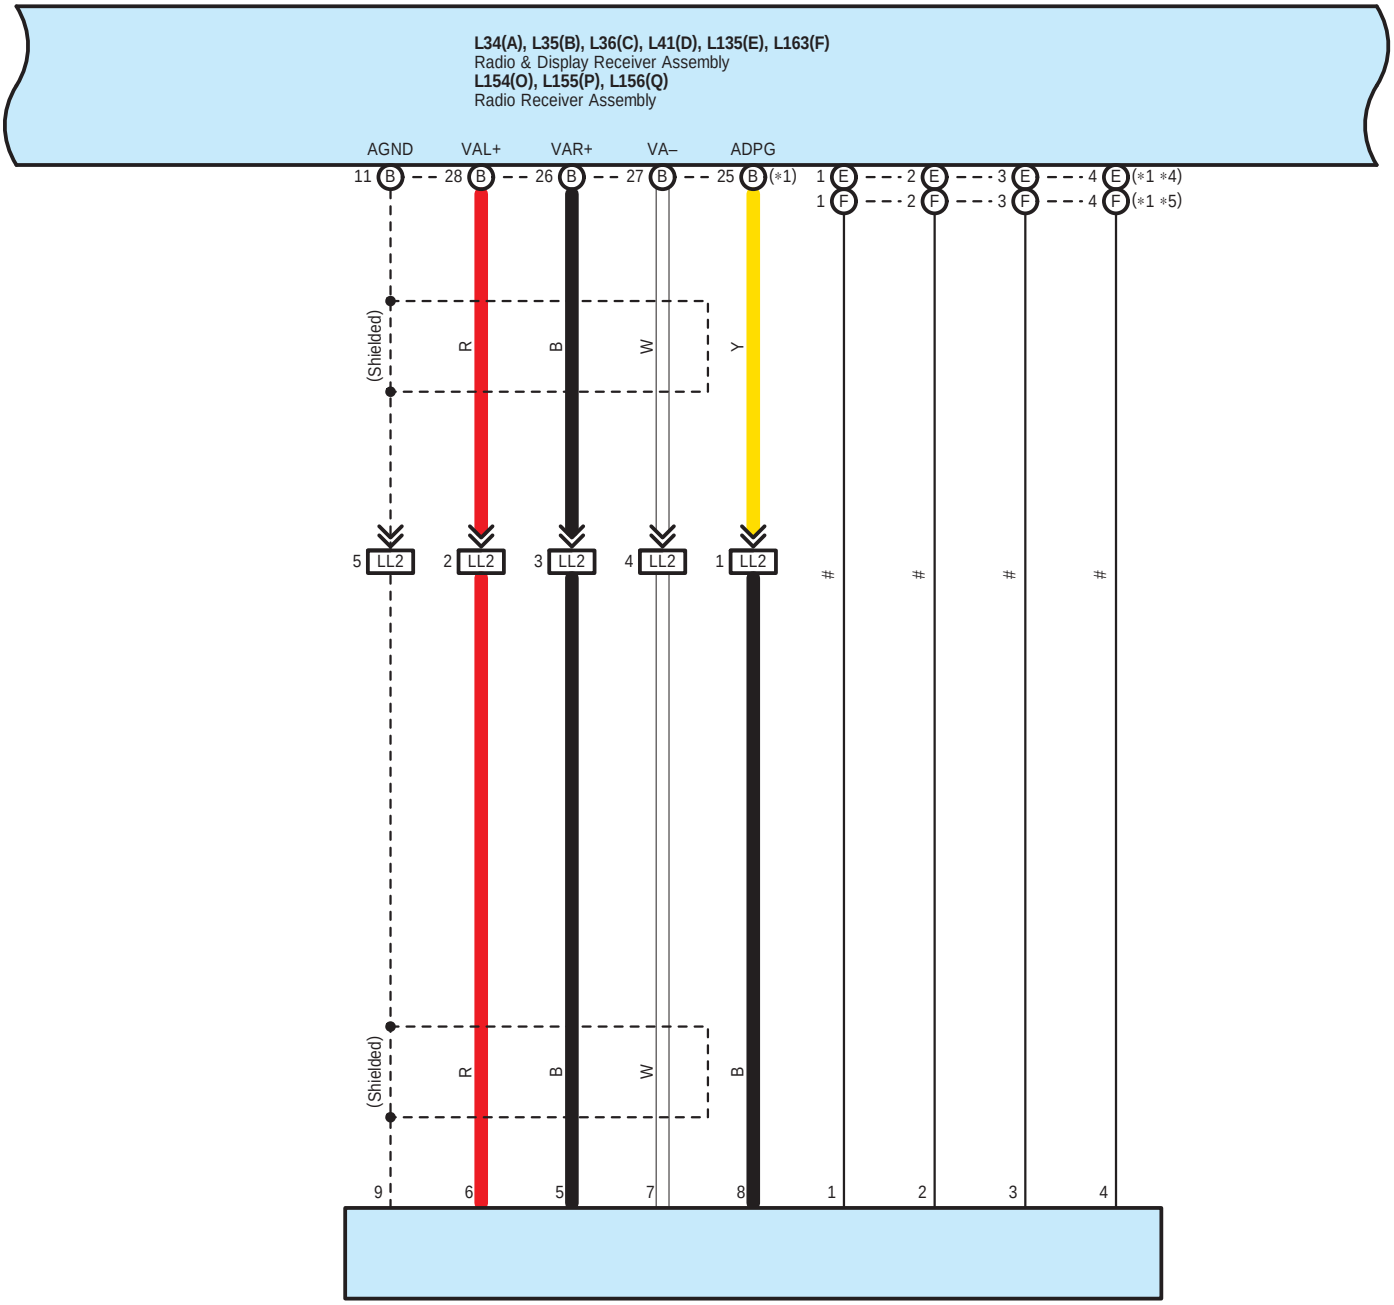


* 1 : Radio & Display Receiver Type
* 4 : Before Aug. 2013 Production
* 5 : From Aug. 2013 Production

: There is no wire color information.

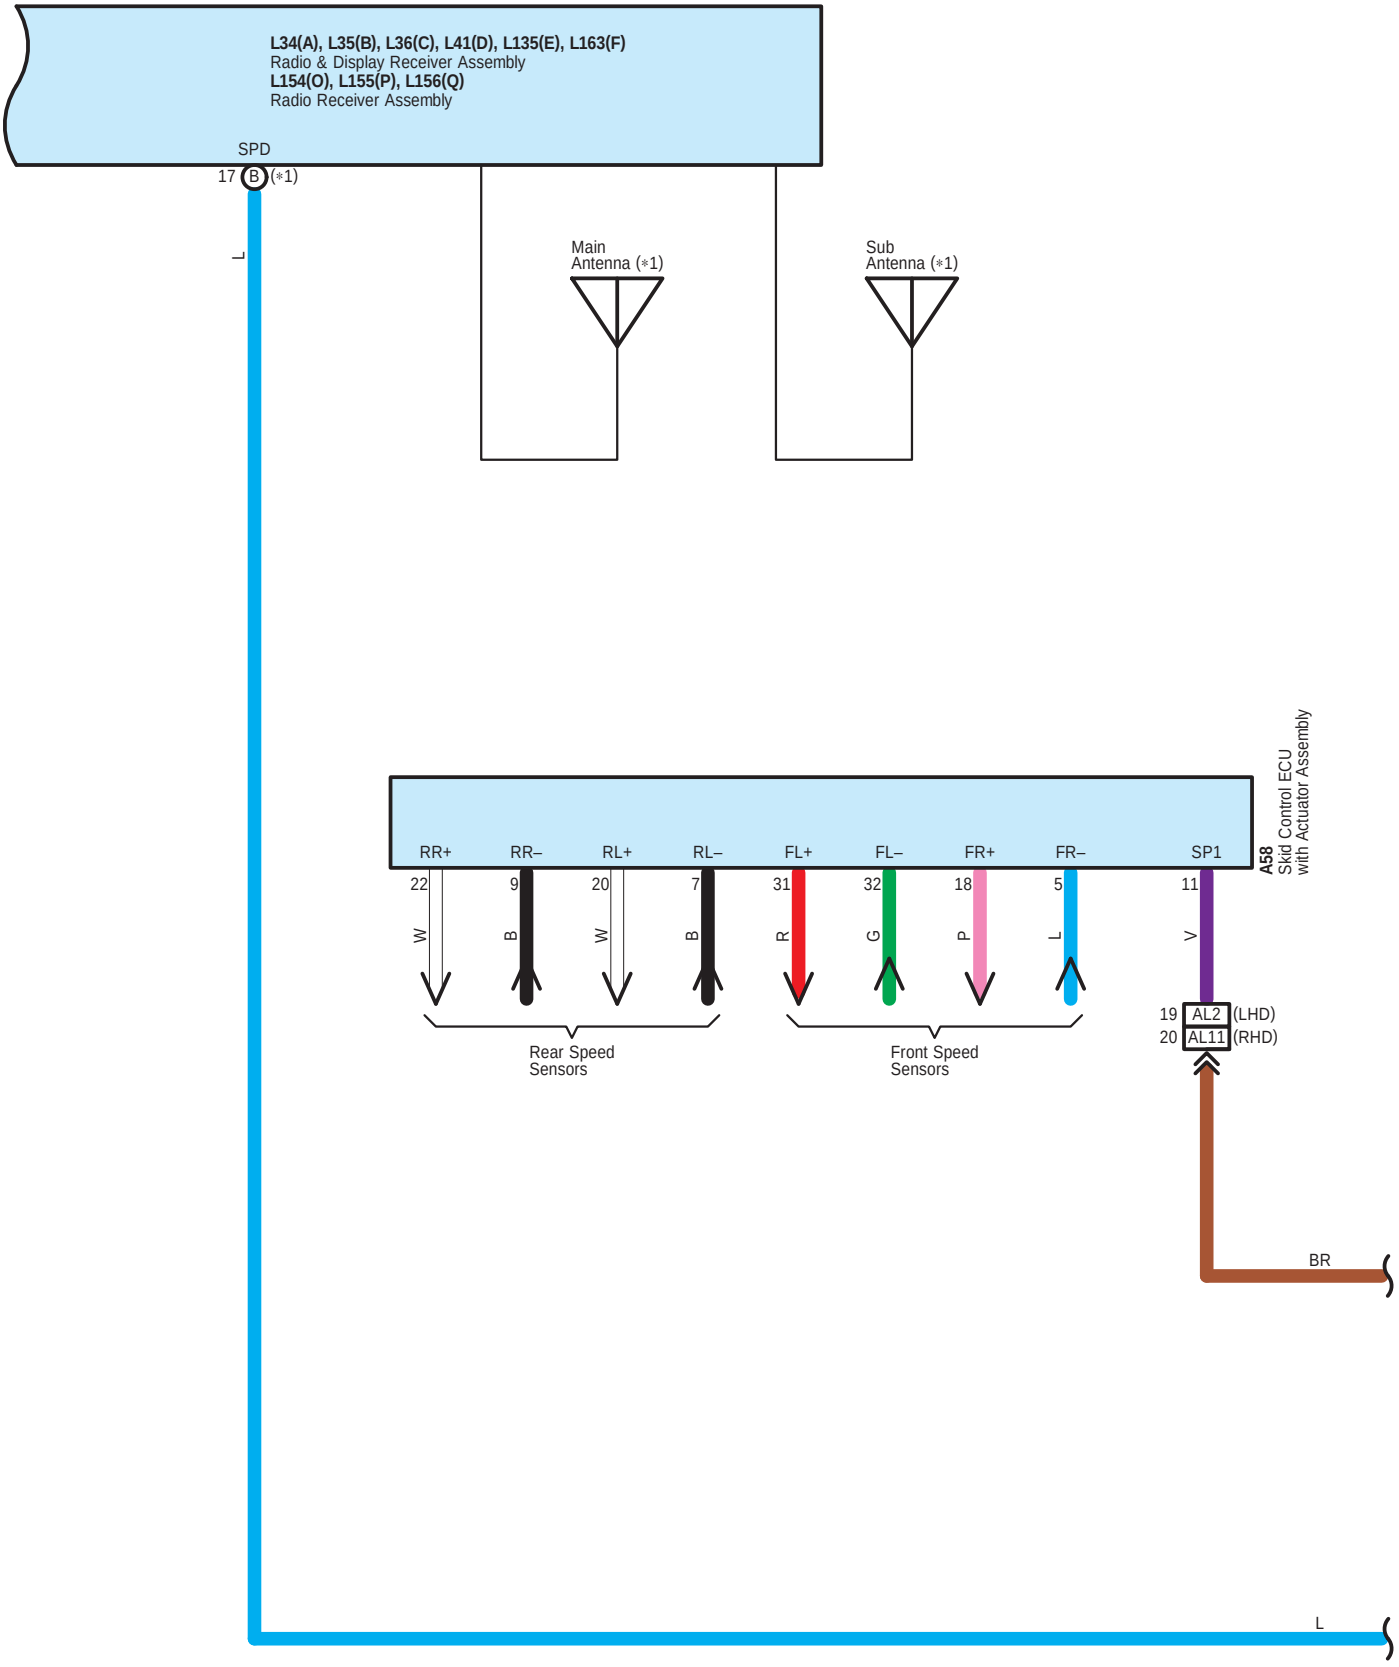
L34(A), L35(B), L36(C), L41(D), L135(E), L163(F)
Radio & Display Receiver Assembly
L154(O), L155(P), L156(Q)
Radio Receiver Assembly
SPD
17 B (*1)
L
Main Antenna (*1)
Sub Antenna (*1)
A58 Skid Control ECU with Actuator Assembly
RR+ 22 W
RR– 9 B
RL+ 20 W
RL– 7 B
FL+ 31 R
FL– 32 G
FR+ 18 P
FR– 5 L
SP1 11 V
Rear Speed Sensors
Front Speed Sensors
19 AL2 (LHD)
20 AL11 (RHD)
BR
L

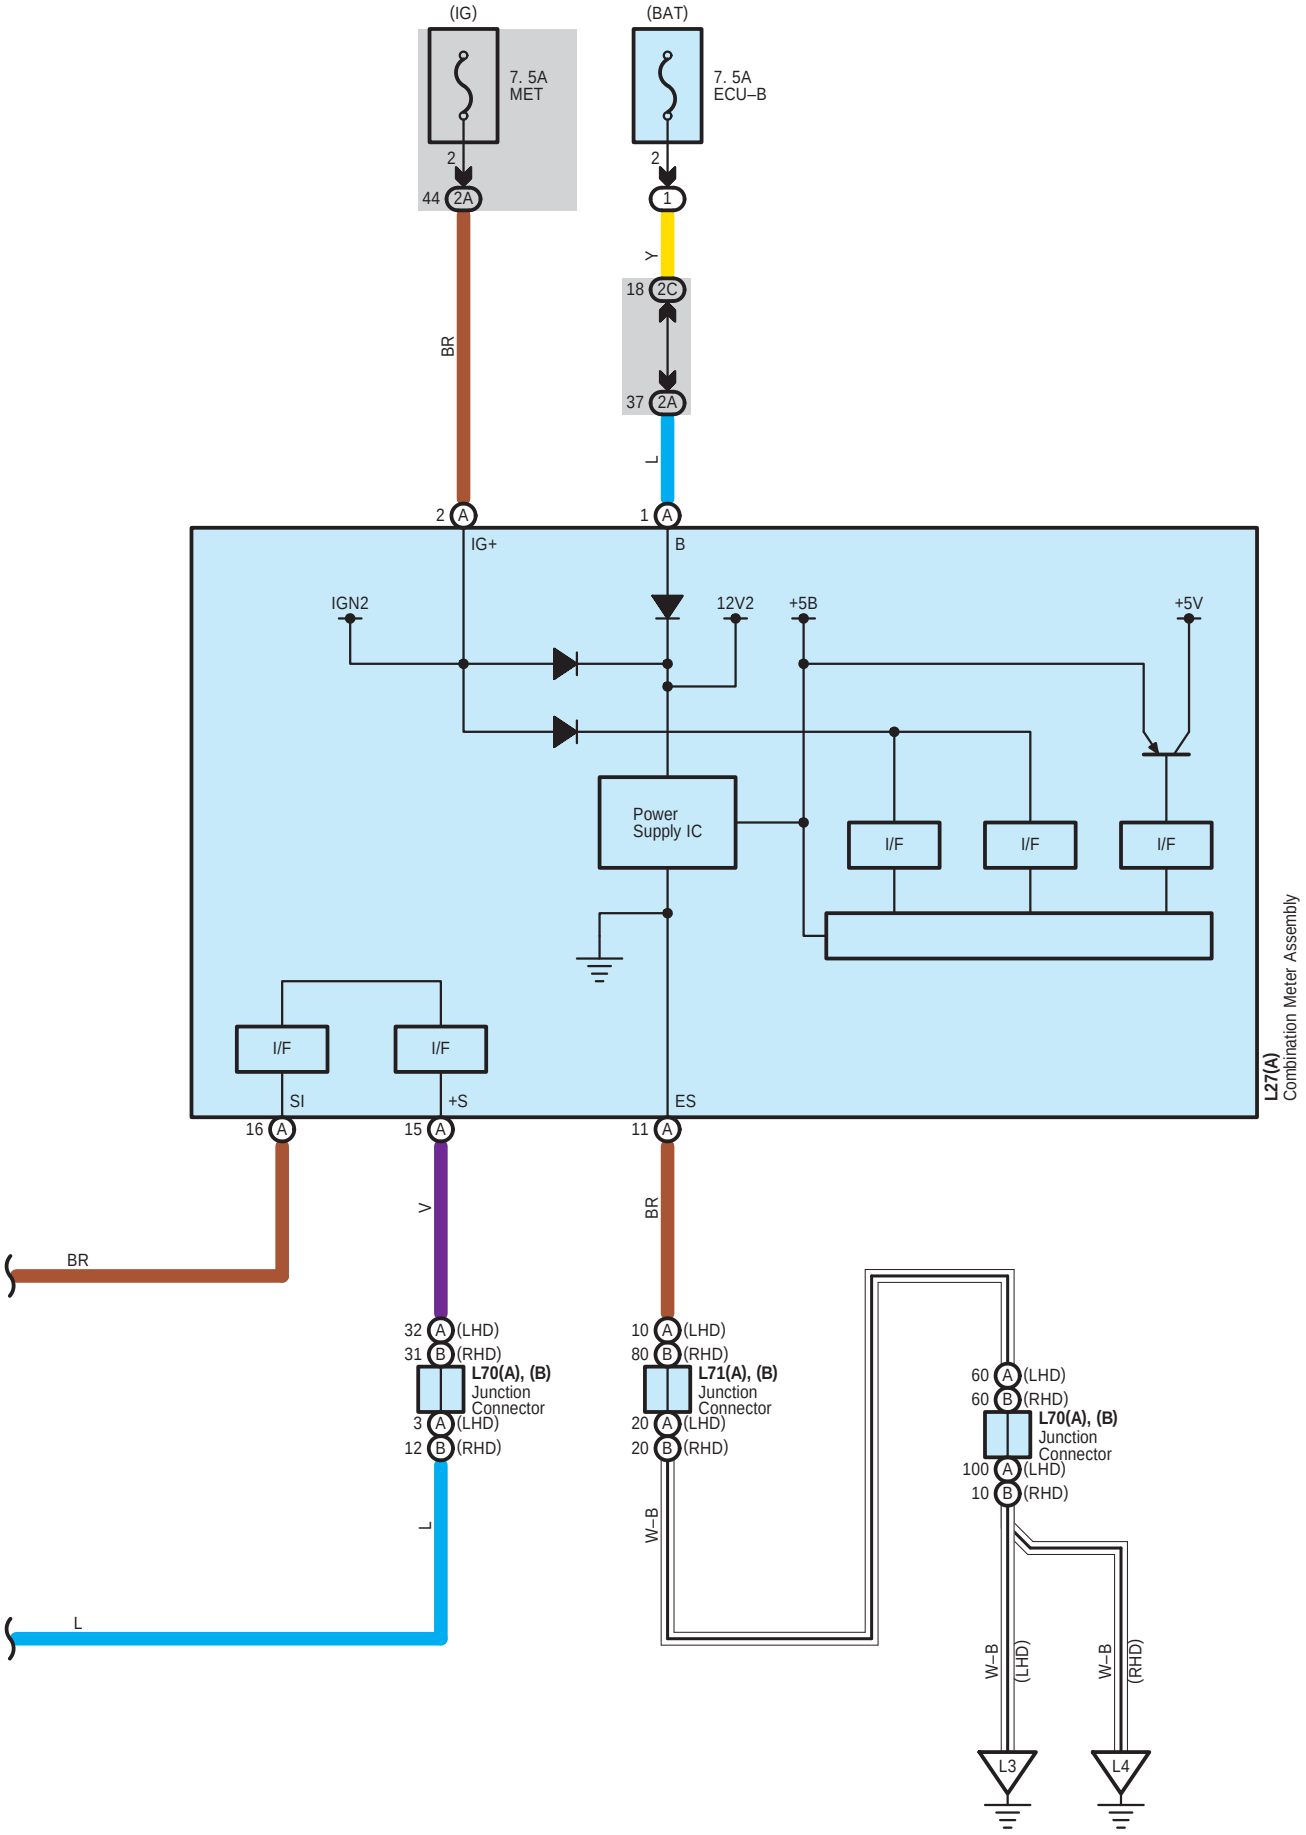
(IG)
(BAT)
7. 5A
MET
7. 5A
ECU–B
2
44 2A
2
1
Y
18 2C
37 2A
BR
L
2 A
1 A
IG+
B
IGN2
12V2
+5B
+5V
Power
Supply IC
I/F
I/F
I/F
I/F
I/F
SI
+S
ES
16 A
15 A
11 A
L27(A)
Combination Meter Assembly
BR
V
BR
32 A (LHD)
31 B (RHD)
L70(A), (B)
Junction
Connector
3 A (LHD)
12 B (RHD)
10 A (LHD)
80 B (RHD)
L71(A), (B)
Junction
Connector
20 A (LHD)
20 B (RHD)
60 A (LHD)
60 B (RHD)
L70(A), (B)
Junction
Connector
100 A (LHD)
10 B (RHD)
L
W–B
W–B
(LHD)
W–B
(RHD)
L
L3
L4


A 21
Gray

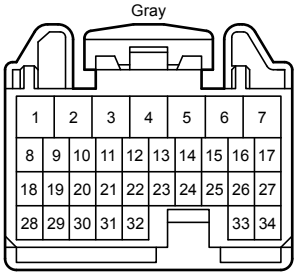


A 25
White




A 58
Gray

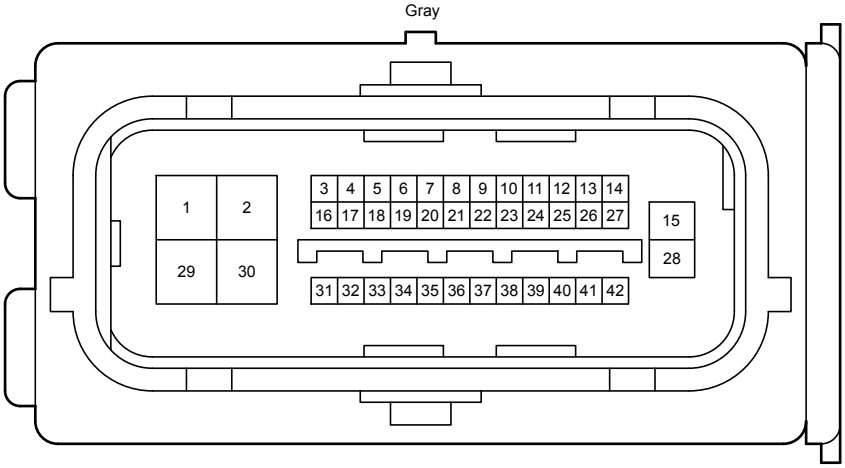


I 2
White




I 3
White




L 5
Gray

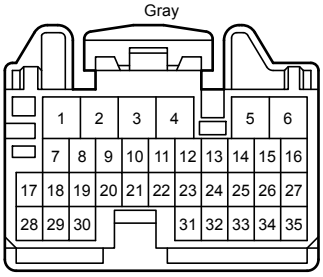


L 6
Gray

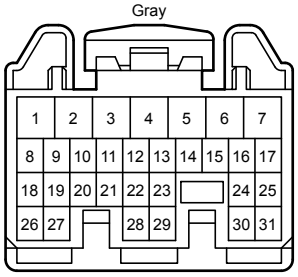


L 13
Black

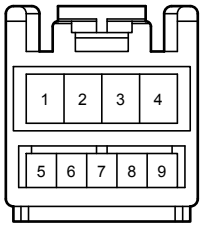


L 27
White

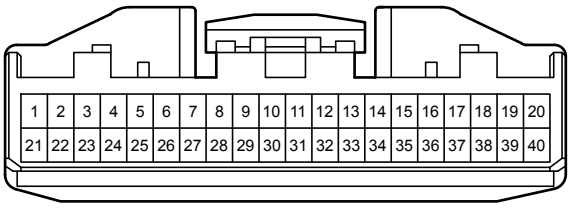


L 34
White

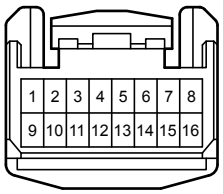

L 35
White

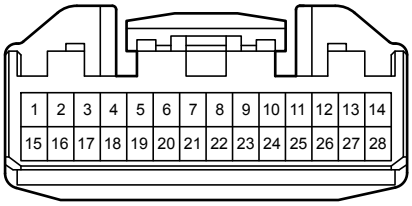


L 36
White

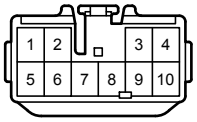


L 41
White




L 52
Black

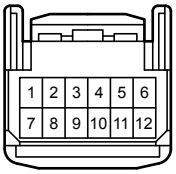


L 70
White

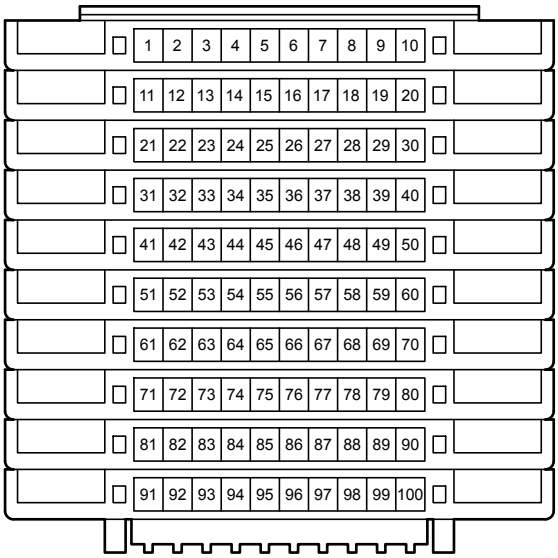


L 71
White

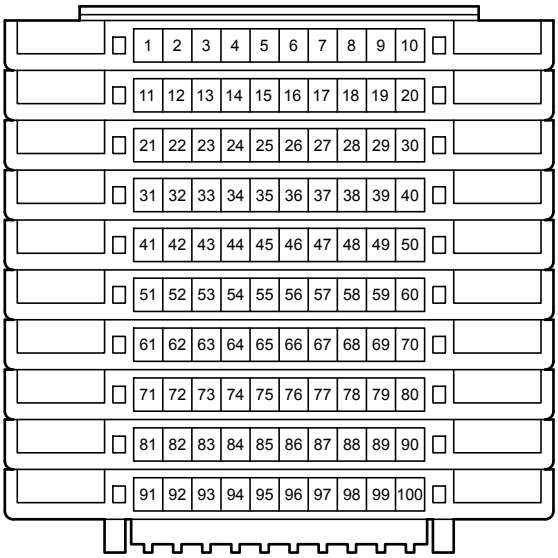


L 85
White

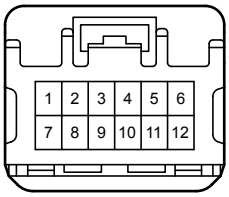


L 87
White

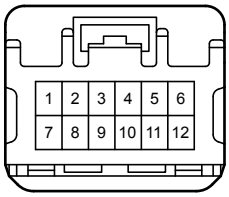


L 94
White

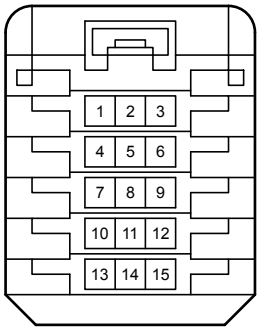


L 95
White

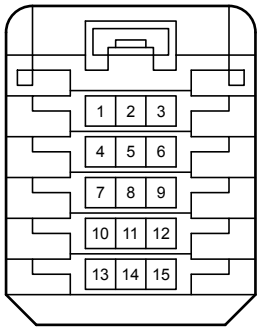


L126
White

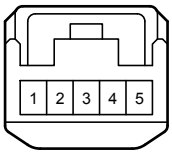


L127
Black

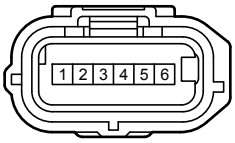

L133
Gray

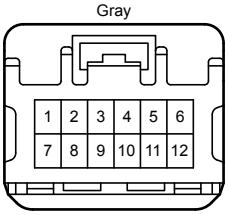


L135
Gray

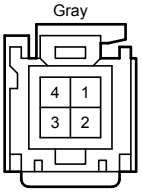


L154
White



L155
White

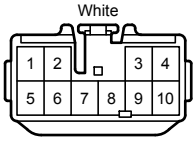


L156
White

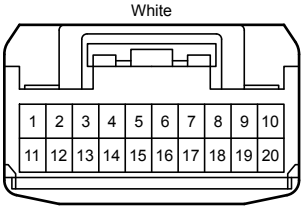


L157
White



L161
Gray

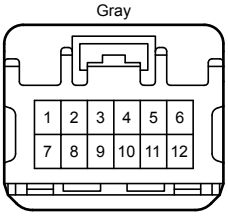

L163
Gray

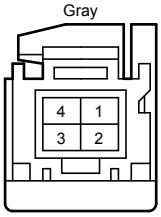

N 1
White



O 1
White




P 3
White




Q 3
White




U 3
Gray

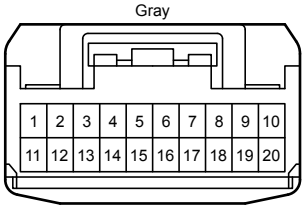


V 6
Black

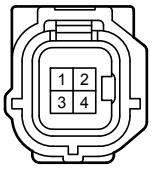


z 9
White

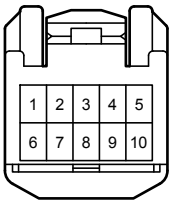


1G
White

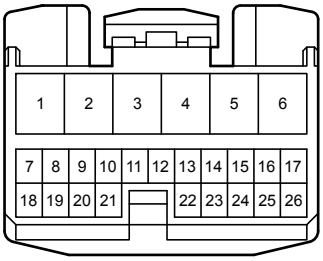


1H
White

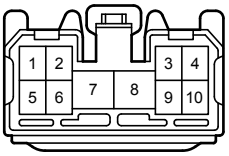


2A
White

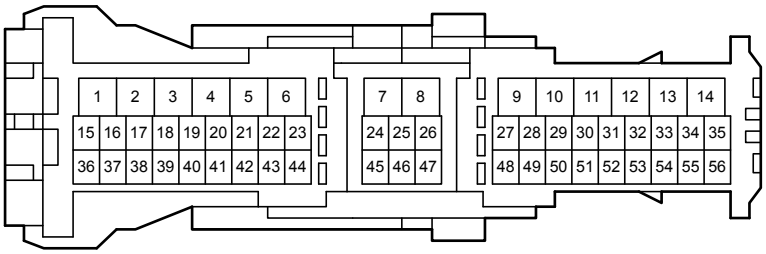


2B
White

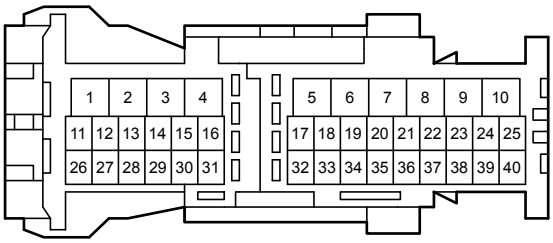


2C
White

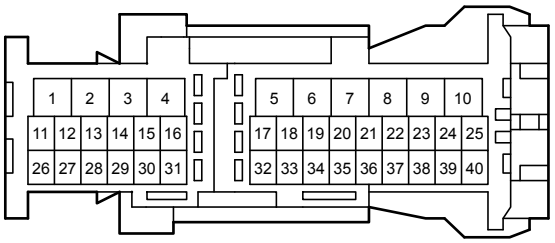


AL2
Gray

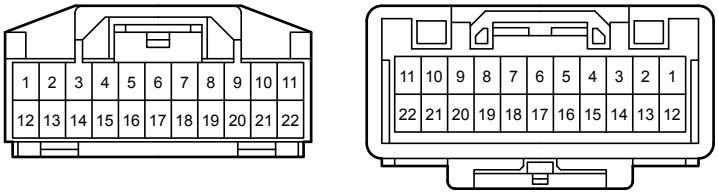


AL4
Black

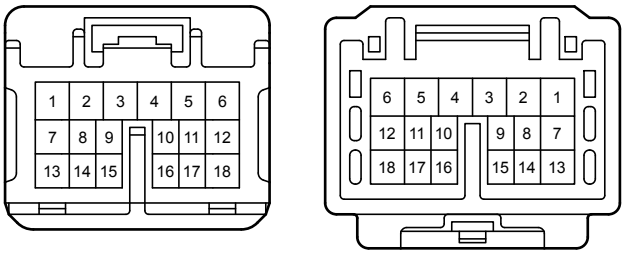


AL11
White

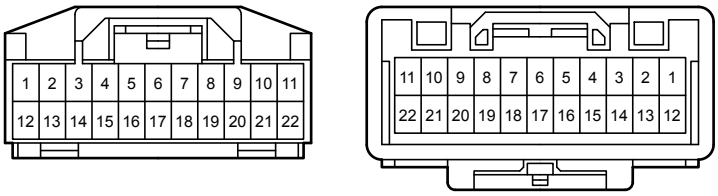



LI1
Blue

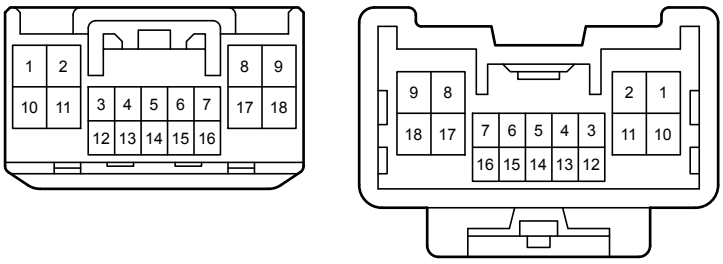


LL2
White

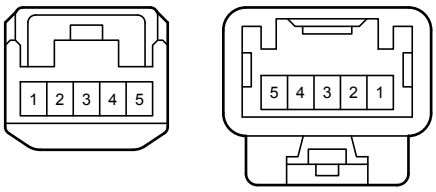

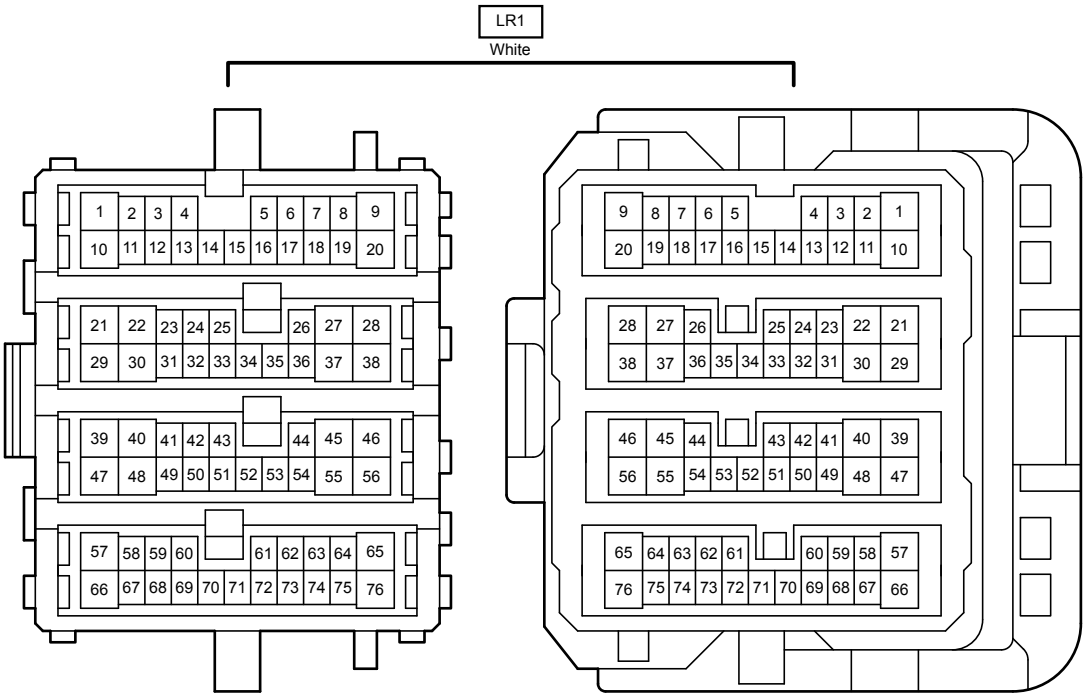

LR1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40 41 42 43 44 45 46
47 48 49 50 51 52 53 54 55 56
57 58 59 60 61 62 63 64 65
66 67 68 69 70 71 72 73 74 75 76
9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11 10
28 27 26 25 24 23 22 21
38 37 36 35 34 33 32 31 30 29
46 45 44 43 42 41 40 39
56 55 54 53 52 51 50 49 48 47
65 64 63 62 61 60 59 58 57
76 75 74 73 72 71 70 69 68 67 66

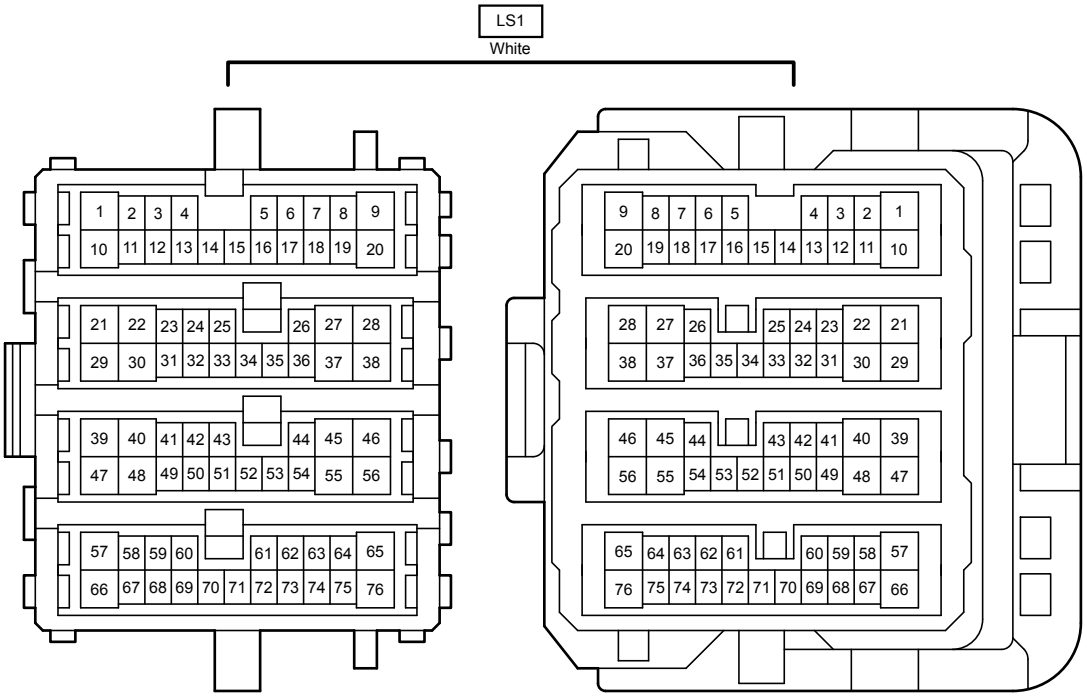
LS1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40 41 42 43 44 45 46
47 48 49 50 51 52 53 54 55 56
57 58 59 60 61 62 63 64 65
66 67 68 69 70 71 72 73 74 75 76
9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11 10
28 27 26 25 24 23 22 21
38 37 36 35 34 33 32 31 30 29
46 45 44 43 42 41 40 39
56 55 54 53 52 51 50 49 48 47
65 64 63 62 61 60 59 58 57
76 75 74 73 72 71 70 69 68 67 66


NL2
White

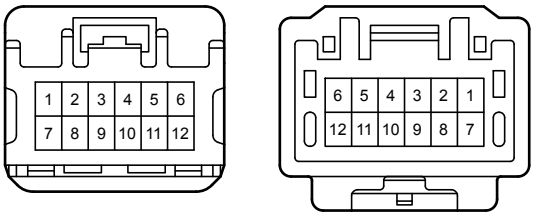


OL2
White

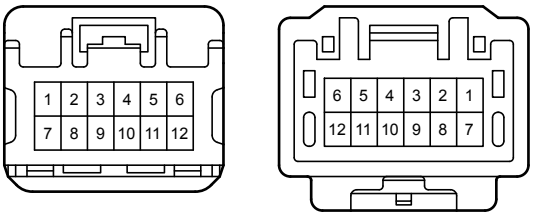


PS1
White

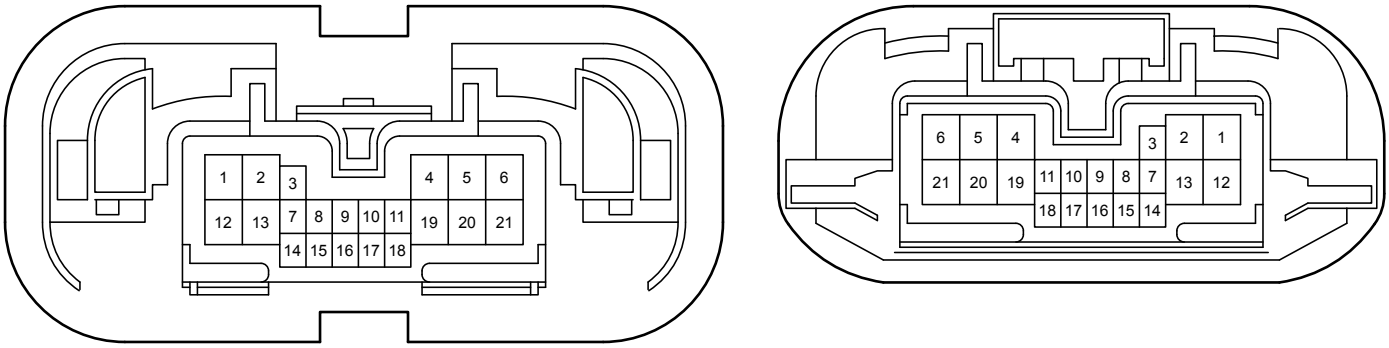


QR1
White

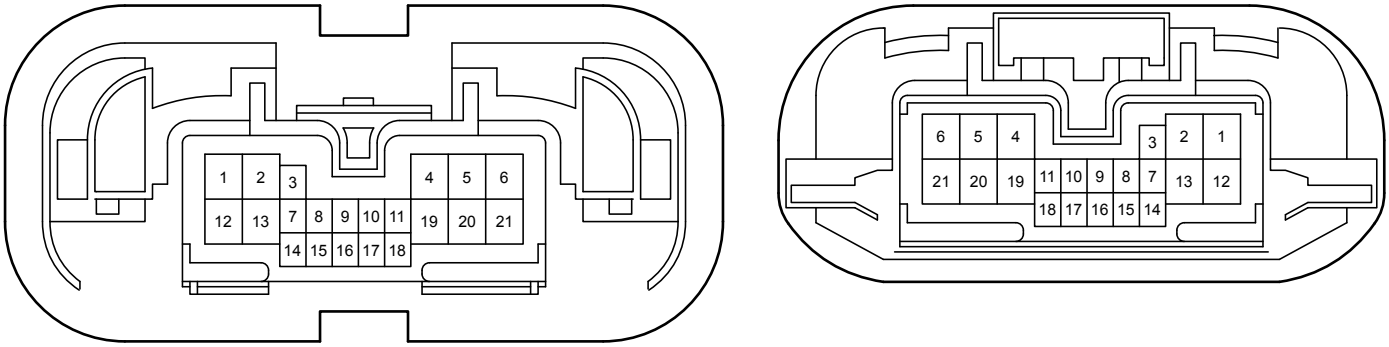

UL1
White

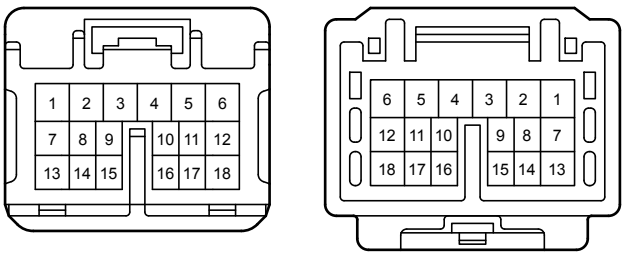

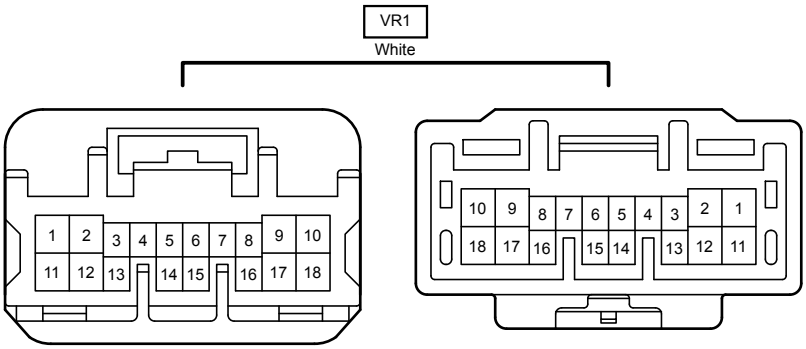
VR1
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11