





(BAT)
30A
IGCT
(BAT)
10A
STOP
(BAT)
7. 5A
AM2
A21(A), A22(B), L5(C), L6(D)
Power Management
Control ECU
BATT
12 2C
11 2C
20 AL2
A28
Stop Light Control
ECU Assembly
A26
Stop Light
Switch Assembly
A79(A), A80(B), A93(C)
Stop Light
Switch Assembly
+B
OUT
B
OUT
L
IGCT
Relay
10A
IGCT
NO. 2
A56
Junction
Connector
A3
L(∗7 ∗8)
G(∗7 ∗9)
L(∗6 ∗8)
G(∗6 ∗9)
BE
BE
W
(∗10)
L
∗ 6 : Before Nov. 2014 Production
∗ 7 : From Nov. 2014 Production
∗ 8 : w/ Dynamic Radar Cruise Control
∗ 9 : w/o Dynamic Radar Cruise Control
∗10 : Before May 2016 Production
∗11 : From May 2016 Production
∗18 : Before Aug. 2020 Production
∗19 : From Aug. 2020 Production



A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
AM21
AM22
STP
MREL
+B2
+B1
E01
E02
E12
E1
L70(A) Junction Connector
A52(A), A53(B) Junction Connector
A50(A), A51(B) Junction Connector
A54(A), A55(B) Junction Connector
L87 Junction Connector
L87 Junction Connector
L(*7 *8)
G(*7 *9)
L(*6 *8)
G(*6 *9)
BE
W
(*10)
L
W–B
L1
L3

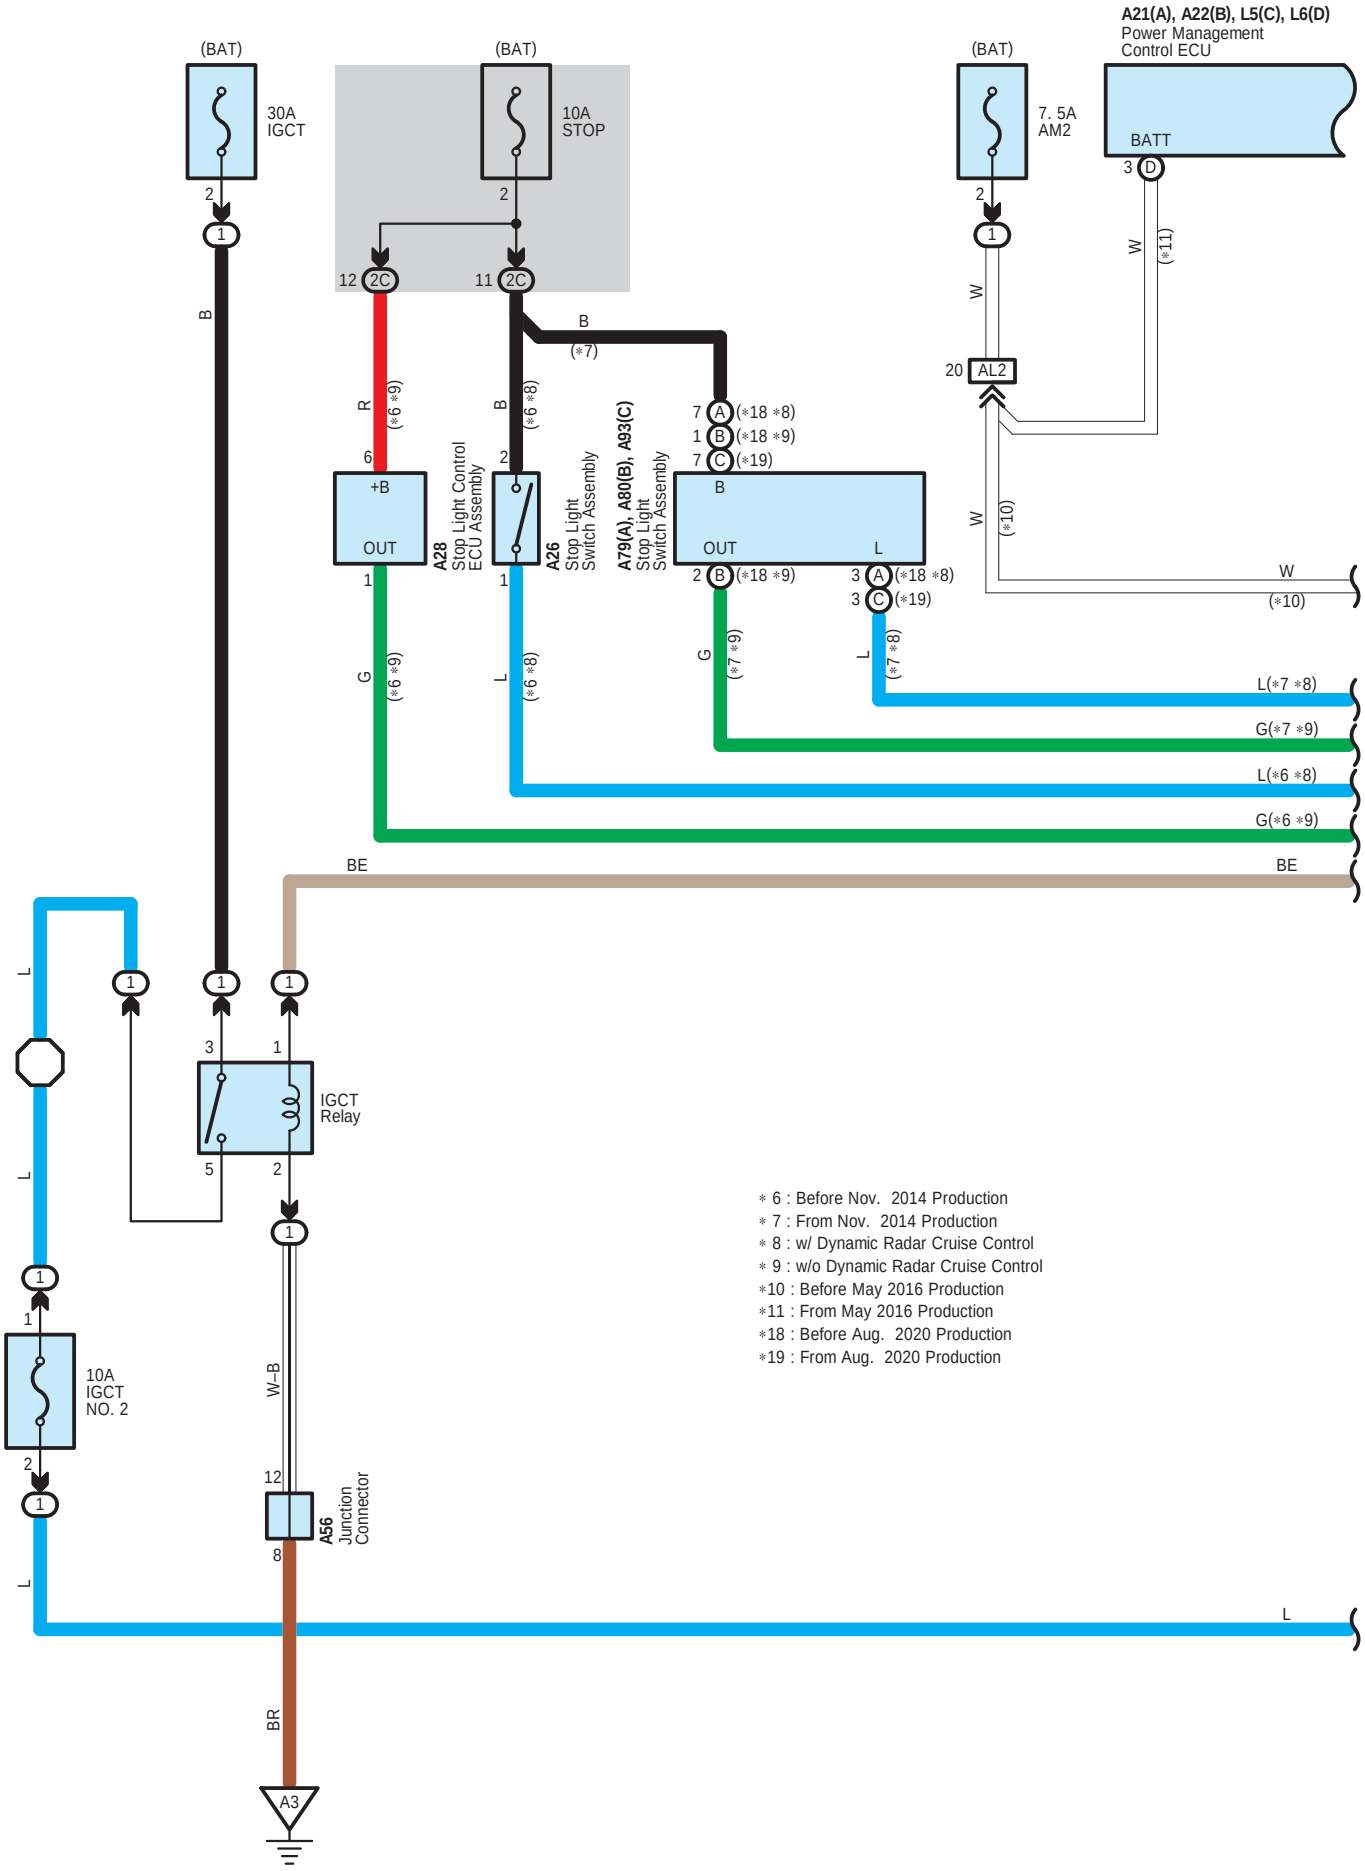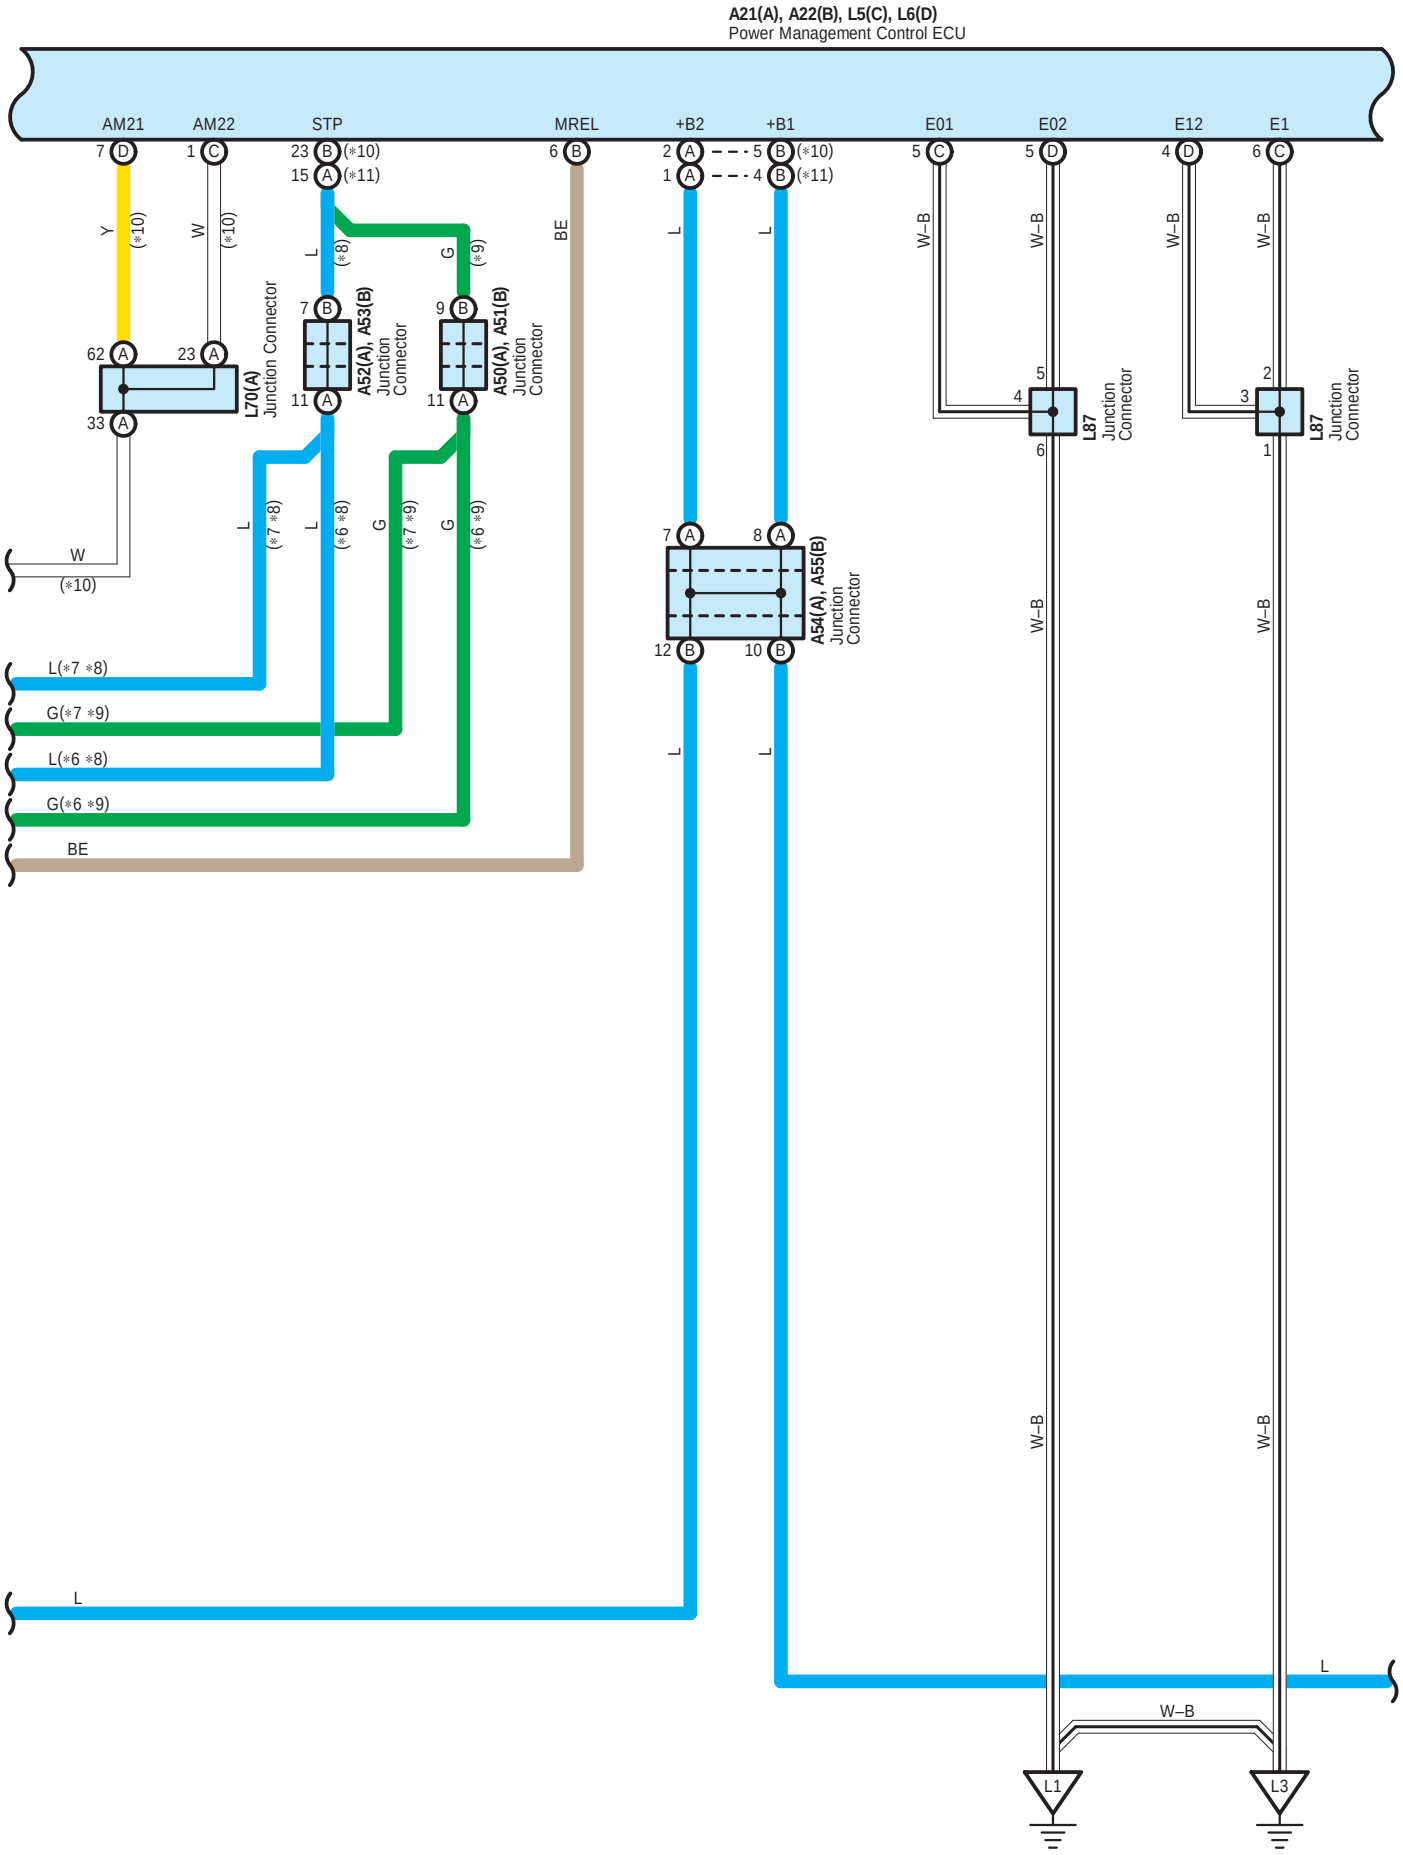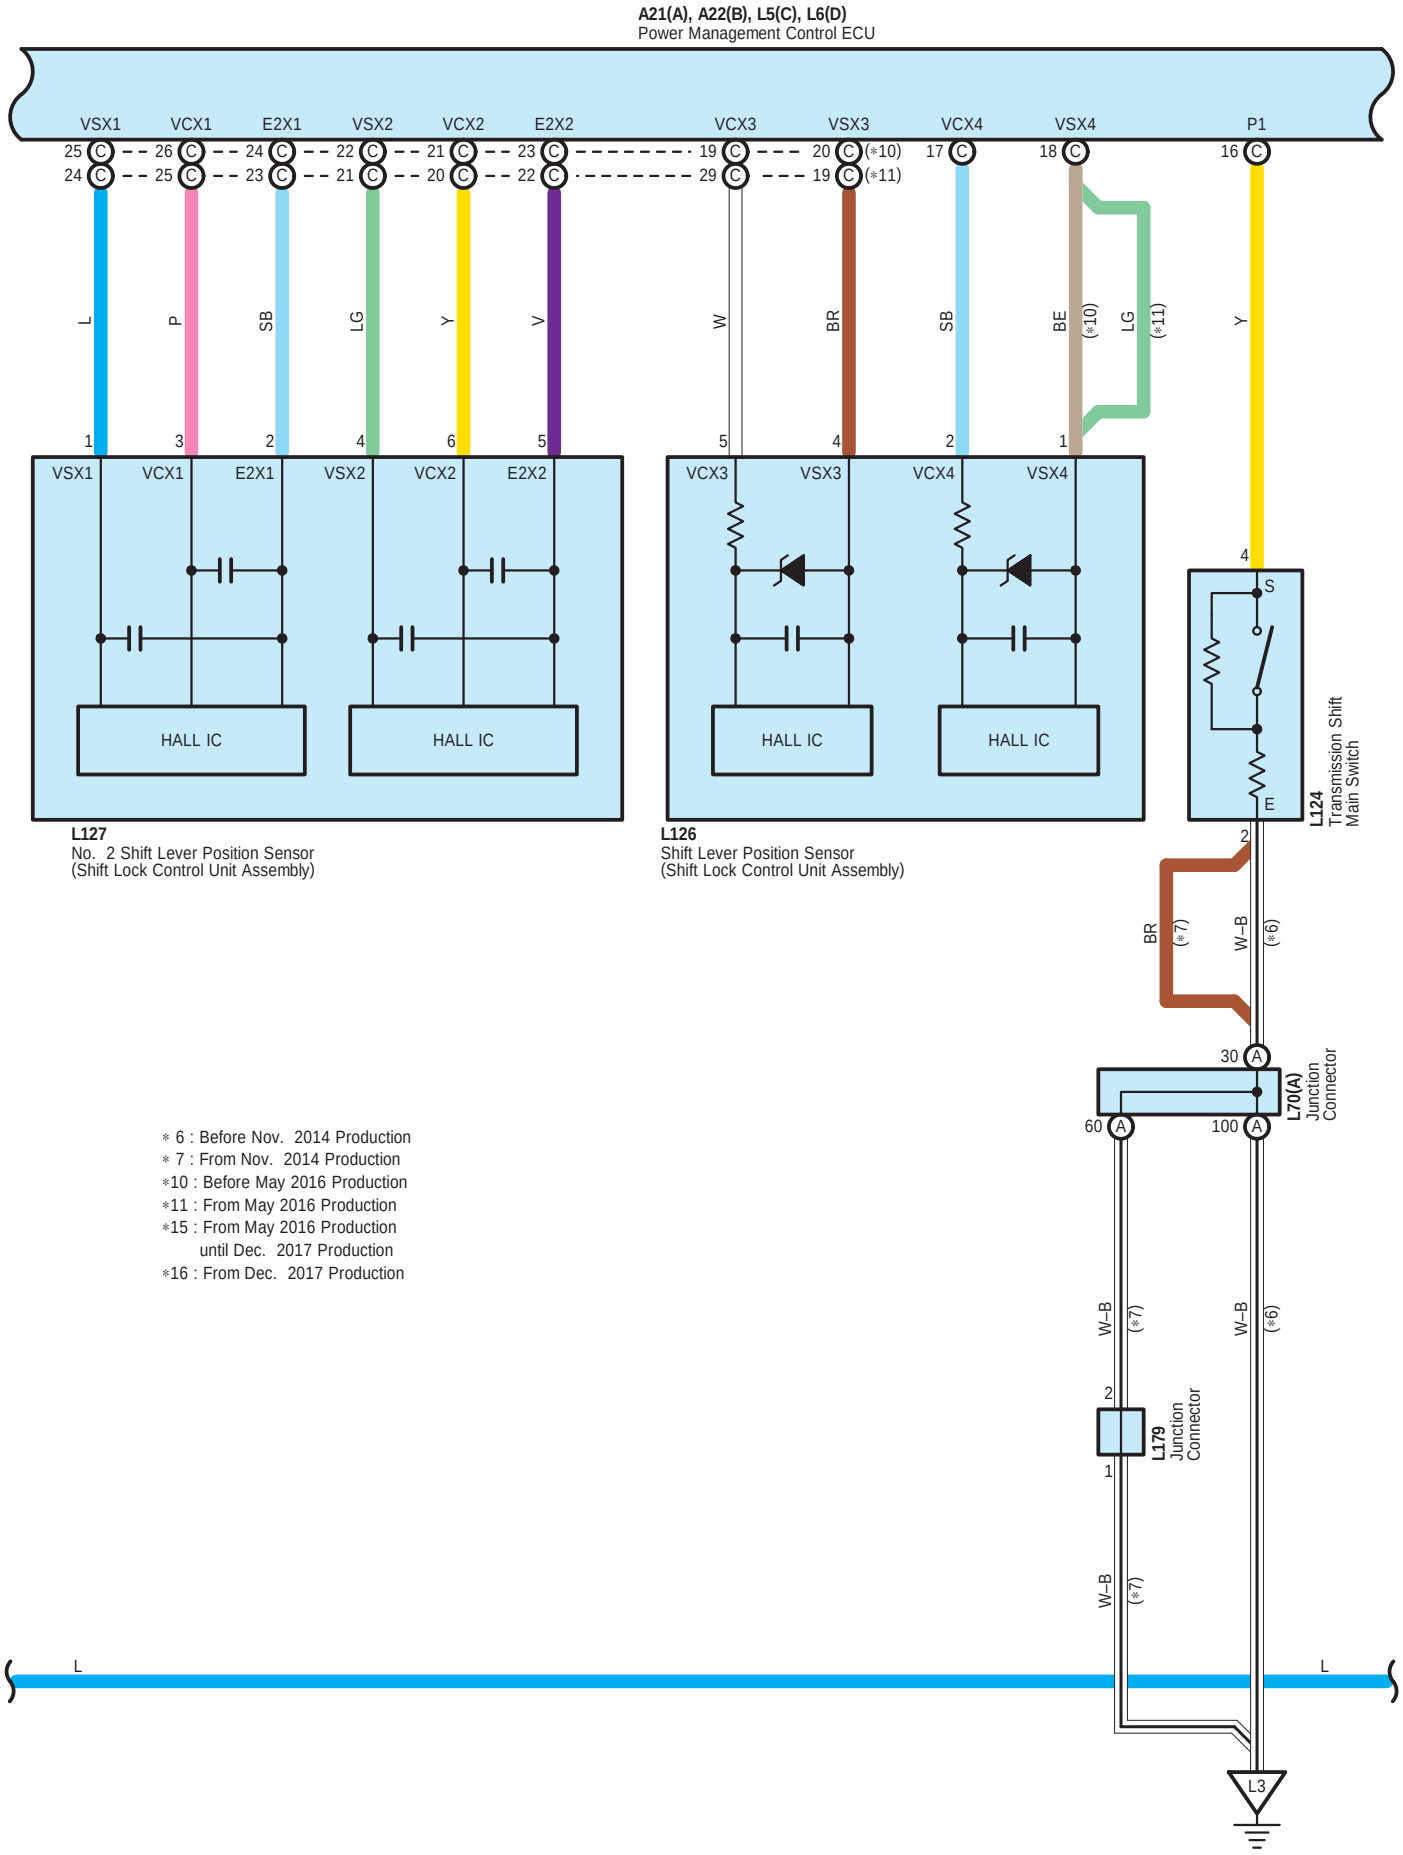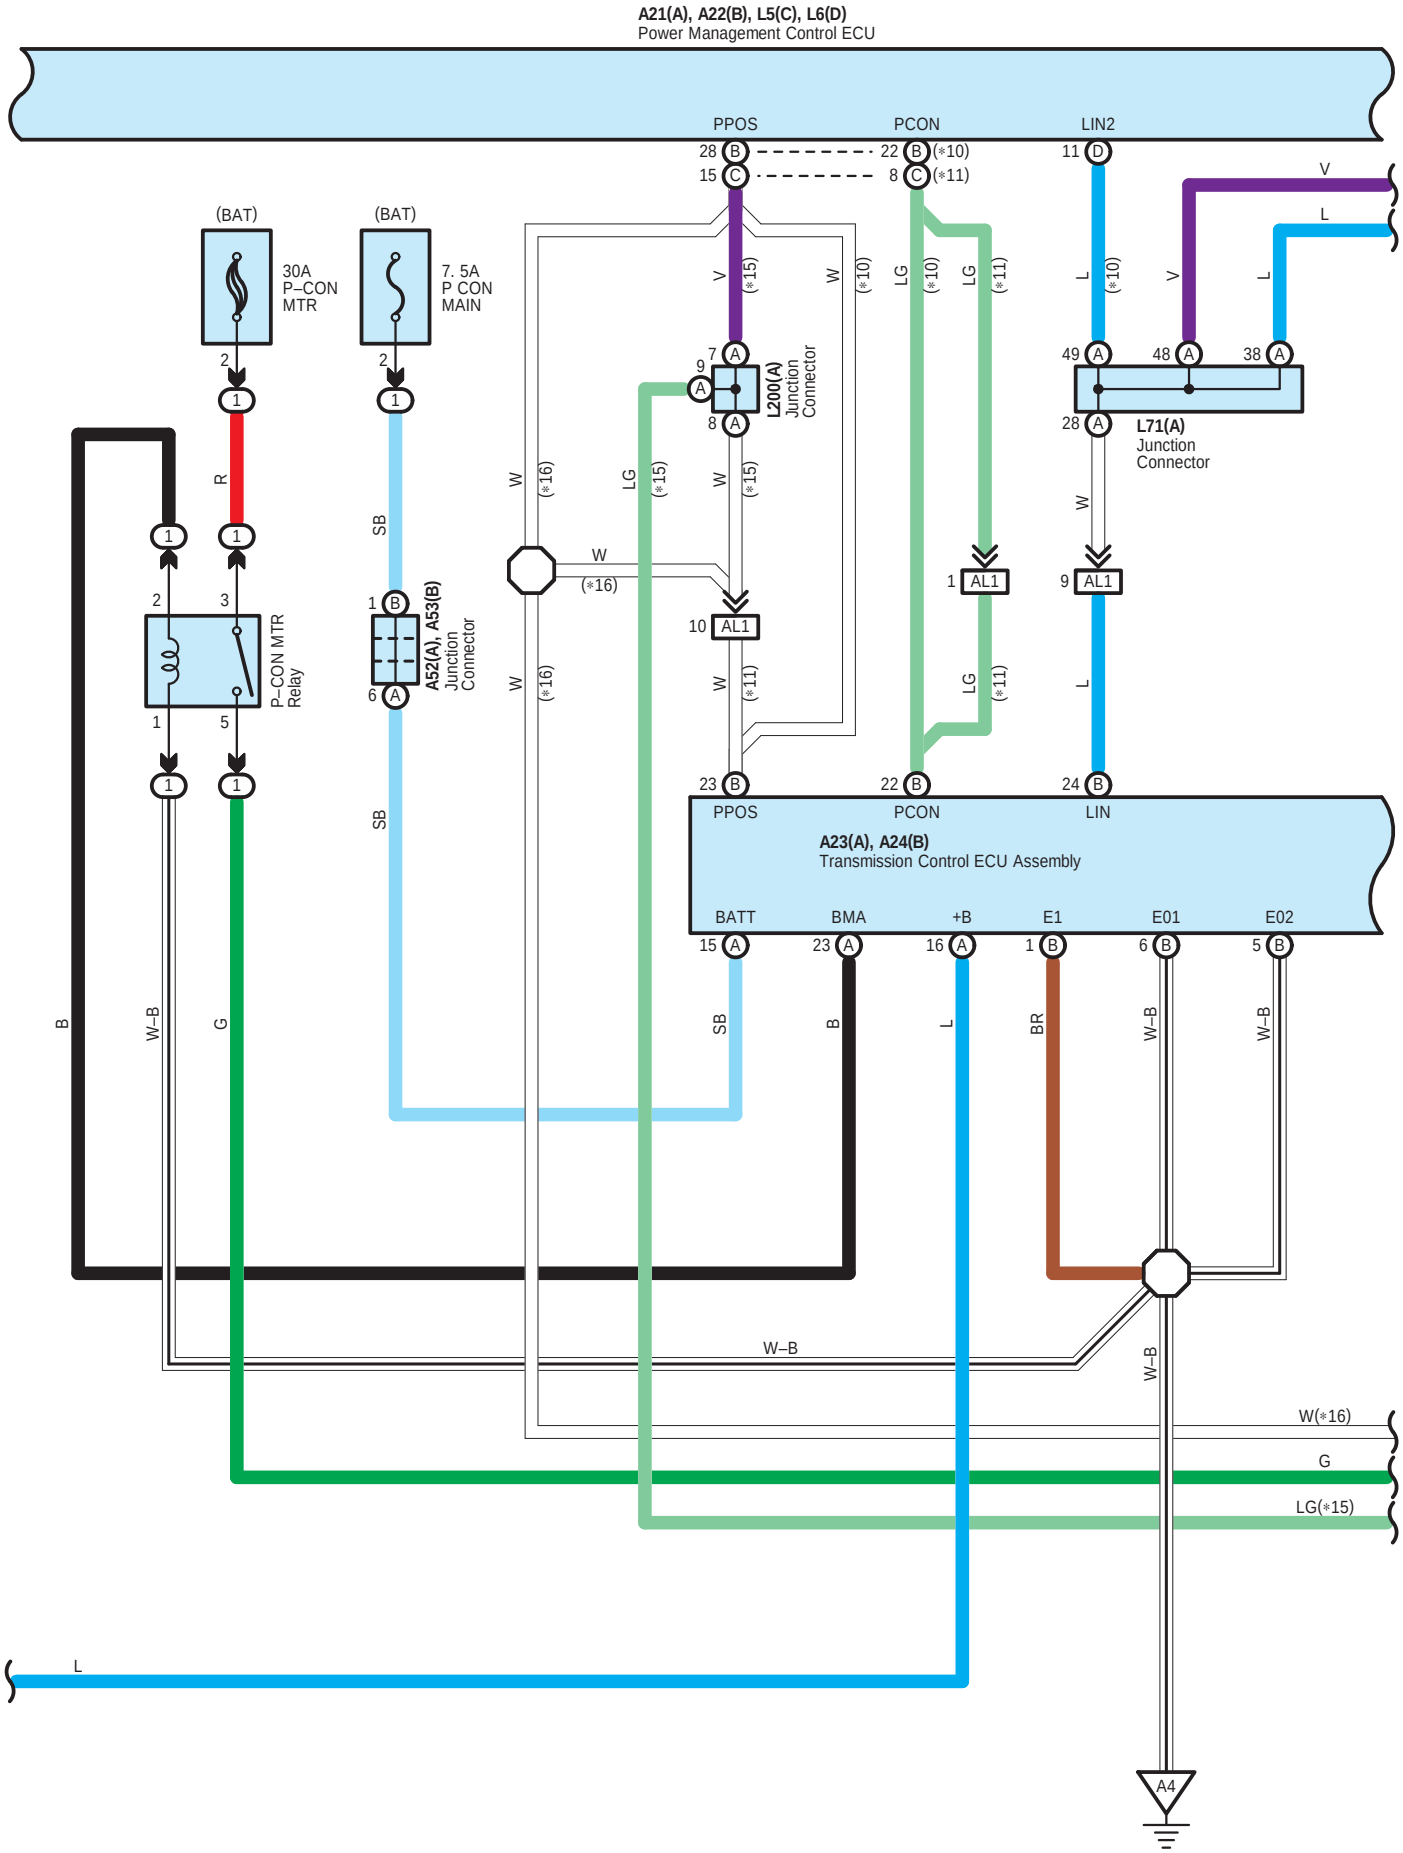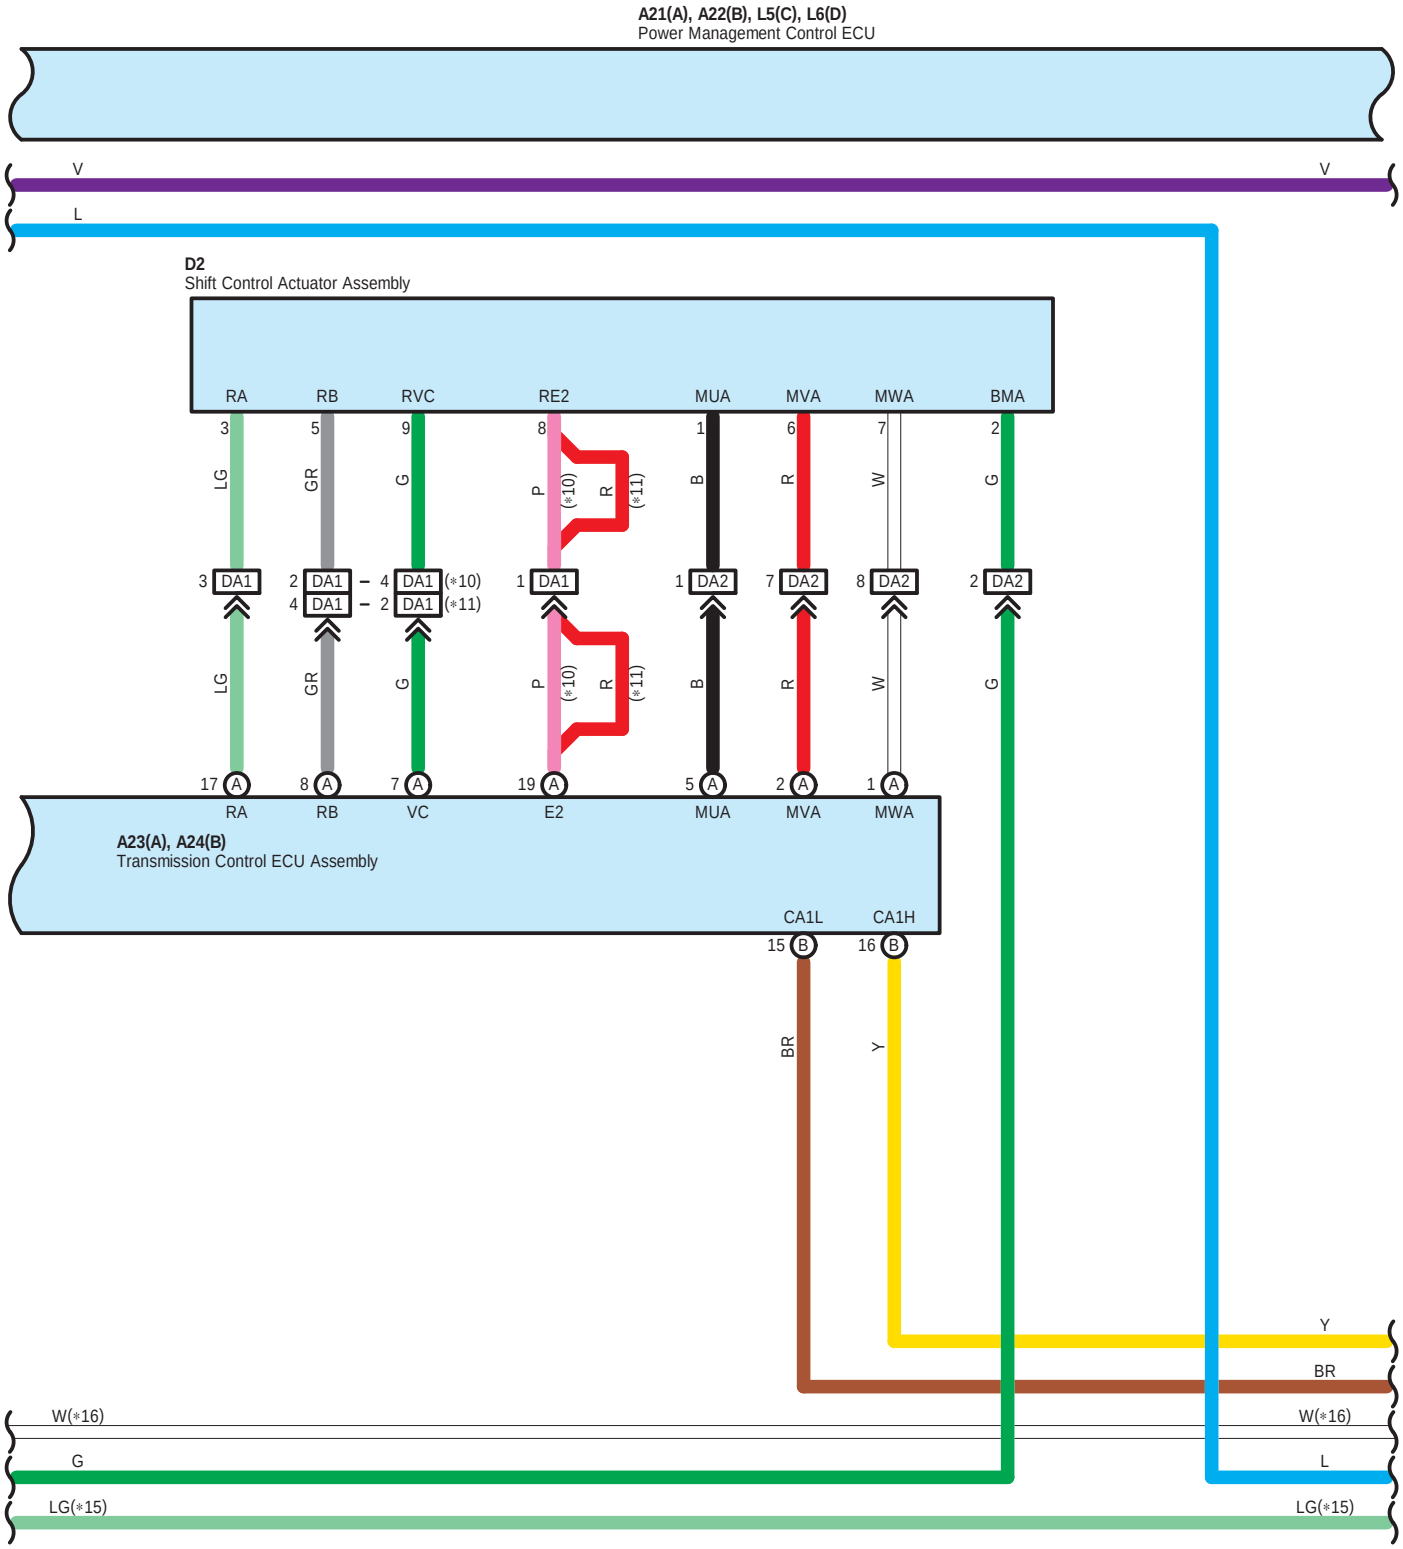



* 6 : Before Nov. 2014 Production
* 7 : From Nov. 2014 Production
*10 : Before May 2016 Production
*11 : From May 2016 Production
*15 : From May 2016 Production
until Dec. 2017 Production
*16 : From Dec. 2017 Production



A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
PPOS
PCON
LIN2
(BAT)
(BAT)
30A
P–CON
MTR
7. 5A
P CON
MAIN
P–CON MTR
Relay
A52(A), A53(B)
Junction
Connector
L200(A)
Junction
Connector
L71(A)
Junction
Connector
AL1
A23(A), A24(B)
Transmission Control ECU Assembly
BATT
BMA
+B
E1
E01
E02
LIN
W–B
W(*16)
G
LG(*15)
L
A4



A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
V
V
L
D2
Shift Control Actuator Assembly
RA
RB
RVC
RE2
MUA
MVA
MWA
BMA
3
5
9
8
1
6
7
2
LG
GR
G
P
(*10)
R
(*11)
B
R
W
G
3 DA1
2 DA1
4 DA1
4 DA1 – 2 DA1 (*10)
2 DA1 – 4 DA1 (*11)
1 DA1
1 DA2
7 DA2
8 DA2
2 DA2
17 A
8 A
7 A
19 A
5 A
2 A
1 A
RA
RB
VC
E2
MUA
MVA
MWA
A23(A), A24(B)
Transmission Control ECU Assembly
CA1L
CA1H
15 B
16 B
BR
Y
Y
BR
W(*16)
W(*16)
G
L
LG(*15)
LG(*15)

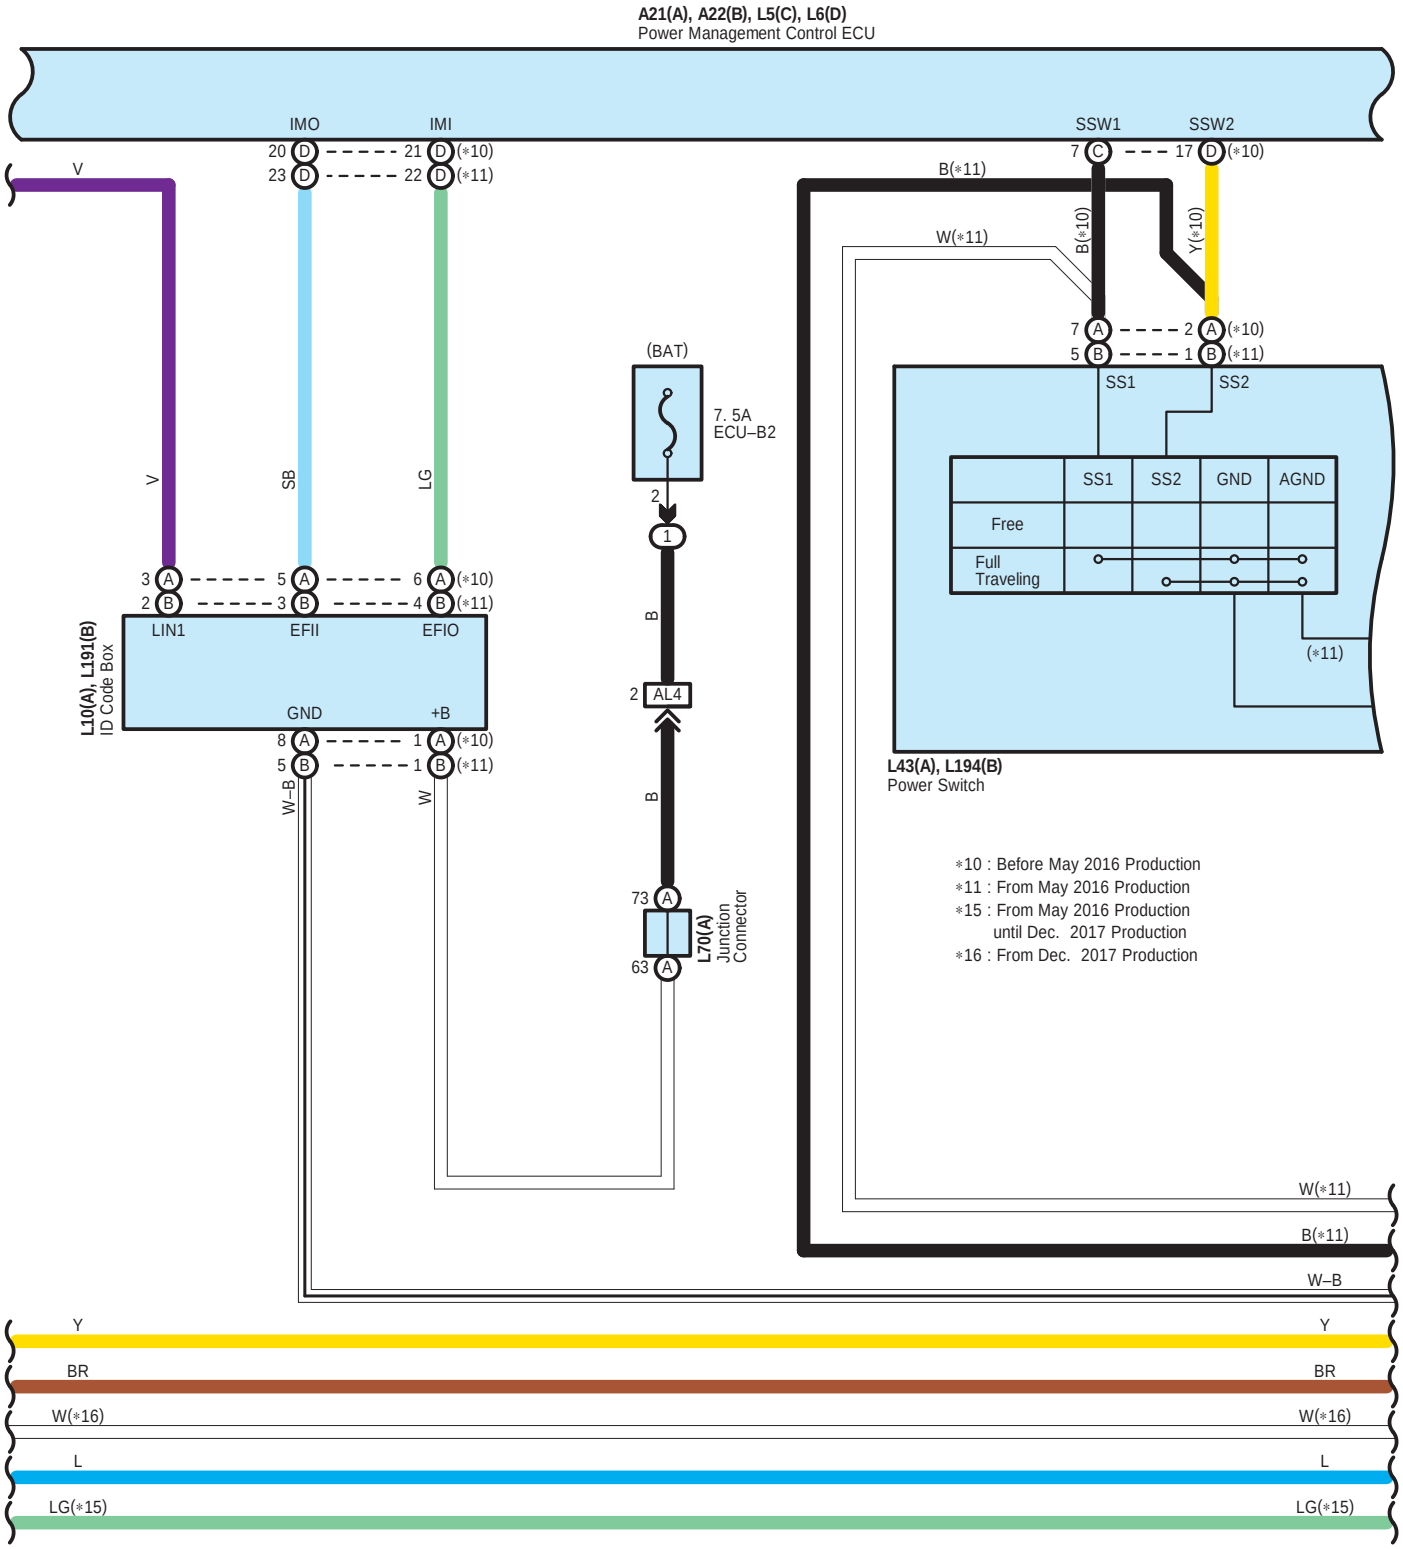

A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
IMO
IMI
SSW1
SSW2
20 D
21 D (*10)
23 D
22 D (*11)
7 C
17 D (*10)
B(*11)
W(*11)
B(*10)
Y(*10)
7 A
2 A (*10)
5 B
1 B (*11)
SS1
SS2
SS1
SS2
GND
AGND
Free
Full Traveling
(*11)
(BAT)
7. 5A
ECU–B2
2
1
B
2 AL4
B
73 A
63 A
L70(A)
Junction Connector
V
V
SB
LG
3 A
5 A
6 A (*10)
2 B
3 B
4 B (*11)
L10(A), L191(B)
ID Code Box
LIN1
EFII
EFIO
GND
+B
8 A
1 A (*10)
5 B
1 B (*11)
W–B
W
L43(A), L194(B)
Power Switch
*10 : Before May 2016 Production
*11 : From May 2016 Production
*15 : From May 2016 Production
until Dec. 2017 Production
*16 : From Dec. 2017 Production
W(*11)
B(*11)
W–B
Y
BR
W(*16)
L
LG(*15)
Y
BR
W(*16)
L
LG(*15)

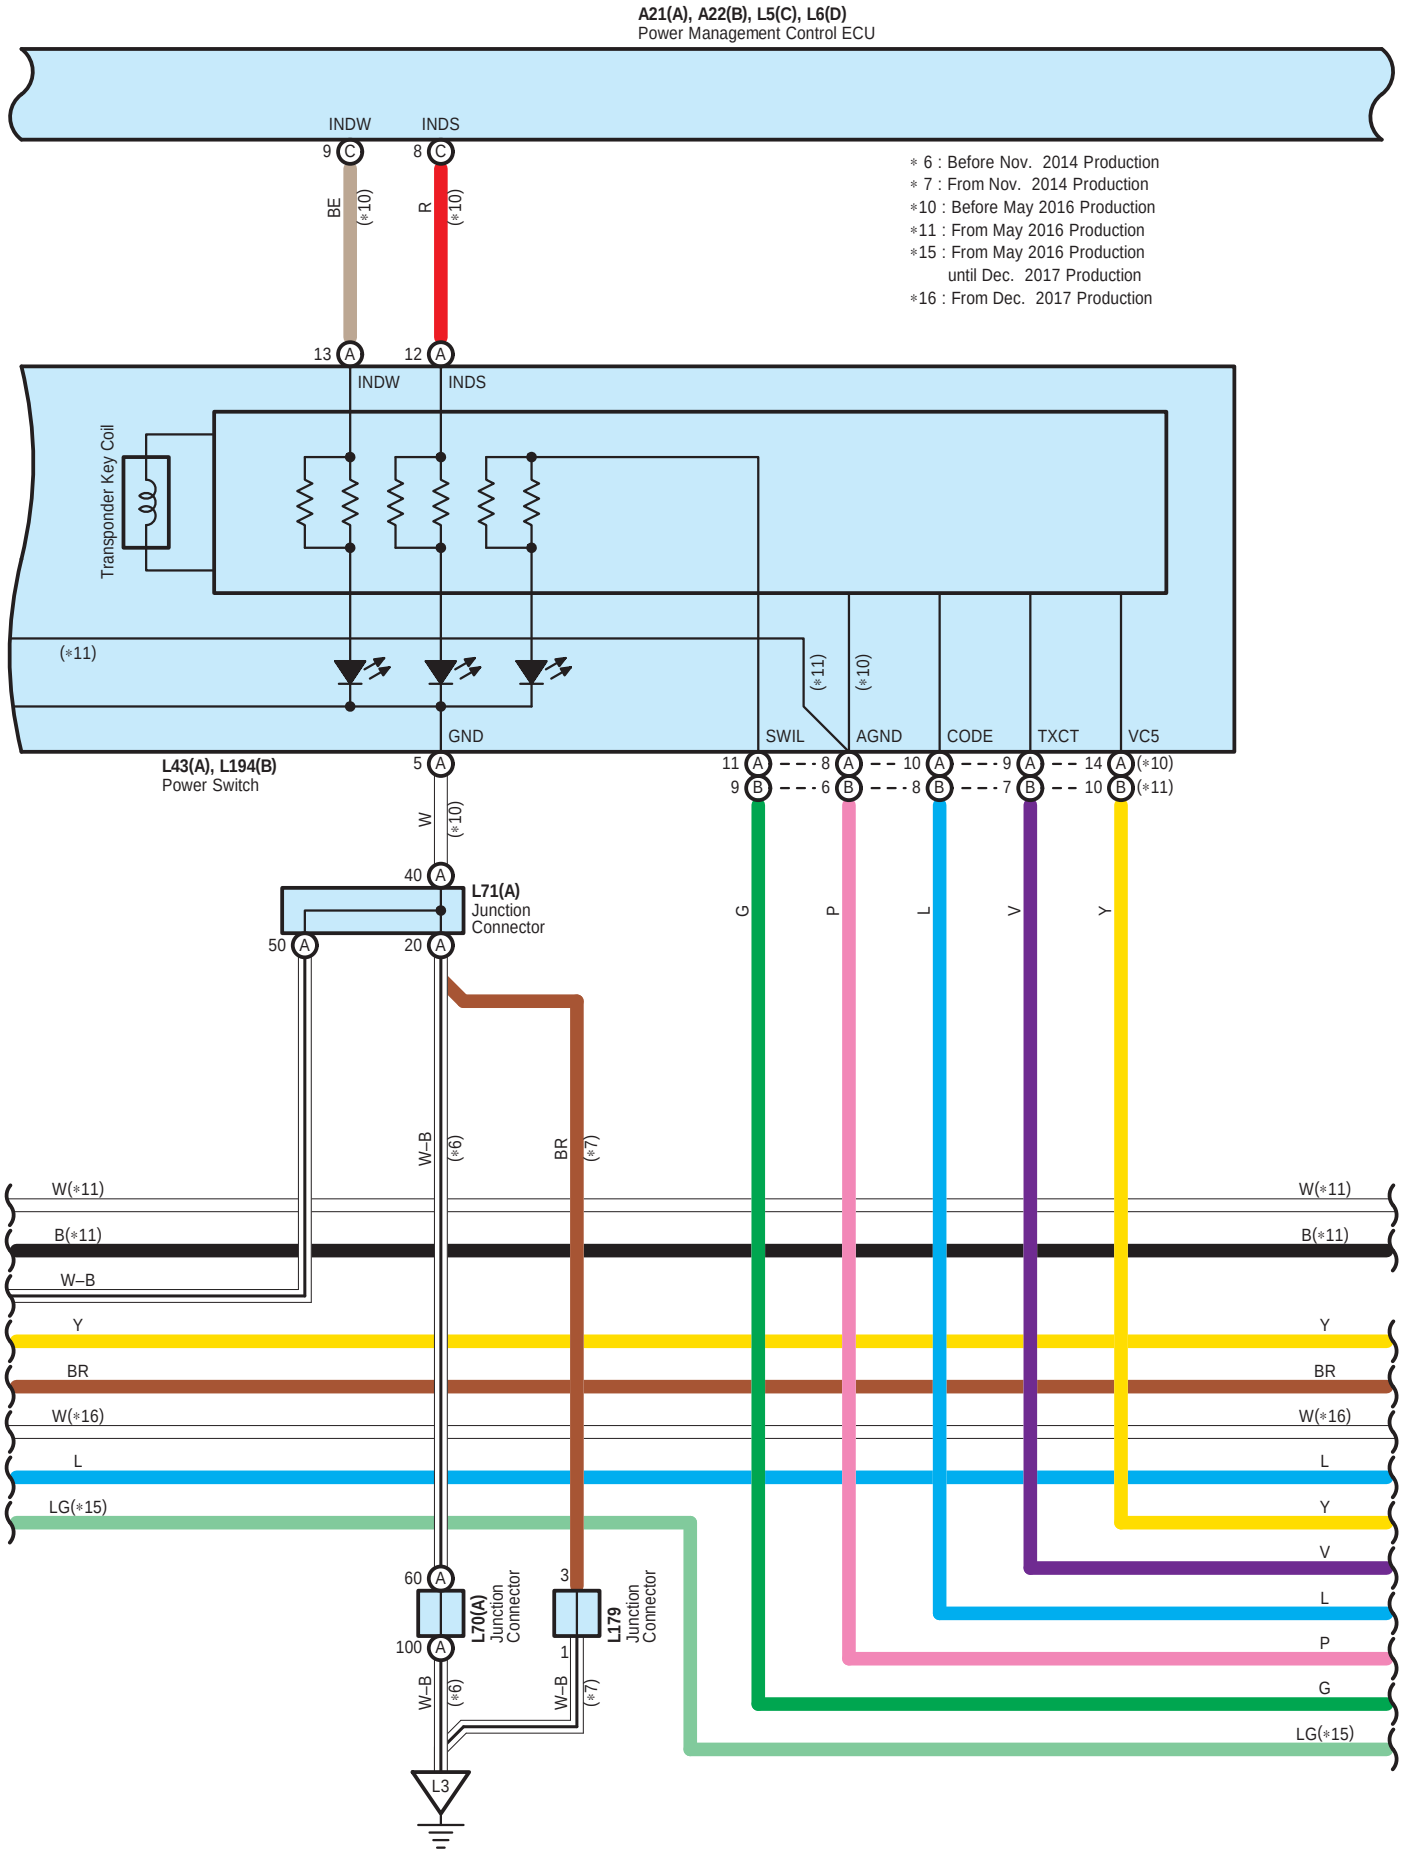

A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
INDW
INDS
9 C
8 C
BE
(*10)
R
(*10)
∗ 6 : Before Nov. 2014 Production
∗ 7 : From Nov. 2014 Production
∗10 : Before May 2016 Production
∗11 : From May 2016 Production
∗15 : From May 2016 Production until Dec. 2017 Production
∗16 : From Dec. 2017 Production
13 A
12 A
INDW
INDS
Transponder Key Coil
(*11)
GND
SWIL
AGND
CODE
TXCT
VC5
(*11)
(*10)
L43(A), L194(B)
Power Switch
5 A
W
(*10)
40 A
L71(A)
Junction Connector
50 A
20 A
11 A
9 B
8 A
6 B
10 A
8 B
9 A
7 B
14 A
10 B
(*10)
(*11)
G
P
L
V
Y
W–B
(*6)
BR
(*7)
W(*11)
B(*11)
W–B
Y
BR
W(*16)
L
LG(*15)
60 A
100 A
L70(A)
Junction Connector
3
1
L179
Junction Connector
W–B
(*6)
W–B
(*7)
L3
W(*11)
B(*11)
Y
BR
W(*16)
L
Y
V
L
P
G
LG(*15)

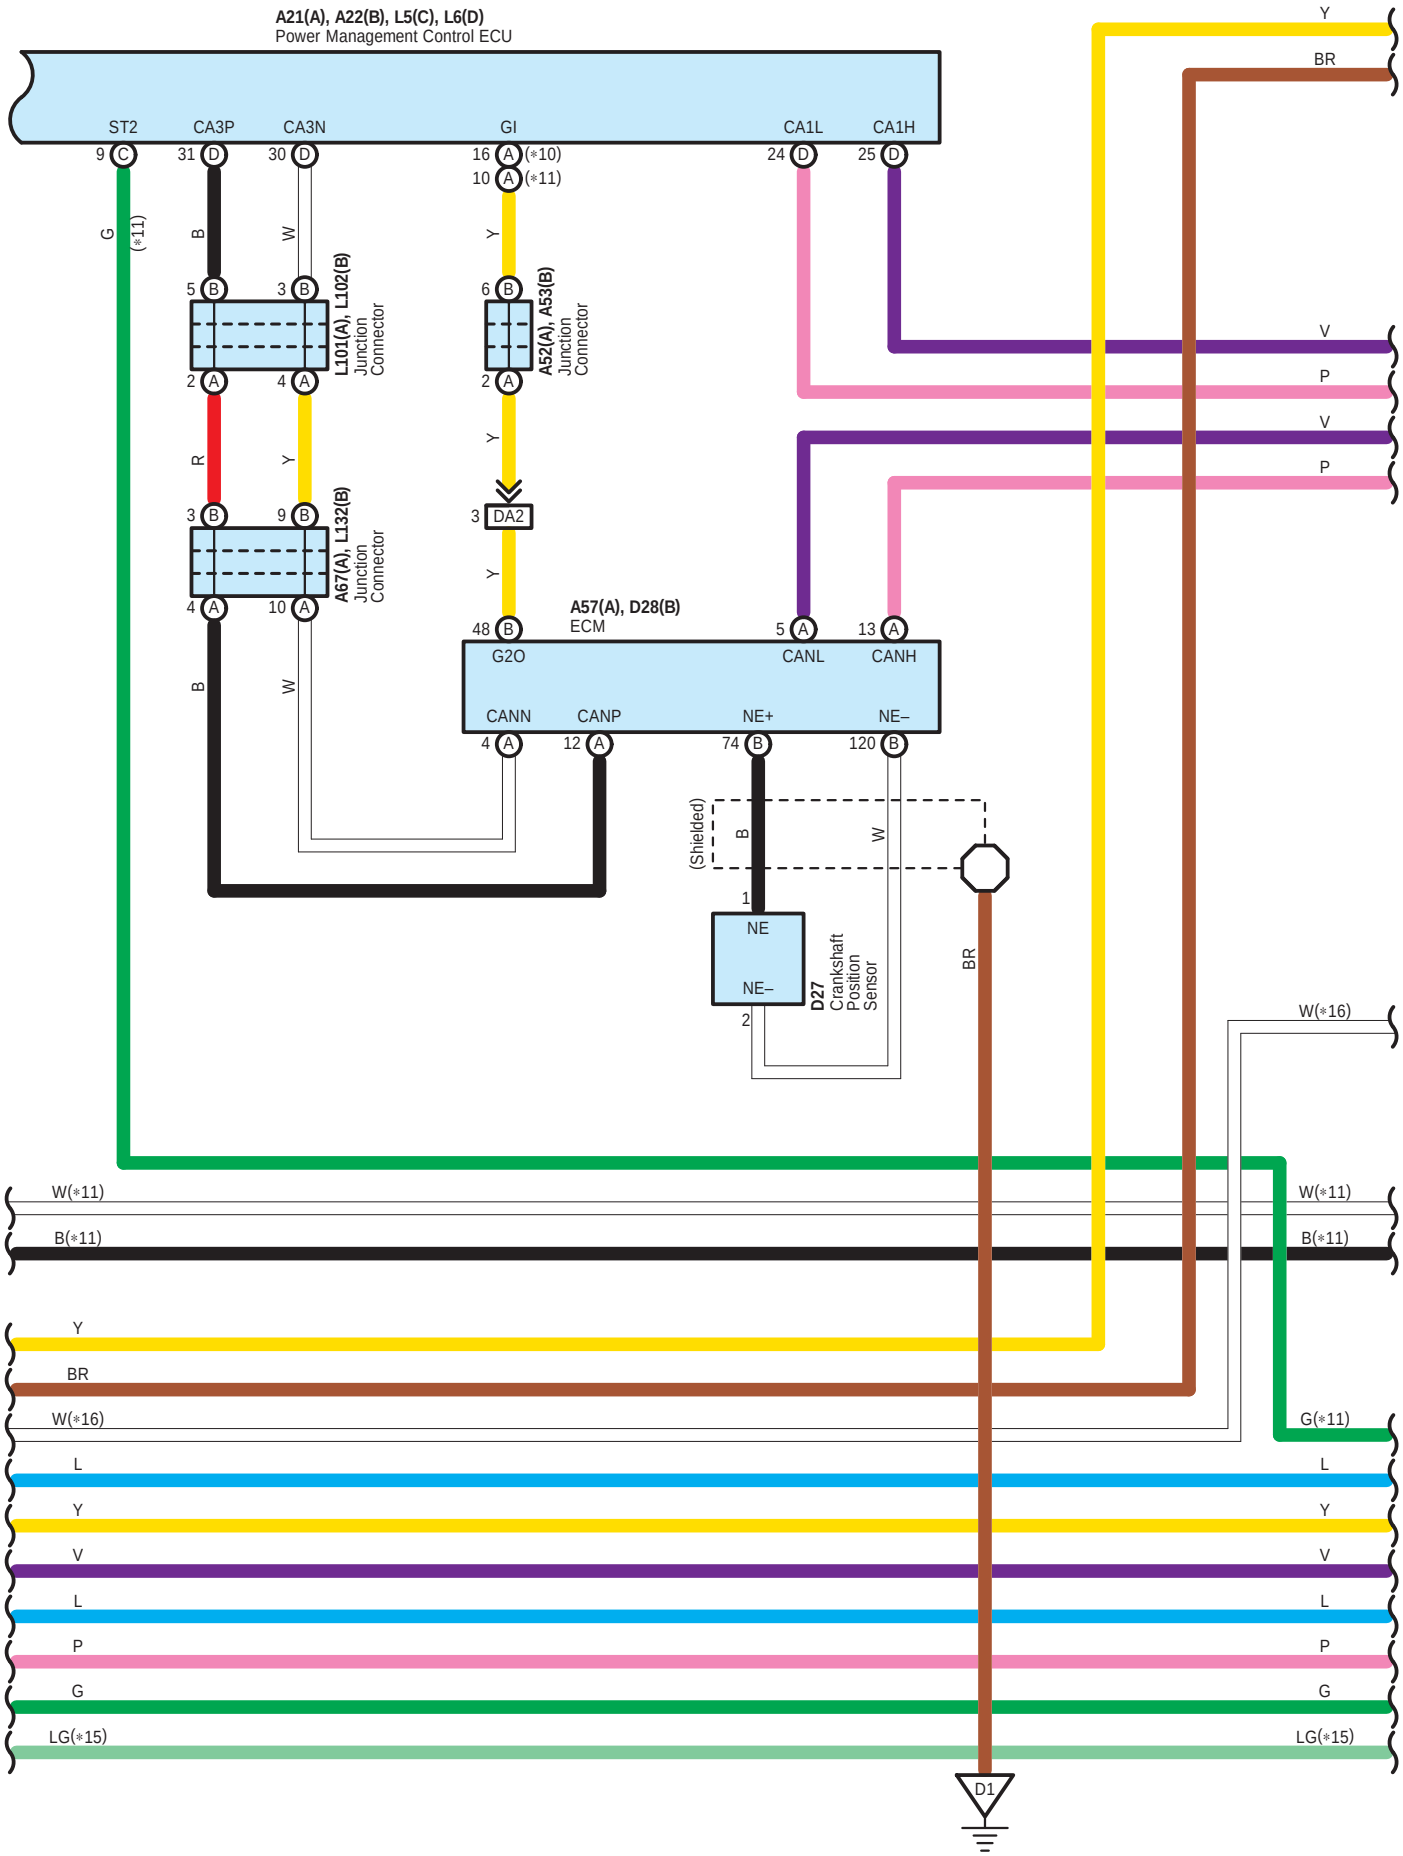

A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
ST2
CA3P
CA3N
GI
CA1L
CA1H
9 C
31 D
30 D
16 A (*10)
10 A (*11)
24 D
25 D
G (*11)
B
W
Y
L101(A), L102(B) Junction Connector
A52(A), A53(B) Junction Connector
A67(A), L132(B) Junction Connector
DA2
A57(A), D28(B) ECM
G2O
CANL
CANH
CANN
CANP
NE+
NE–
(Shielded)
NE
D27 Crankshaft Position Sensor
BR
R
V
P
W(*16)
W(*11)
B(*11)
G(*11)
L
LG(*15)
D1

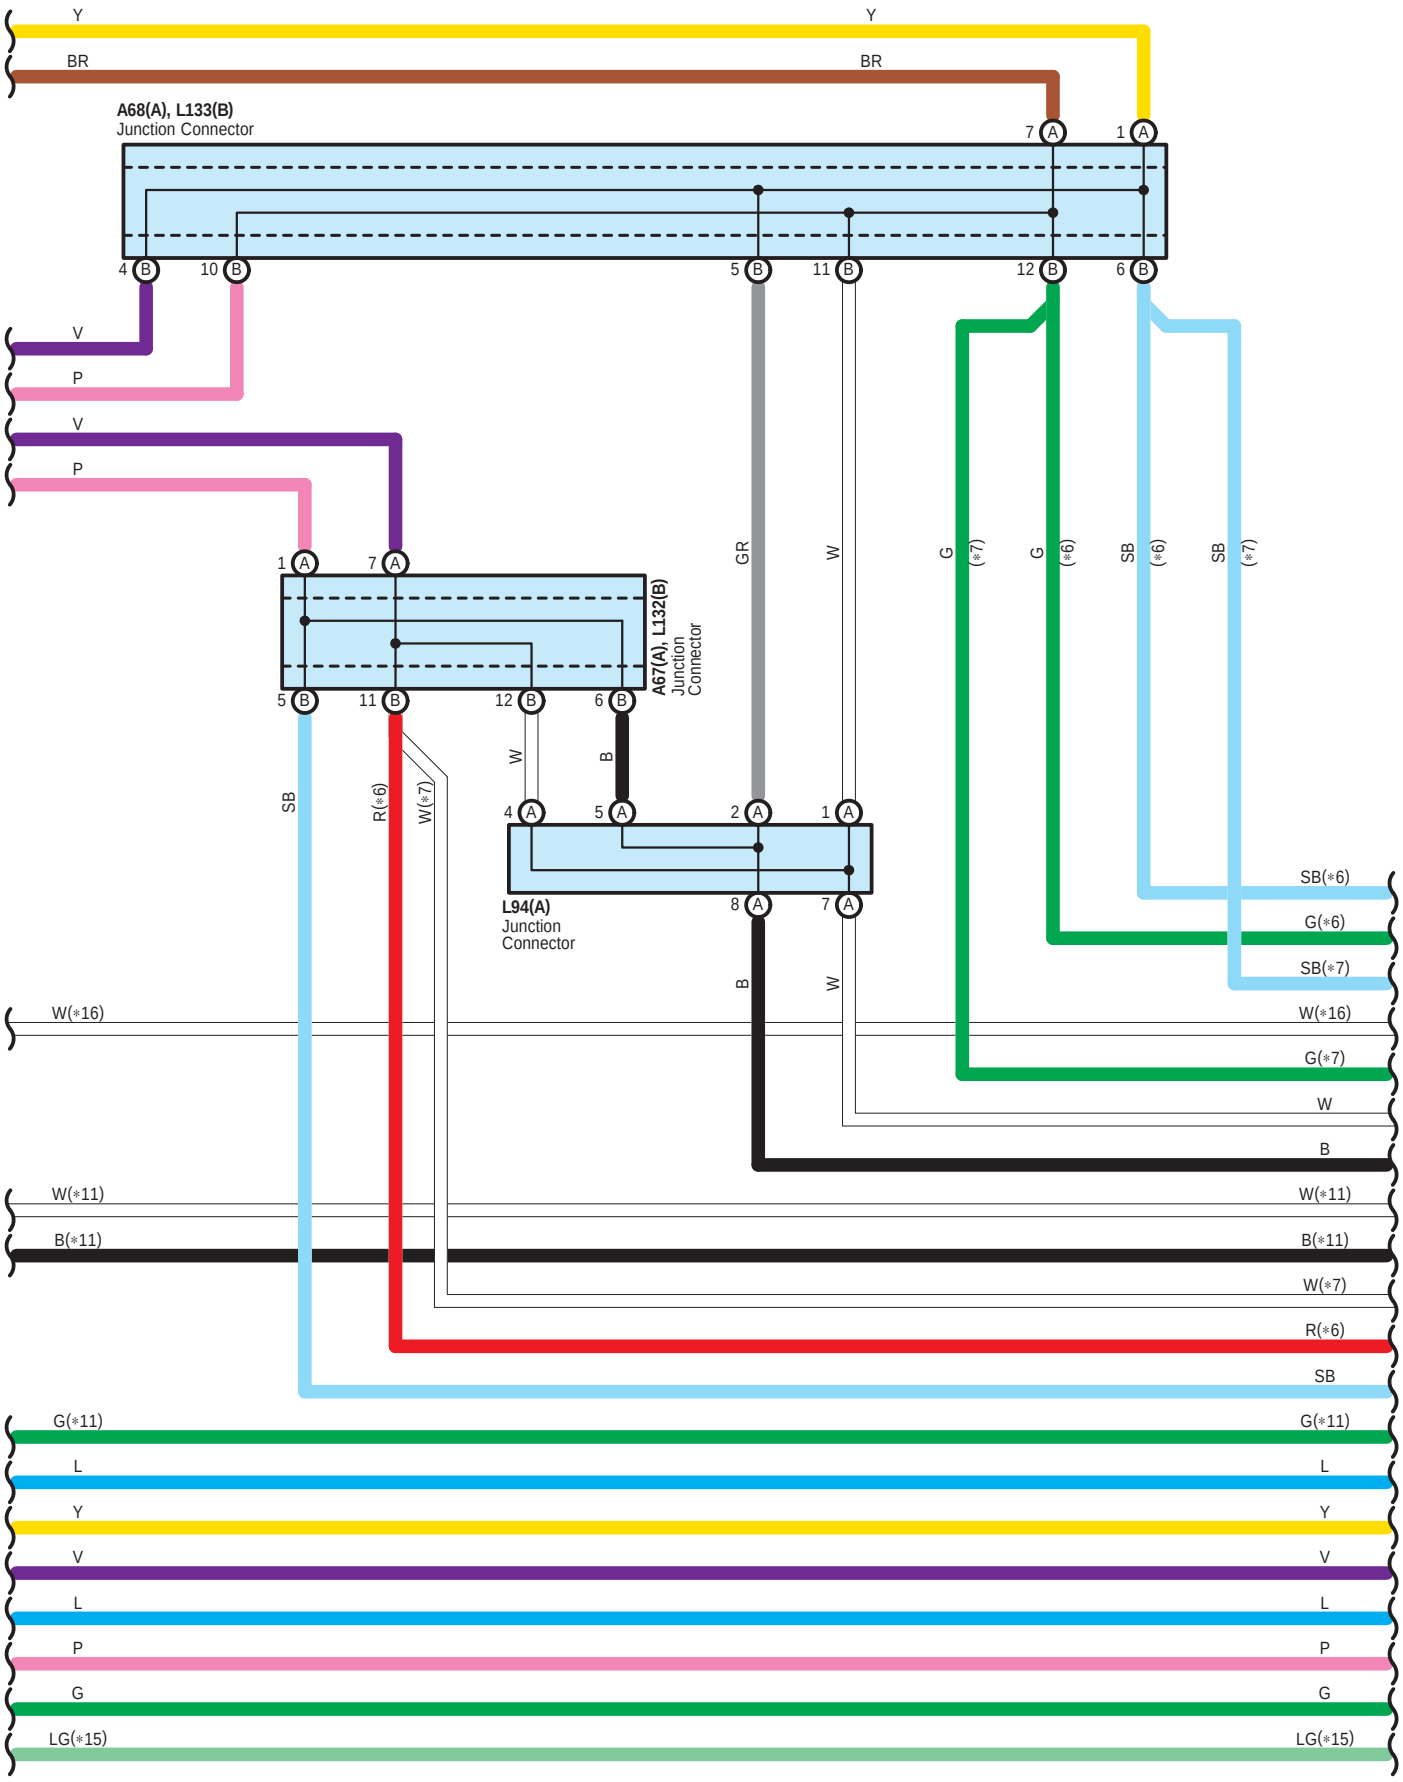

A68(A), L133(B)
Junction Connector
A67(A), L132(B)
Junction Connector
L94(A)
Junction Connector
Y
BR
V
P
GR
W
G (*7)
G (*6)
SB (*6)
SB (*7)
B
R(*6)
W(*7)
SB(*6)
G(*6)
SB(*7)
W(*16)
G(*7)
W(*11)
B(*11)
G(*11)
L
LG(*15)

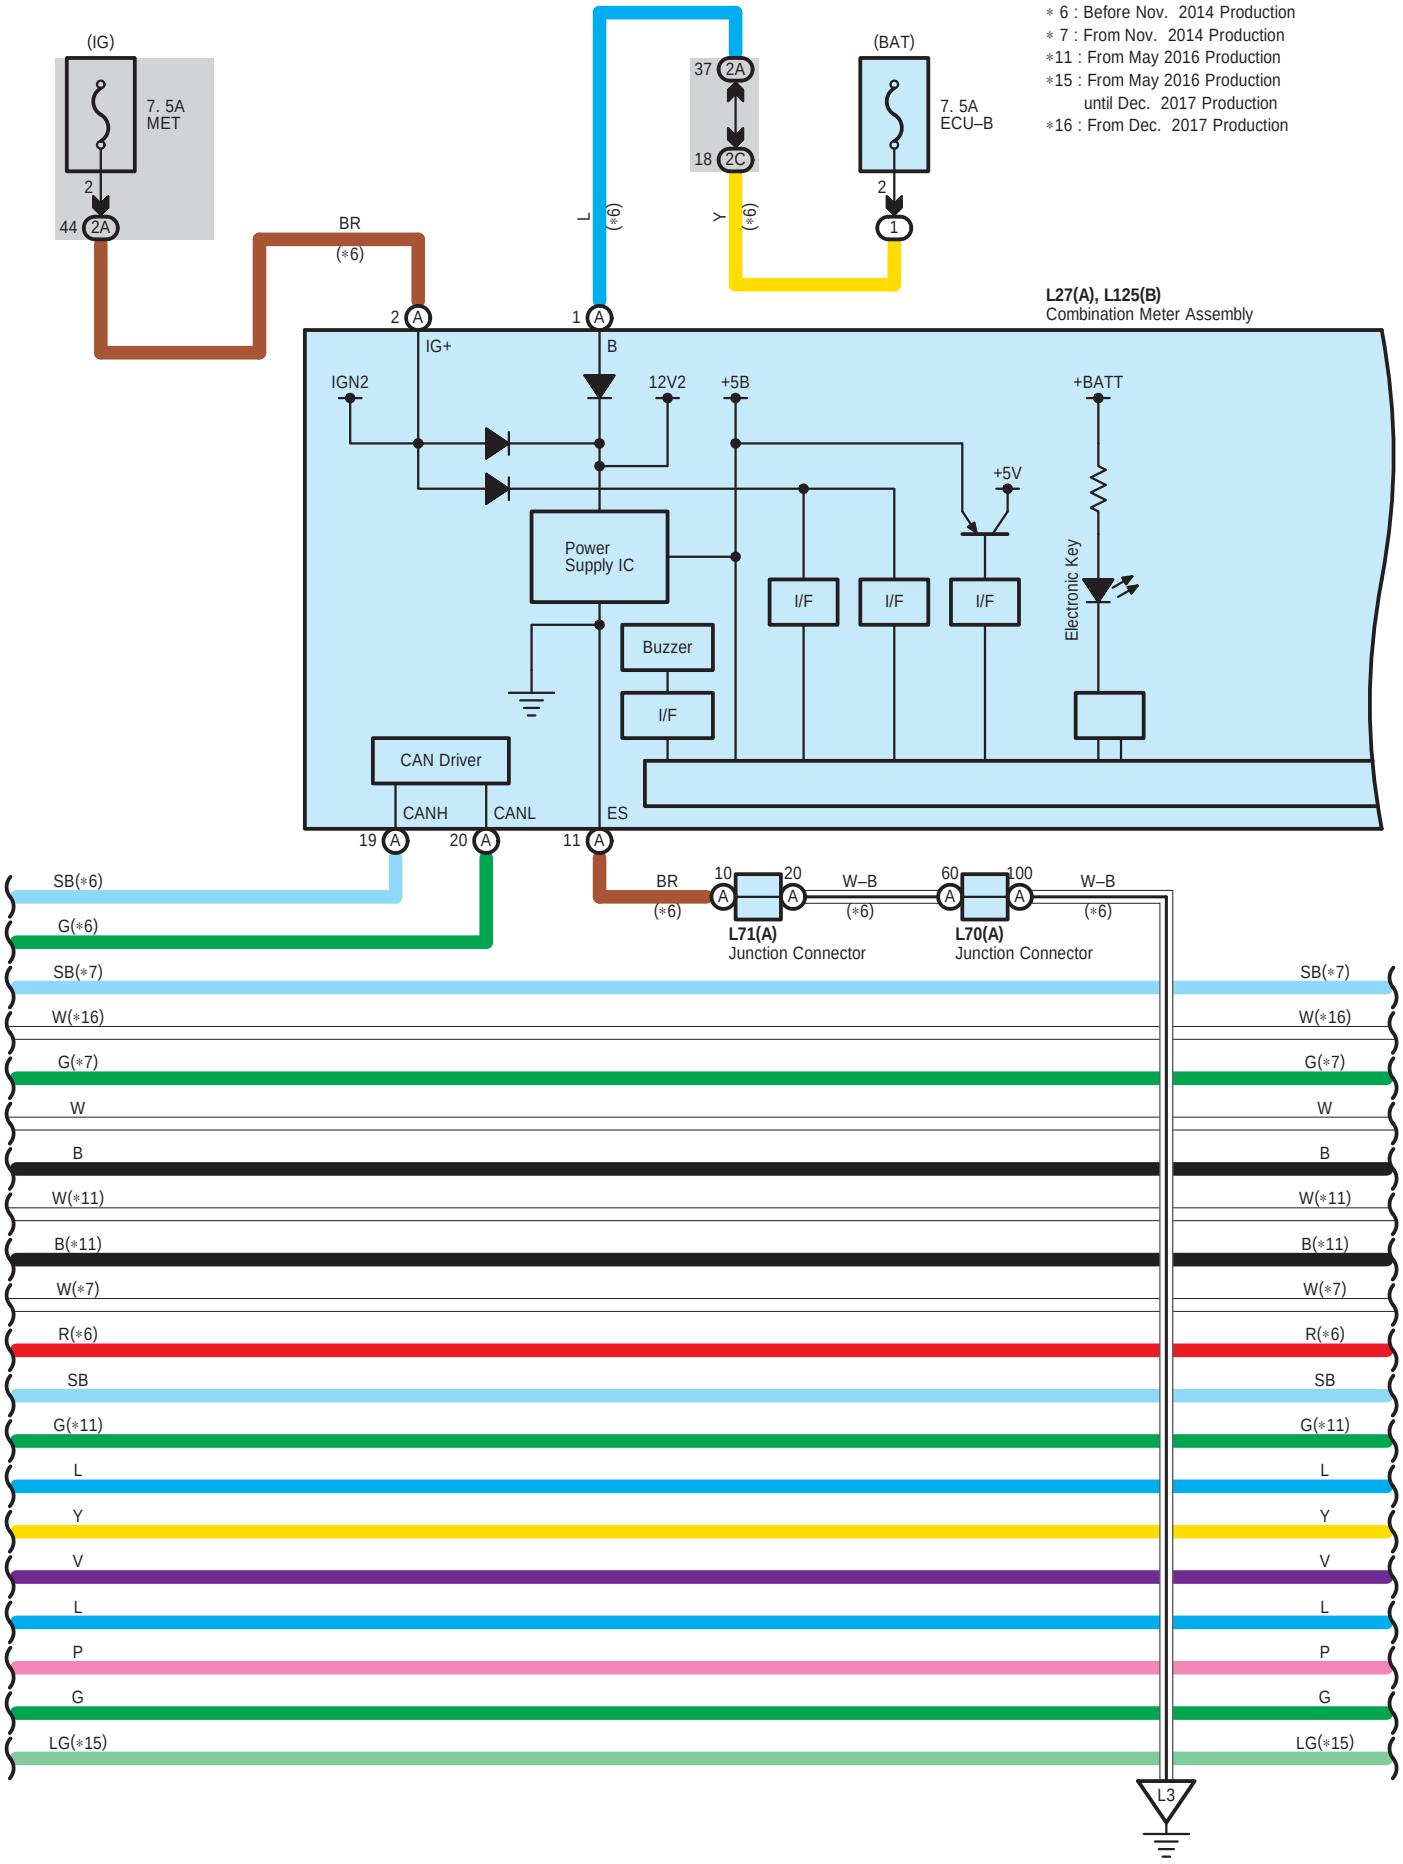
∗6 : Before Nov. 2014 Production
∗7 : From Nov. 2014 Production
∗11 : From May 2016 Production
∗15 : From May 2016 Production until Dec. 2017 Production
∗16 : From Dec. 2017 Production
(IG)
7. 5A MET
(BAT)
7. 5A ECU–B
L27(A), L125(B)
Combination Meter Assembly
IG+
B
IGN2
12V2
+5B
+BATT
+5V
Power Supply IC
I/F
Buzzer
Electronic Key
CAN Driver
CANH
CANL
ES
L71(A)
Junction Connector
L70(A)
Junction Connector
SB(∗6)
G(∗6)
BR (∗6)
W–B (∗6)
SB(∗7)
W(∗16)
G(∗7)
W
B
W(∗11)
B(∗11)
W(∗7)
R(∗6)
SB
G(∗11)
L
Y
V
P
G
LG(∗15)
L3

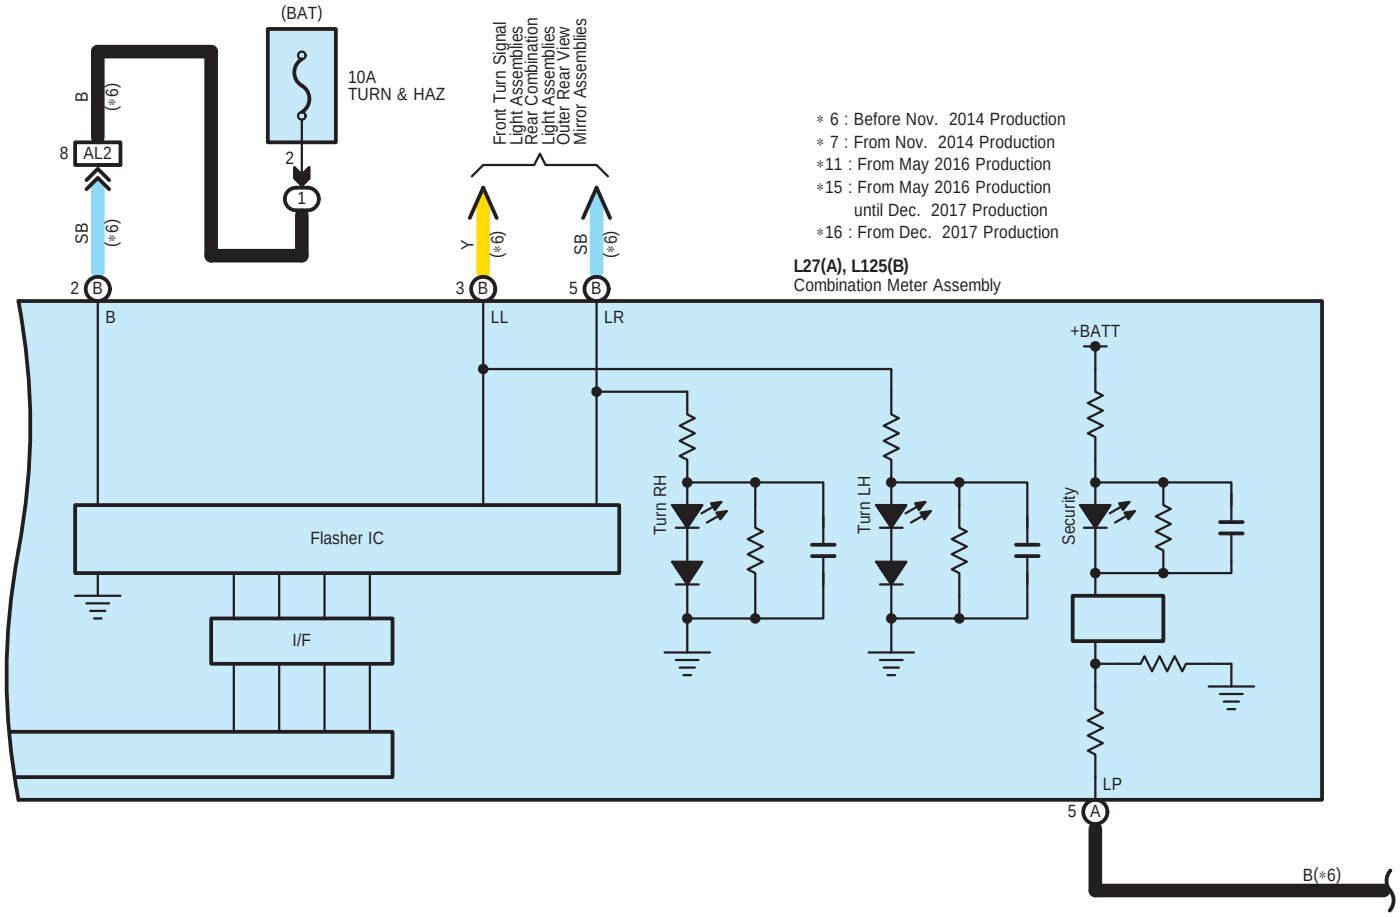

(BAT)
10A
TURN & HAZ
B
(*6)
8
AL2
2
1
SB
(*6)
Front Turn Signal Light Assemblies
Rear Combination Light Assemblies
Outer Rear View Mirror Assemblies
Y
(*6)
SB
(*6)
* 6 : Before Nov. 2014 Production
* 7 : From Nov. 2014 Production
*11 : From May 2016 Production
*15 : From May 2016 Production until Dec. 2017 Production
*16 : From Dec. 2017 Production
L27(A), L125(B)
Combination Meter Assembly
2 B
3 B
5 B
B
LL
LR
+BATT
Flasher IC
I/F
Turn RH
Turn LH
Security
LP
5 A
B(*6)

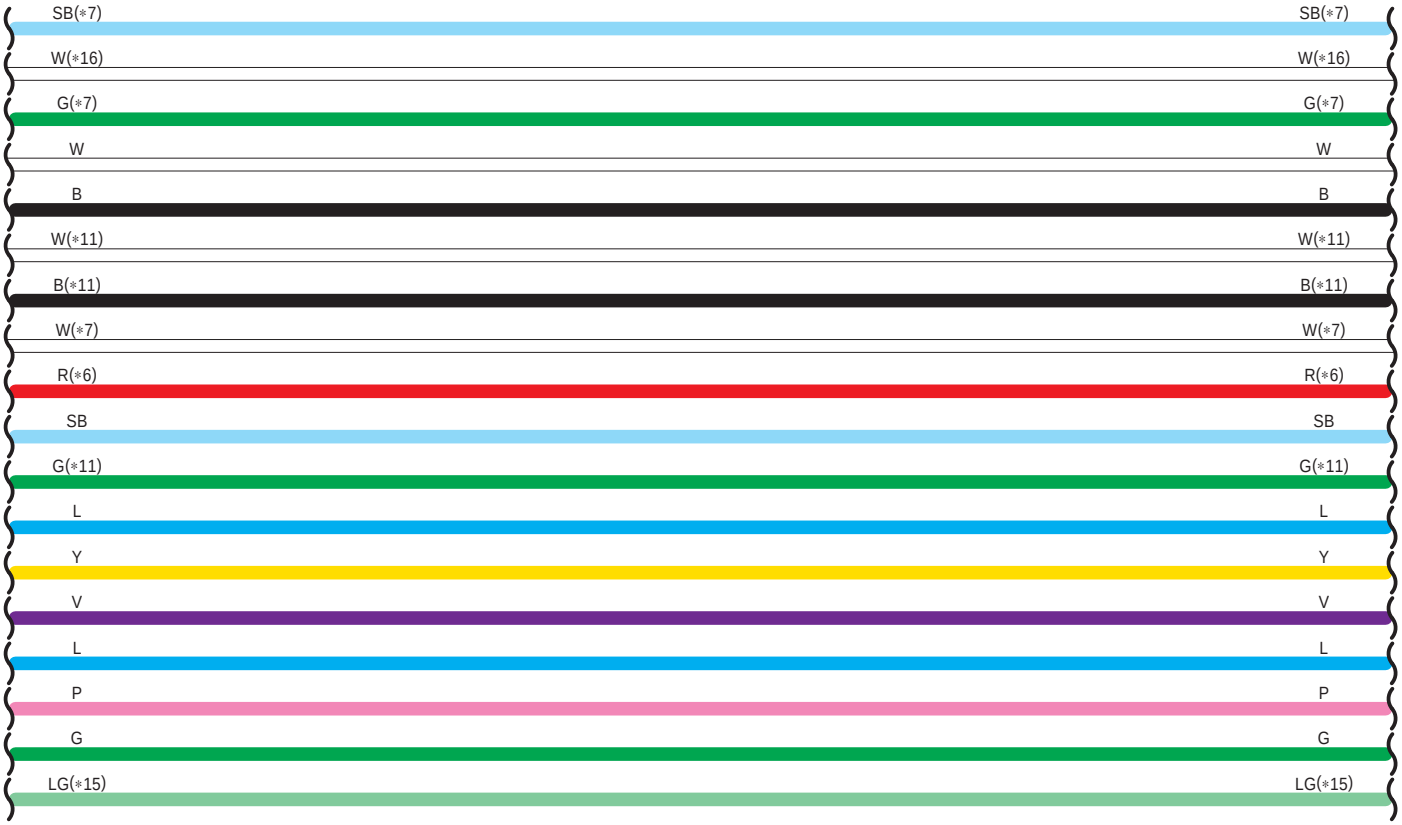

SB(*7)
W(*16)
G(*7)
W
B
W(*11)
B(*11)
W(*7)
R(*6)
SB
G(*11)
L
Y
V
L
P
G
LG(*15)

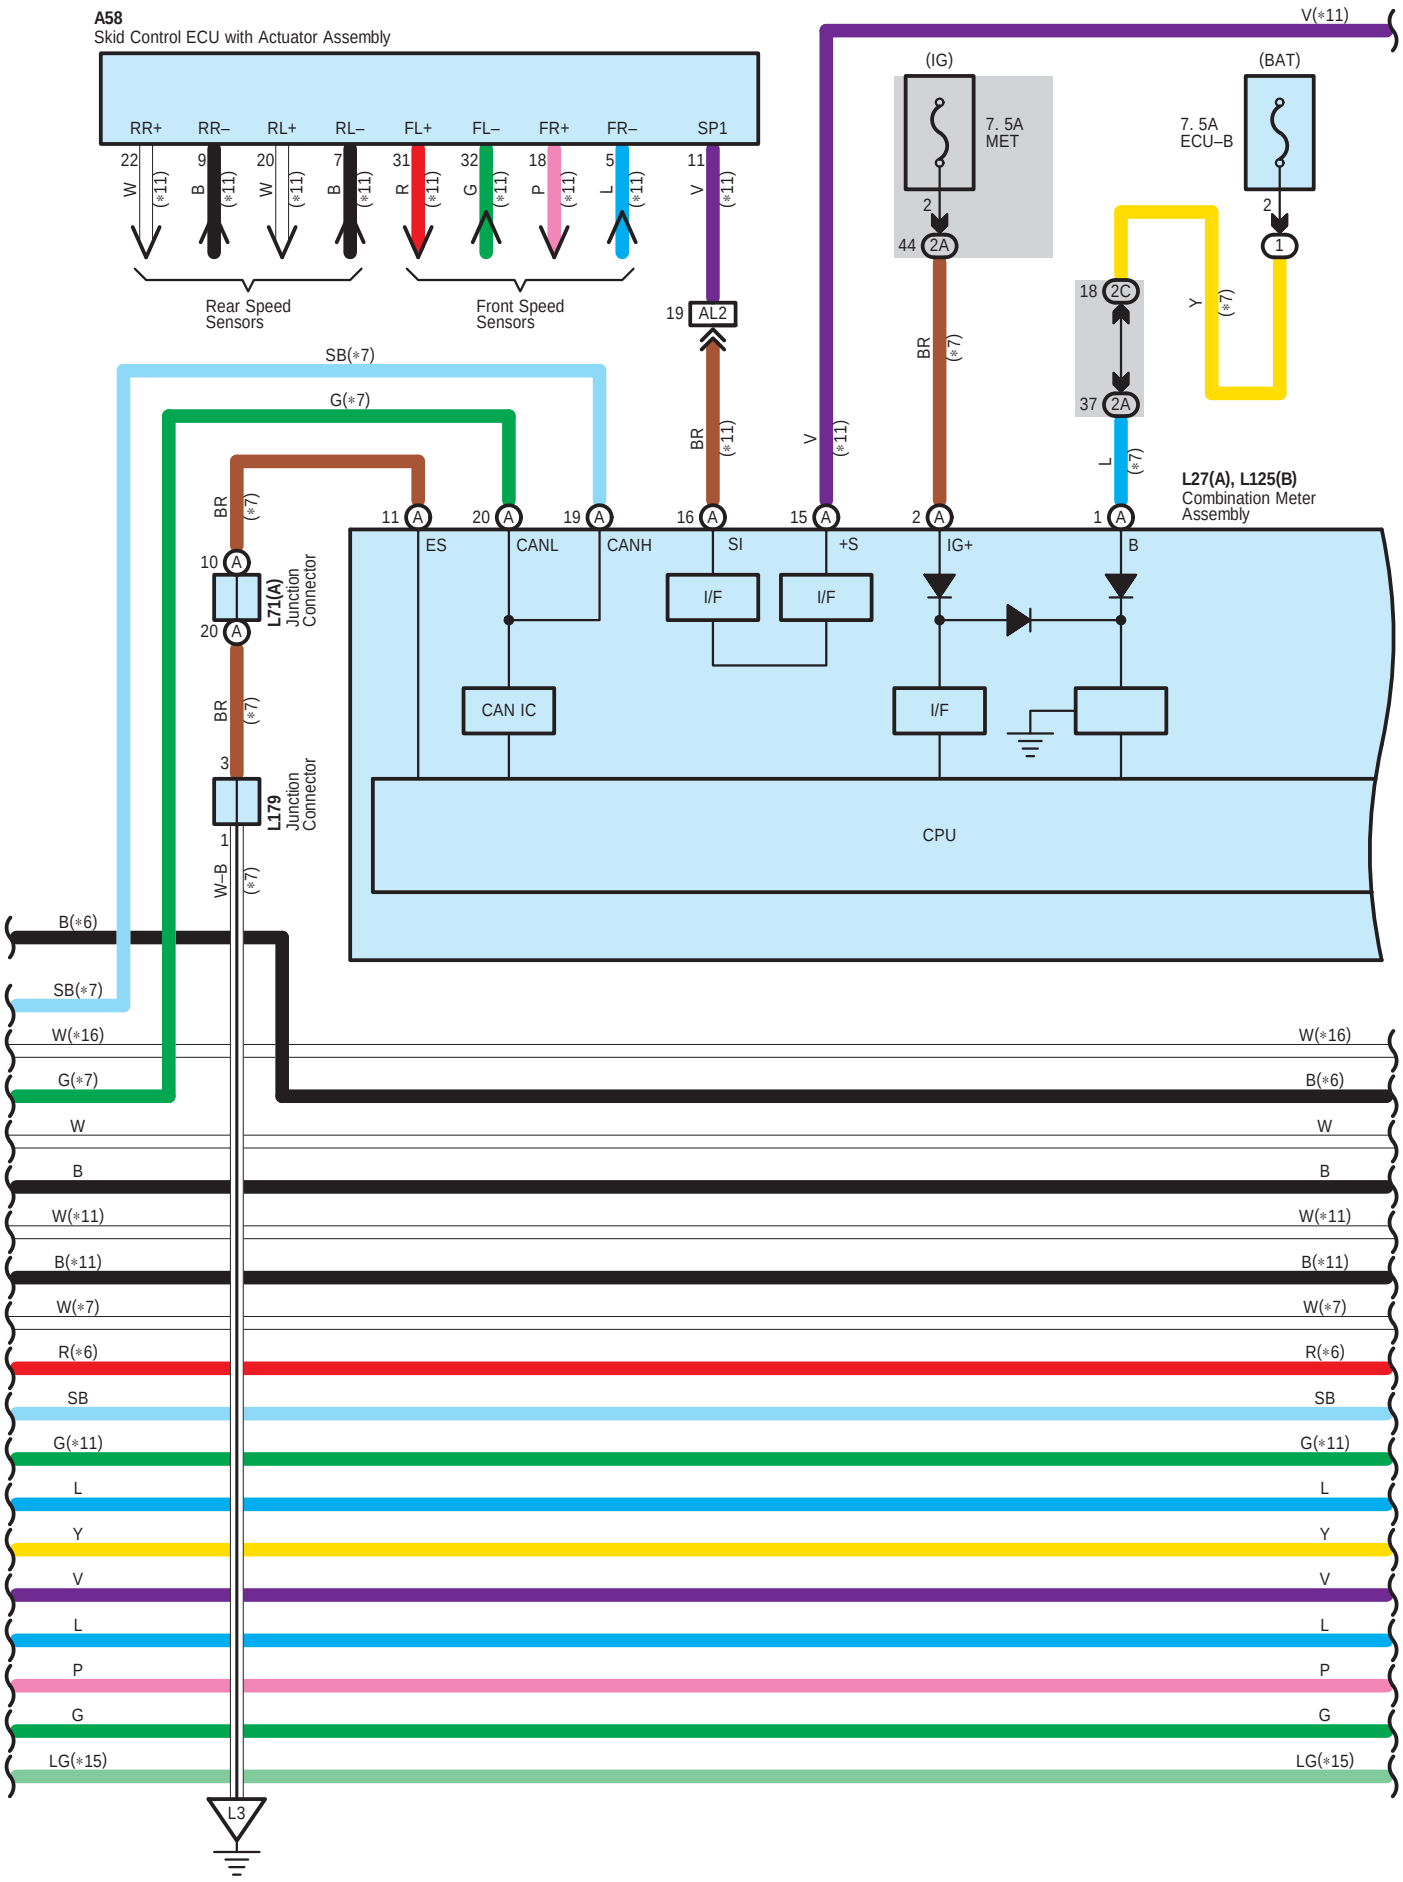

A58
Skid Control ECU with Actuator Assembly
RR+
RR–
RL+
RL–
FL+
FL–
FR+
FR–
SP1
Rear Speed Sensors
Front Speed Sensors
V(*11)
(IG)
7. 5A MET
(BAT)
7. 5A ECU–B
SB(*7)
G(*7)
BR (*7)
BR (*11)
V (*11)
L (*7)
Y (*7)
L27(A), L125(B)
Combination Meter Assembly
ES
CANL
CANH
SI
+S
IG+
B
I/F
CAN IC
CPU
L71(A) Junction Connector
L179 Junction Connector
W–B (*7)
B(*6)
W(*16)
W
B
W(*11)
B(*11)
W(*7)
R(*6)
SB
G(*11)
L
Y
V
P
G
LG(*15)
L3

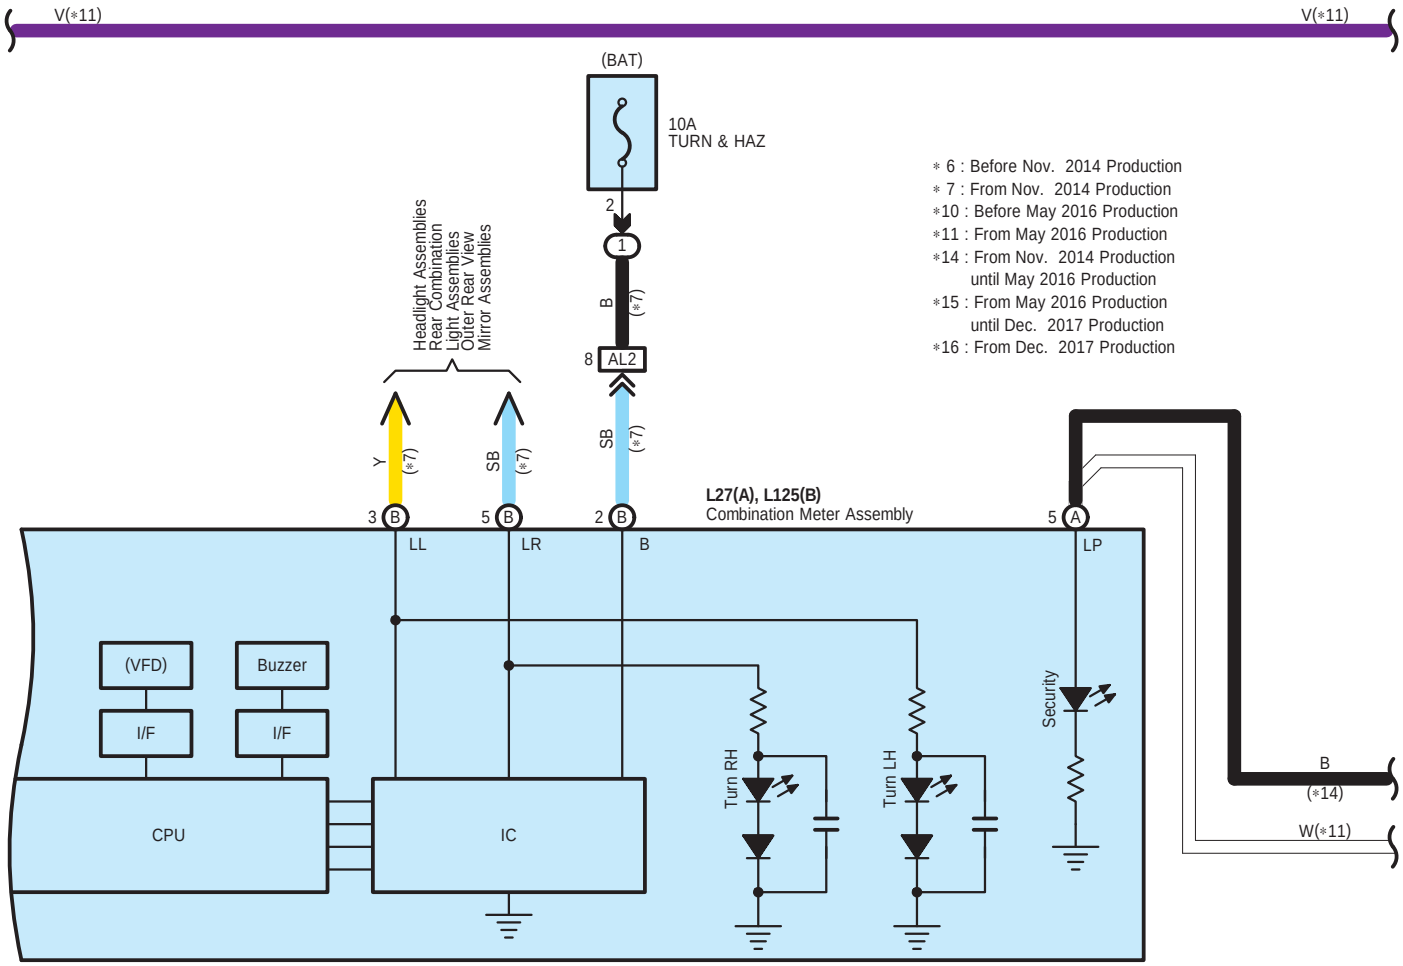

V(∗11)
V(∗11)
(BAT)
10A
TURN & HAZ
2
1
B
(∗7)
8
AL2
SB
(∗7)
Headlight Assemblies
Rear Combination
Light Assemblies
Outer Rear View
Mirror Assemblies
Y
(∗7)
SB
(∗7)
∗ 6 : Before Nov. 2014 Production
∗ 7 : From Nov. 2014 Production
∗10 : Before May 2016 Production
∗11 : From May 2016 Production
∗14 : From Nov. 2014 Production
until May 2016 Production
∗15 : From May 2016 Production
until Dec. 2017 Production
∗16 : From Dec. 2017 Production
L27(A), L125(B)
Combination Meter Assembly
3 B
5 B
2 B
5 A
LL
LR
B
LP
(VFD)
Buzzer
I/F
I/F
CPU
IC
Turn RH
Turn LH
Security
B
(∗14)
W(∗11)



W(∗16)
W(∗16)
B(∗6)
B(∗6)
W
W
B
B
W(∗11)
W(∗11)
B(∗11)
B(∗11)
W(∗7)
W(∗7)
R(∗6)
R(∗6)
SB
SB
G(∗11)
G(∗11)
L
L
Y
Y
V
V
L
L
P
P
G
G
LG(∗15)
LG(∗15)

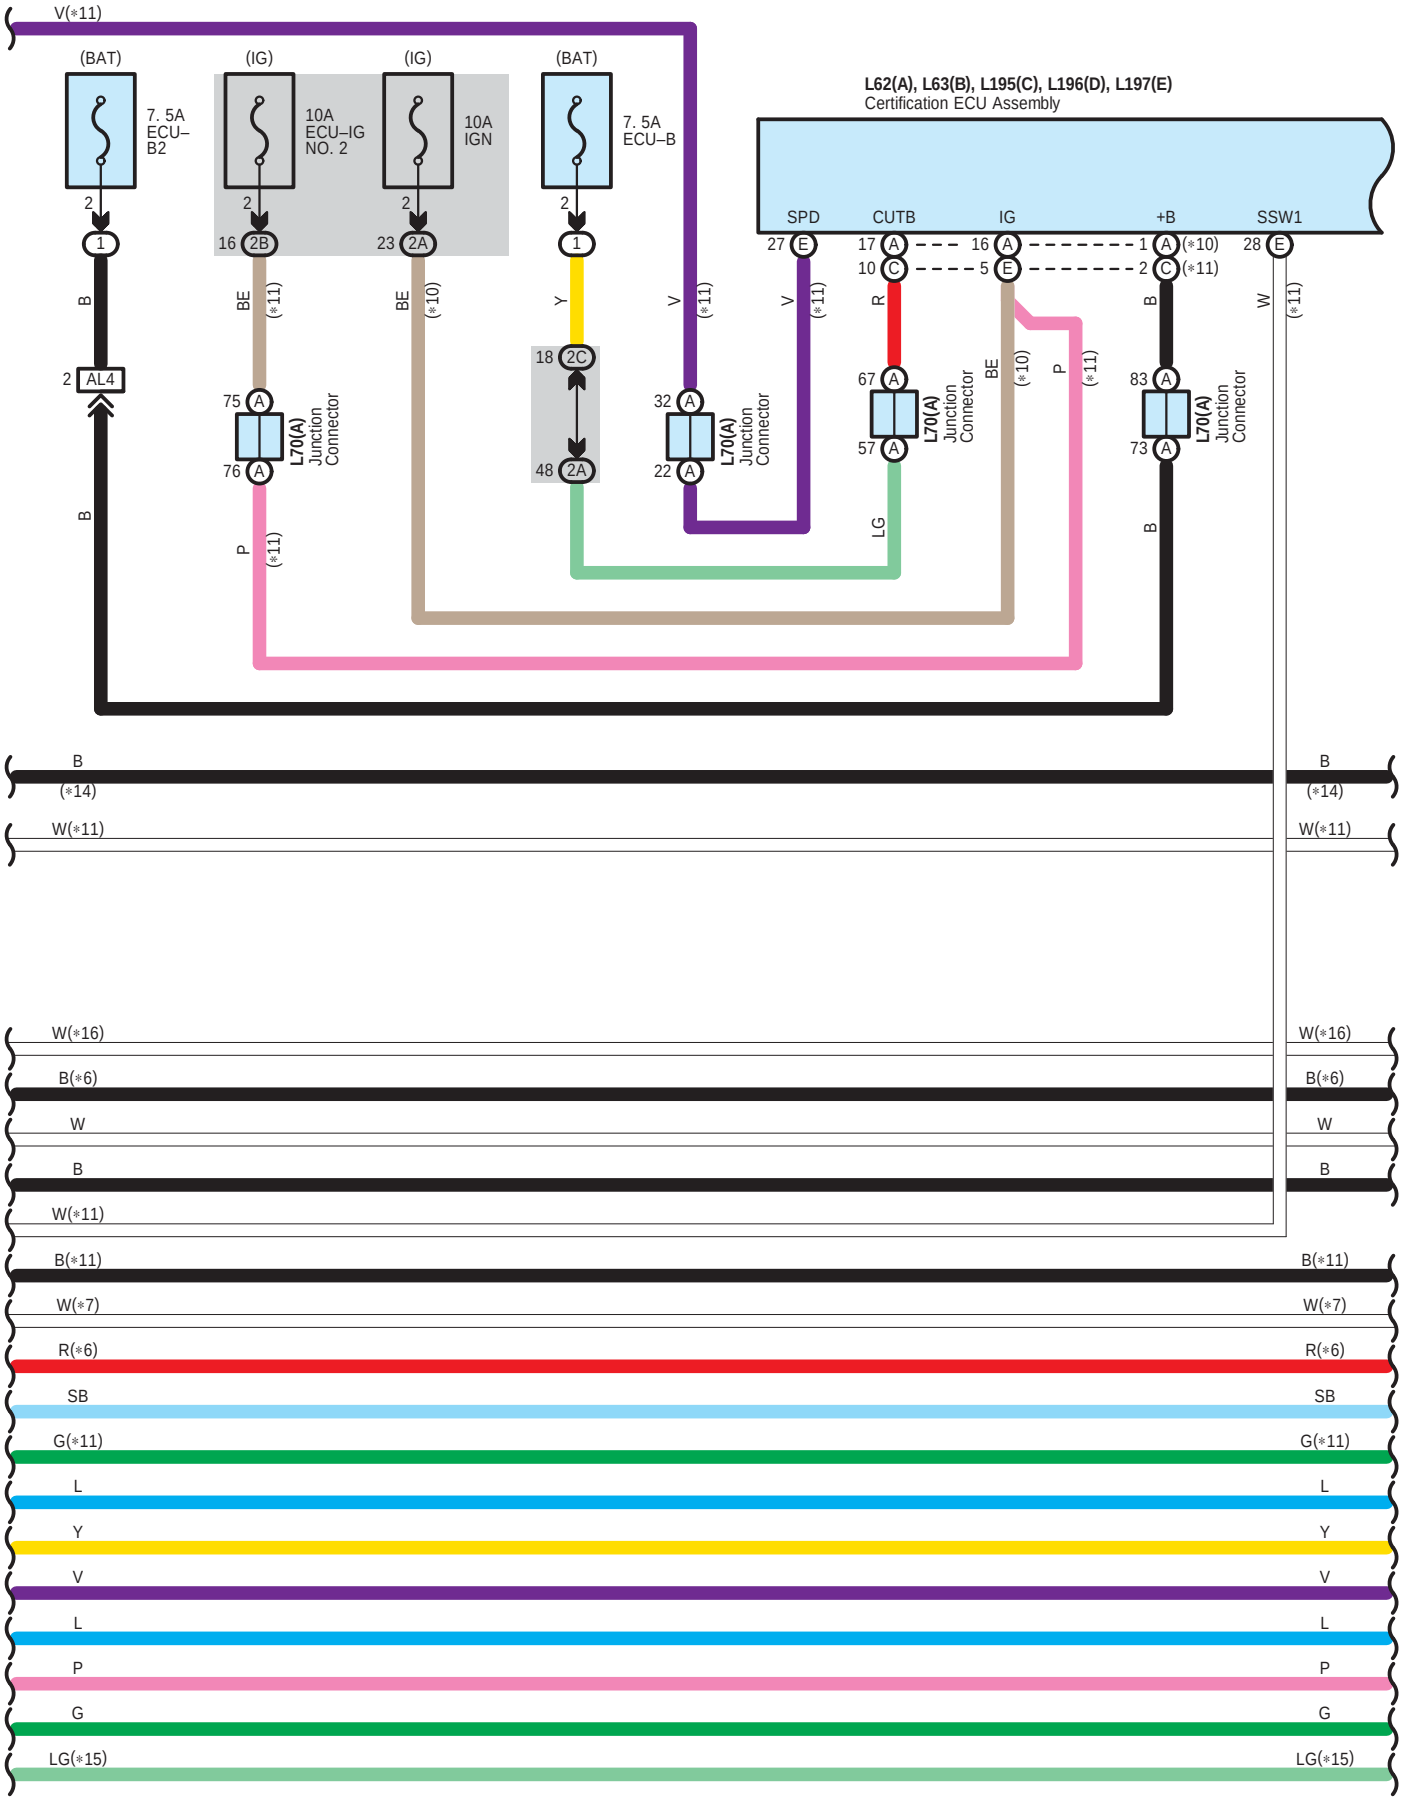
V(*11)
(BAT)
(IG)
(IG)
(BAT)
7. 5A ECU–B2
10A ECU–IG NO. 2
10A IGN
7. 5A ECU–B
L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
SPD
CUTB
IG
+B
SSW1
AL4
L70(A) Junction Connector
B
BE
P
Y
V
R
LG
W
B(*14)
W(*11)
W(*16)
B(*6)
W
B
B(*11)
W(*7)
R(*6)
SB
G(*11)
L
Y
V
L
P
G
LG(*15)

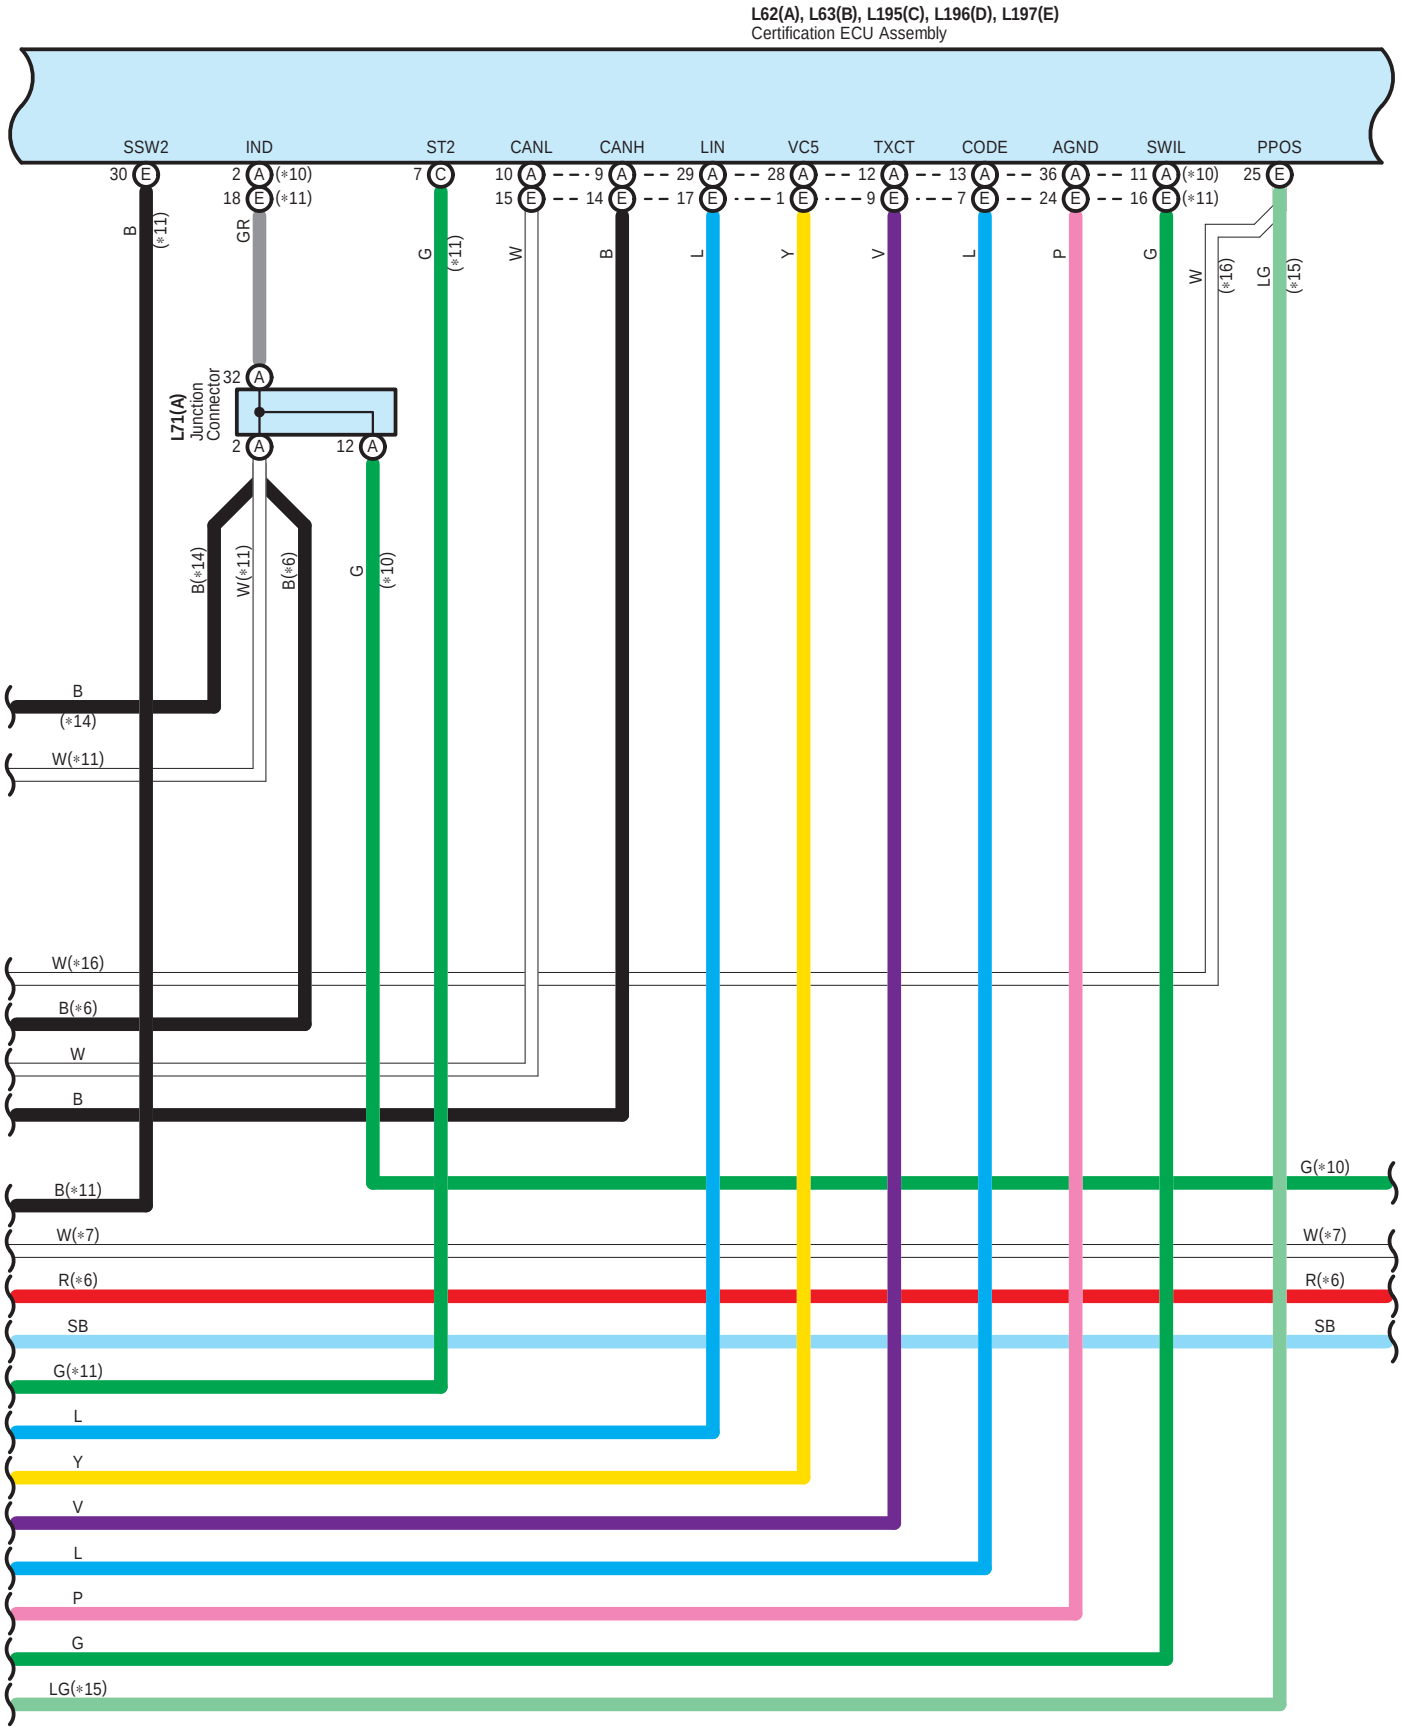

L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
SSW2
IND
ST2
CANL
CANH
LIN
VC5
TXCT
CODE
AGND
SWIL
PPOS
30 E
2 A (*10)
18 E (*11)
7 C
10 A
15 E
9 A
14 E
29 A
17 E
28 A
1 E
12 A
9 E
13 A
7 E
36 A
24 E
11 A (*10)
16 E (*11)
25 E
B (*11)
GR
G (*11)
W
B
L
Y
V
L
P
G
W (*16)
LG (*15)
L71(A) Junction Connector
32 A
2 A
12 A
B(*14)
W(*11)
B(*6)
G (*10)
B (*14)
W(*11)
W(*16)
B(*6)
W
B
B(*11)
W(*7)
R(*6)
SB
G(*11)
L
Y
V
L
P
G
LG(*15)
G(*10)
W(*7)
R(*6)
SB

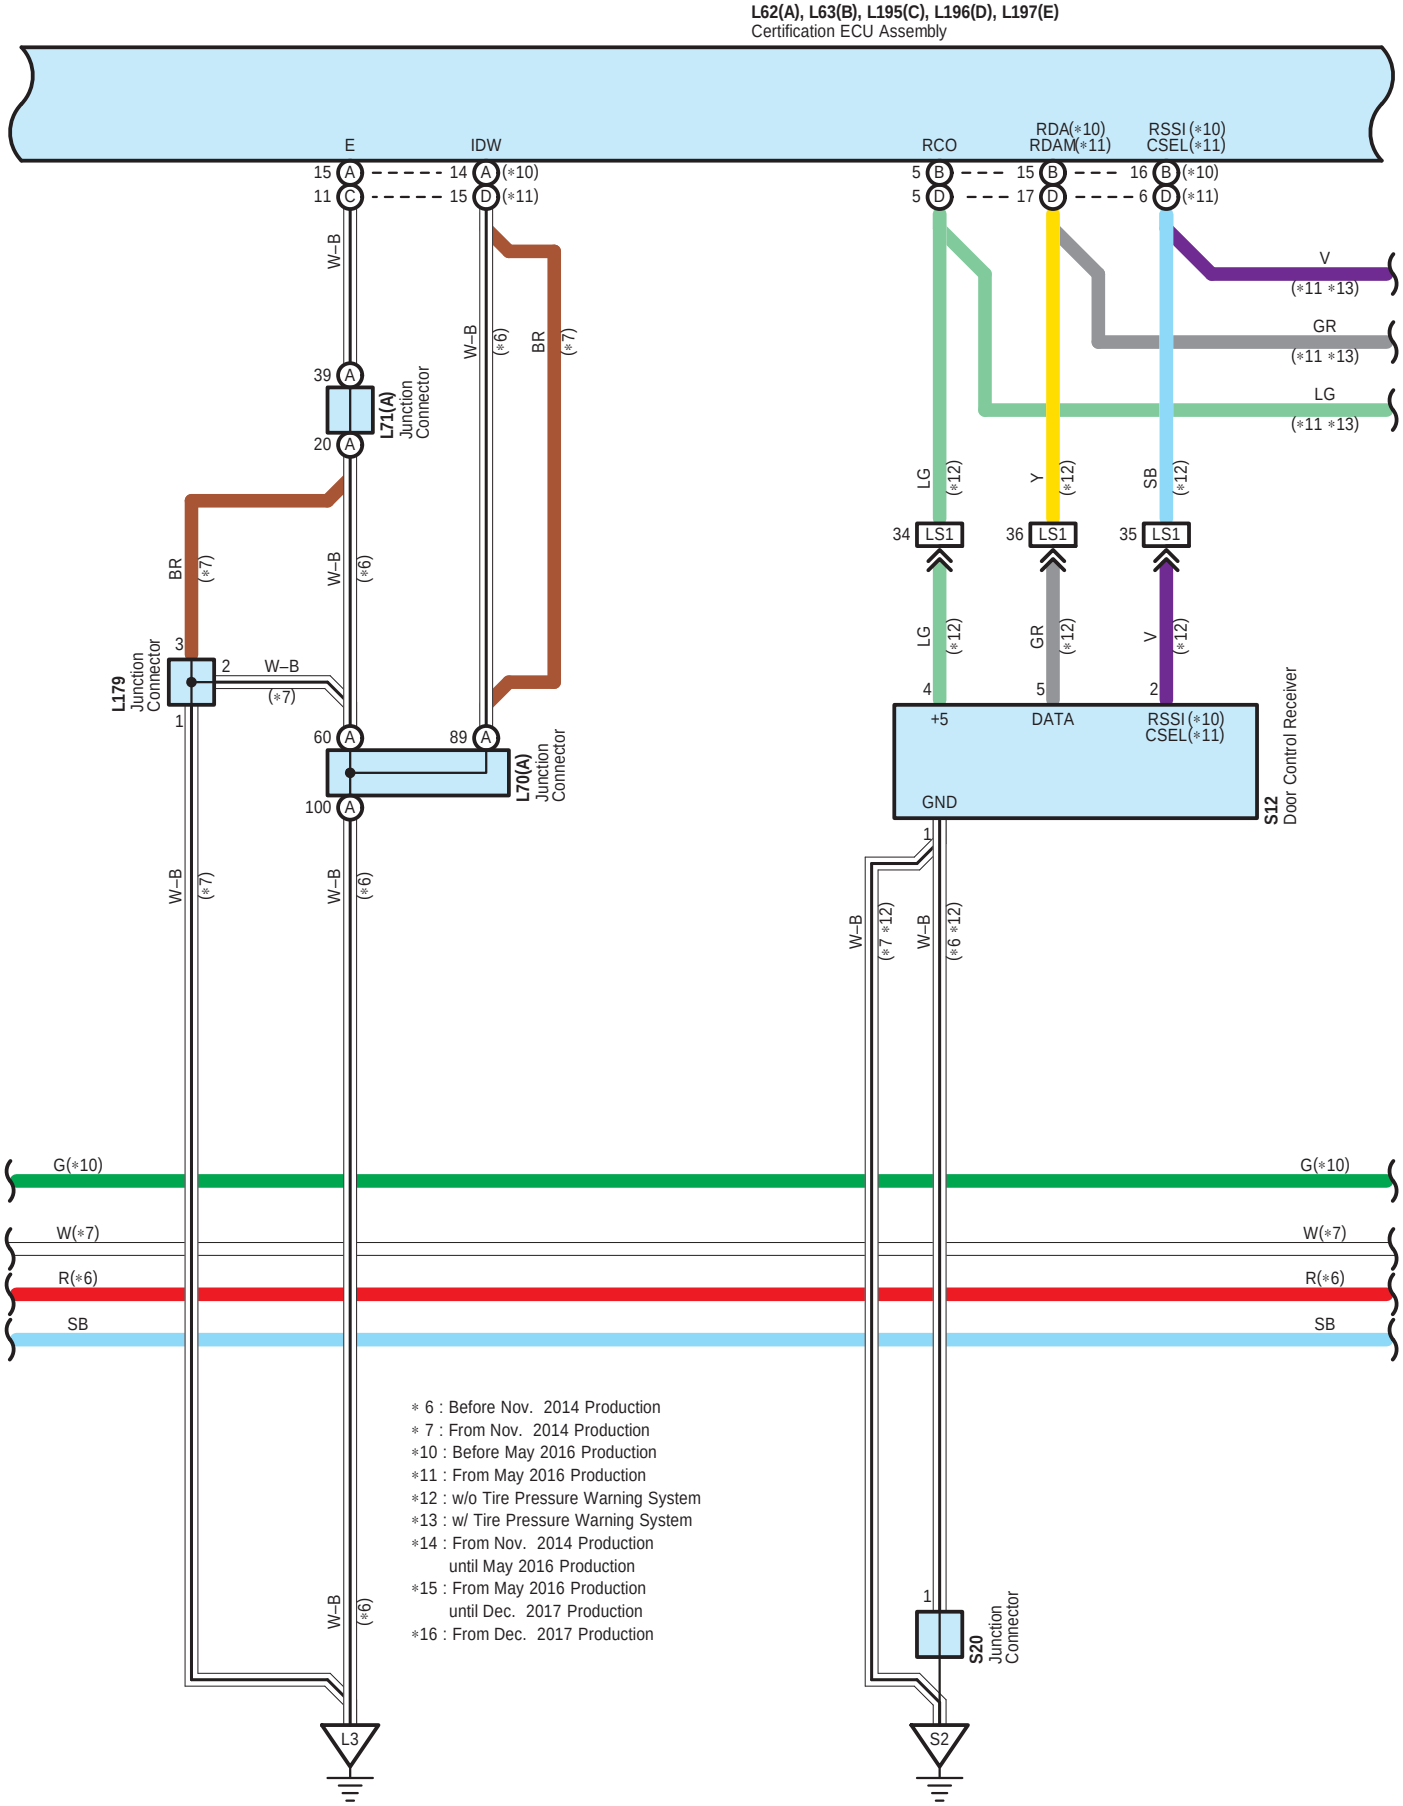
L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
E
IDW
RCO
RDA(∗10)
RDAM(∗11)
RSSI(∗10)
CSEL(∗11)
15 A
11 C
14 A (∗10)
15 D (∗11)
5 B
5 D
15 B
17 D
16 B (∗10)
6 D (∗11)
W–B
BR (∗7)
W–B (∗6)
39 A
20 A
L71(A) Junction Connector
V (∗11 ∗13)
GR (∗11 ∗13)
LG (∗11 ∗13)
LG (∗12)
Y (∗12)
SB (∗12)
34 LS1
36 LS1
35 LS1
L179 Junction Connector
3
2
1
W–B (∗7)
LG (∗12)
GR (∗12)
V (∗12)
4
5
2
60 A
89 A
100 A
L70(A) Junction Connector
+5
DATA
RSSI(∗10)
CSEL(∗11)
GND
S12 Door Control Receiver
W–B (∗7)
W–B (∗6)
W–B (∗7 ∗12)
W–B (∗6 ∗12)
G(∗10)
W(∗7)
R(∗6)
SB
∗ 6 : Before Nov. 2014 Production
∗ 7 : From Nov. 2014 Production
∗10 : Before May 2016 Production
∗11 : From May 2016 Production
∗12 : w/o Tire Pressure Warning System
∗13 : w/ Tire Pressure Warning System
∗14 : From Nov. 2014 Production until May 2016 Production
∗15 : From May 2016 Production until Dec. 2017 Production
∗16 : From Dec. 2017 Production
S20 Junction Connector
L3
S2

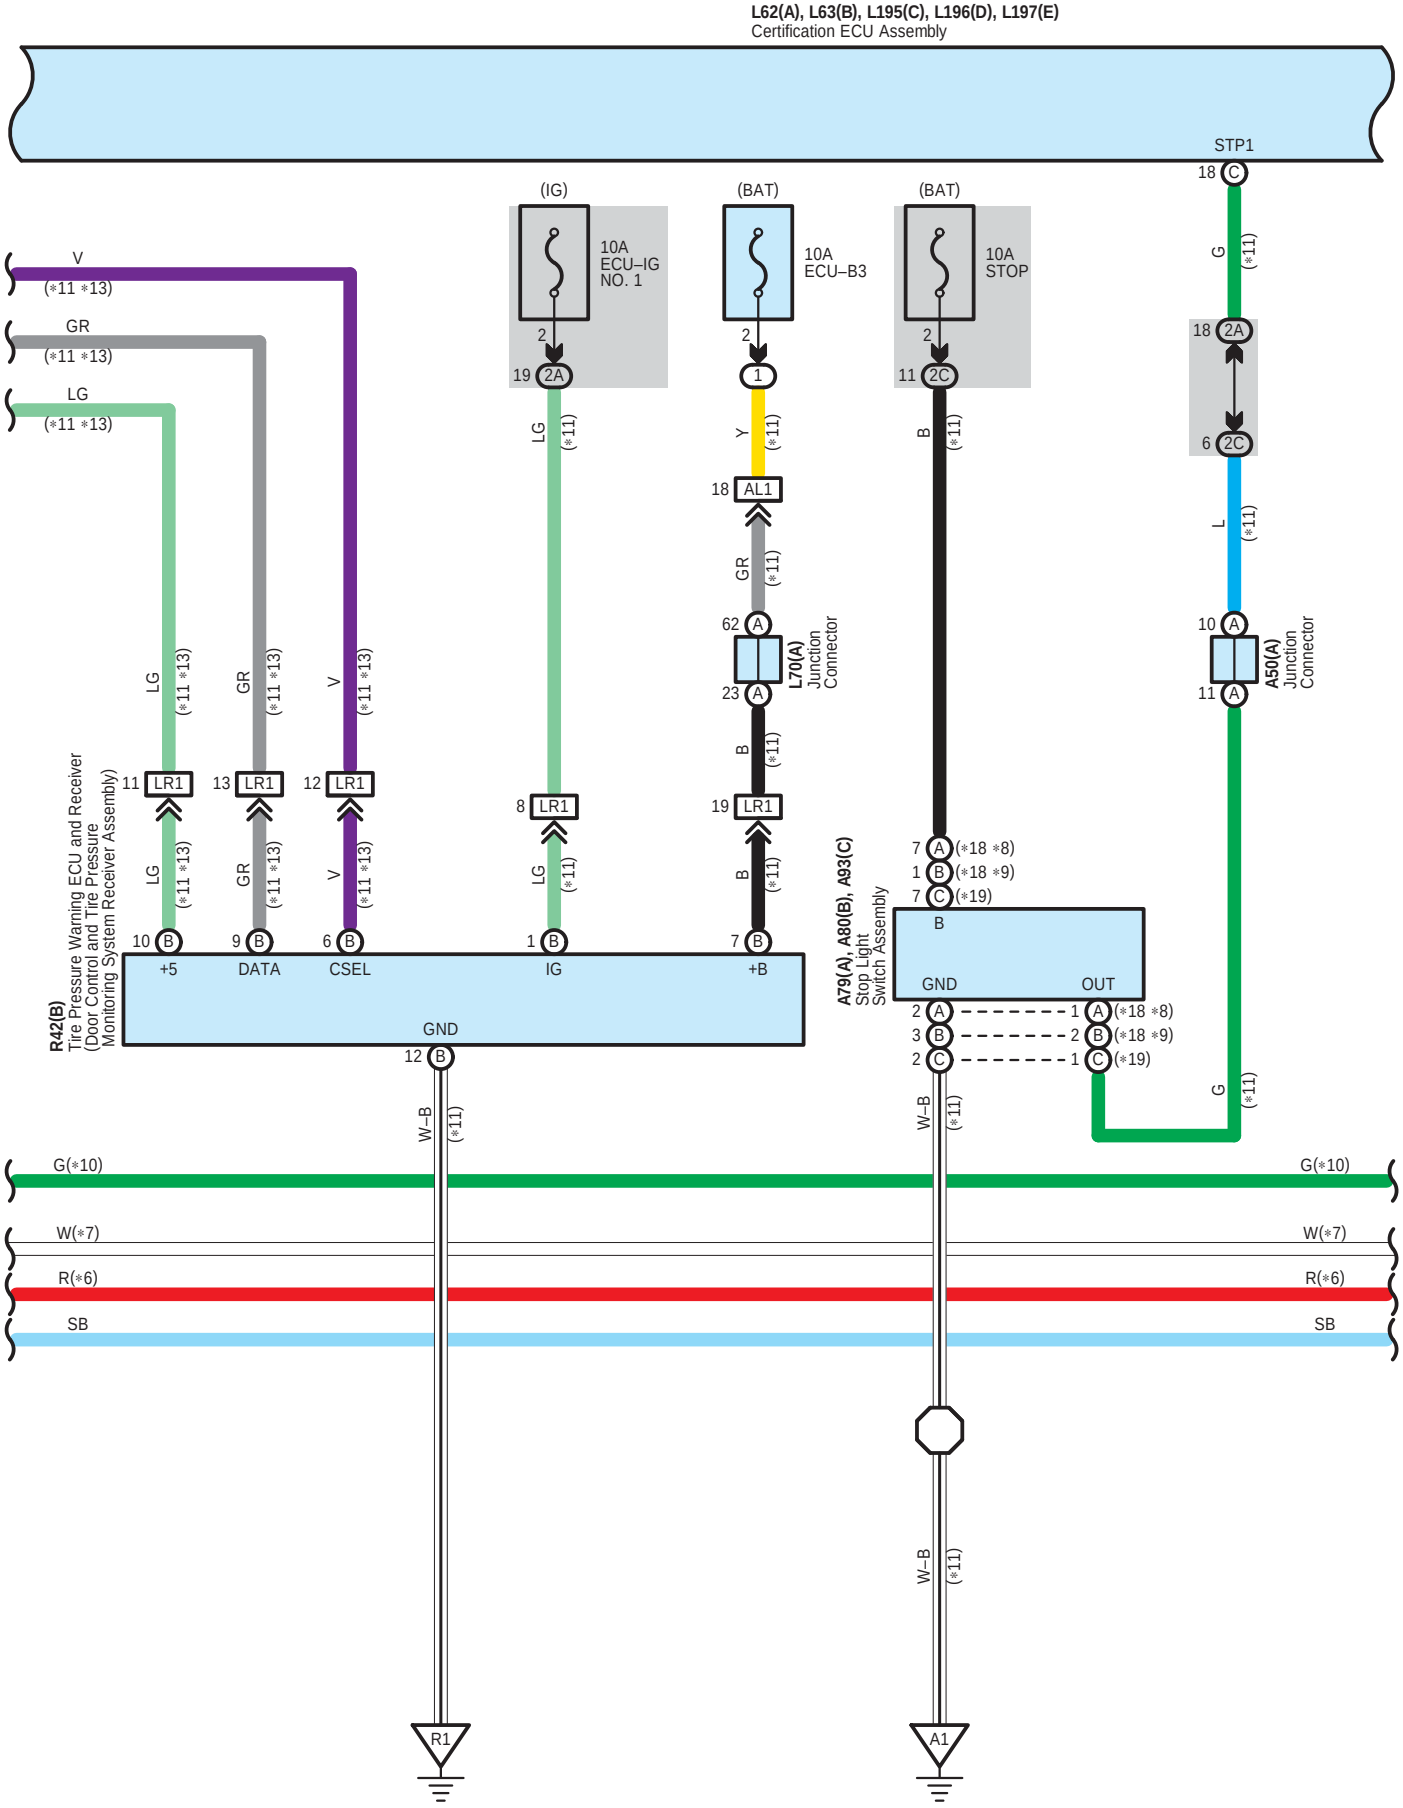

L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
(IG)
10A
ECU–IG
NO. 1
(BAT)
10A
ECU–B3
(BAT)
10A
STOP
STP1
V
(*11 *13)
GR
(*11 *13)
LG
(*11 *13)
LG
(*11)
Y
(*11)
B
(*11)
G
(*11)
L
(*11)
GR
(*11)
B
(*11)
B
(*11)
LG
(*11)
V
(*11 *13)
GR
(*11 *13)
LG
(*11 *13)
GR
(*11 *13)
V
(*11 *13)
R42(B)
Tire Pressure Warning ECU and Receiver
(Door Control and Tire Pressure
Monitoring System Receiver Assembly)
+5
DATA
CSEL
IG
+B
GND
L70(A)
Junction
Connector
A50(A)
Junction
Connector
A79(A), A80(B), A93(C)
Stop Light
Switch Assembly
GND
OUT
(*18 *8)
(*18 *9)
(*19)
W–B
(*11)
G(*10)
W(*7)
R(*6)
SB
R1
A1

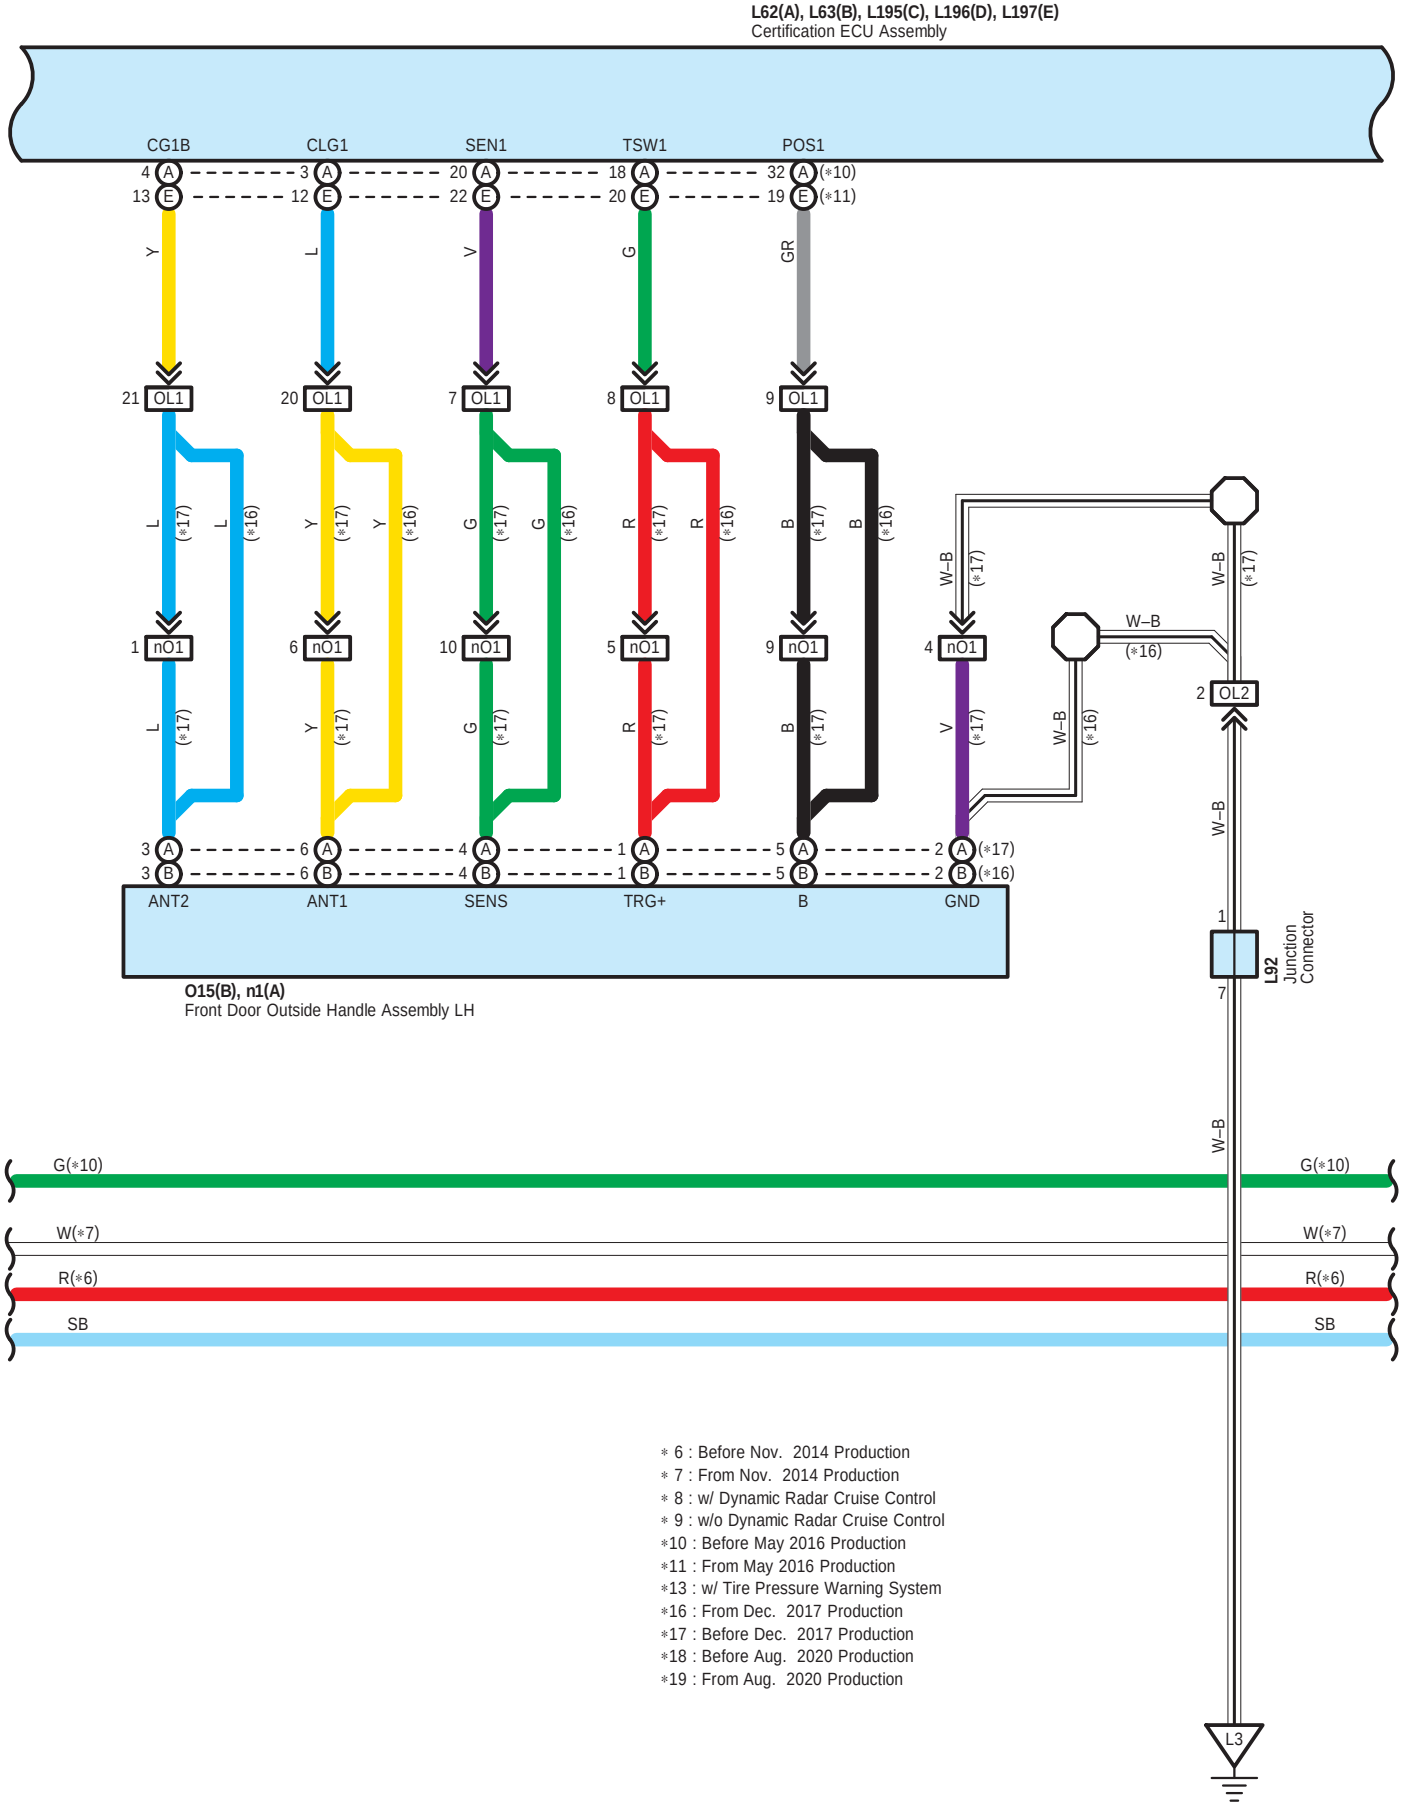



* 6 : Before Nov. 2014 Production
* 7 : From Nov. 2014 Production
* 8 : w/ Dynamic Radar Cruise Control
* 9 : w/o Dynamic Radar Cruise Control
*10 : Before May 2016 Production
*11 : From May 2016 Production
*13 : w/ Tire Pressure Warning System
*16 : From Dec. 2017 Production
*17 : Before Dec. 2017 Production
*18 : Before Aug. 2020 Production
*19 : From Aug. 2020 Production

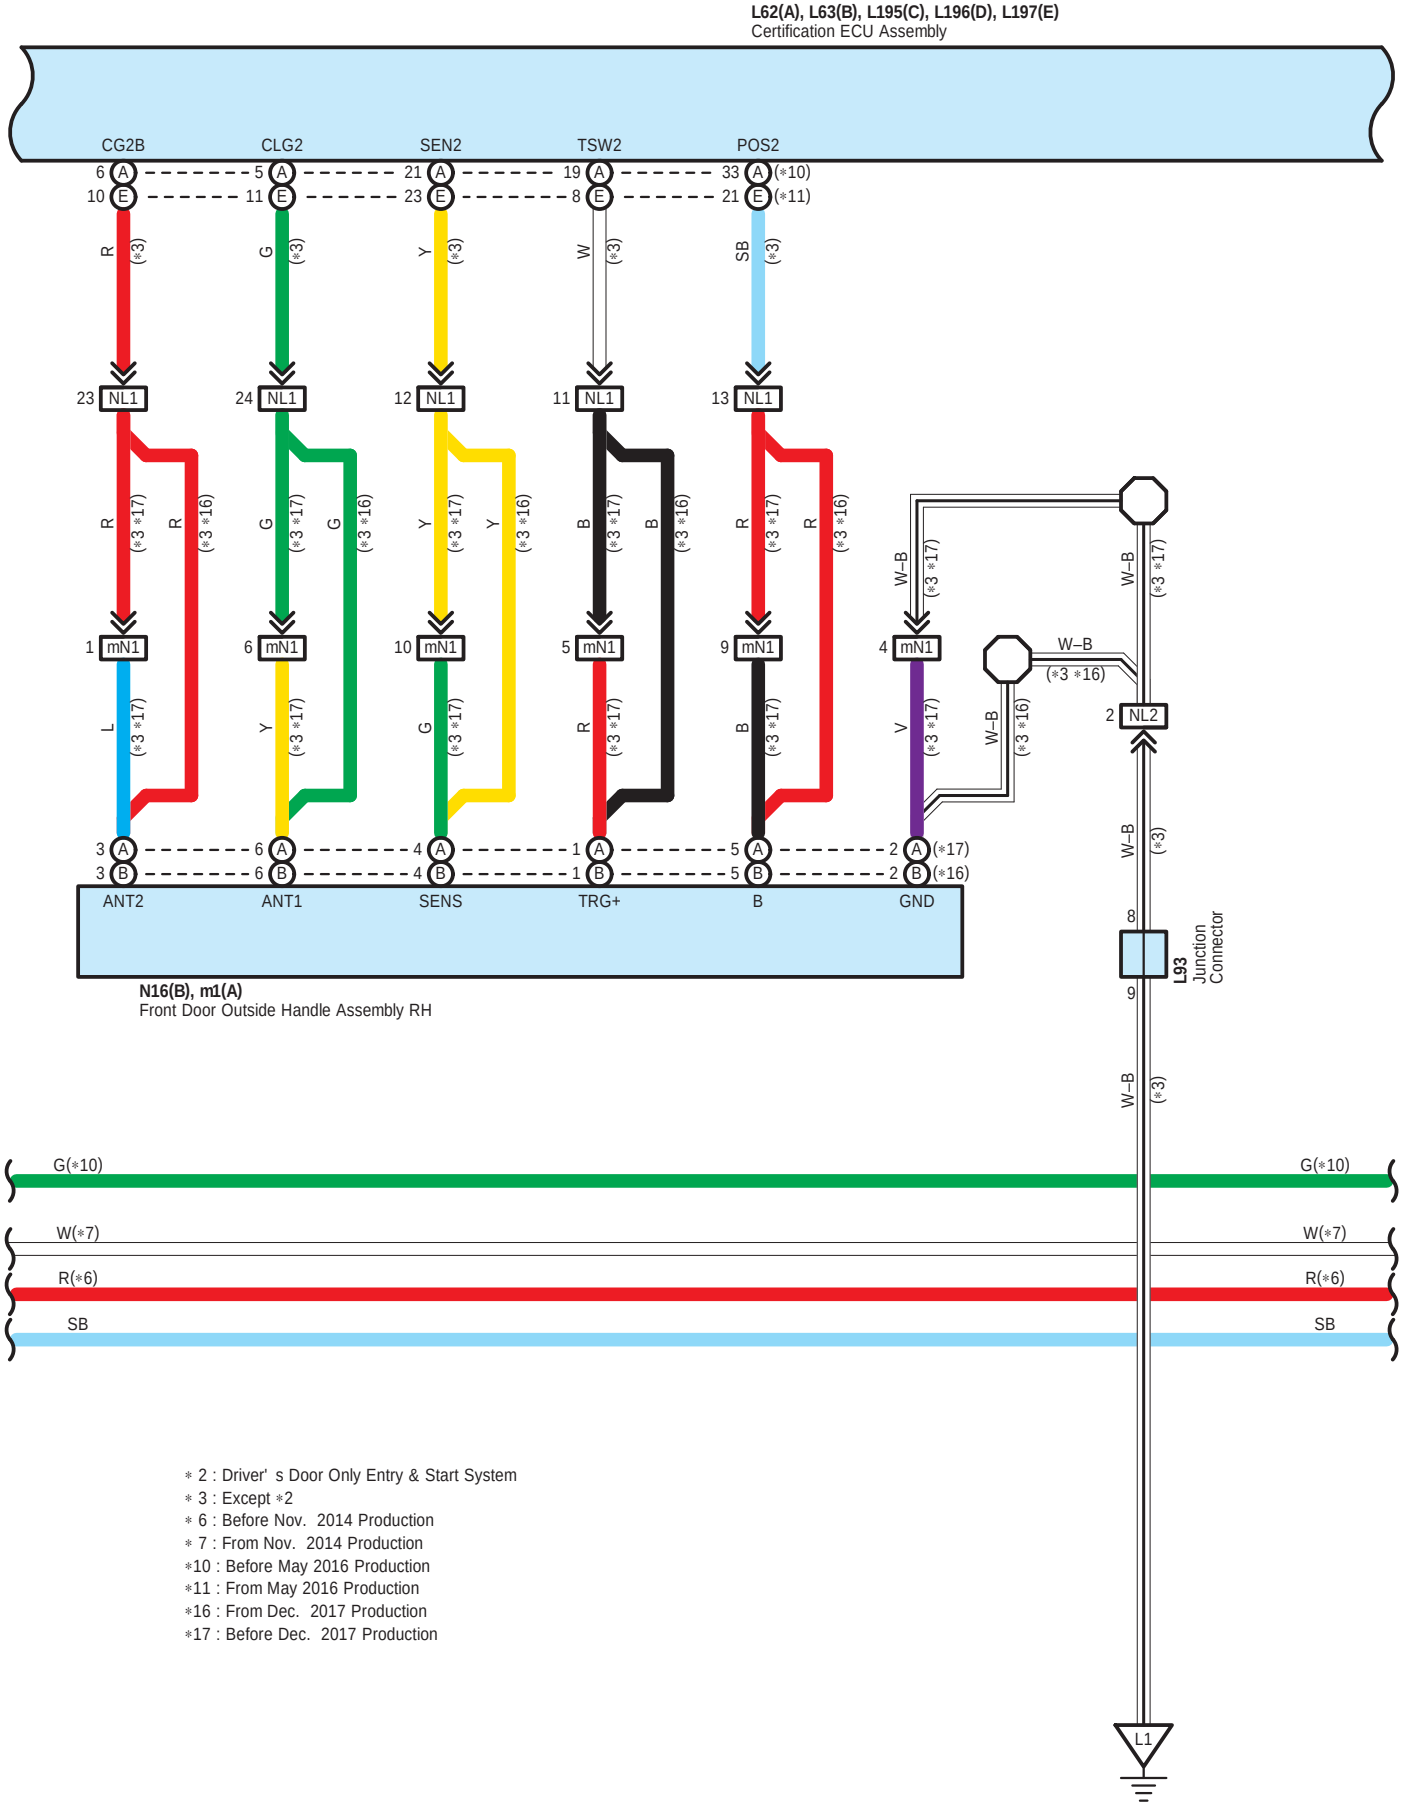



∗ 2 : Driver' s Door Only Entry & Start System
∗ 3 : Except ∗2
∗ 6 : Before Nov. 2014 Production
∗ 7 : From Nov. 2014 Production
∗10 : Before May 2016 Production
∗11 : From May 2016 Production
∗16 : From Dec. 2017 Production
∗17 : Before Dec. 2017 Production

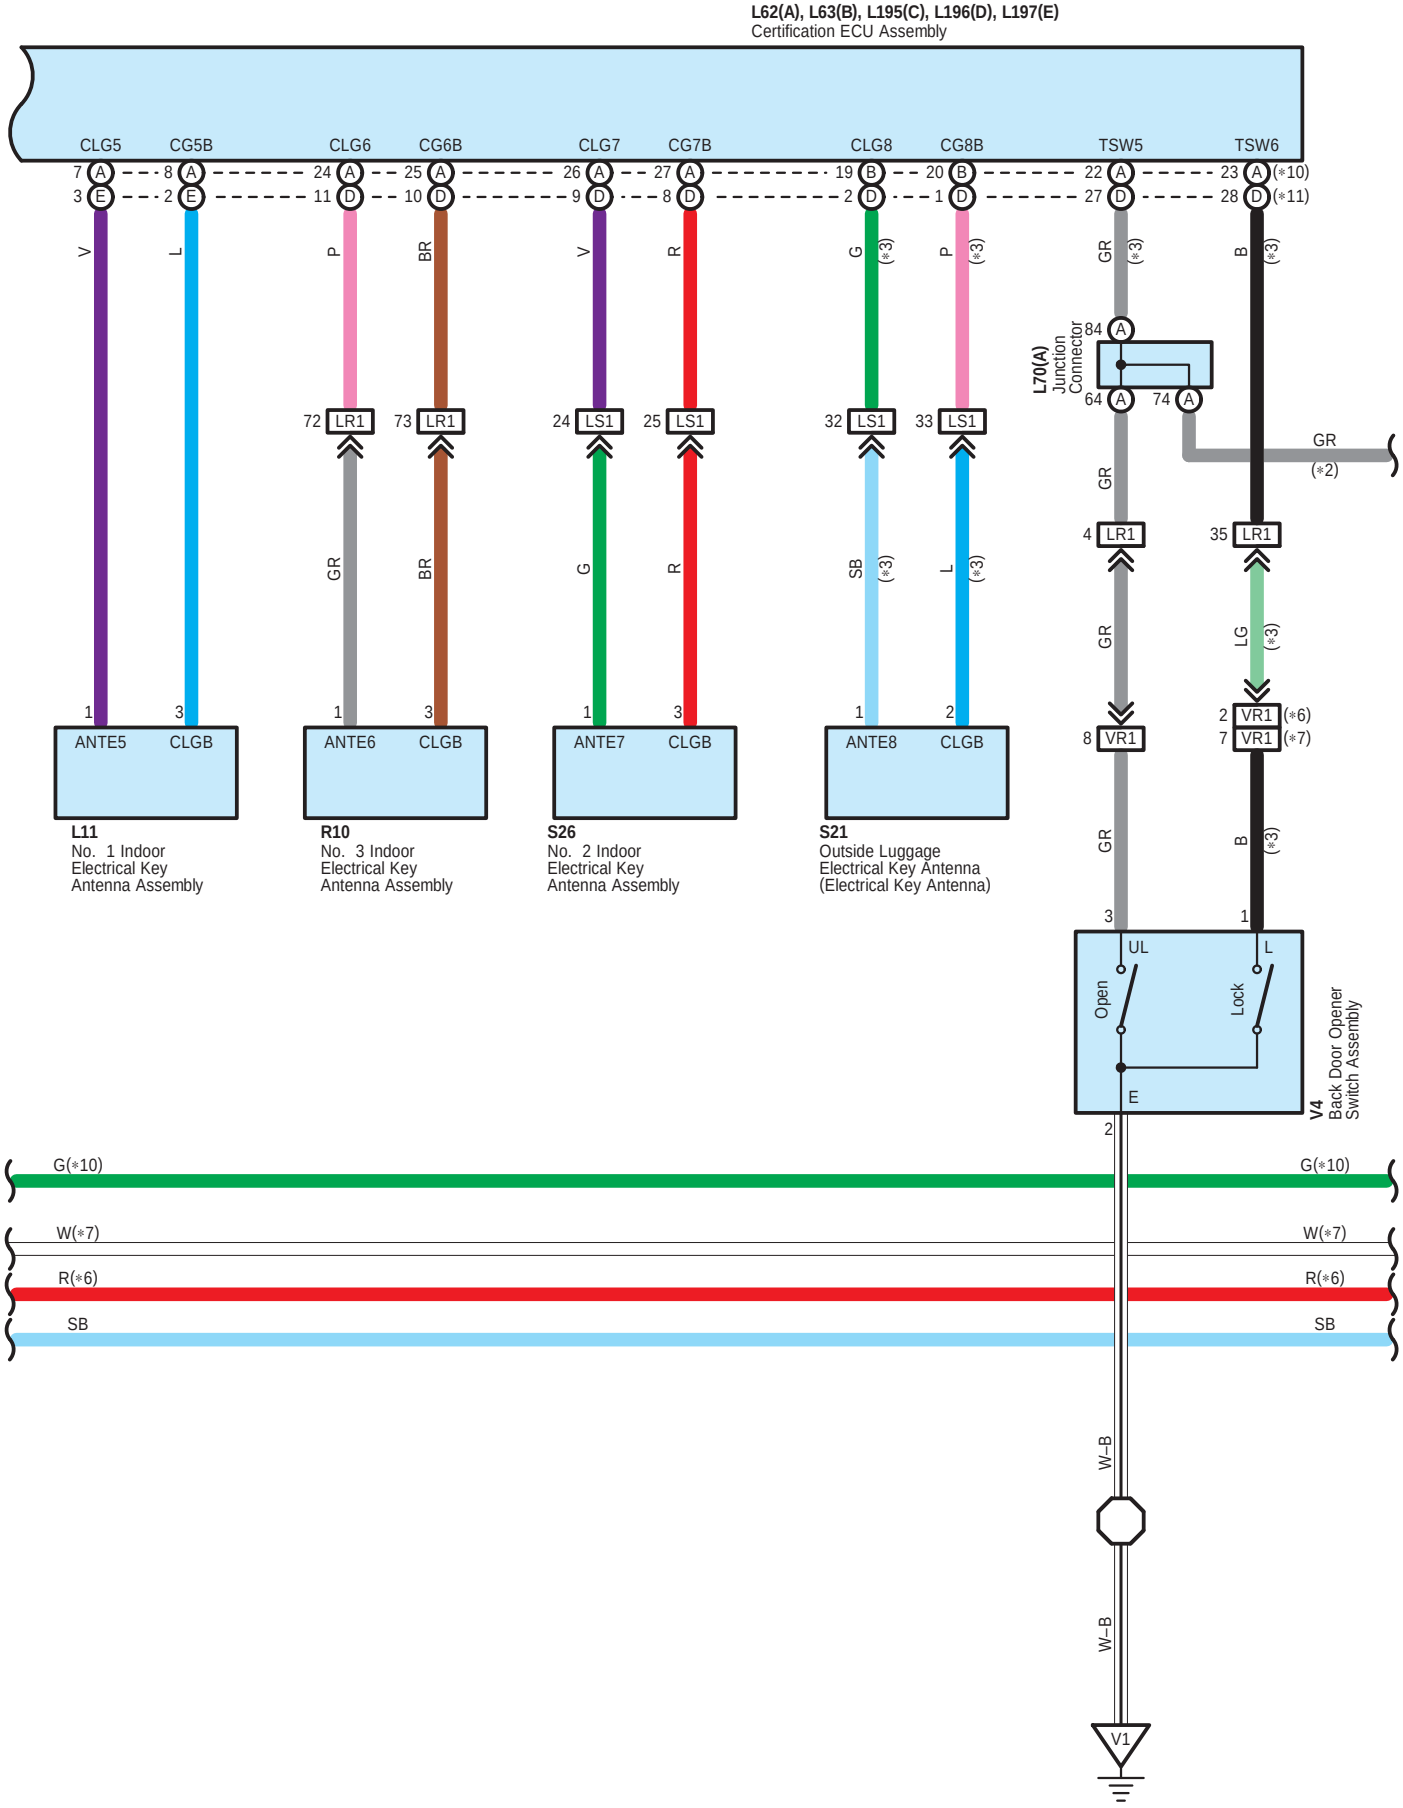

L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
CLG5
CG5B
CLG6
CG6B
CLG7
CG7B
CLG8
CG8B
TSW5
TSW6
L70(A)
Junction Connector
L11
No. 1 Indoor Electrical Key Antenna Assembly
R10
No. 3 Indoor Electrical Key Antenna Assembly
S26
No. 2 Indoor Electrical Key Antenna Assembly
S21
Outside Luggage Electrical Key Antenna (Electrical Key Antenna)
V4
Back Door Opener Switch Assembly
Open
Lock
UL
L
E
W–B
V1

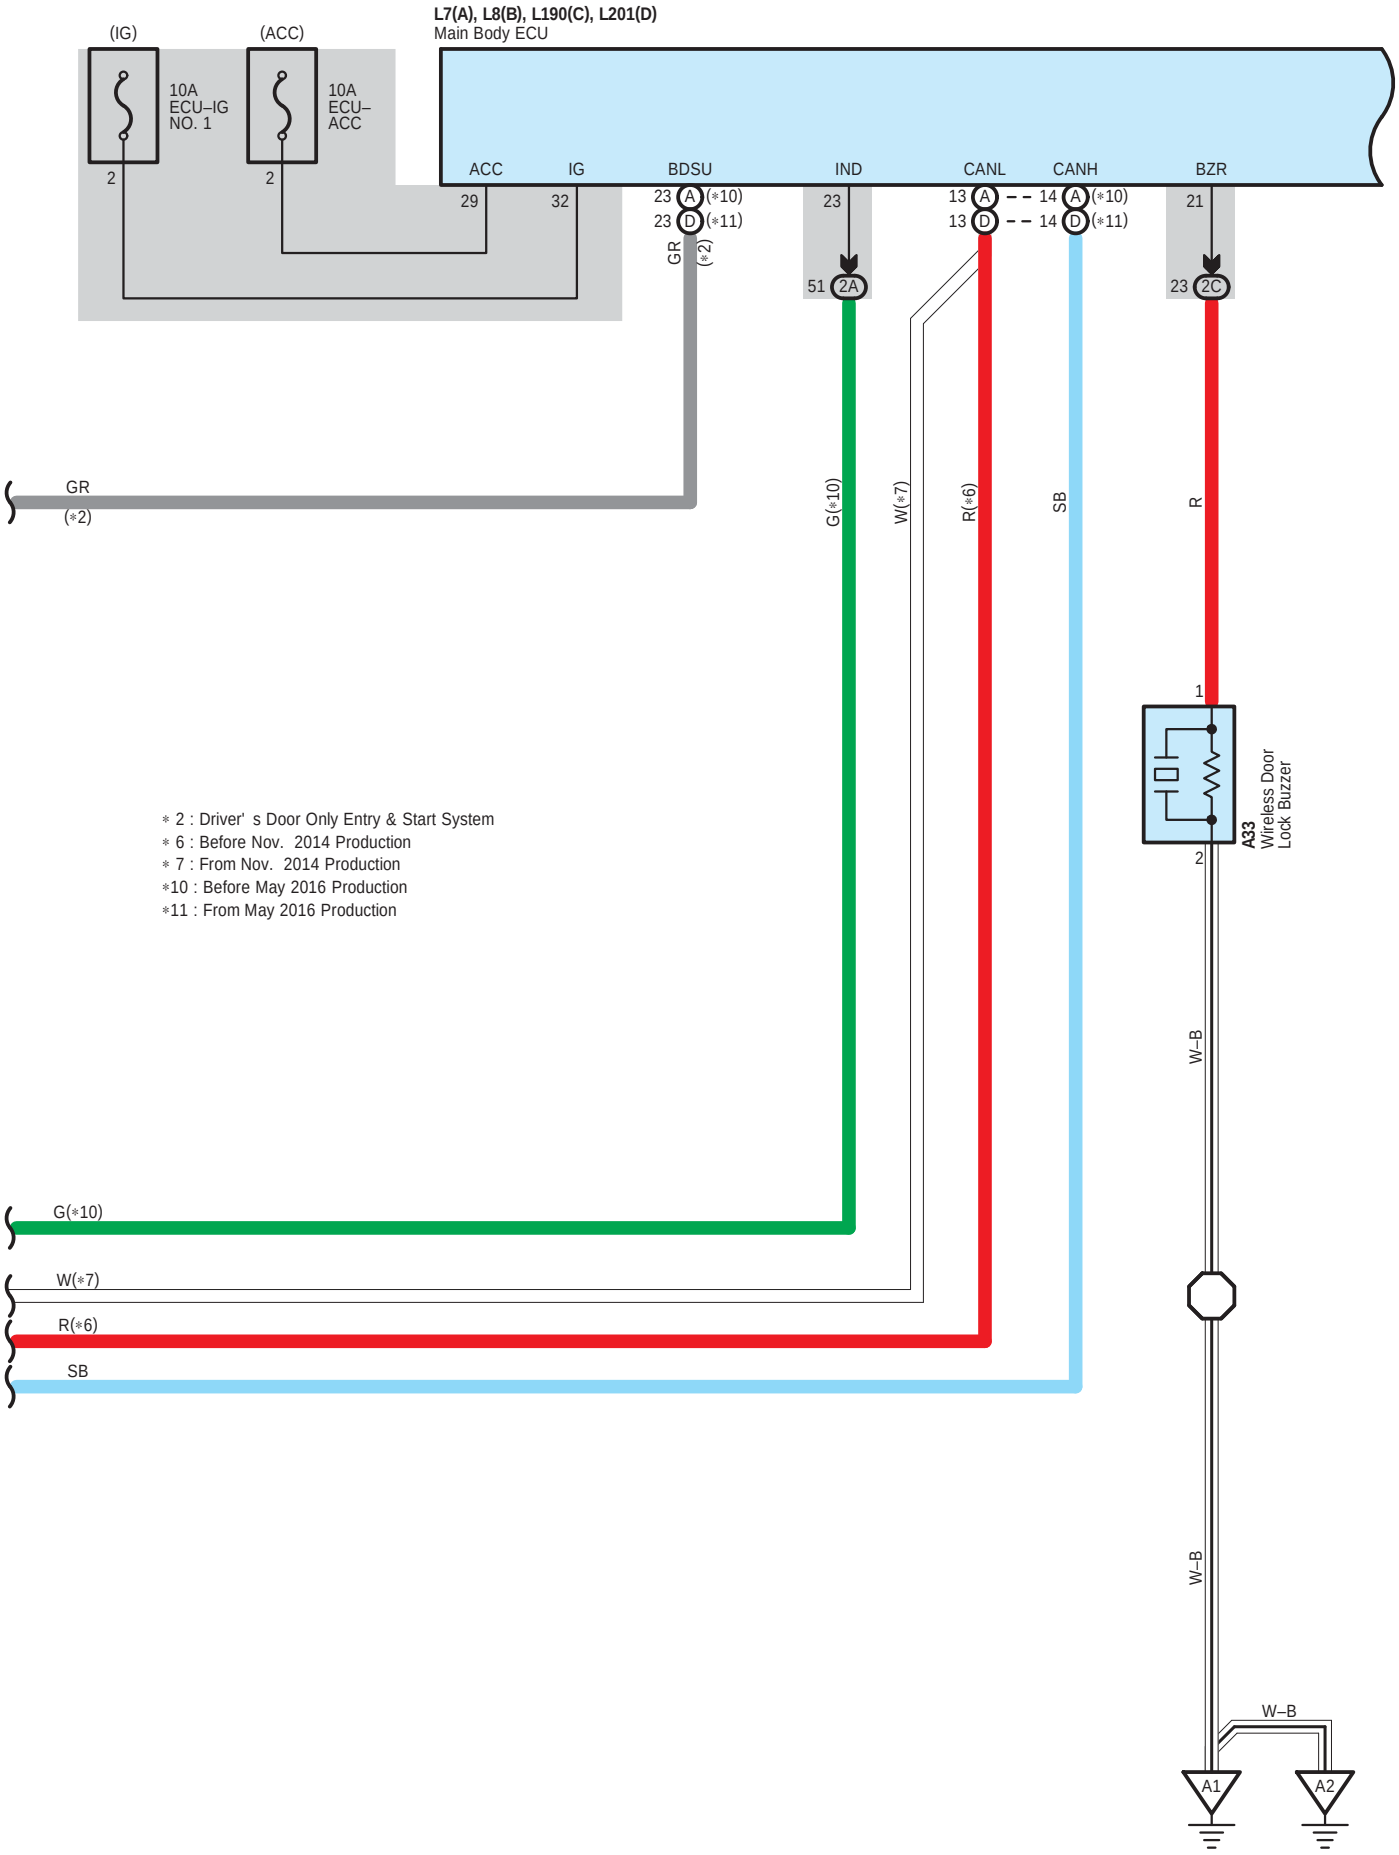
L7(A), L8(B), L190(C), L201(D)
Main Body ECU
(IG)
(ACC)
10A
ECU–IG
NO. 1
10A
ECU–
ACC
2
2
ACC
IG
BDSU
IND
CANL
CANH
BZR
29
32
23 A (*10)
23 D (*11)
GR
(*2)
23
51 2A
13 A
13 D
14 A (*10)
14 D (*11)
21
23 2C
GR
(*2)
G(*10)
W(*7)
R(*6)
SB
R
1
2
A33
Wireless Door
Lock Buzzer
W–B
W–B
W–B
A1
A2
* 2 : Driver' s Door Only Entry & Start System
* 6 : Before Nov. 2014 Production
* 7 : From Nov. 2014 Production
*10 : Before May 2016 Production
*11 : From May 2016 Production

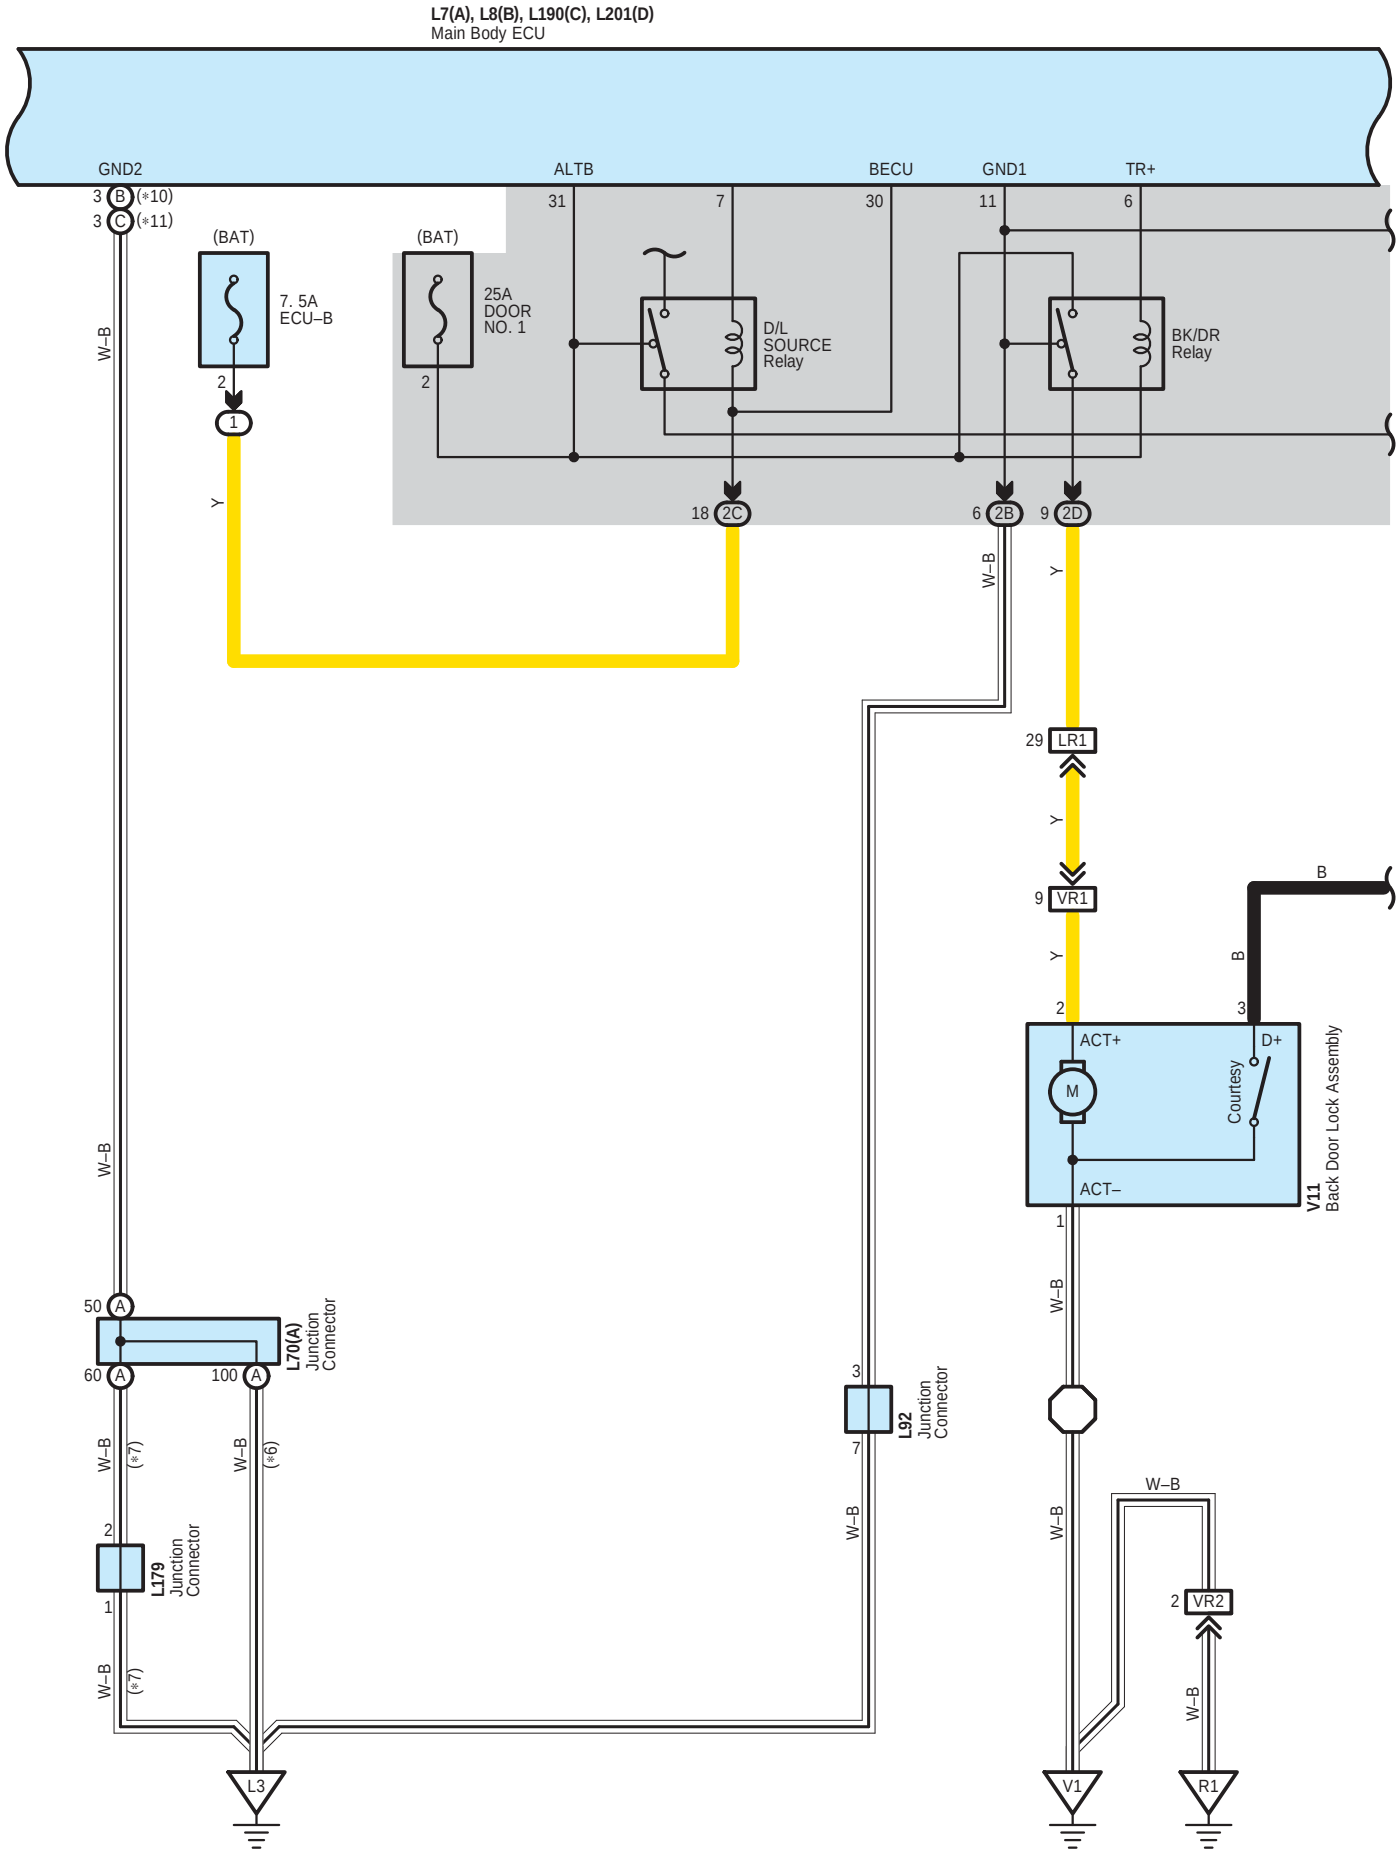

L7(A), L8(B), L190(C), L201(D)
Main Body ECU
GND2
ALTB
BECU
GND1
TR+
3 B (*10)
3 C (*11)
31
7
30
11
6
(BAT)
(BAT)
7. 5A
ECU–B
25A
DOOR
NO. 1
D/L
SOURCE
Relay
BK/DR
Relay
W–B
Y
18 2C
6 2B
9 2D
29 LR1
9 VR1
B
2
3
ACT+
D+
M
Courtesy
ACT–
V11
Back Door Lock Assembly
1
50 A
60 A
100 A
L70(A)
Junction
Connector
(*7)
(*6)
2
L179
Junction
Connector
3
7
L92
Junction
Connector
W–B
2 VR2
L3
V1
R1

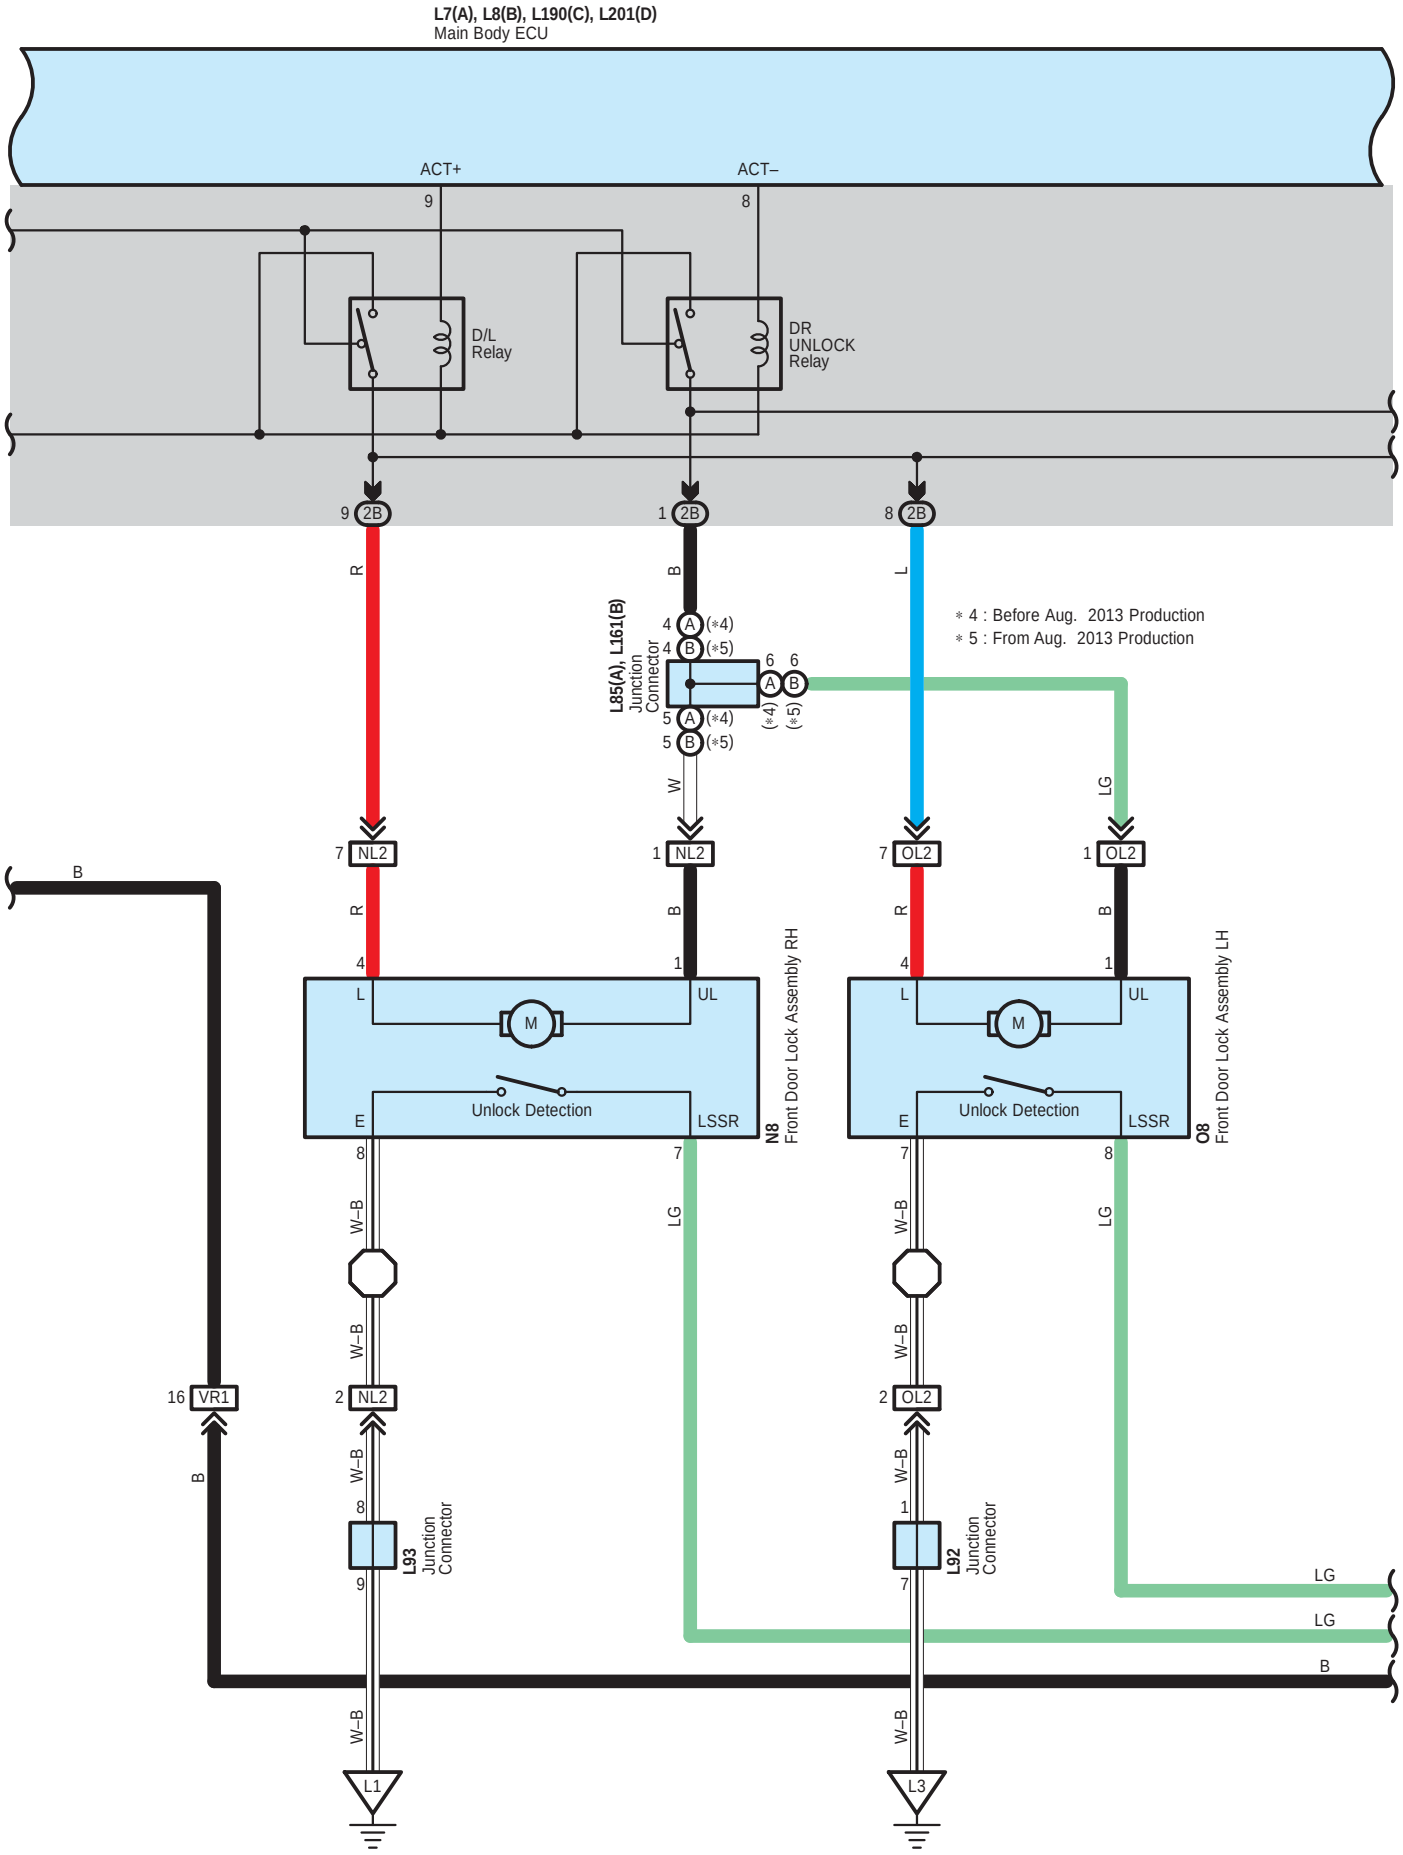
L7(A), L8(B), L190(C), L201(D)
Main Body ECU
ACT+
ACT–
9
8
D/L Relay
DR UNLOCK Relay
9 2B
1 2B
8 2B
R
B
L
L85(A), L161(B) Junction Connector
4 A (*4)
4 B (*5)
5 A (*4)
5 B (*5)
6 6
A B
(*4) (*5)
* 4 : Before Aug. 2013 Production
* 5 : From Aug. 2013 Production
W
LG
7 NL2
1 NL2
7 OL2
1 OL2
B
R
B
R
B
4
1
4
1
L
UL
M
E
Unlock Detection
LSSR
N8 Front Door Lock Assembly RH
O8 Front Door Lock Assembly LH
8
7
7
8
W–B
LG
W–B
W–B
LG
16 VR1
2 NL2
2 OL2
B
W–B
W–B
8
1
L93 Junction Connector
L92 Junction Connector
9
7
LG
LG
B
W–B
W–B
L1
L3

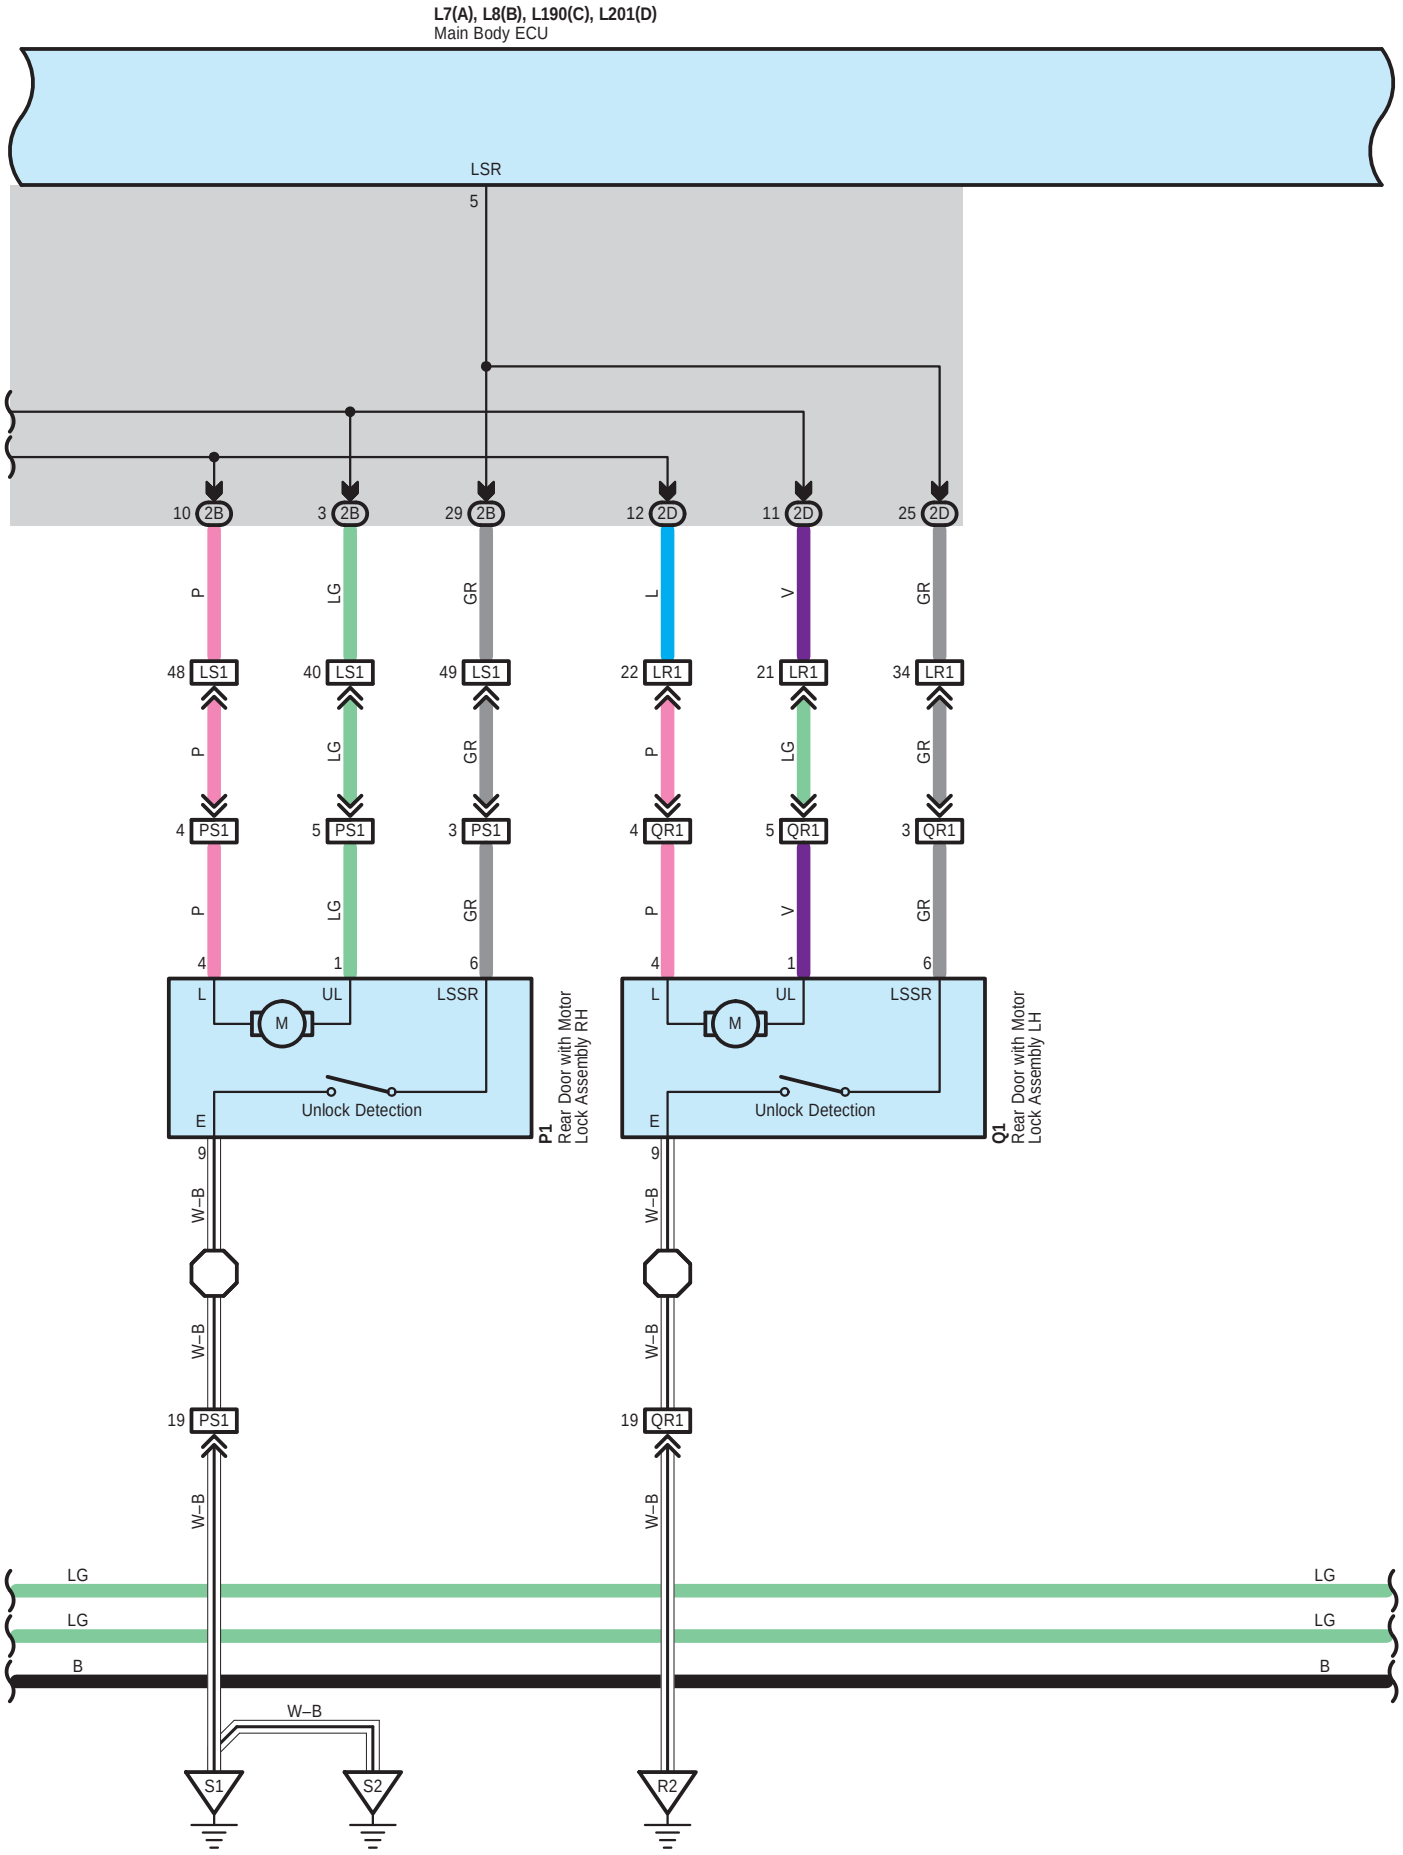

L7(A), L8(B), L190(C), L201(D)
Main Body ECU
LSR
5
10 2B
3 2B
29 2B
12 2D
11 2D
25 2D
P
LG
GR
L
V
GR
48 LS1
40 LS1
49 LS1
22 LR1
21 LR1
34 LR1
4 PS1
5 PS1
3 PS1
4 QR1
5 QR1
3 QR1
4
1
6
L
UL
LSSR
M
Unlock Detection
E
P1
Rear Door with Motor Lock Assembly RH
Q1
Rear Door with Motor Lock Assembly LH
9
W–B
19 PS1
19 QR1
LG
B
S1
S2
R2

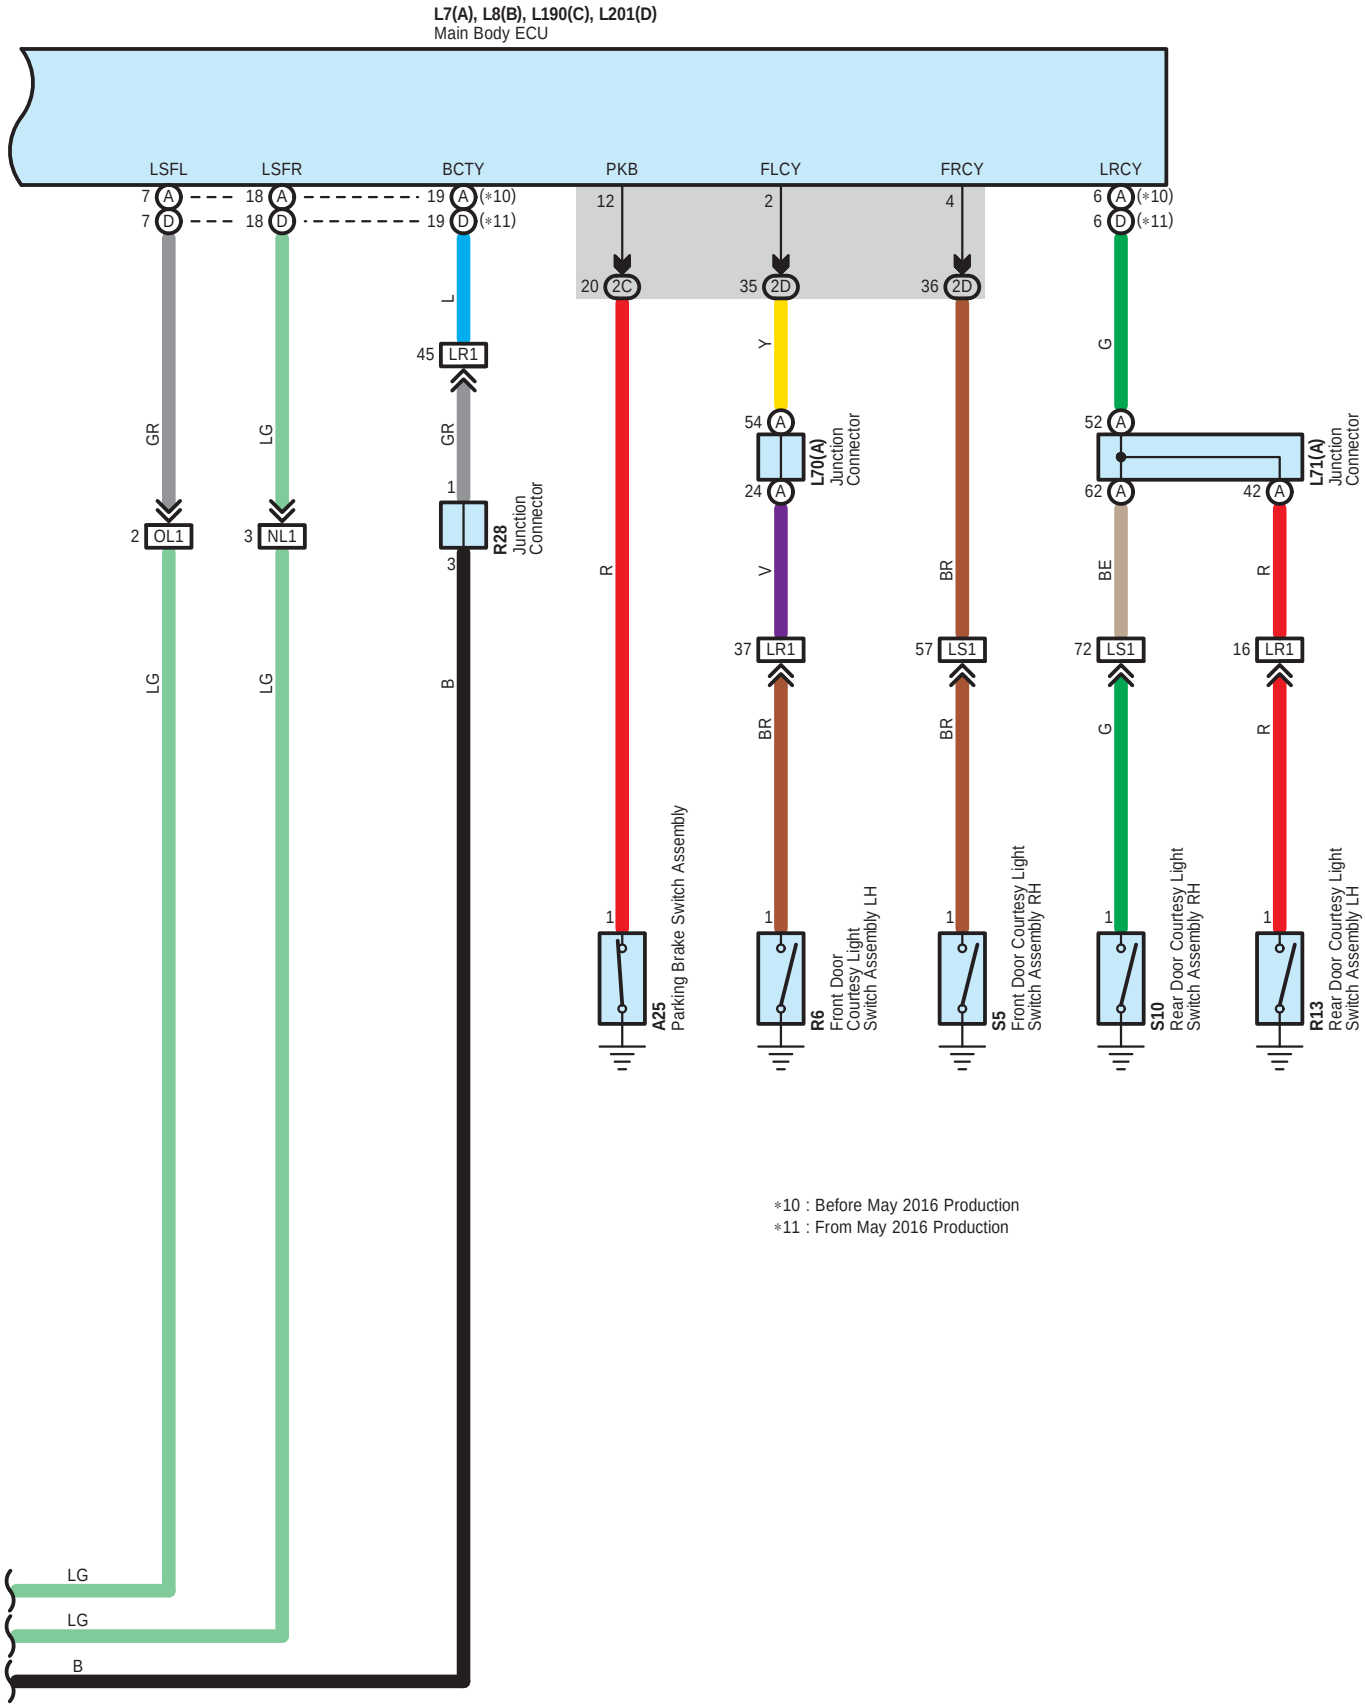
L7(A), L8(B), L190(C), L201(D)
Main Body ECU
LSFL
LSFR
BCTY
PKB
FLCY
FRCY
LRCY
7 A
7 D
18 A
18 D
19 A (*10)
19 D (*11)
12
20 2C
2
35 2D
4
36 2D
6 A (*10)
6 D (*11)
GR
LG
L
GR
Y
G
45 LR1
1
3
2 OL1
3 NL1
R28
Junction Connector
54 A
24 A
L70(A)
Junction Connector
52 A
62 A
42 A
L71(A)
Junction Connector
R
V
BR
BE
R
37 LR1
57 LS1
72 LS1
16 LR1
BR
BR
G
R
B
LG
LG
B
1
A25
Parking Brake Switch Assembly
R6
Front Door Courtesy Light Switch Assembly LH
S5
Front Door Courtesy Light Switch Assembly RH
S10
Rear Door Courtesy Light Switch Assembly RH
R13
Rear Door Courtesy Light Switch Assembly LH
*10 : Before May 2016 Production
*11 : From May 2016 Production


A 21
Gray

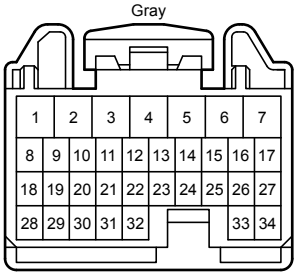


A 22
Gray

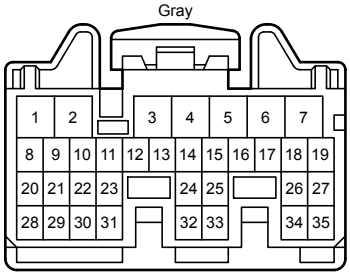

A 23
White

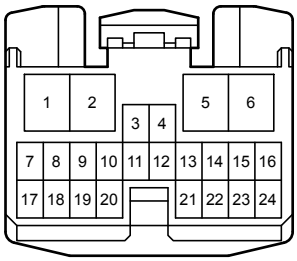


A 24
White

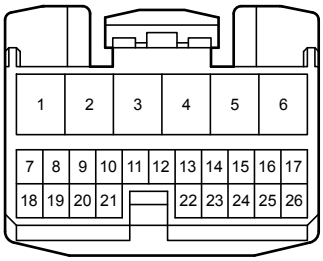


A 25
White




A 26
White




A 28
Black

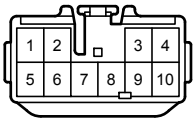


A 33
Gray

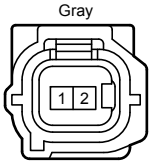


A 50
White

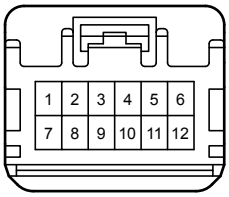


A 51
White

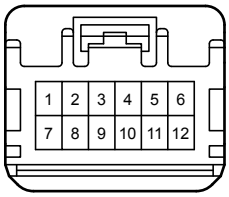


A 52
Black

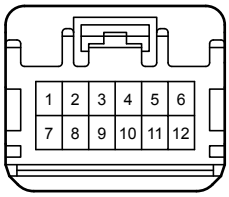


A 53
Black

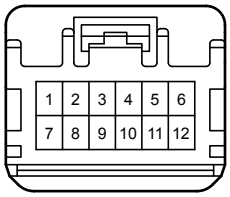


A 54
Black

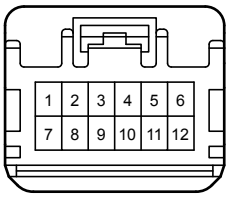


A 55
Black

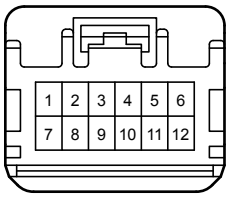


A 56
White

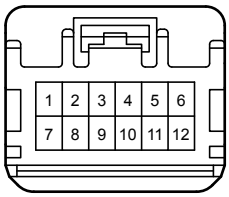


A 57
Black

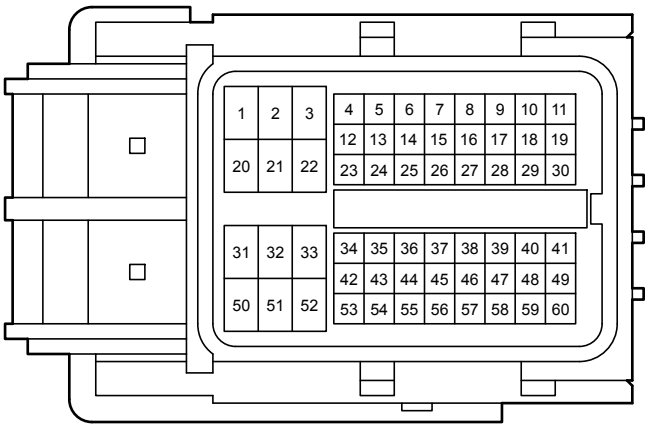


A 58
Gray

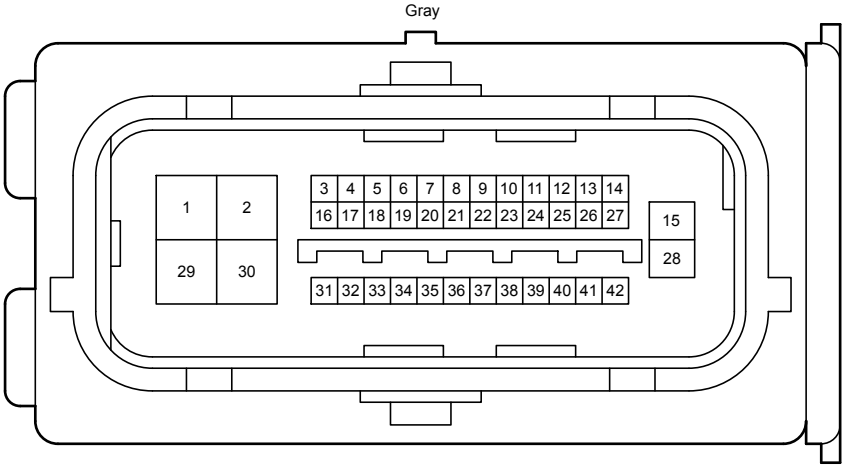


A 67
Blue

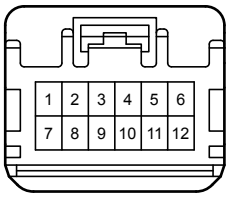


A 68
Gray

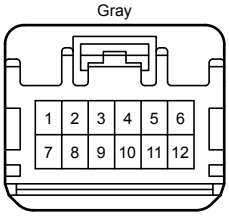


A 79
Black

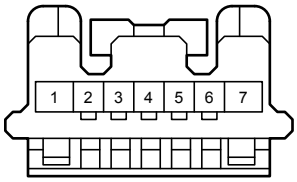


A 80
Blue

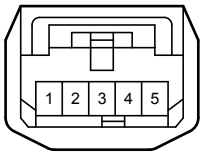


A 93
Blue

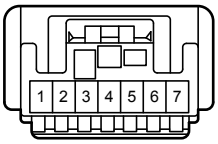


D 2
Black

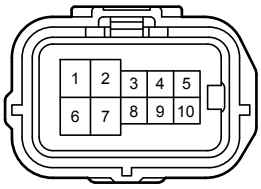


D 27
Black

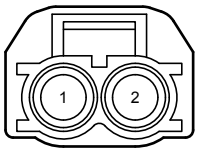


D 28
Black

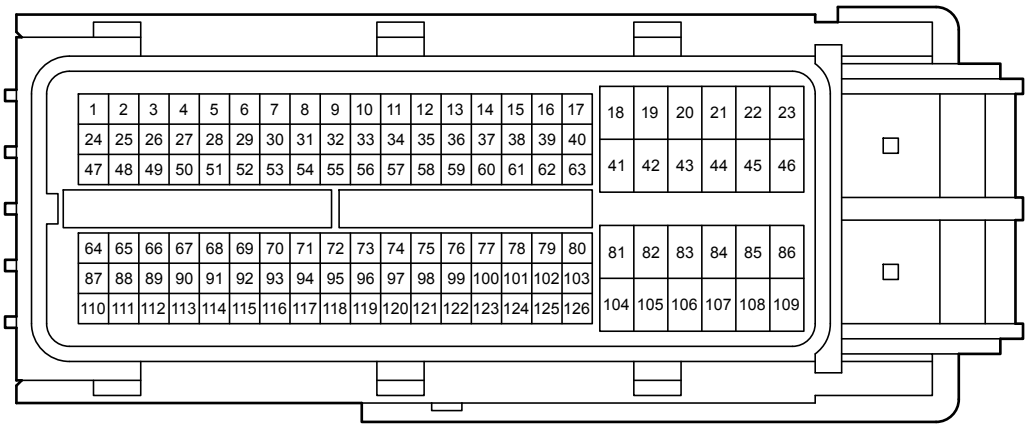


L 5
Gray

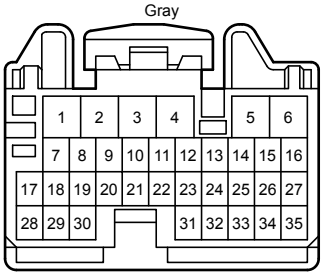


L 6
Gray

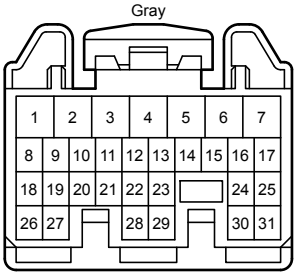


L 7
White

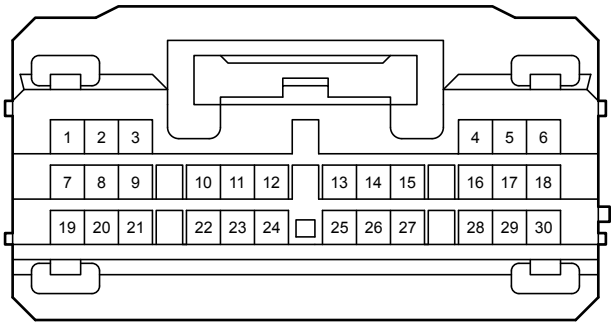


L 8
White

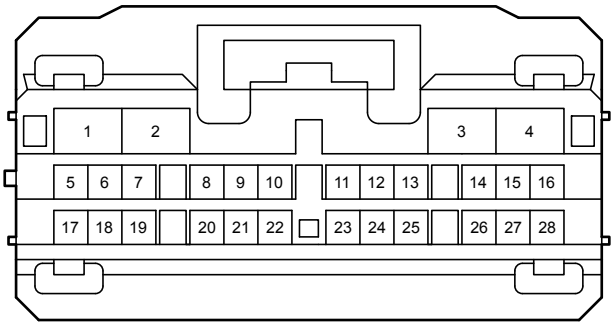


L 10
White

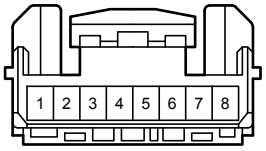


L 11
White

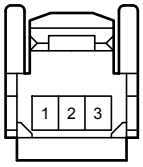


L 27
White

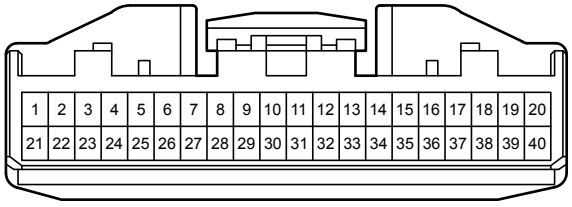


L 43
Gray

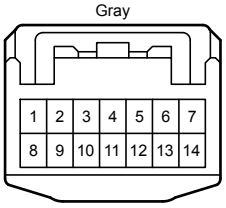


L 62
White

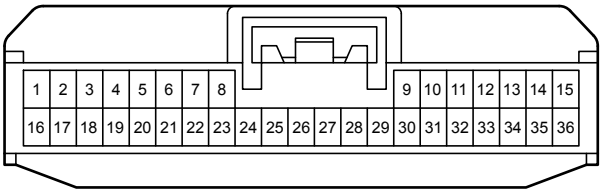


L 63
White

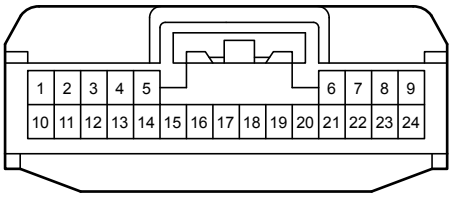


L 70
White

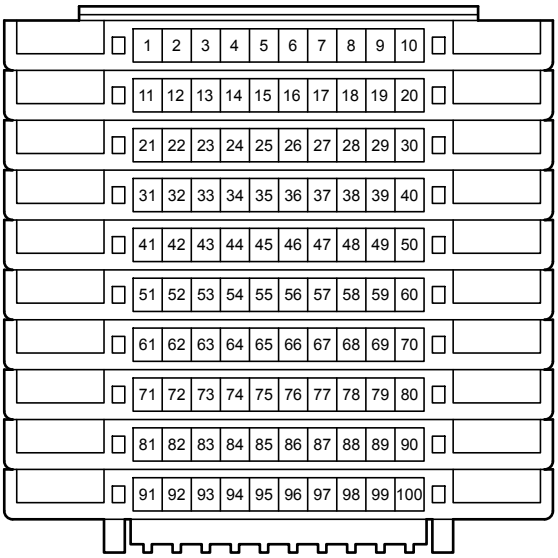


L 71
White

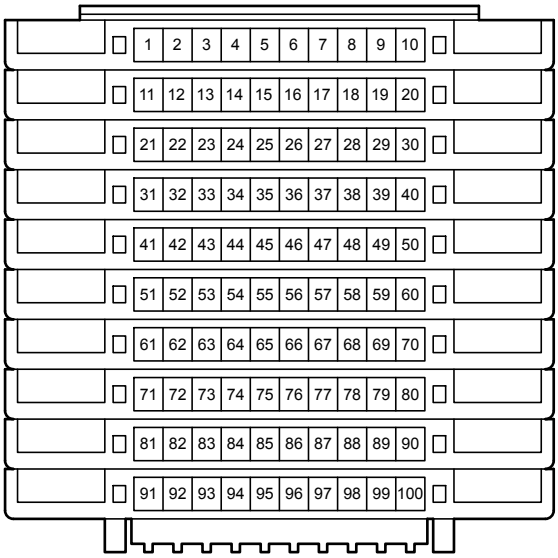


L 85
White

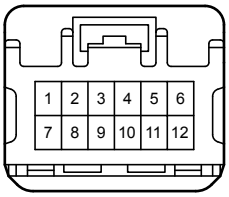


L 87
White

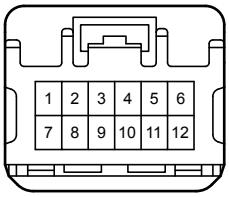


L 92
White

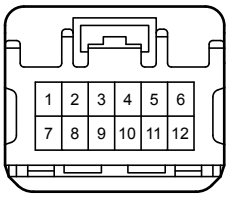


L 93
White

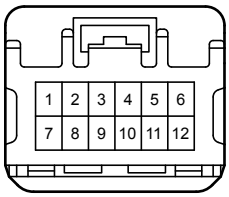


L 94
White

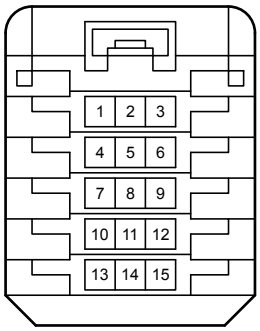


L101
White

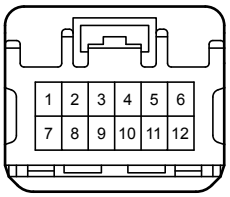


L102
White

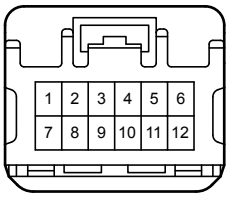


L124
Black

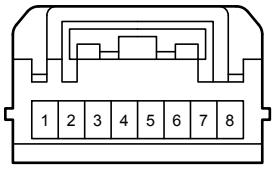


L125
White

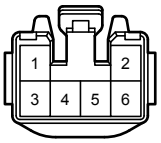


L126
White

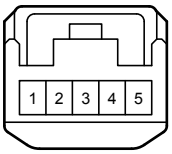


L127
Black

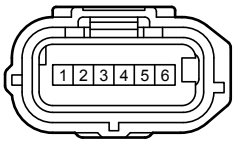


L132
Blue

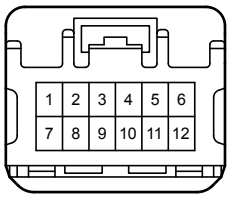


L133
Gray

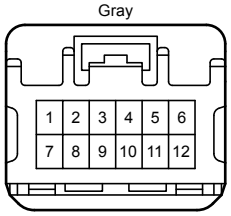


L161
Gray

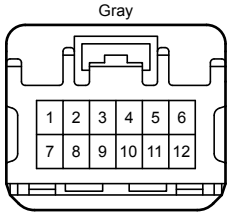


L179
Black




L190
White

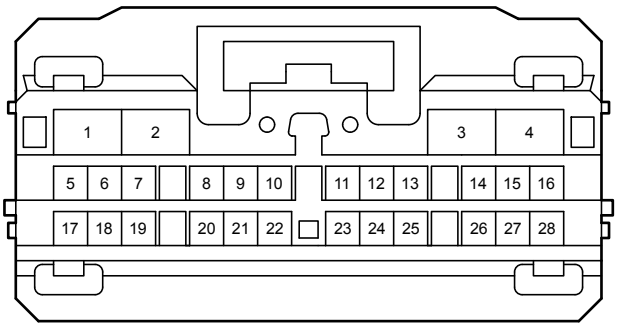


L191
White

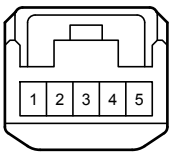


L194
Black

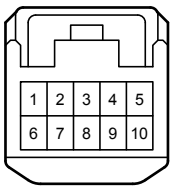


L195
White

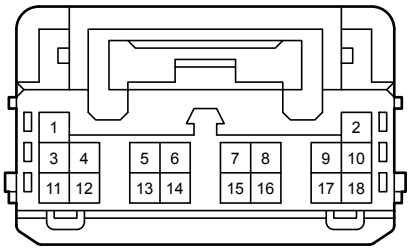


L196
White

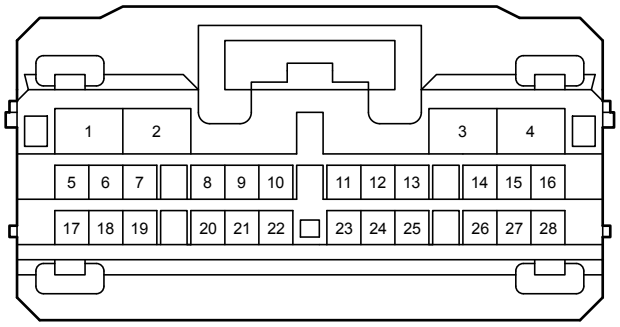


L197
White

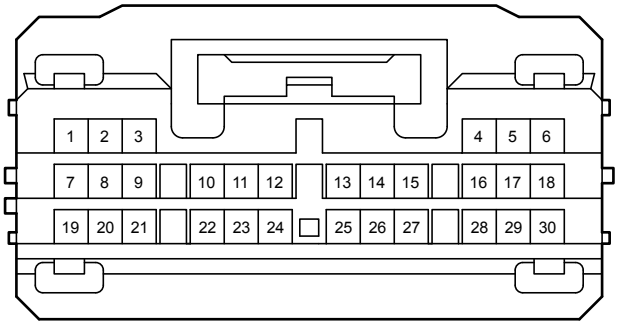


L200
Black

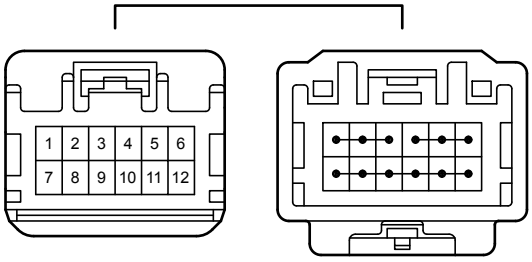


L201
White

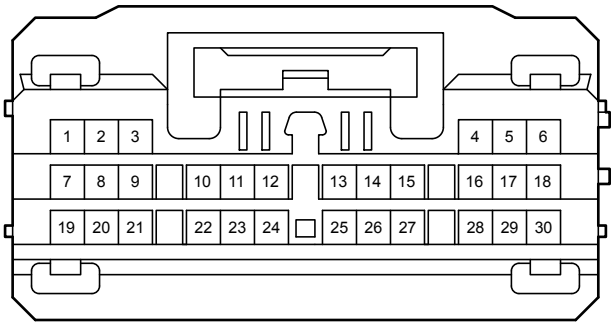


N 8
White

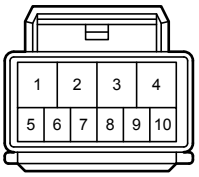


N 16
Gray

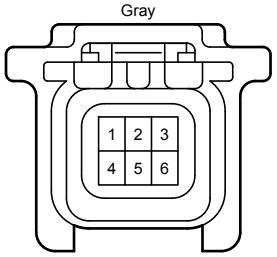


O 8
White

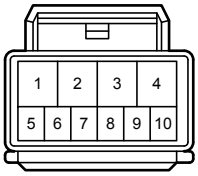


O 15
Gray

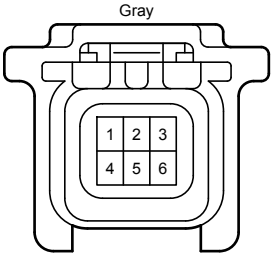

P 1
White

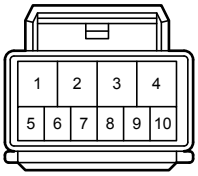


Q 1
White

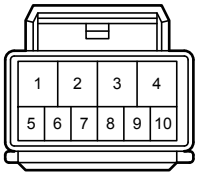

R 6
Black




R 10
White

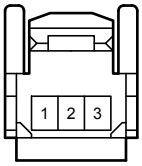


R 13
Black



R 28
Black

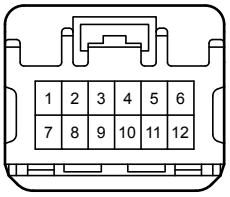

R 42
White

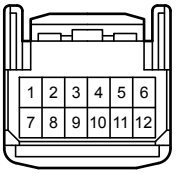


S 5
Black




S 10
Black




S 12
Blue

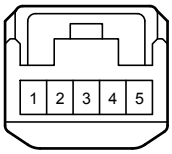


S 20
White

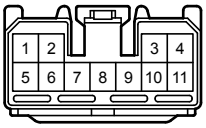


S 21
White




S 26
White

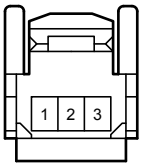


V 4
White

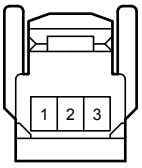


V 11
Black

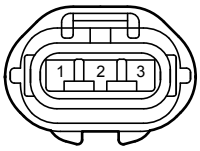


m 1
Gray

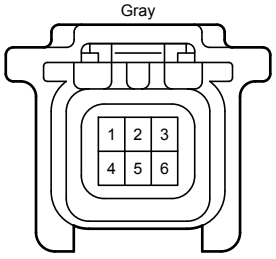


n 1
Gray

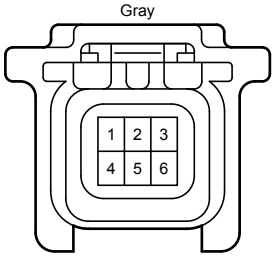


2A
White

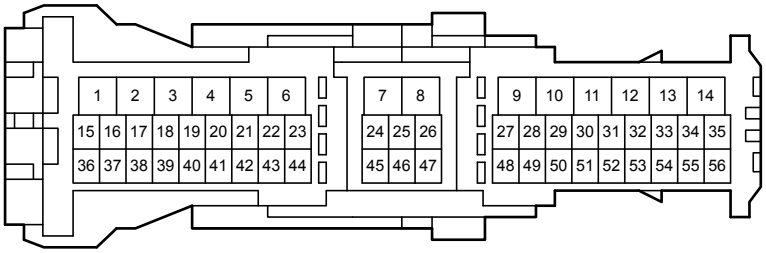


2B
White

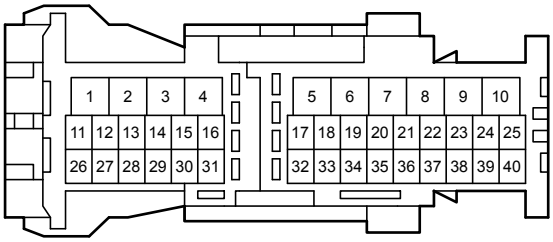


2C
White

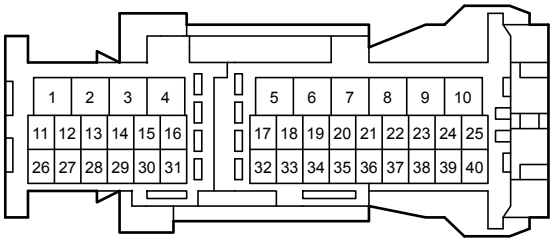


2D
White

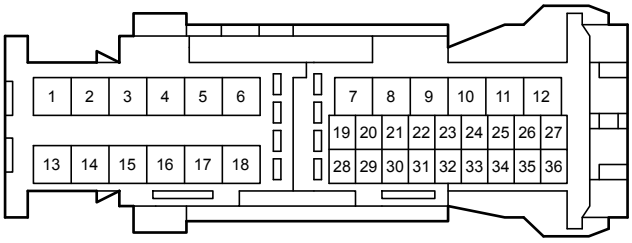


AL1
White

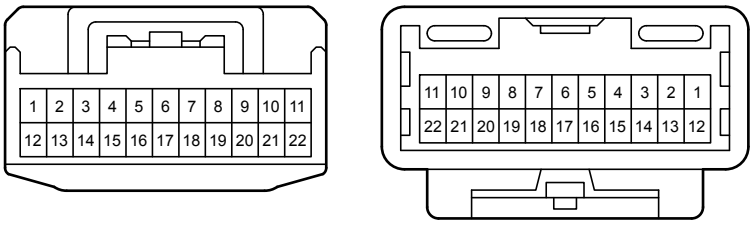


AL2
Gray

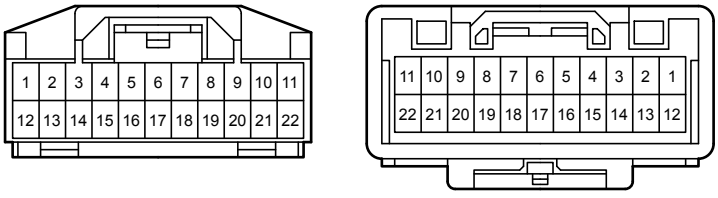


AL4
Black

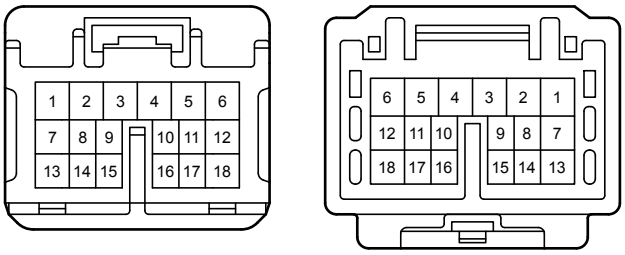


DA1
White

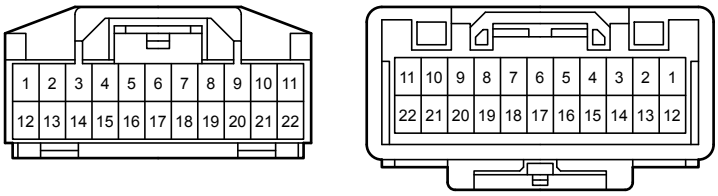



DA2
White

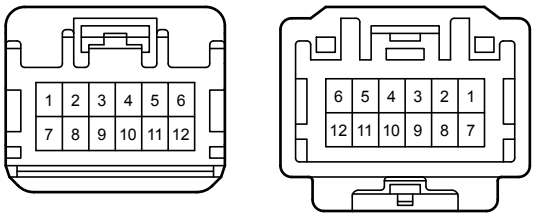


LR1
White

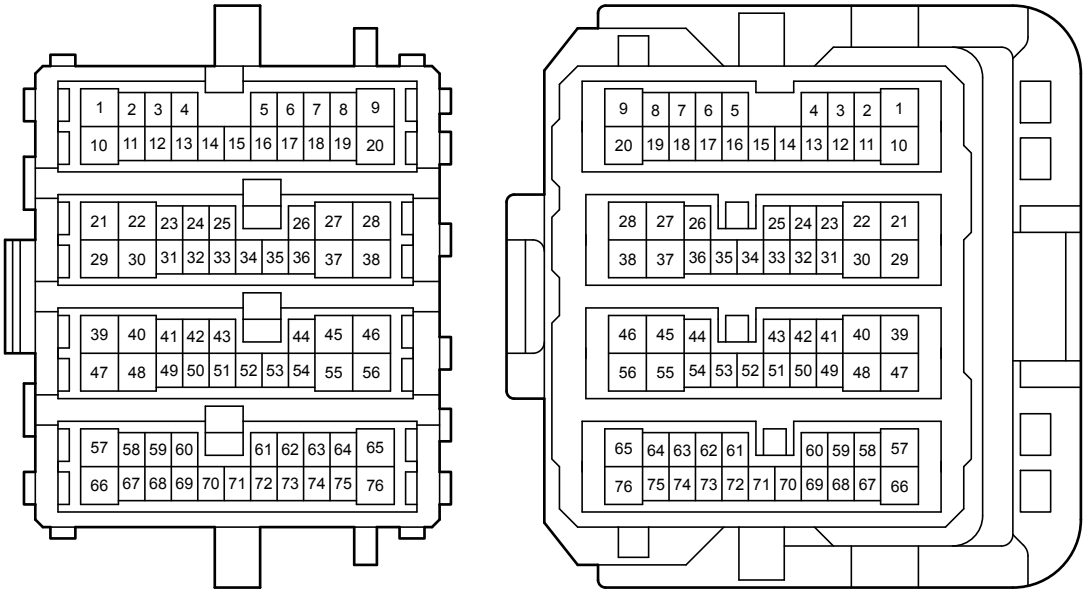


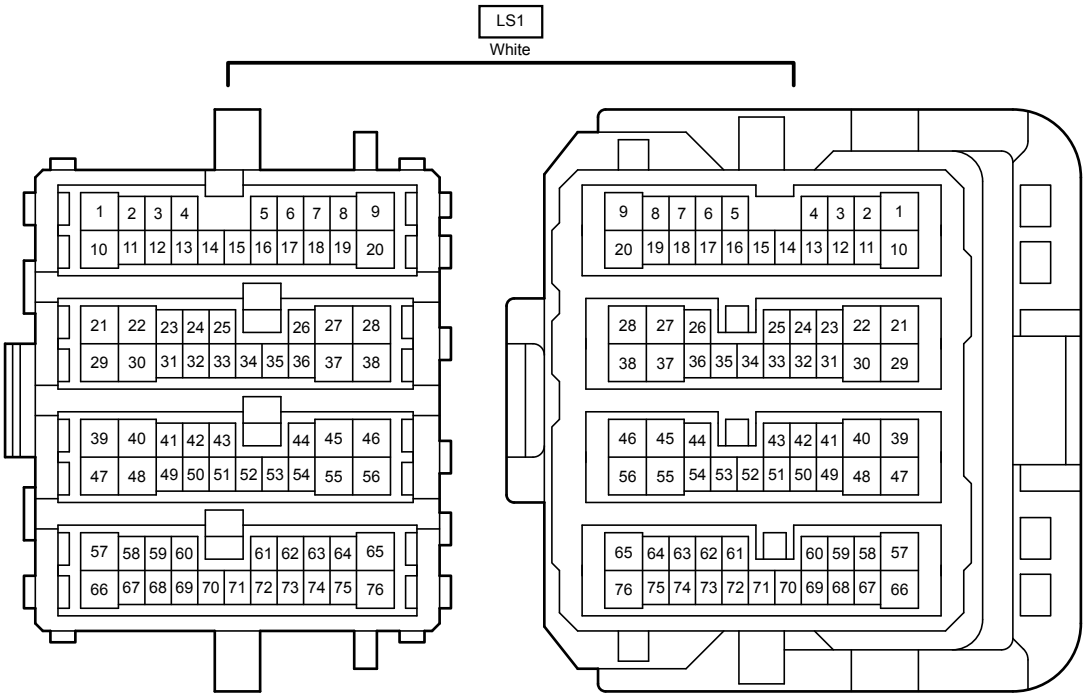
LS1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40 41 42 43 44 45 46
47 48 49 50 51 52 53 54 55 56
57 58 59 60 61 62 63 64 65
66 67 68 69 70 71 72 73 74 75 76
9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11 10
28 27 26 25 24 23 22 21
38 37 36 35 34 33 32 31 30 29
46 45 44 43 42 41 40 39
56 55 54 53 52 51 50 49 48 47
65 64 63 62 61 60 59 58 57
76 75 74 73 72 71 70 69 68 67 66

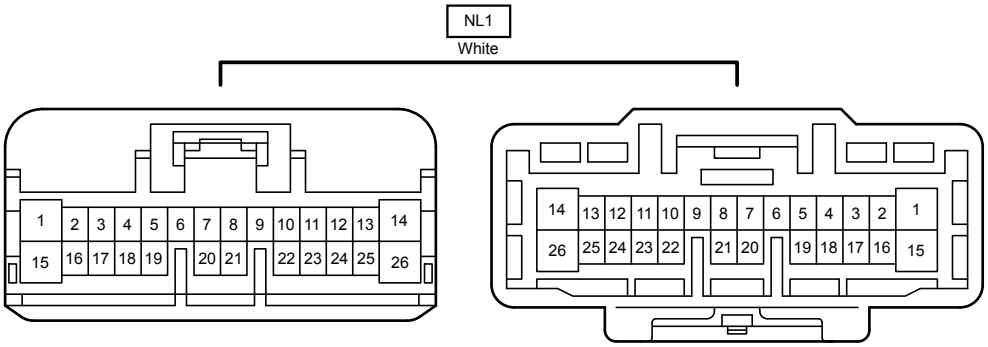

NL1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15

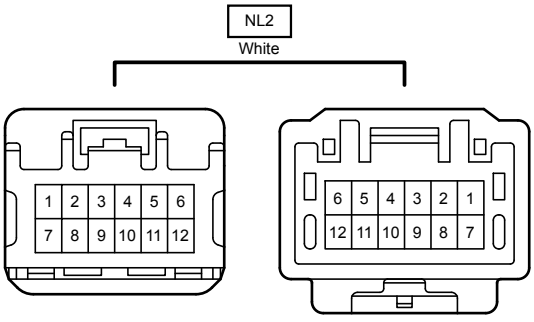
NL2
White
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7


OL1
White

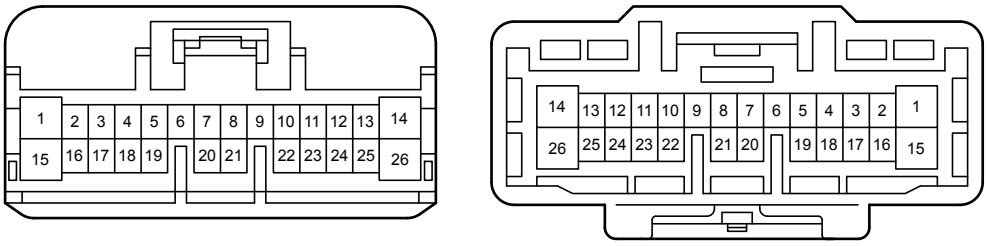


OL2
White

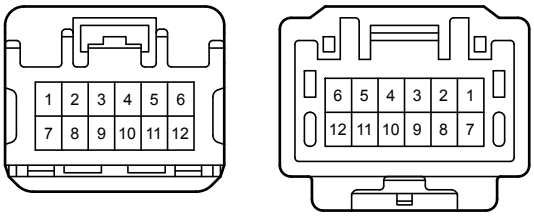


PS1
White

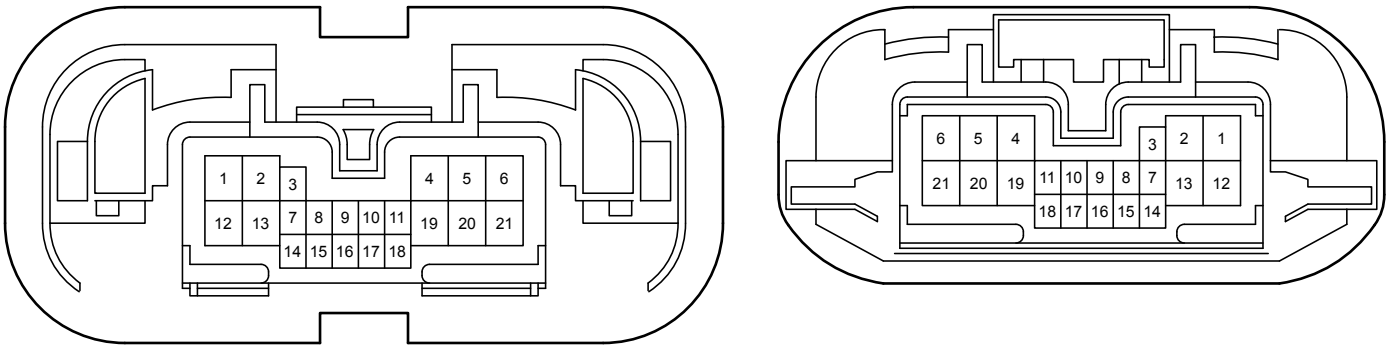

QR1
White

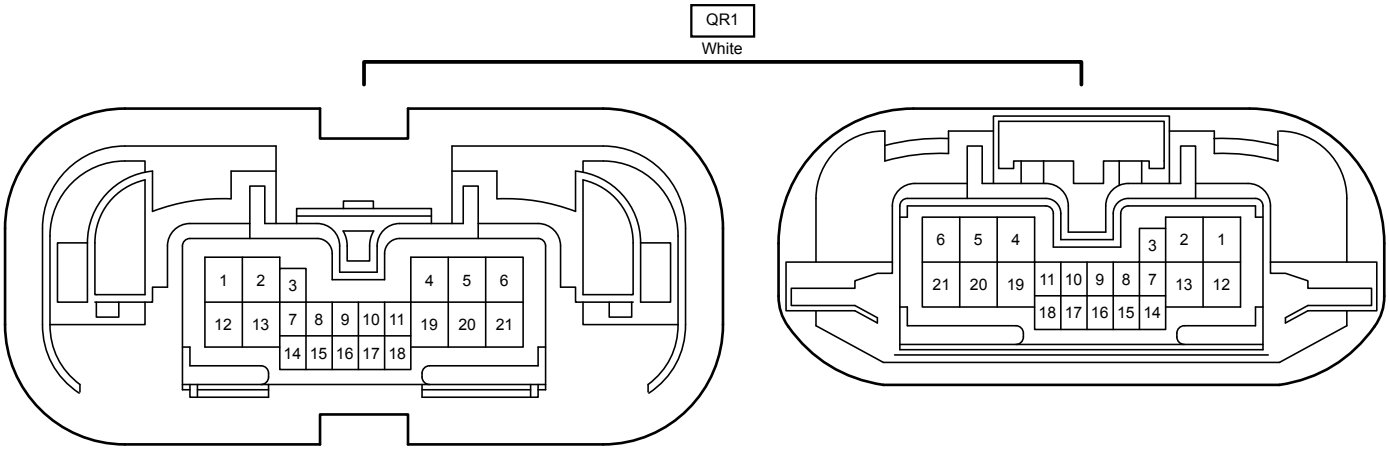

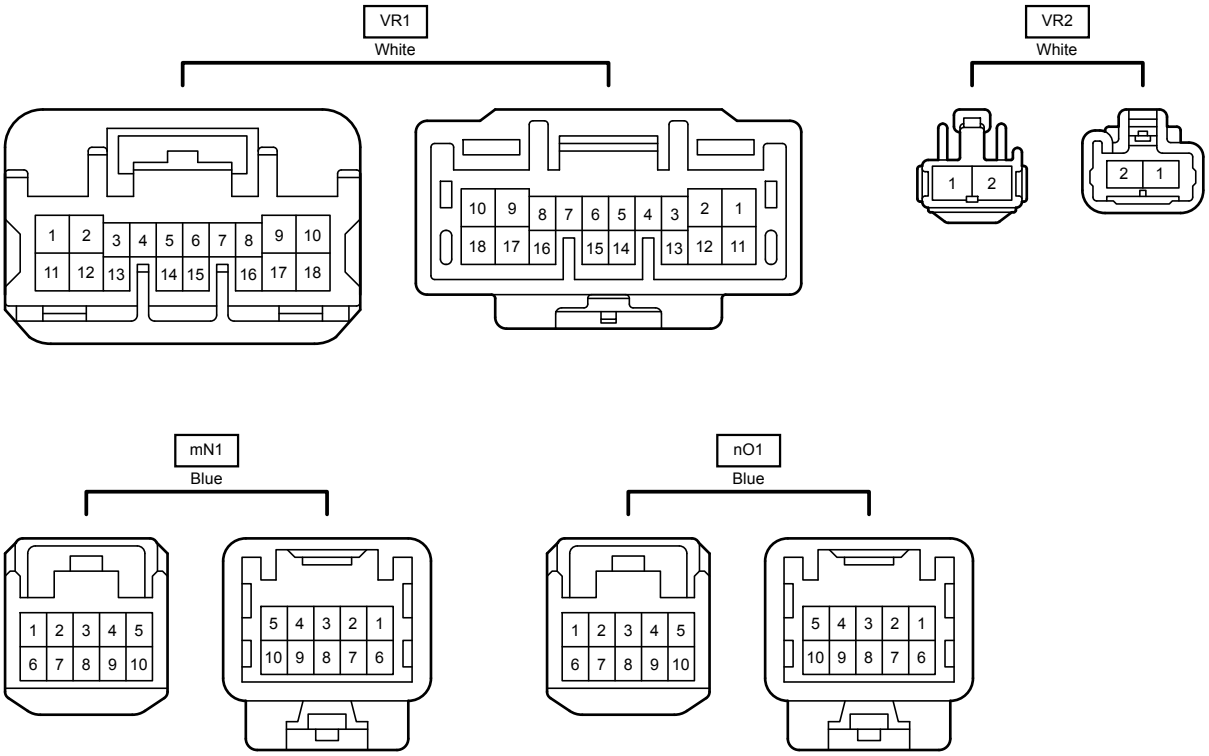
VR1
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11
VR2
White
1 2
2 1
mN1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
nO1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6