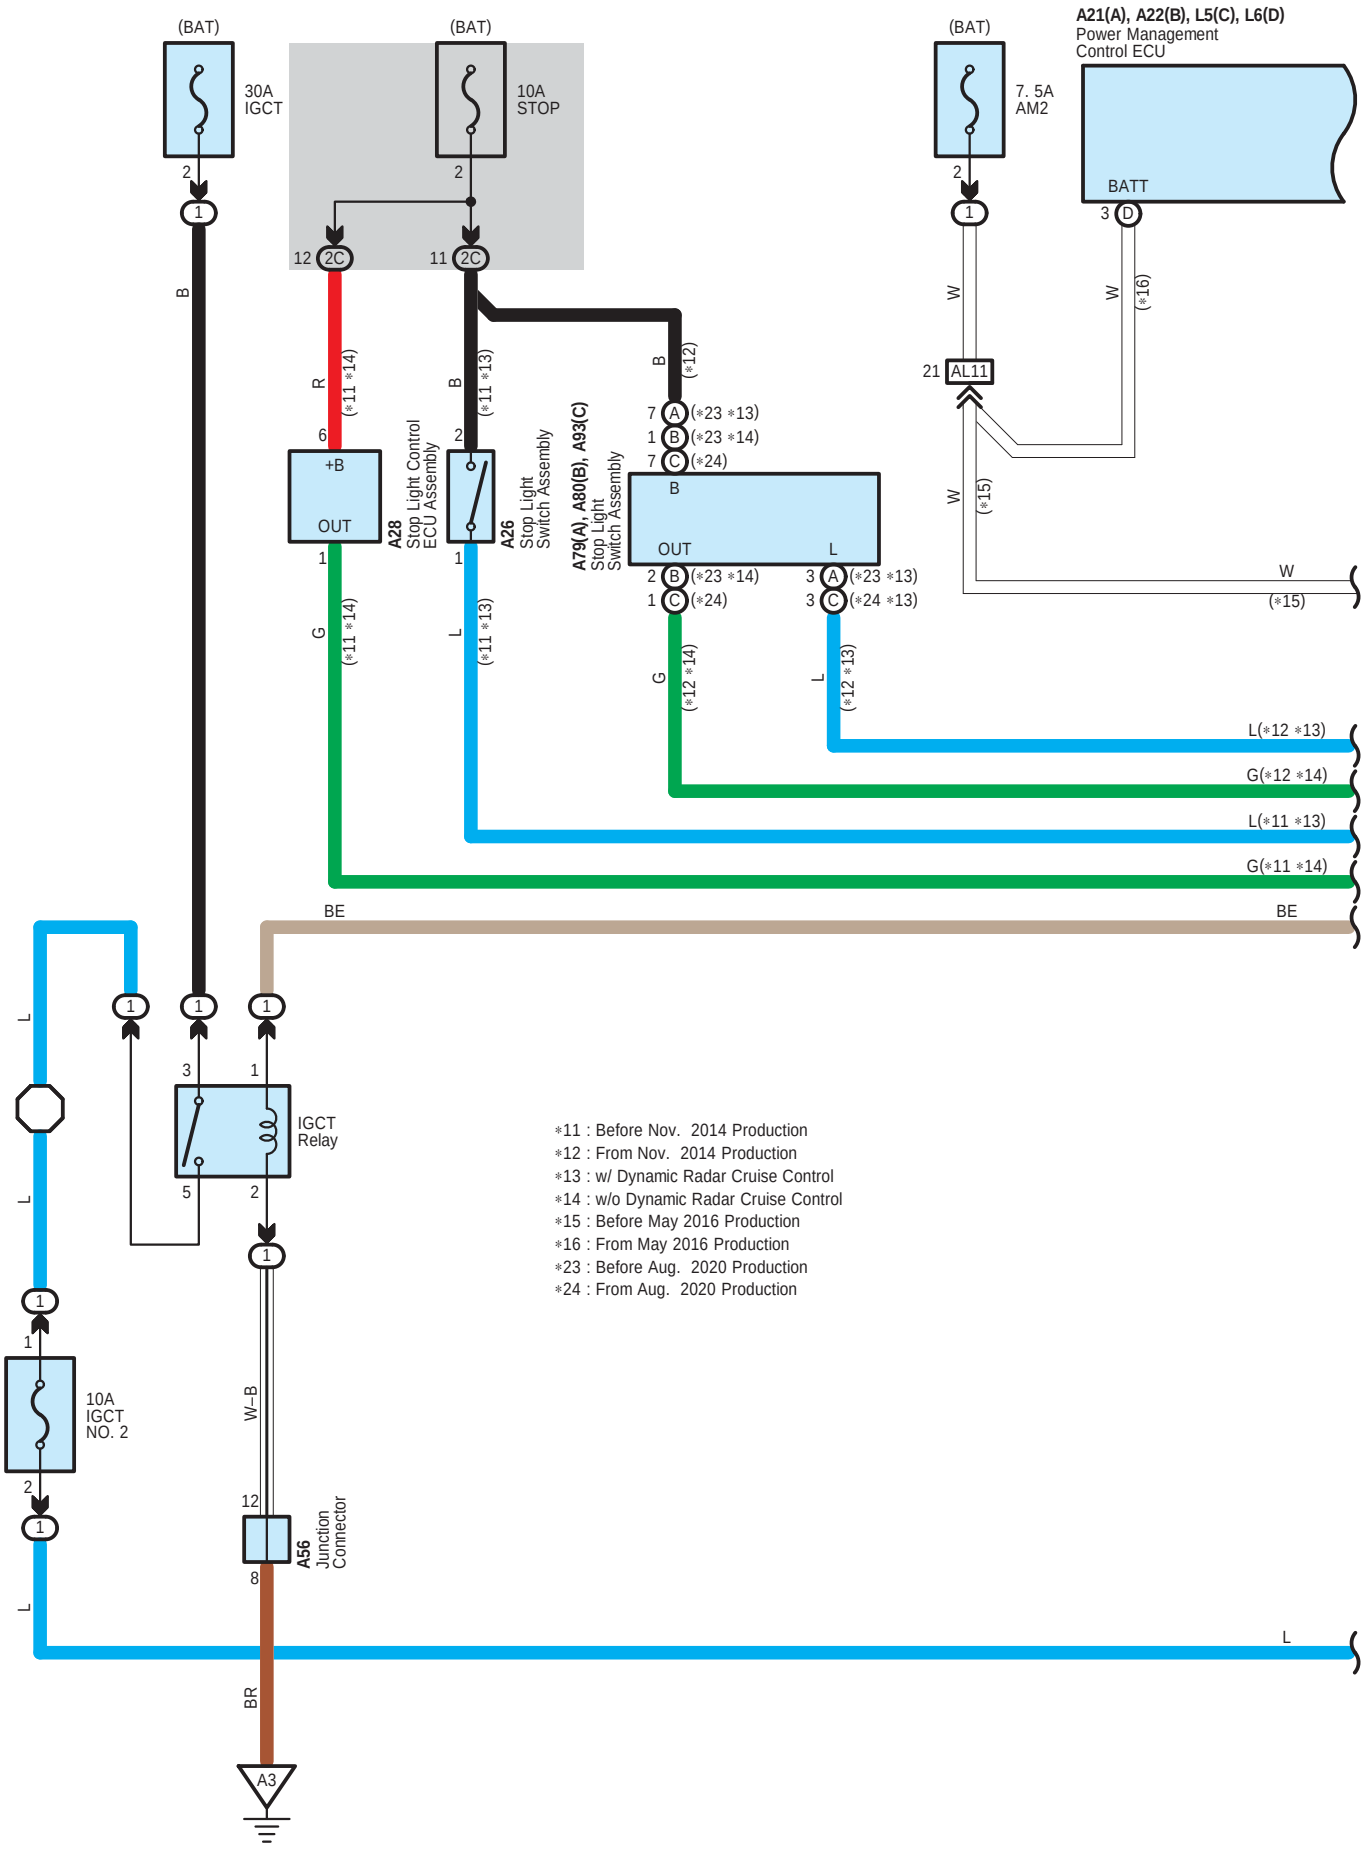
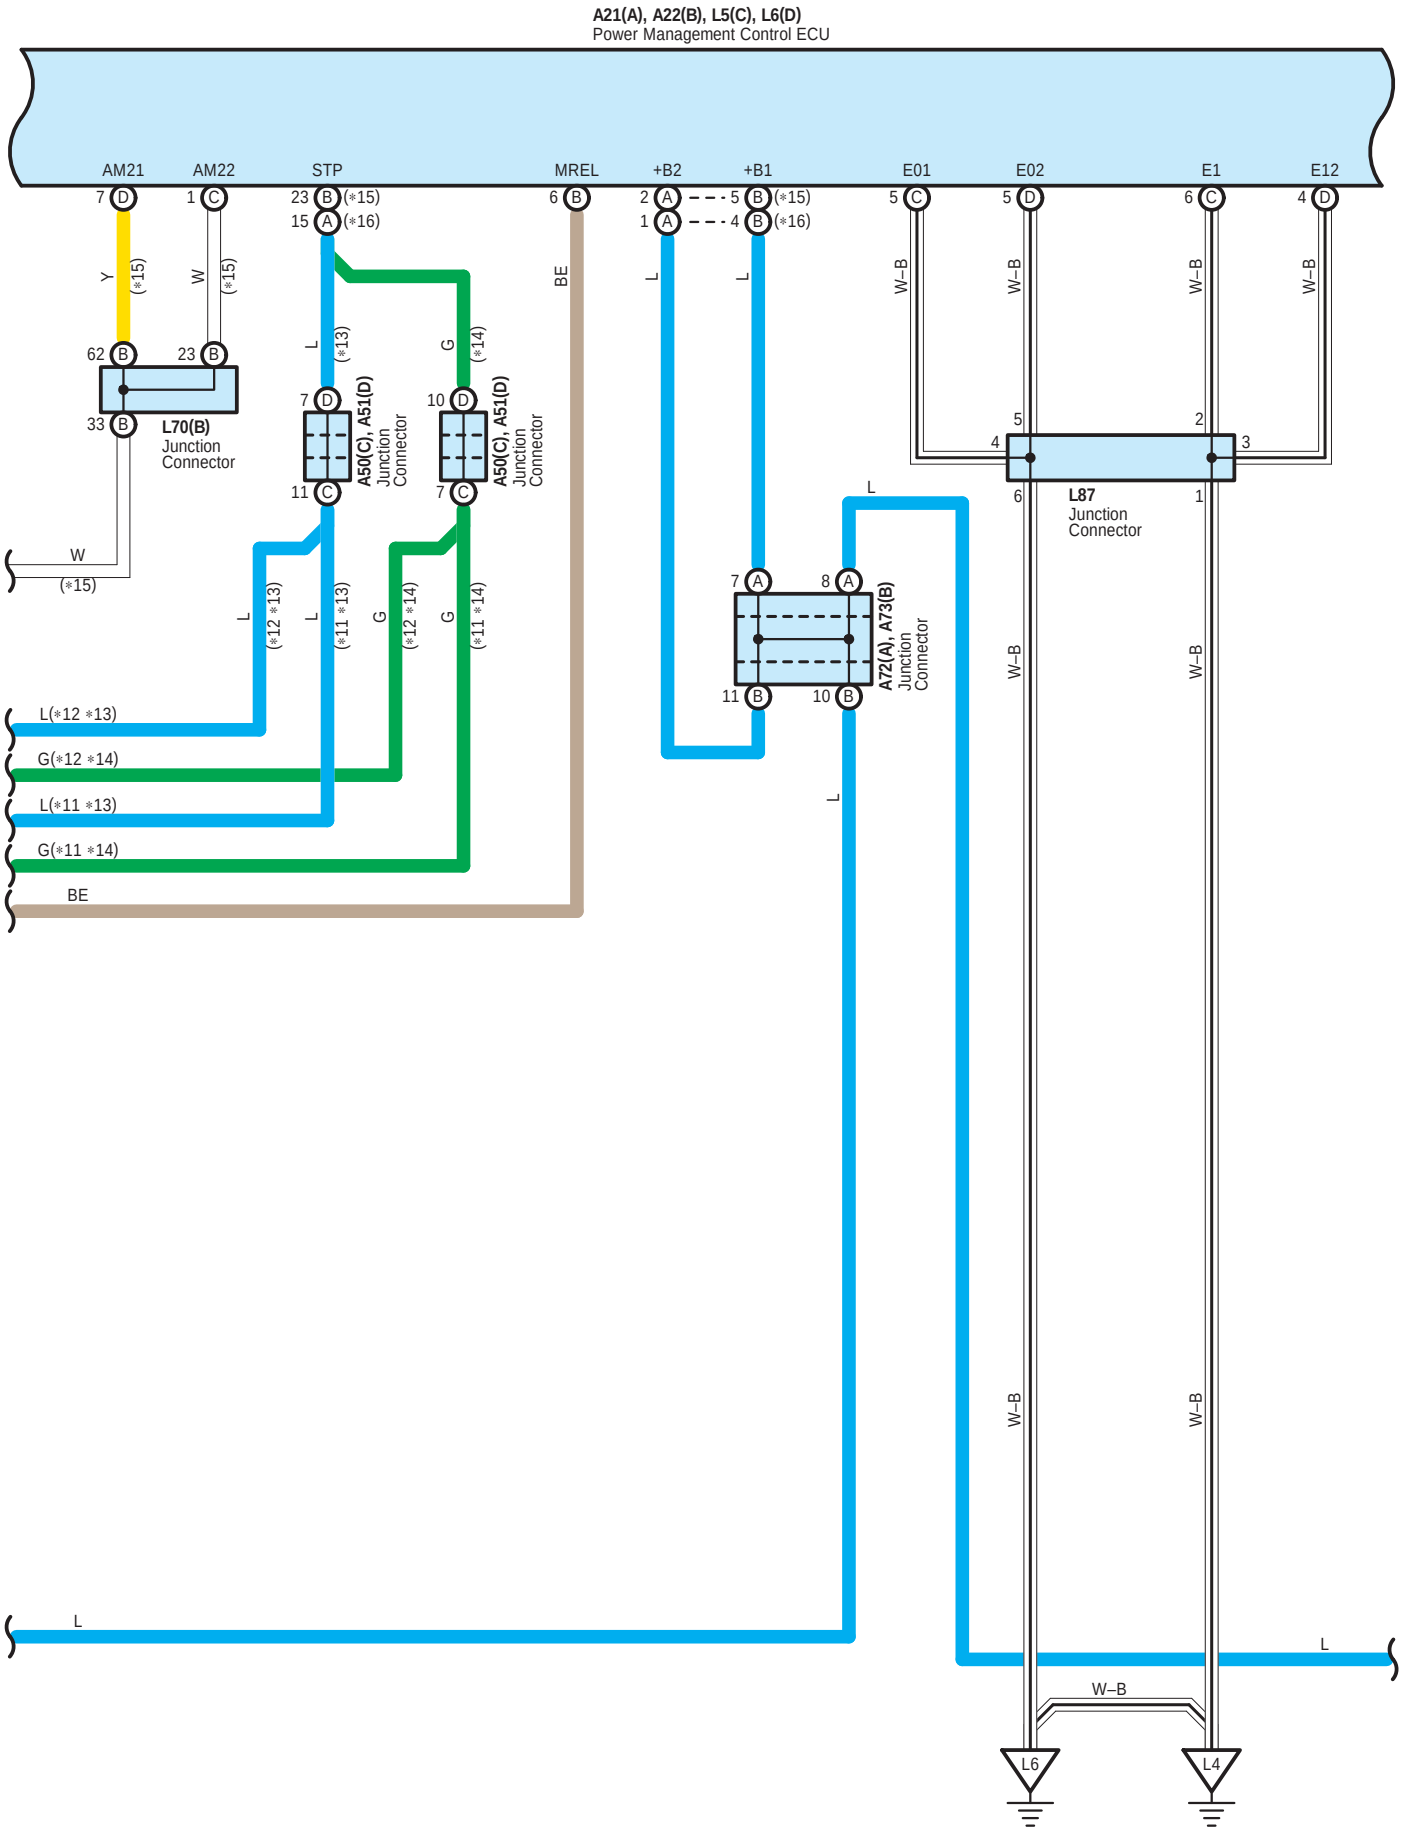
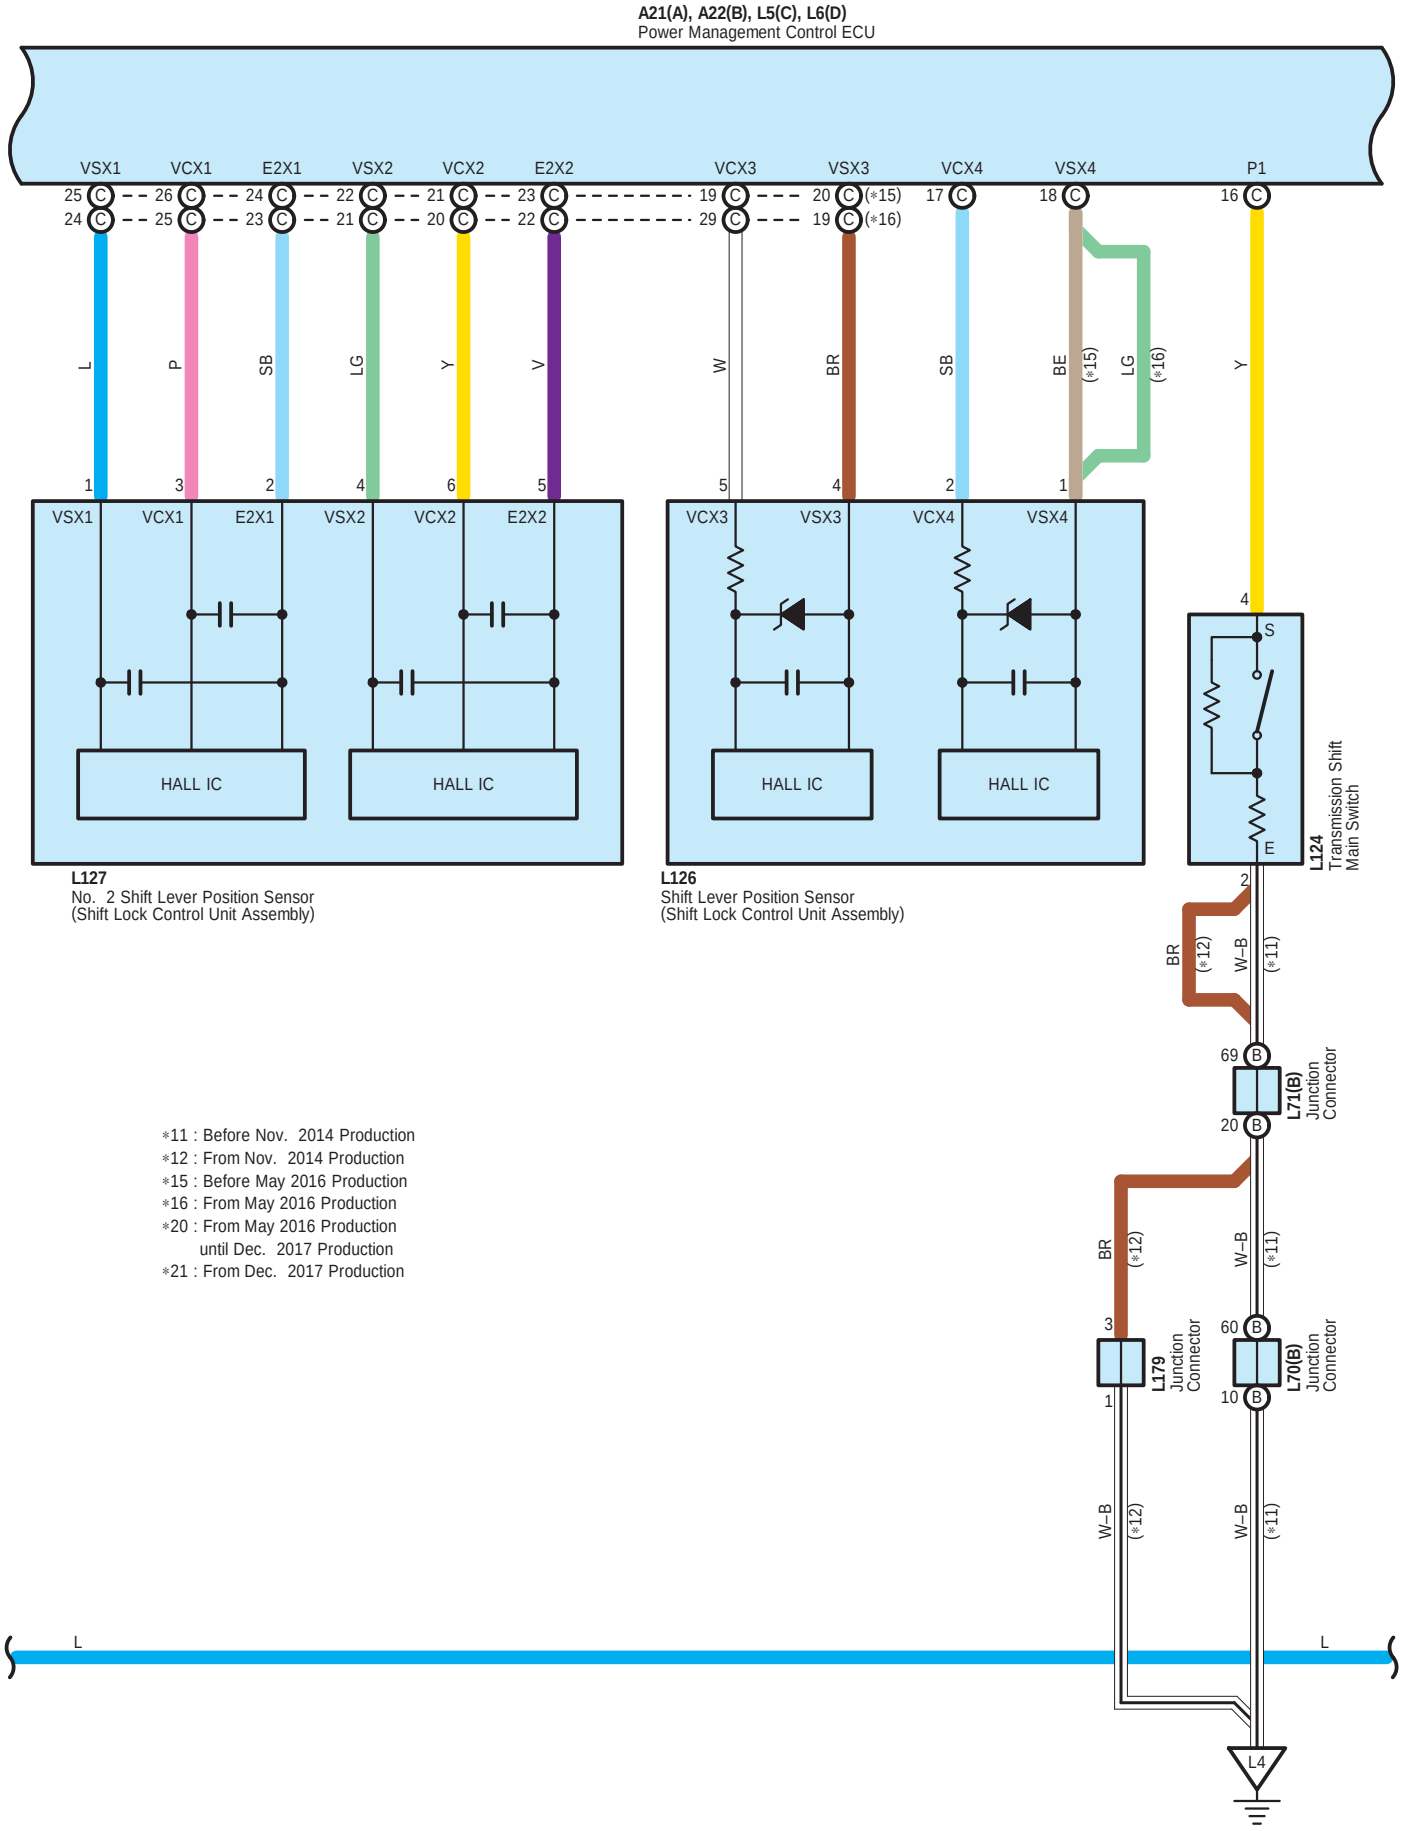
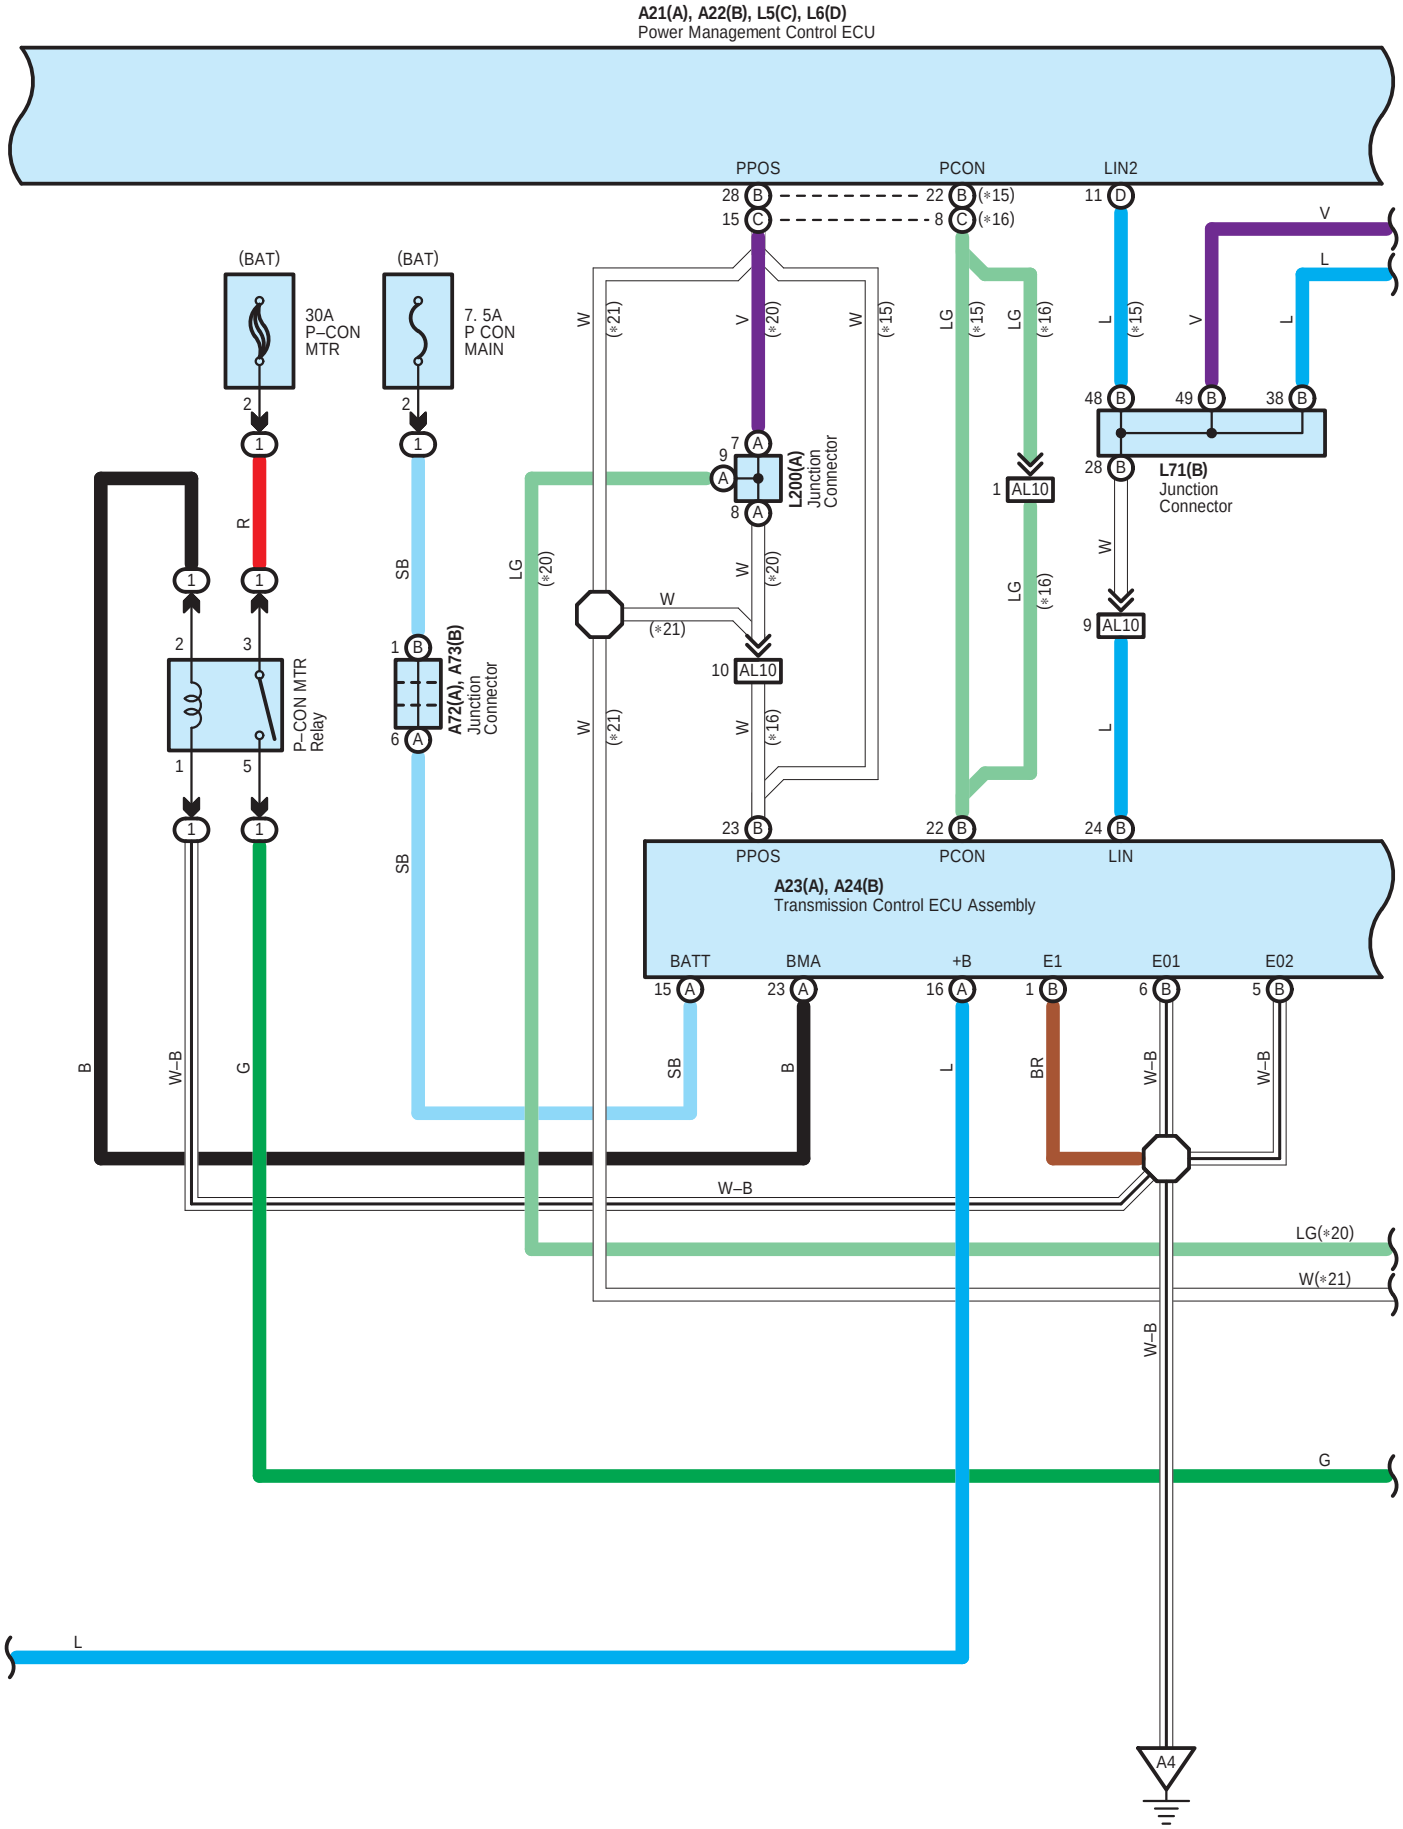
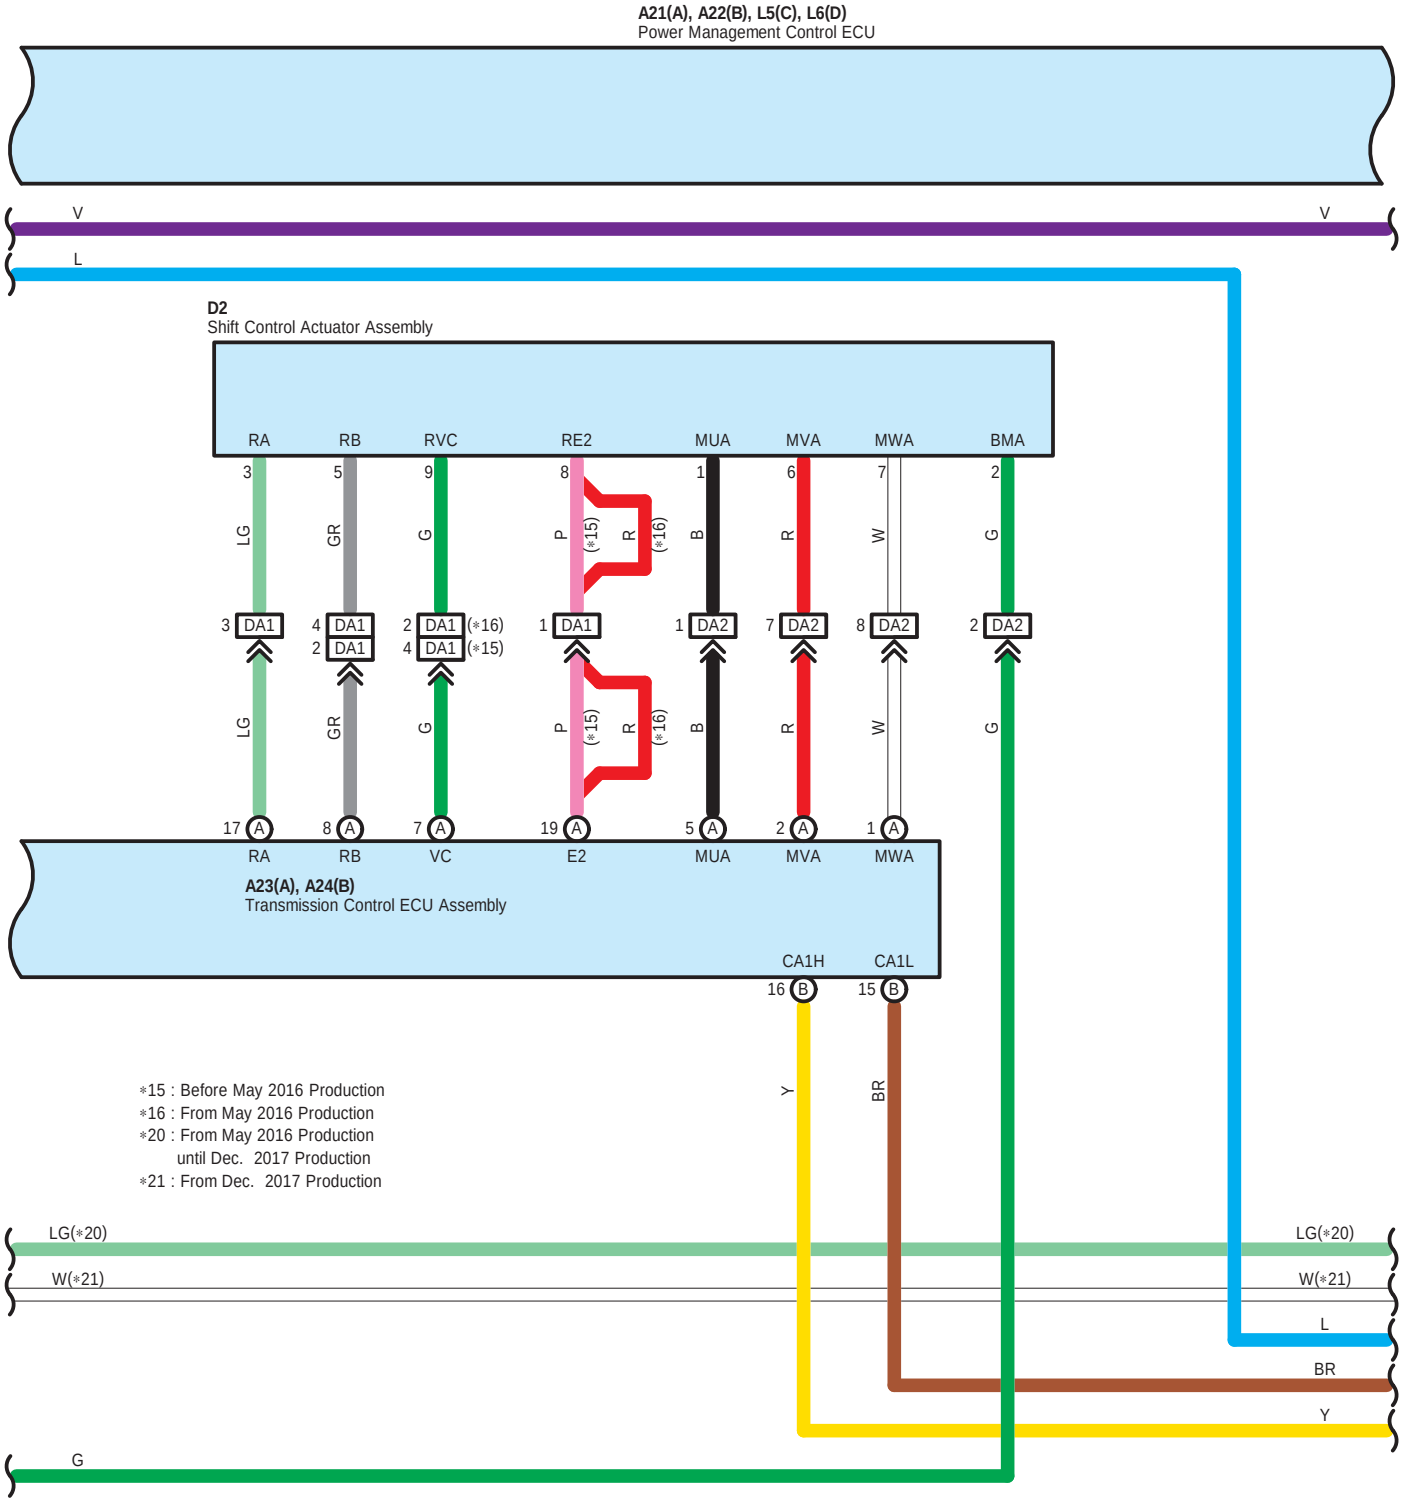

(BAT)
30A
IGCT
(BAT)
10A
STOP
(BAT)
7. 5A
AM2
A21(A), A22(B), L5(C), L6(D)
Power Management
Control ECU
BATT
A28
Stop Light Control
ECU Assembly
A26
Stop Light
Switch Assembly
A79(A), A80(B), A93(C)
Stop Light
Switch Assembly
AL11
IGCT
Relay
10A
IGCT
NO. 2
A56
Junction
Connector
A3
∗11 : Before Nov. 2014 Production
∗12 : From Nov. 2014 Production
∗13 : w/ Dynamic Radar Cruise Control
∗14 : w/o Dynamic Radar Cruise Control
∗15 : Before May 2016 Production
∗16 : From May 2016 Production
∗23 : Before Aug. 2020 Production
∗24 : From Aug. 2020 Production

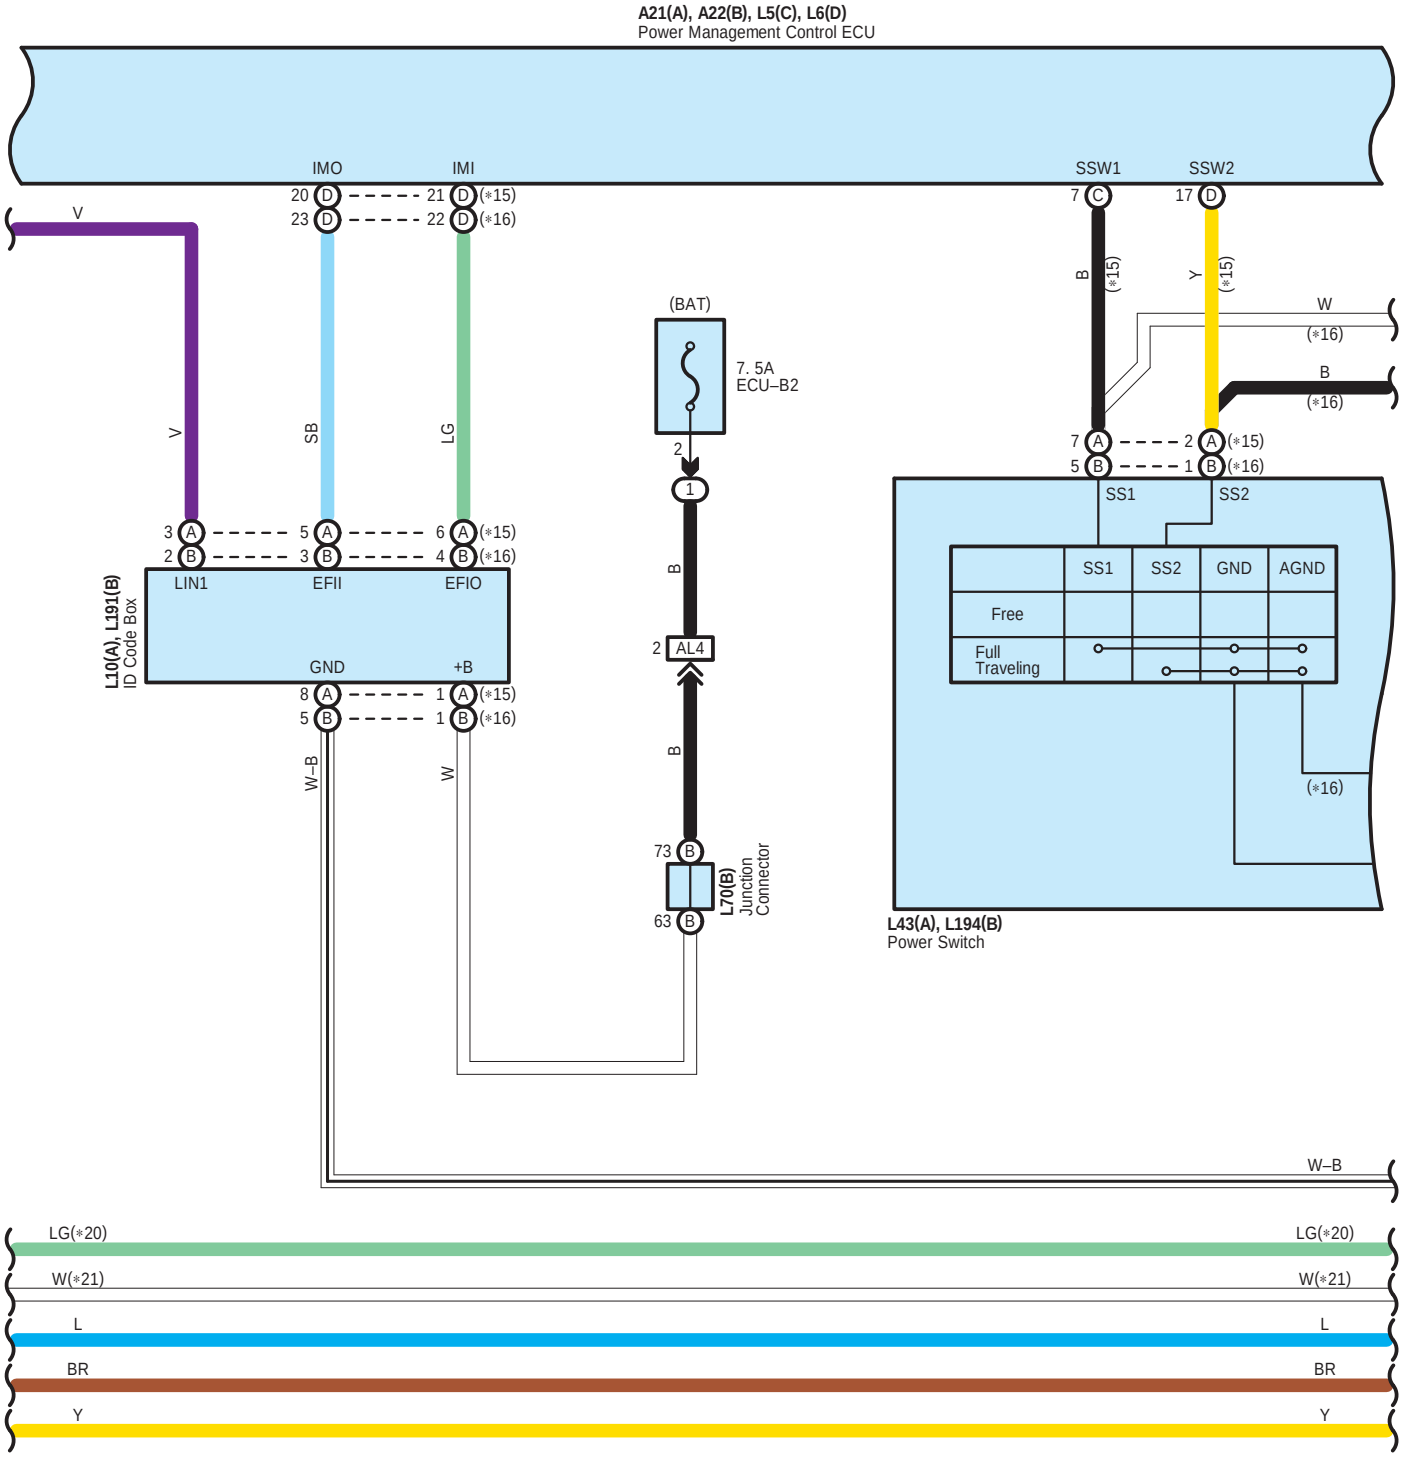

A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
AM21
AM22
STP
MREL
+B2
+B1
E01
E02
E1
E12
L70(B)
Junction Connector
A50(C), A51(D)
Junction Connector
A50(C), A51(D)
Junction Connector
L87
Junction Connector
A72(A), A73(B)
Junction Connector
L(*12 *13)
G(*12 *14)
L(*11 *13)
G(*11 *14)
BE
W
(*15)
W–B
L6
L4

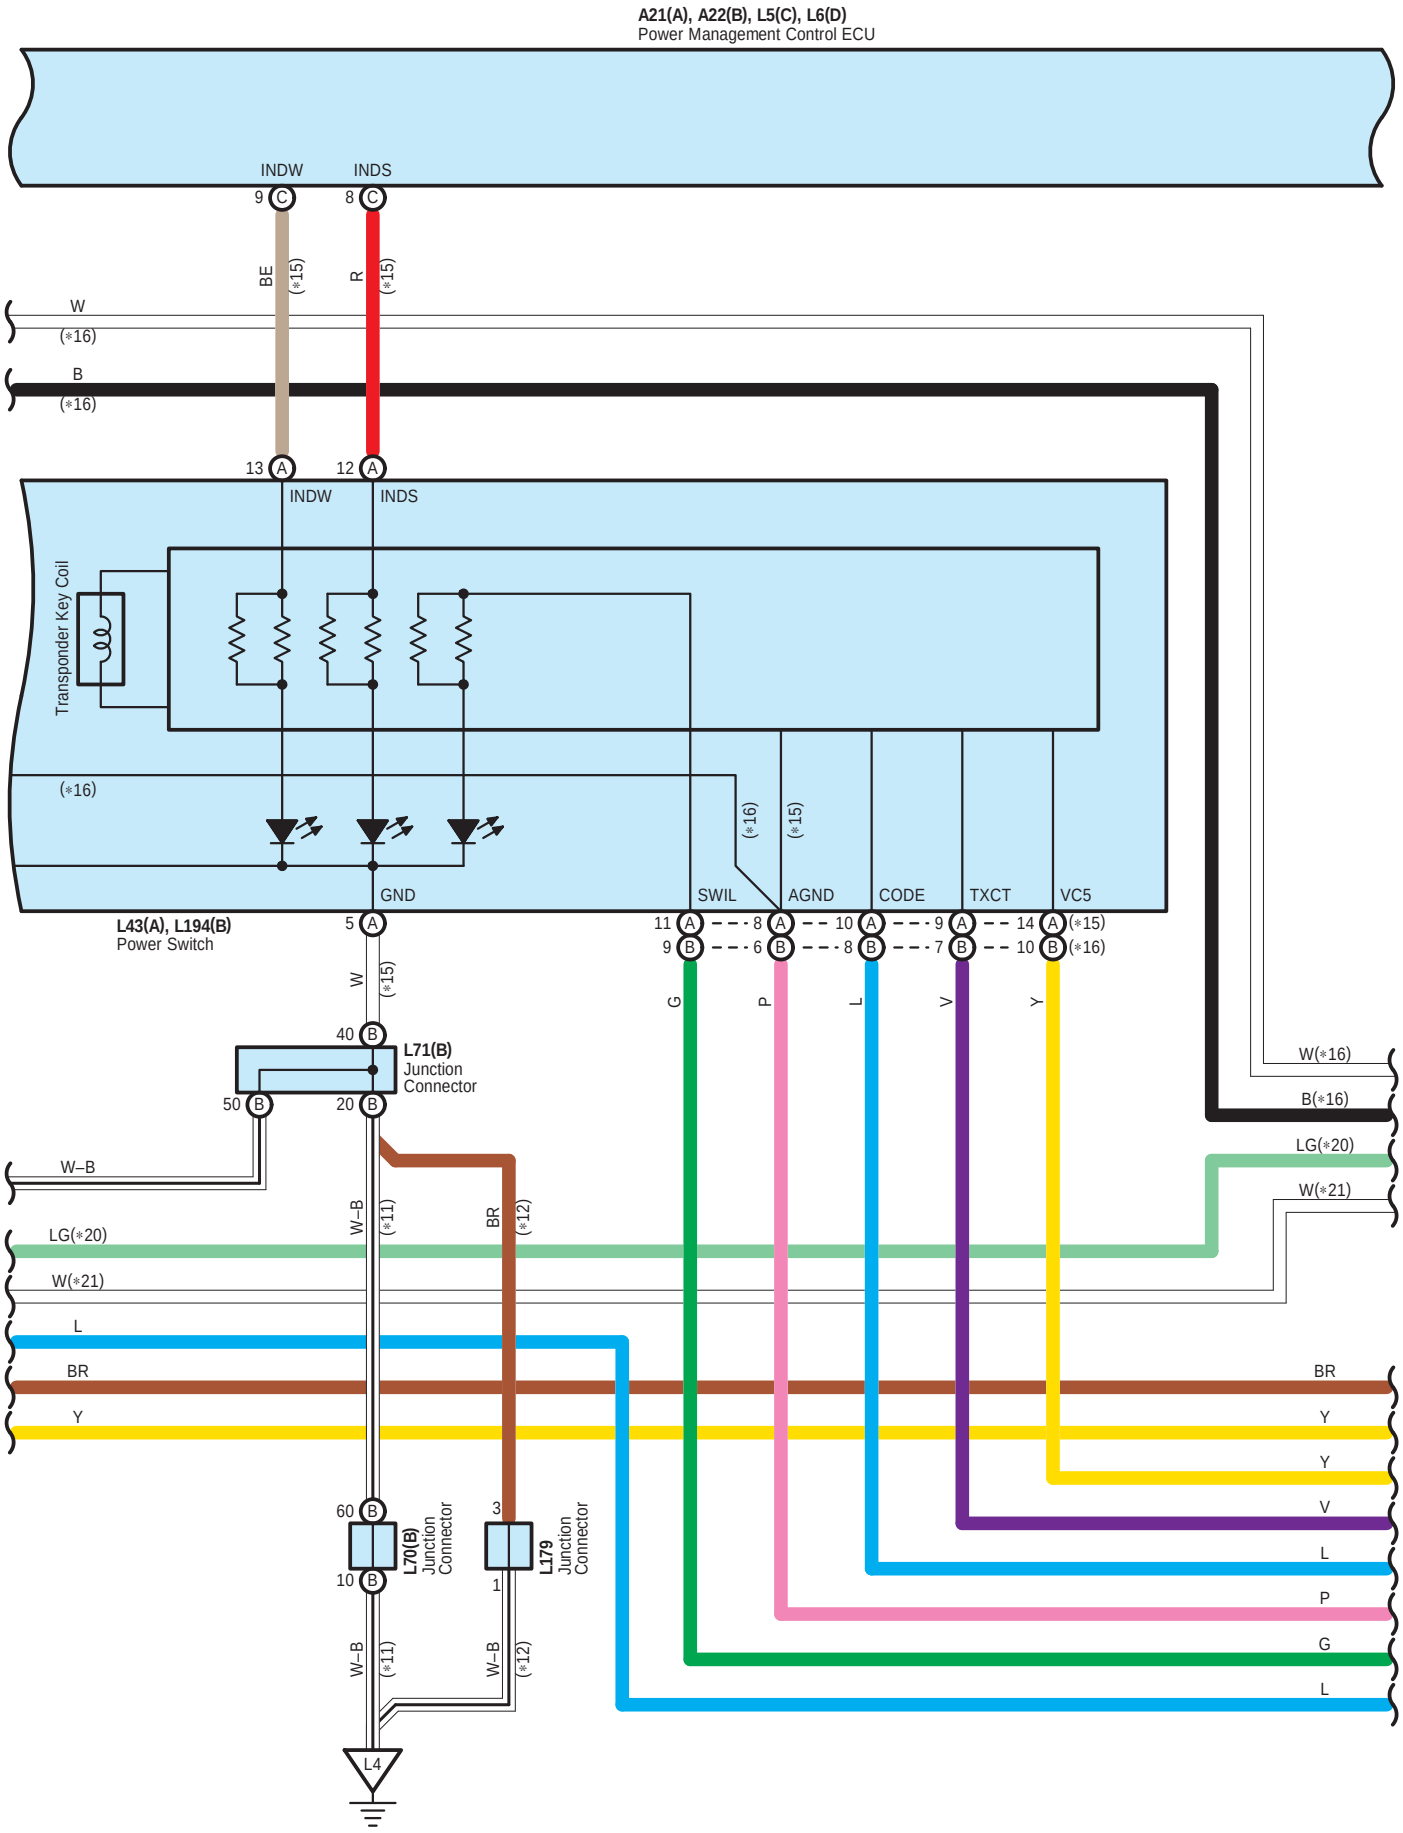


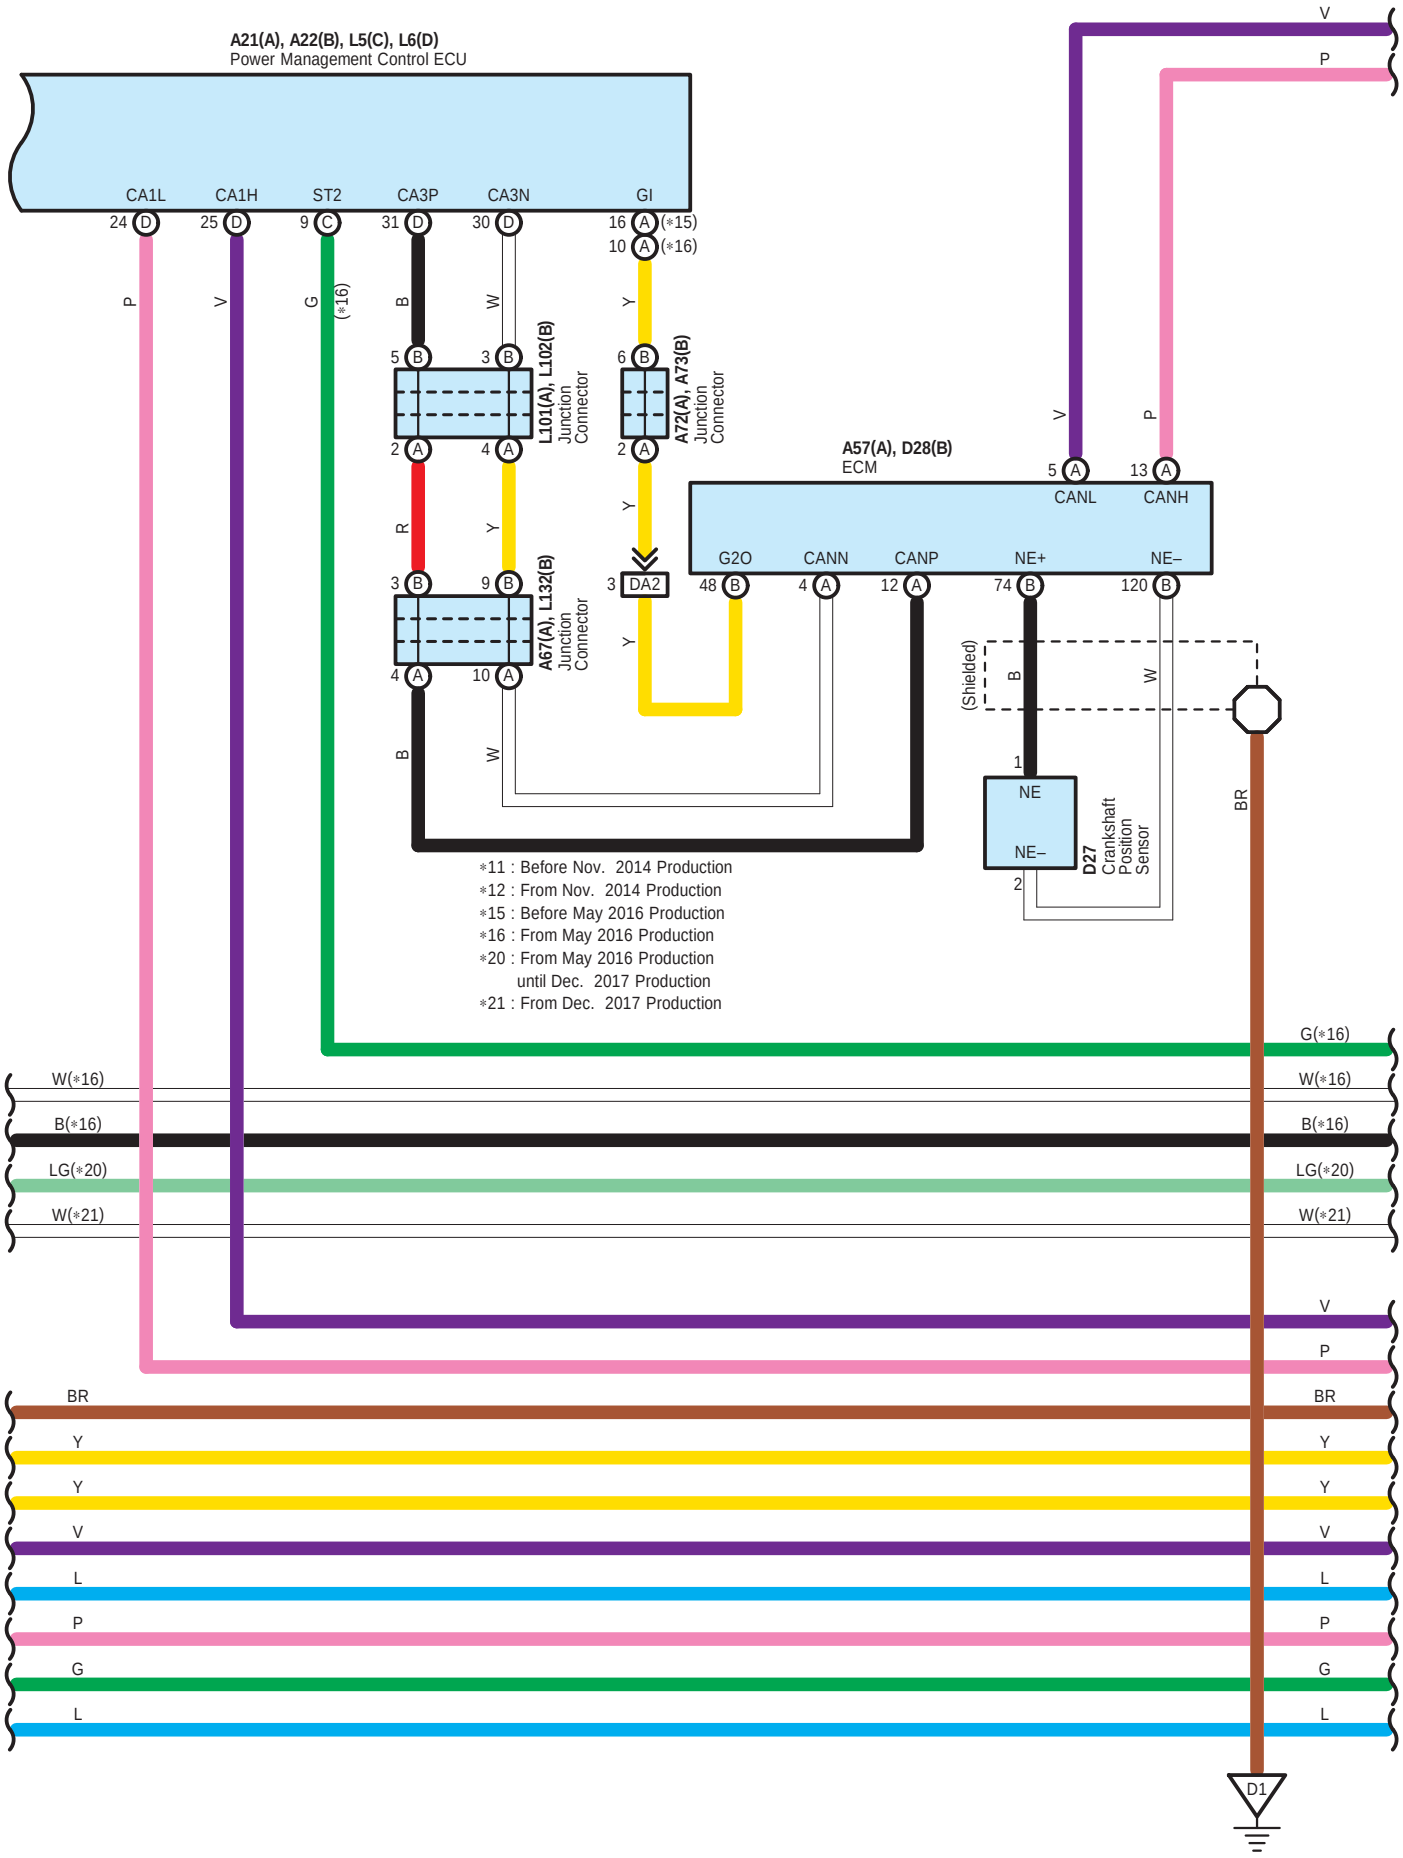

*11 : Before Nov. 2014 Production
*12 : From Nov. 2014 Production
*15 : Before May 2016 Production
*16 : From May 2016 Production
*20 : From May 2016 Production
until Dec. 2017 Production
*21 : From Dec. 2017 Production

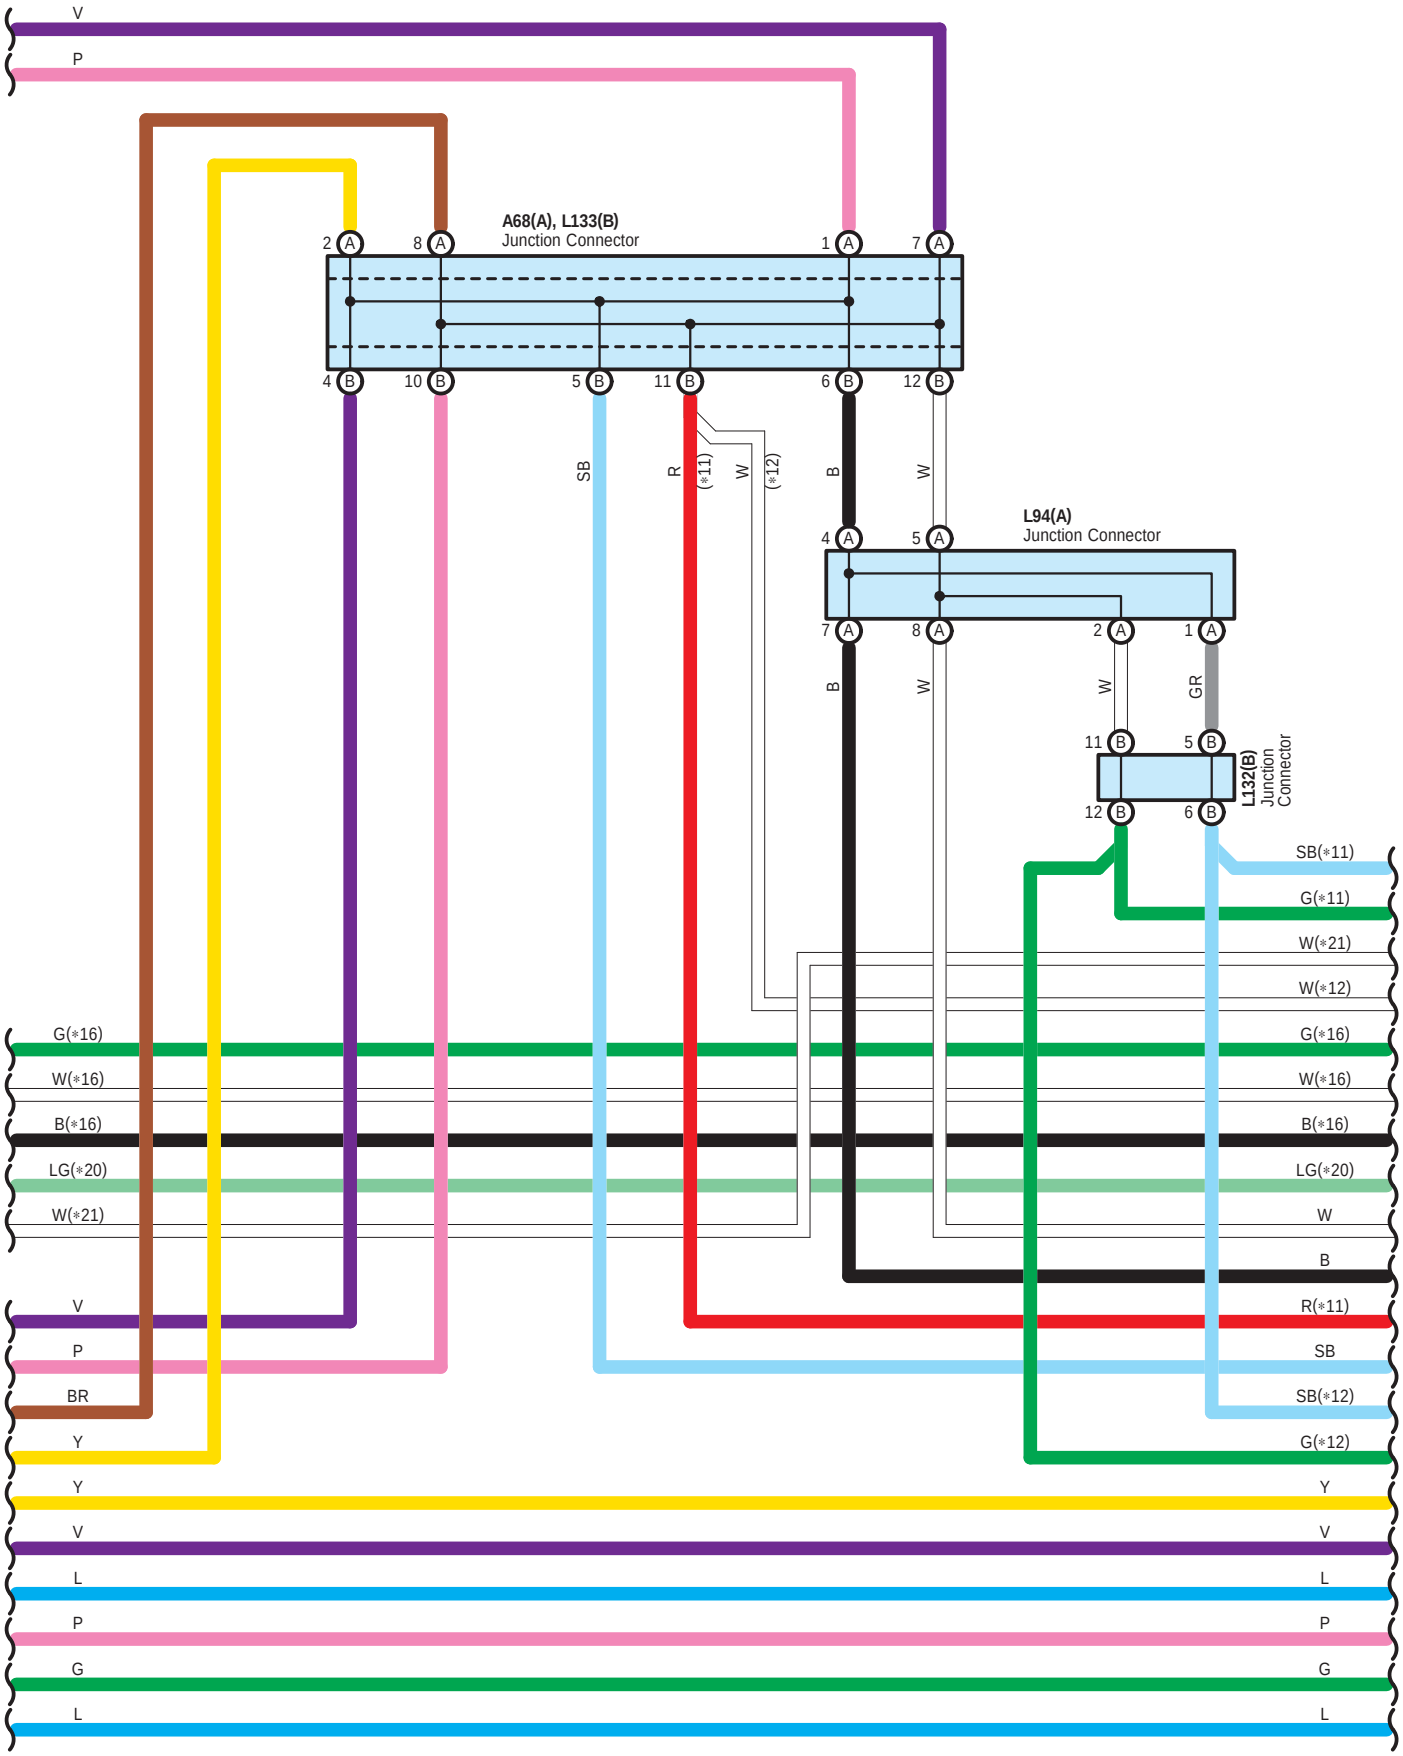

A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
PPOS
PCON
LIN2
28 B
15 C
22 B (*15)
8 C (*16)
11 D
(BAT)
30A
P–CON
MTR
7. 5A
P CON
MAIN
P–CON MTR
Relay
A72(A), A73(B)
Junction
Connector
L200(A)
Junction
Connector
L71(B)
Junction
Connector
AL10
A23(A), A24(B)
Transmission Control ECU Assembly
BATT
BMA
+B
E1
E01
E02
LIN
W–B
LG(*20)
W(*21)
G
L
A4

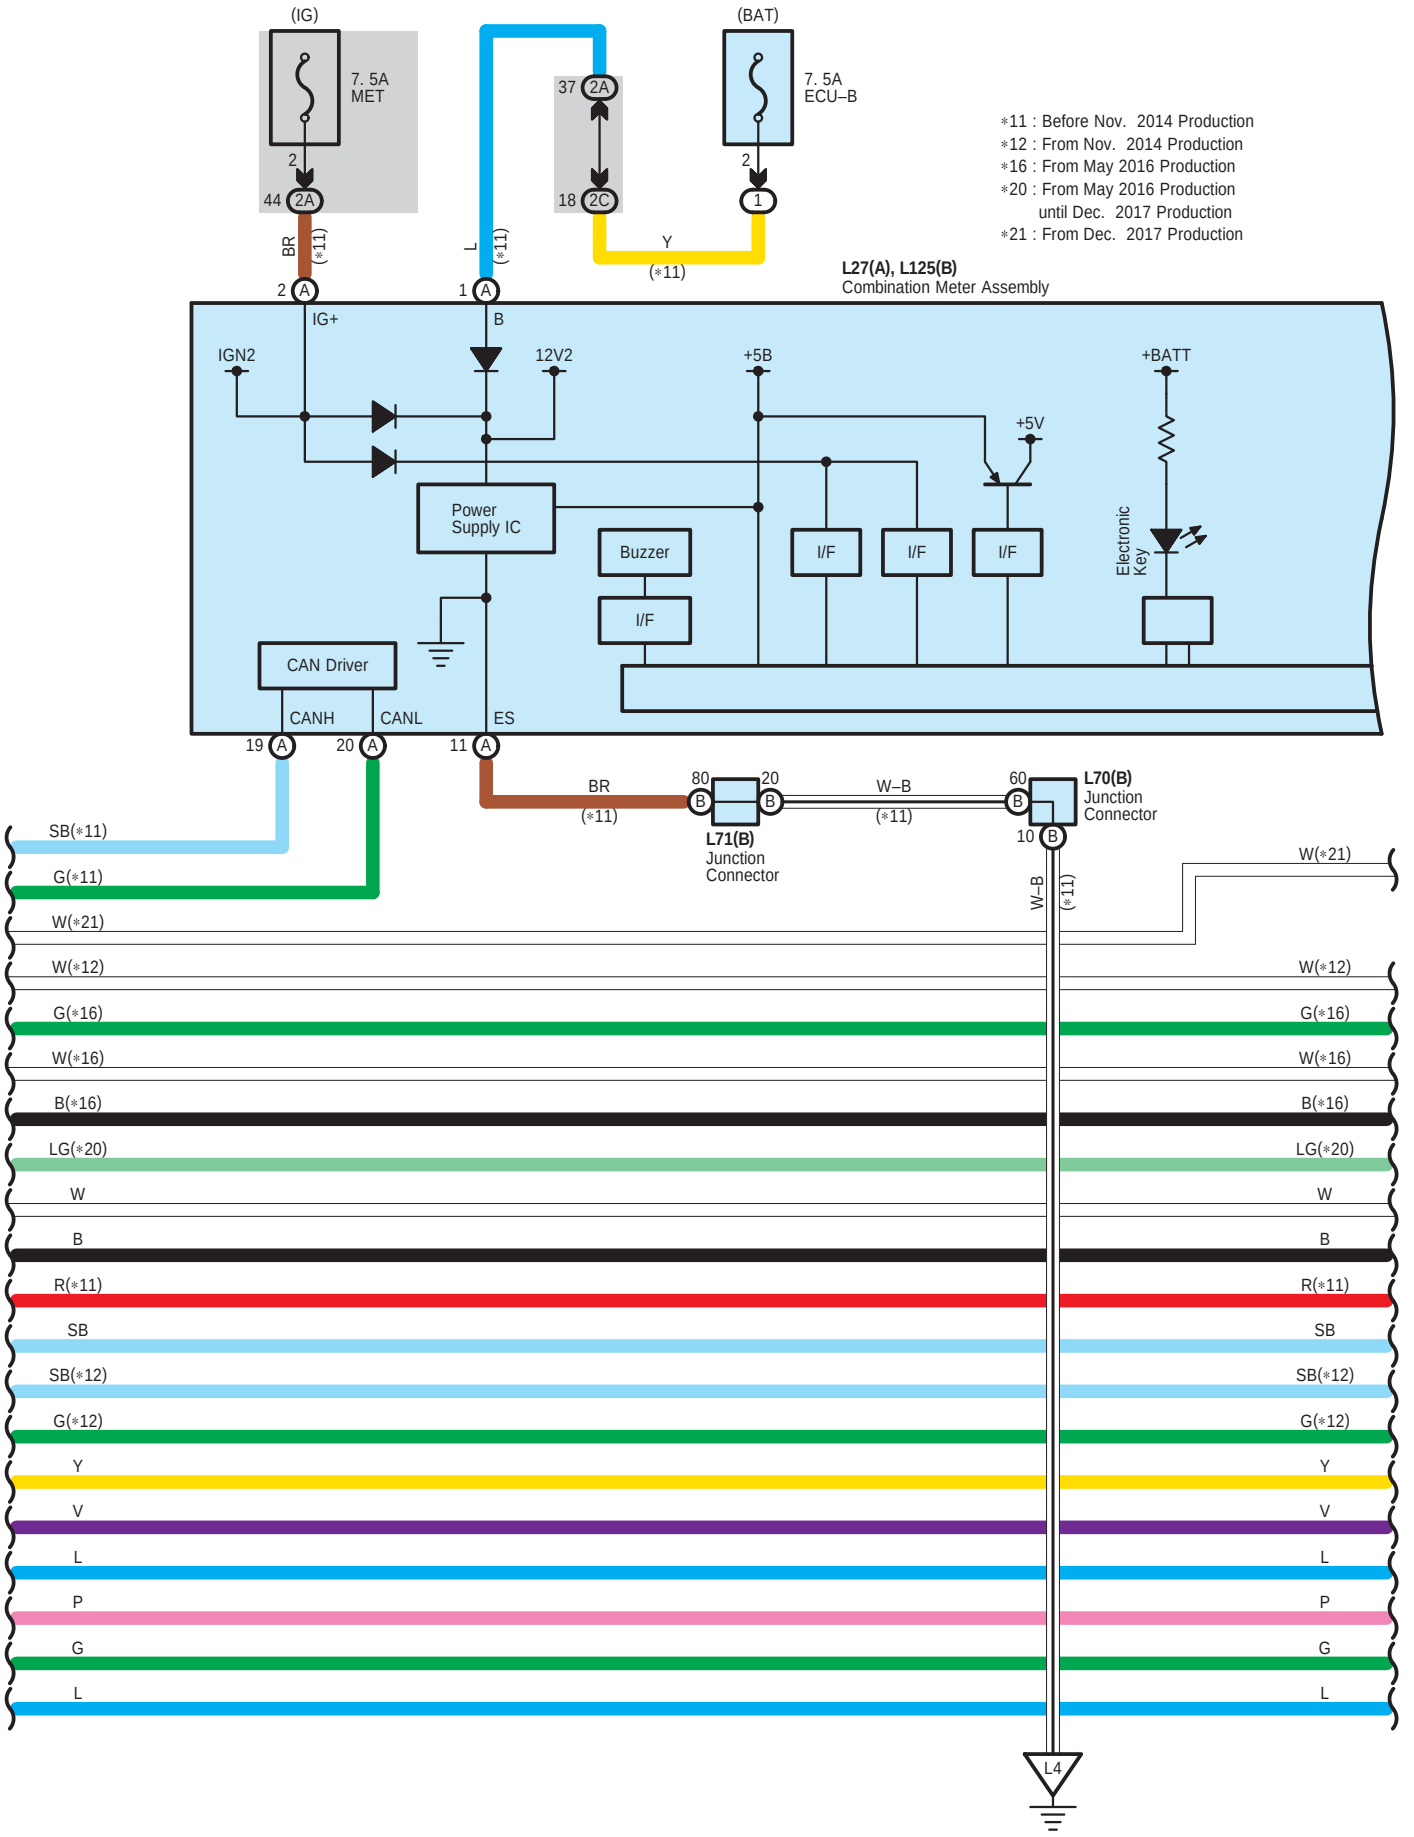

A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
V
V
L
D2
Shift Control Actuator Assembly
RA
RB
RVC
RE2
MUA
MVA
MWA
BMA
3
5
9
8
1
6
7
2
LG
GR
G
P
(*15)
R
(*16)
B
R
W
G
3 DA1
4 DA1
2 DA1
2 DA1
4 DA1
(*16)
(*15)
1 DA1
1 DA2
7 DA2
8 DA2
2 DA2
17 A
8 A
7 A
19 A
5 A
2 A
1 A
RA
RB
VC
E2
MUA
MVA
MWA
A23(A), A24(B)
Transmission Control ECU Assembly
CA1H
CA1L
16 B
15 B
Y
BR
*15 : Before May 2016 Production
*16 : From May 2016 Production
*20 : From May 2016 Production
until Dec. 2017 Production
*21 : From Dec. 2017 Production
LG(*20)
W(*21)
LG(*20)
W(*21)
L
BR
Y
G

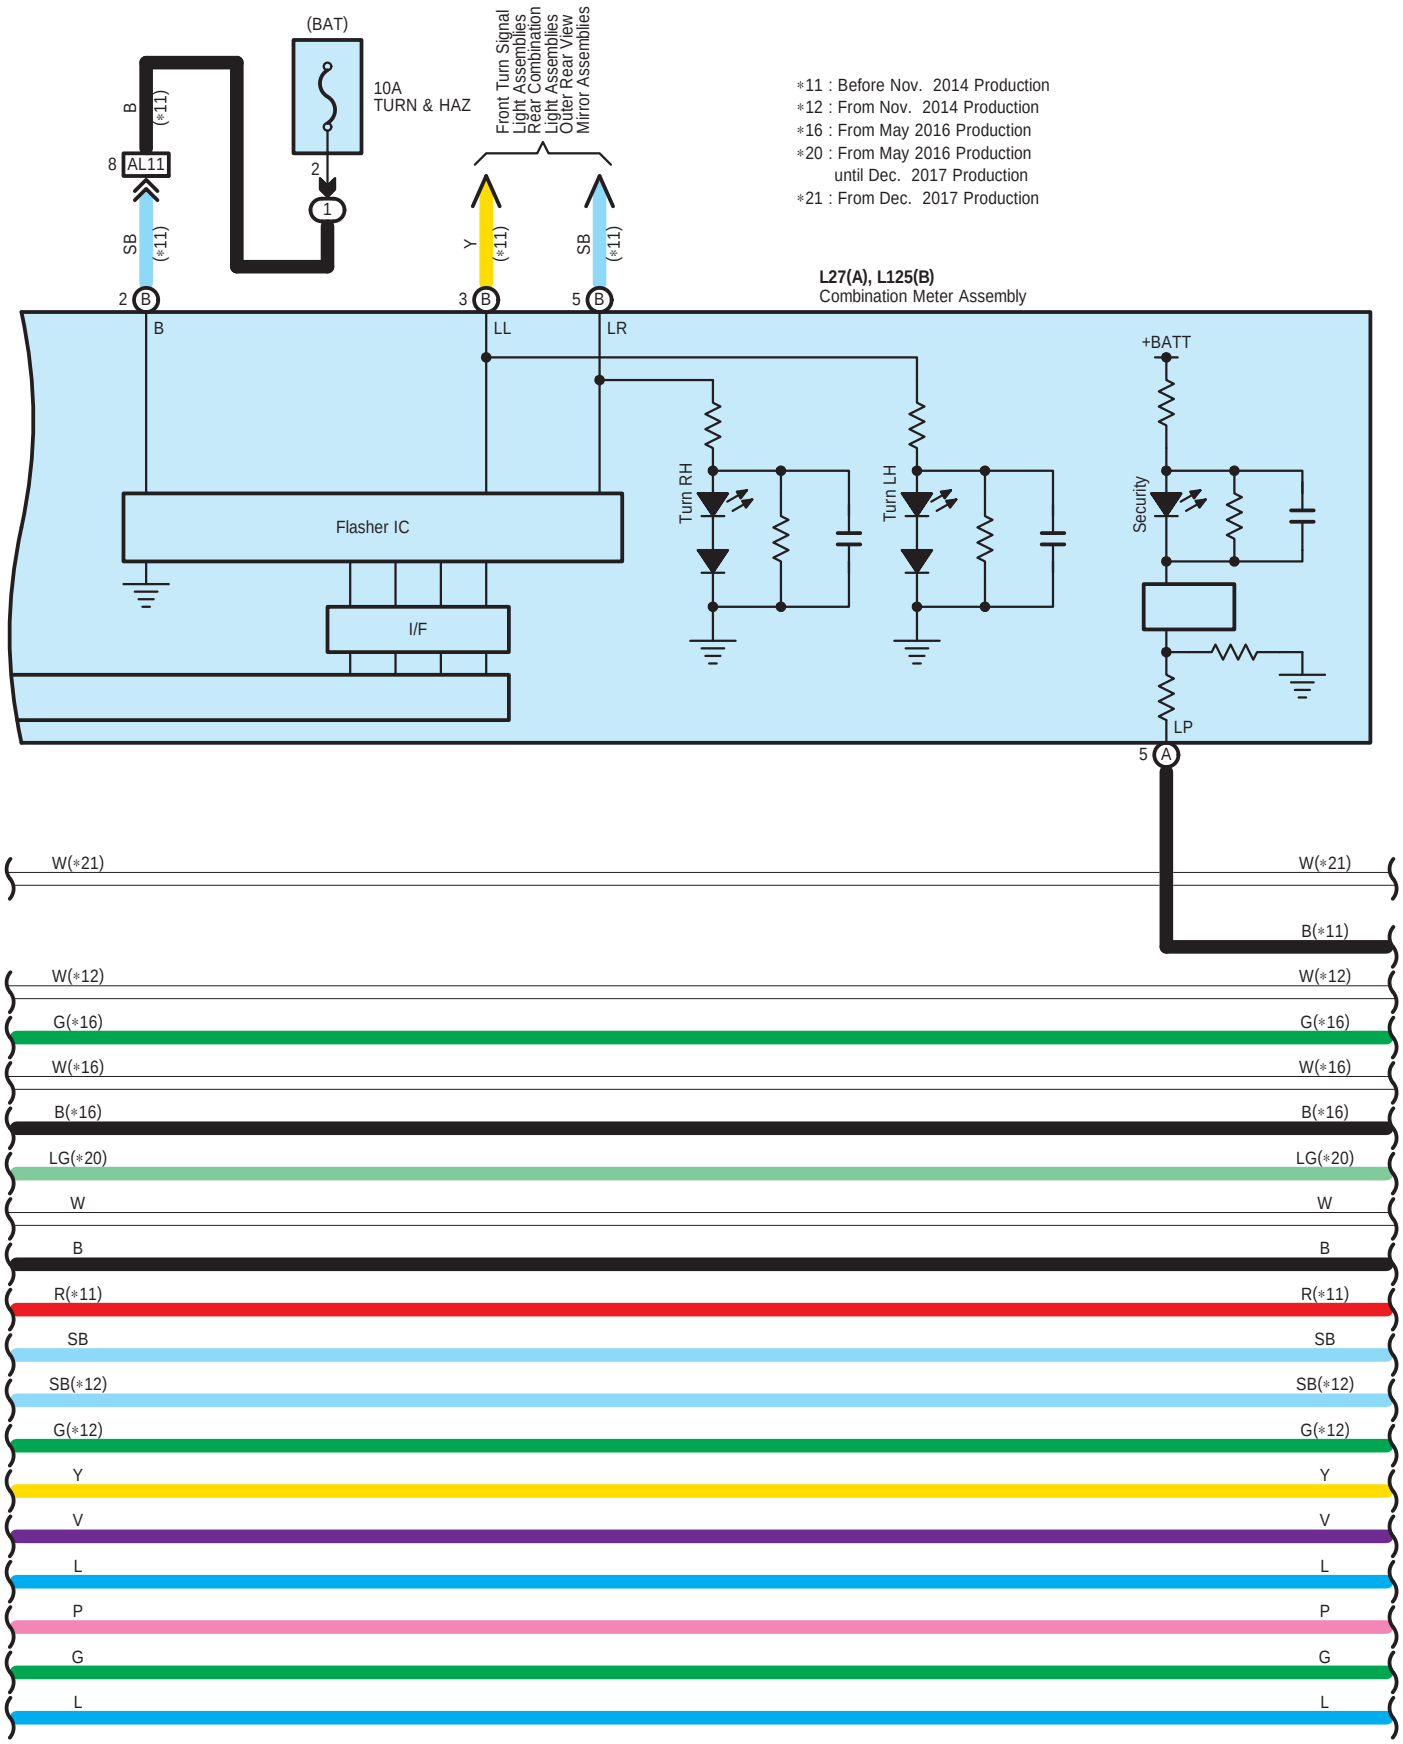

A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
IMO
IMI
SSW1
SSW2
20 D
21 D (*15)
23 D
22 D (*16)
7 C
17 D
V
B (*15)
Y (*15)
W (*16)
B (*16)
(BAT)
7. 5A
ECU–B2
2
1
V
SB
LG
7 A
2 A (*15)
5 B
1 B (*16)
3 A
5 A
6 A (*15)
2 B
3 B
4 B (*16)
SS1
SS2
LIN1
EFII
EFIO
B
2 AL4
B
GND
AGND
Free
Full Traveling
L10(A), L191(B)
ID Code Box
GND
+B
8 A
1 A (*15)
5 B
1 B (*16)
(*16)
W–B
W
73 B
63 B
L70(B)
Junction Connector
L43(A), L194(B)
Power Switch
W–B
LG(*20)
LG(*20)
W(*21)
W(*21)
L
L
BR
BR
Y
Y

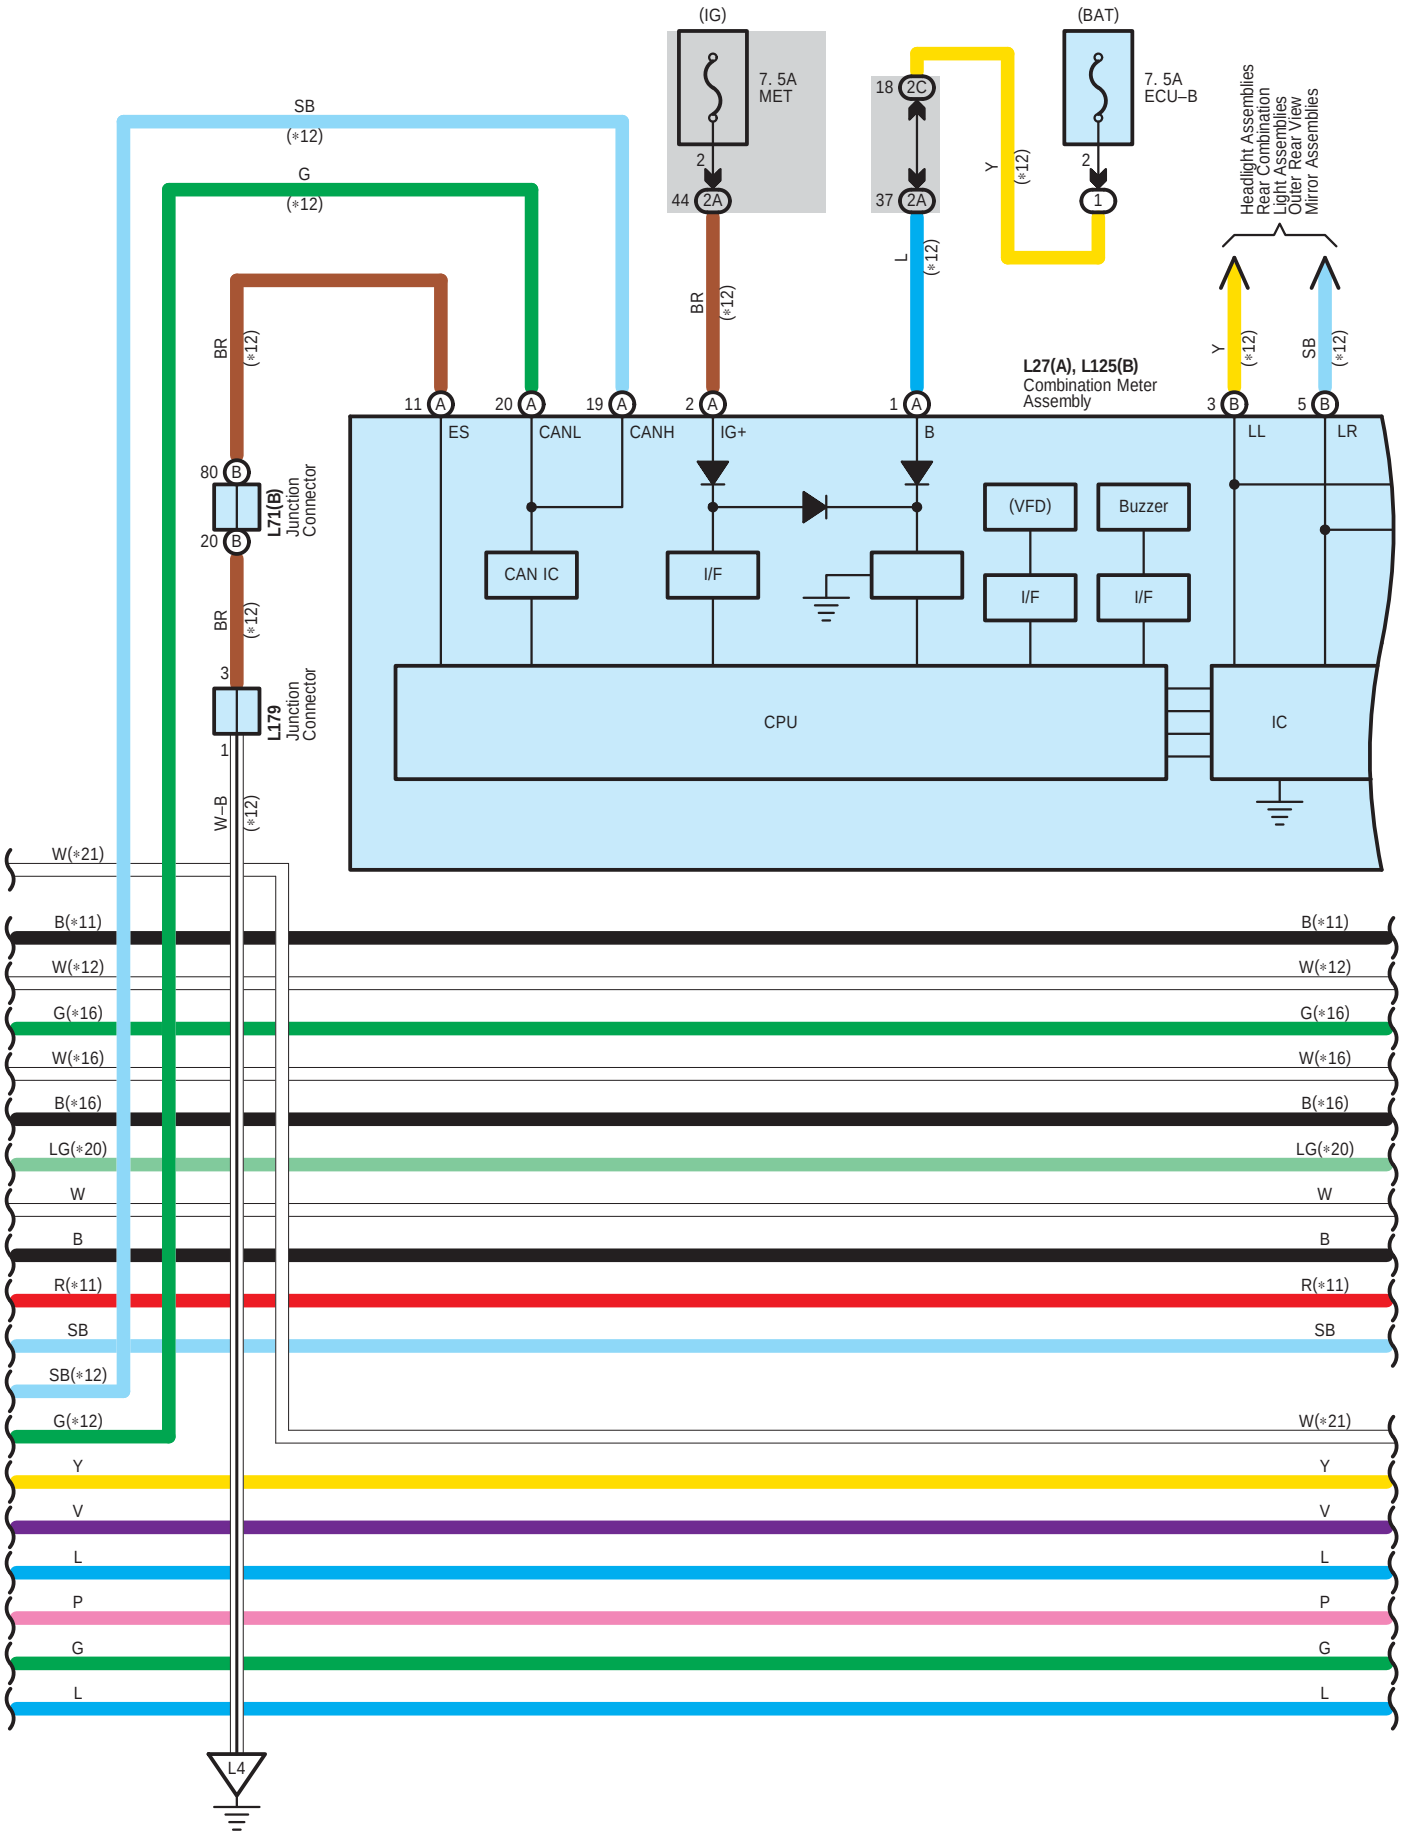

A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
INDW
INDS
9 C
8 C
BE (*15)
R (*15)
W (*16)
B (*16)
13 A
12 A
INDW
INDS
Transponder Key Coil
(*16)
GND
SWIL
AGND
CODE
TXCT
VC5
(*16)
(*15)
L43(A), L194(B)
Power Switch
5 A
W (*15)
40 B
L71(B)
Junction Connector
50 B
20 B
W–B
LG(*20)
W(*21)
L
BR
Y
W–B (*11)
BR (*12)
60 B
10 B
L70(B)
Junction Connector
3
1
L179
Junction Connector
W–B (*11)
W–B (*12)
L4
11 A
9 B
8 A
6 B
10 A
8 B
9 A
7 B
14 A
10 B
(*15)
(*16)
G
P
L
V
Y
W(*16)
B(*16)
LG(*20)
W(*21)
BR
Y
Y
V
L
P
G
L

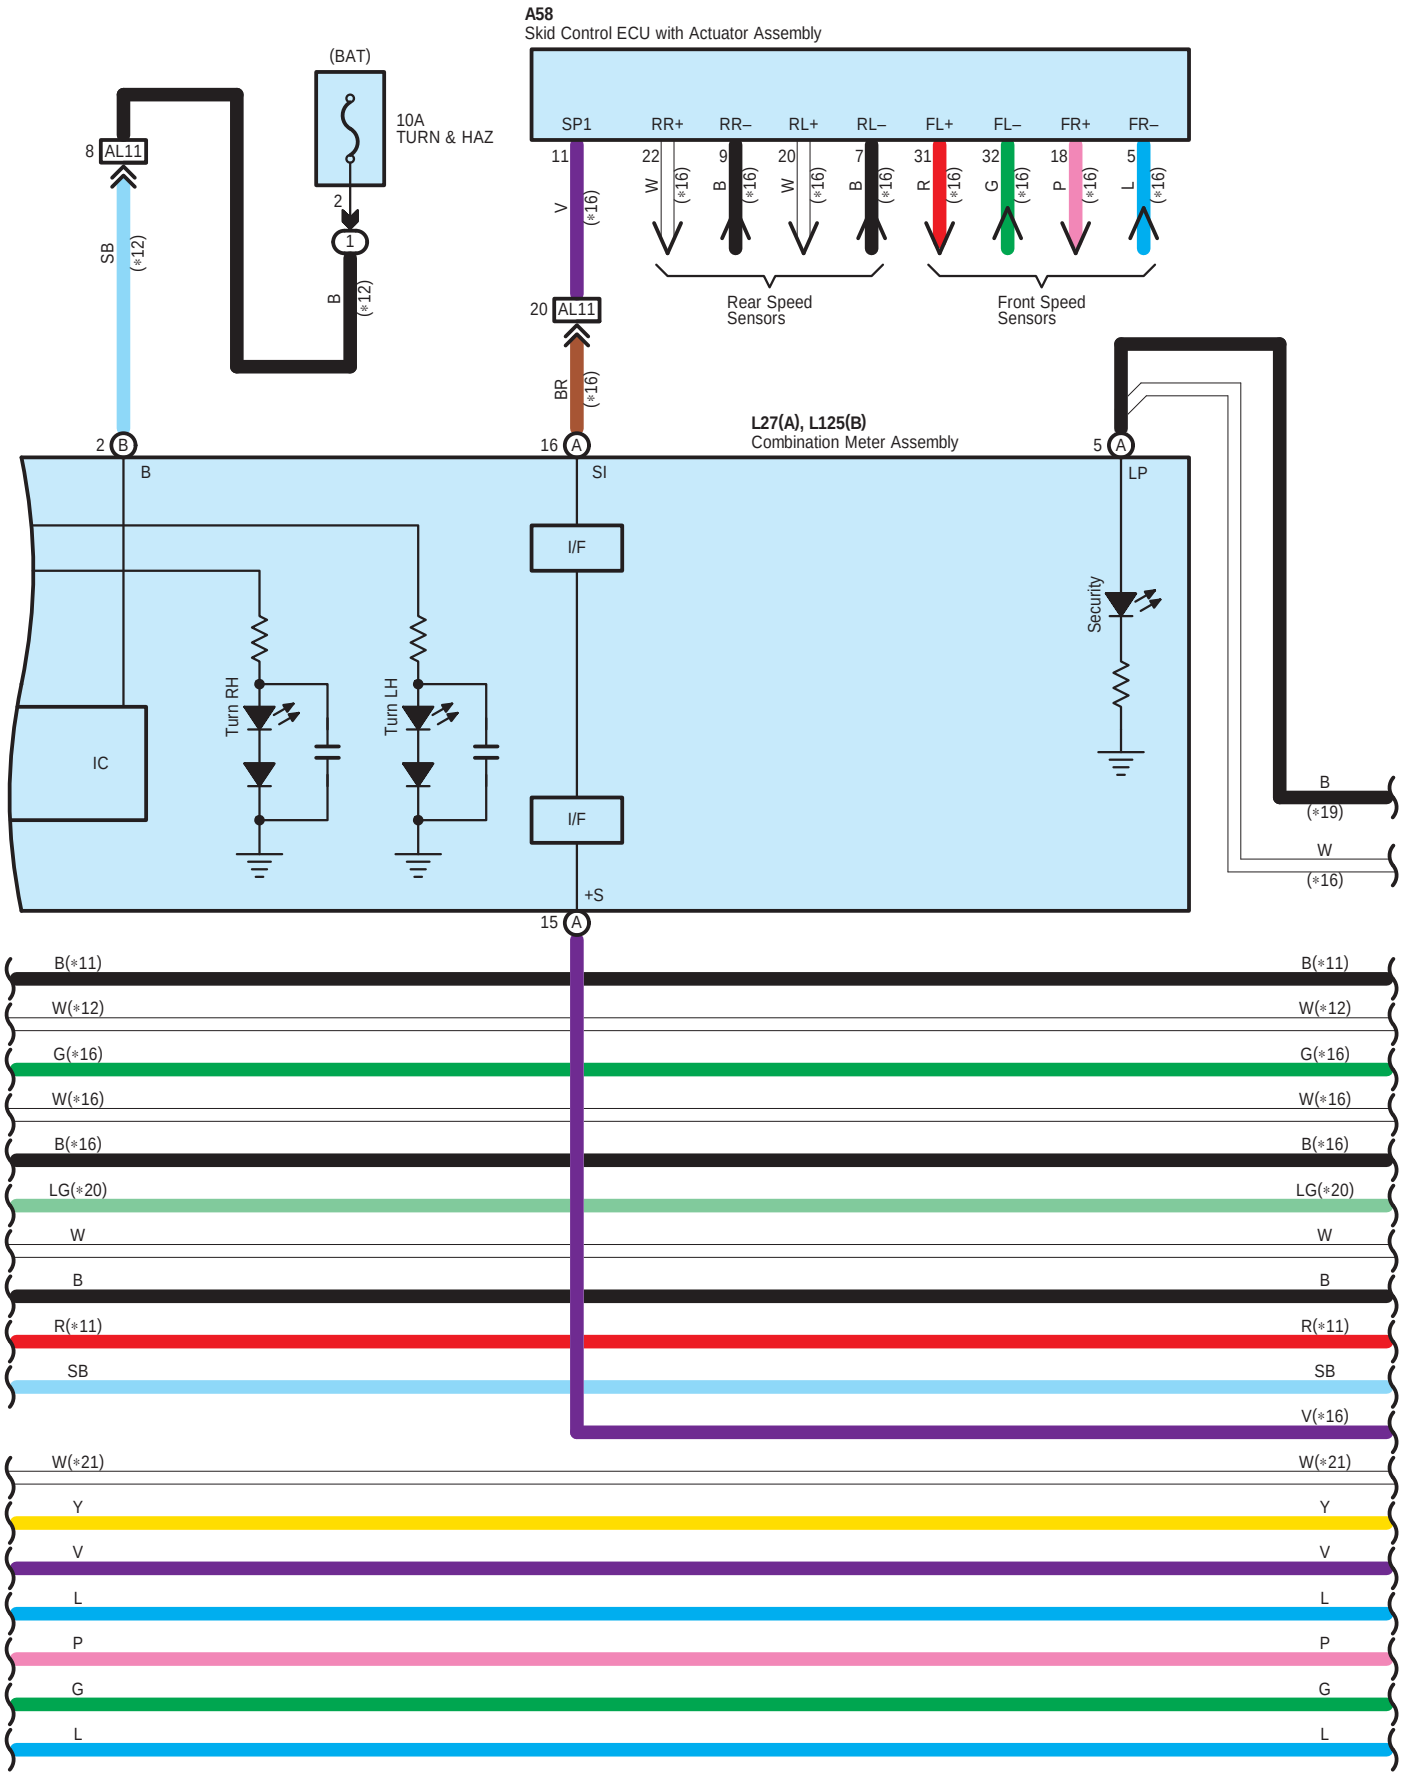

A21(A), A22(B), L5(C), L6(D)
Power Management Control ECU
CA1L
CA1H
ST2
CA3P
CA3N
GI
24 D
25 D
9 C
31 D
30 D
16 A (*15)
10 A (*16)
P
V
G (*16)
B
W
Y
5 B
3 B
6 B
2 A
4 A
2 A
L101(A), L102(B) Junction Connector
A72(A), A73(B) Junction Connector
R
Y
Y
3 B
9 B
3 DA2
A67(A), L132(B) Junction Connector
4 A
10 A
B
W
Y
A57(A), D28(B)
ECM
G2O
CANN
CANP
NE+
NE–
48 B
4 A
12 A
74 B
120 B
V
P
5 A
13 A
CANL
CANH
(Shielded)
B
W
1
NE
NE–
2
D27 Crankshaft Position Sensor
BR
*11 : Before Nov. 2014 Production
*12 : From Nov. 2014 Production
*15 : Before May 2016 Production
*16 : From May 2016 Production
*20 : From May 2016 Production
until Dec. 2017 Production
*21 : From Dec. 2017 Production
G(*16)
W(*16)
B(*16)
LG(*20)
W(*21)
V
P
BR
Y
Y
V
L
P
G
L
D1

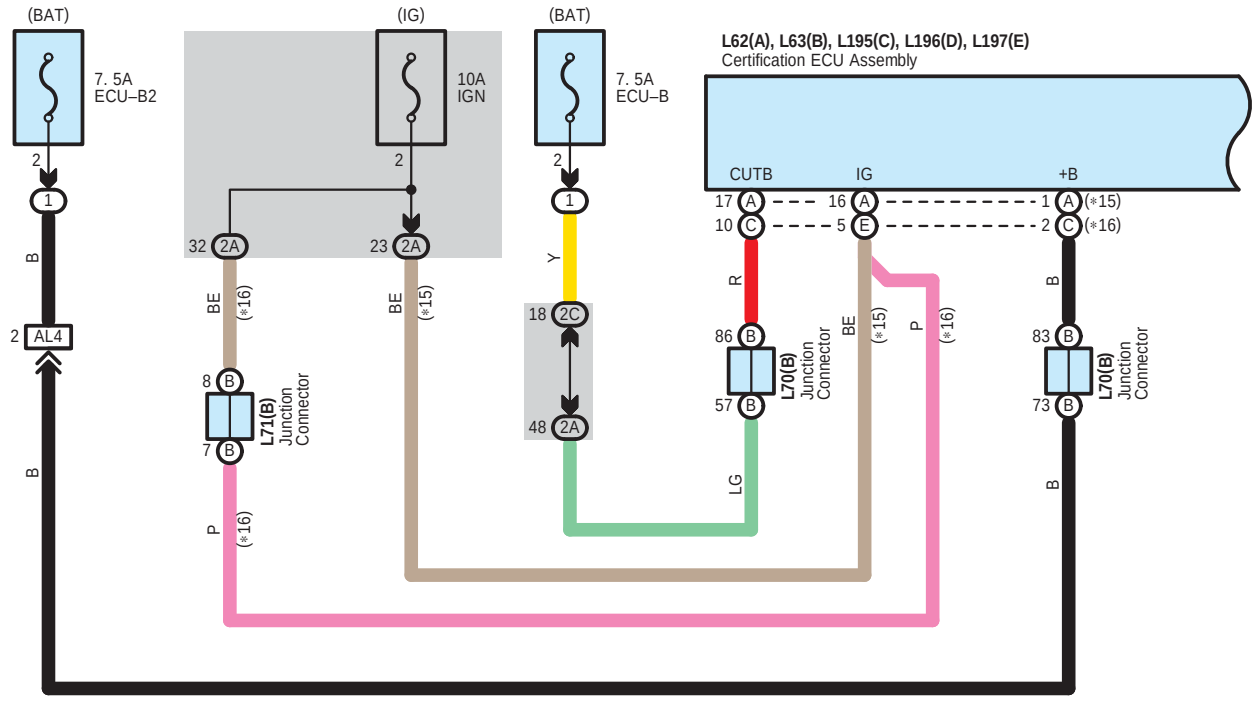

A68(A), L133(B)
Junction Connector
L94(A)
Junction Connector
L132(B)
Junction Connector
V
P
BR
Y
L
G
SB
R
(*11)
W
(*12)
B
GR
G(*16)
W(*16)
B(*16)
LG(*20)
W(*21)
SB(*11)
G(*11)
W(*21)
W(*12)
G(*16)
W(*16)
B(*16)
LG(*20)
W
B
R(*11)
SB
SB(*12)
G(*12)


(IG)
7. 5A
MET
2
44 2A
BR
(∗11)
(BAT)
7. 5A
ECU–B
2
1
37 2A
18 2C
L
(∗11)
Y
(∗11)
∗11 : Before Nov. 2014 Production
∗12 : From Nov. 2014 Production
∗16 : From May 2016 Production
∗20 : From May 2016 Production
until Dec. 2017 Production
∗21 : From Dec. 2017 Production
L27(A), L125(B)
Combination Meter Assembly
2 A
IG+
1 A
B
IGN2
12V2
+5B
+5V
+BATT
Power
Supply IC
Buzzer
I/F
I/F
I/F
I/F
Electronic
Key
CAN Driver
CANH
CANL
ES
19 A
20 A
11 A
BR
(∗11)
80 B
20 B
W–B
(∗11)
60 B
10 B
L71(B)
Junction
Connector
L70(B)
Junction
Connector
W–B
(∗11)
SB(∗11)
G(∗11)
W(∗21)
W(∗12)
G(∗16)
W(∗16)
B(∗16)
LG(∗20)
W
B
R(∗11)
SB
SB(∗12)
G(∗12)
Y
V
L
P
G
L
W(∗21)
W(∗12)
G(∗16)
W(∗16)
B(∗16)
LG(∗20)
W
B
R(∗11)
SB
SB(∗12)
G(∗12)
Y
V
L
P
G
L
L4


(BAT)
10A
TURN & HAZ
Front Turn Signal Light Assemblies
Rear Combination Light Assemblies
Outer Rear View Mirror Assemblies
∗11 : Before Nov. 2014 Production
∗12 : From Nov. 2014 Production
∗16 : From May 2016 Production
∗20 : From May 2016 Production until Dec. 2017 Production
∗21 : From Dec. 2017 Production
L27(A), L125(B)
Combination Meter Assembly
B (∗11)
8 AL11
SB (∗11)
2 B
Y (∗11)
3 B
SB (∗11)
5 B
B
LL
LR
+BATT
Flasher IC
I/F
Turn RH
Turn LH
Security
LP
5 A
W(∗21)
B(∗11)
W(∗12)
G(∗16)
W(∗16)
B(∗16)
LG(∗20)
W
B
R(∗11)
SB
SB(∗12)
G(∗12)
Y
V
L
P
G
L

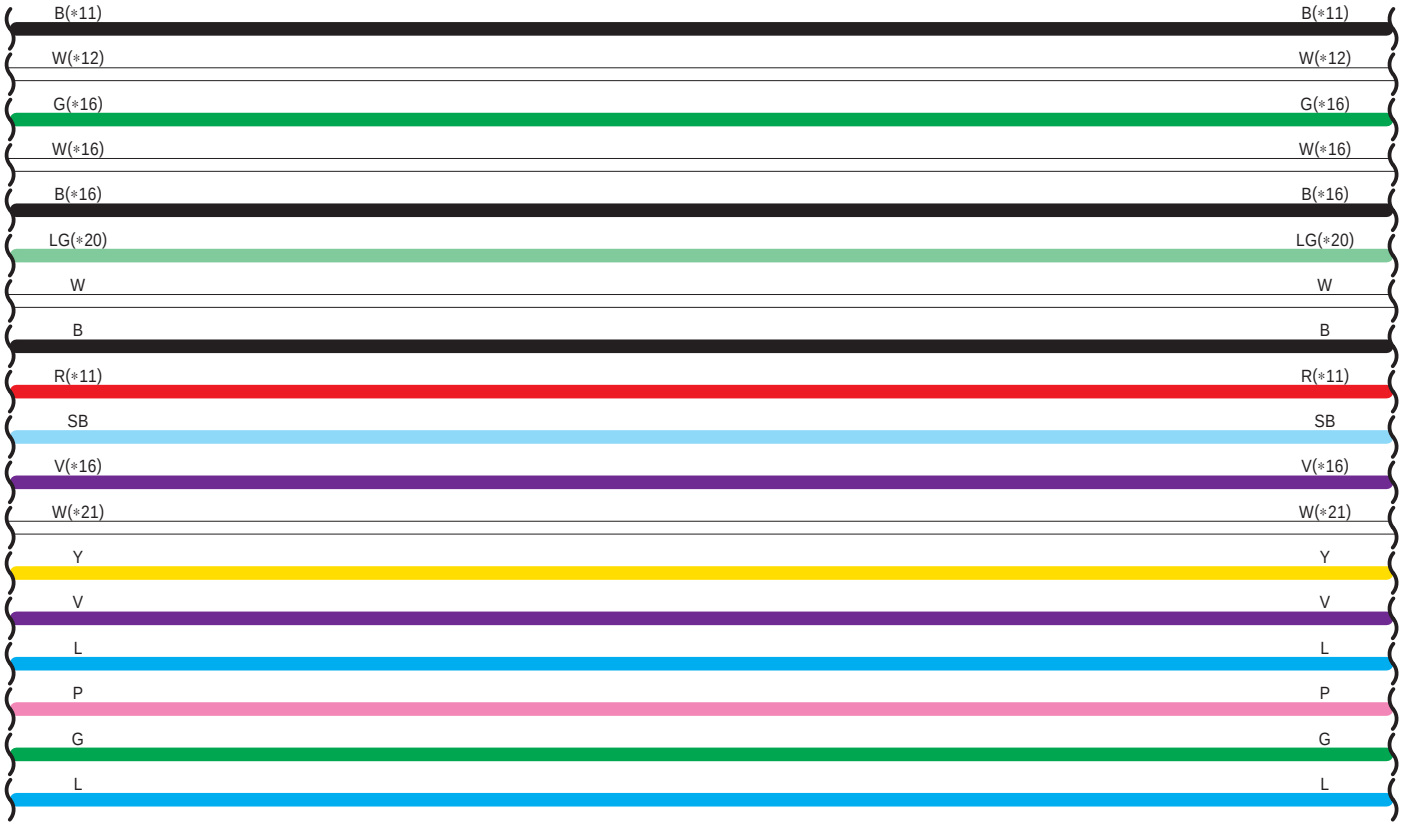

(IG)
7. 5A
MET
(BAT)
7. 5A
ECU–B
Headlight Assemblies
Rear Combination Light Assemblies
Outer Rear View Mirror Assemblies
SB
(*12)
G
(*12)
BR
(*12)
L
(*12)
Y
(*12)
SB
(*12)
L27(A), L125(B)
Combination Meter Assembly
ES
CANL
CANH
IG+
B
LL
LR
L71(B)
Junction Connector
L179
Junction Connector
CAN IC
I/F
(VFD)
Buzzer
CPU
IC
W–B
W(*21)
B(*11)
W(*12)
G(*16)
W(*16)
B(*16)
LG(*20)
W
B
R(*11)
SB
SB(*12)
G(*12)
Y
V
L
P
G
L
L4


A58
Skid Control ECU with Actuator Assembly
(BAT)
10A
TURN & HAZ
8 AL11
SB (*12)
2
1
B (*12)
SP1
RR+
RR–
RL+
RL–
FL+
FL–
FR+
FR–
11
V (*16)
20 AL11
BR (*16)
22 W (*16)
9 B (*16)
20 W (*16)
7 B (*16)
31 R (*16)
32 G (*16)
18 P (*16)
5 L (*16)
Rear Speed Sensors
Front Speed Sensors
L27(A), L125(B)
Combination Meter Assembly
2 B
16 A
5 A
B
SI
LP
I/F
I/F
IC
Turn RH
Turn LH
Security
+S
15 A
B (*19)
W (*16)
B(*11)
W(*12)
G(*16)
W(*16)
B(*16)
LG(*20)
W
B
R(*11)
SB
V(*16)
W(*21)
Y
V
L
P
G
L

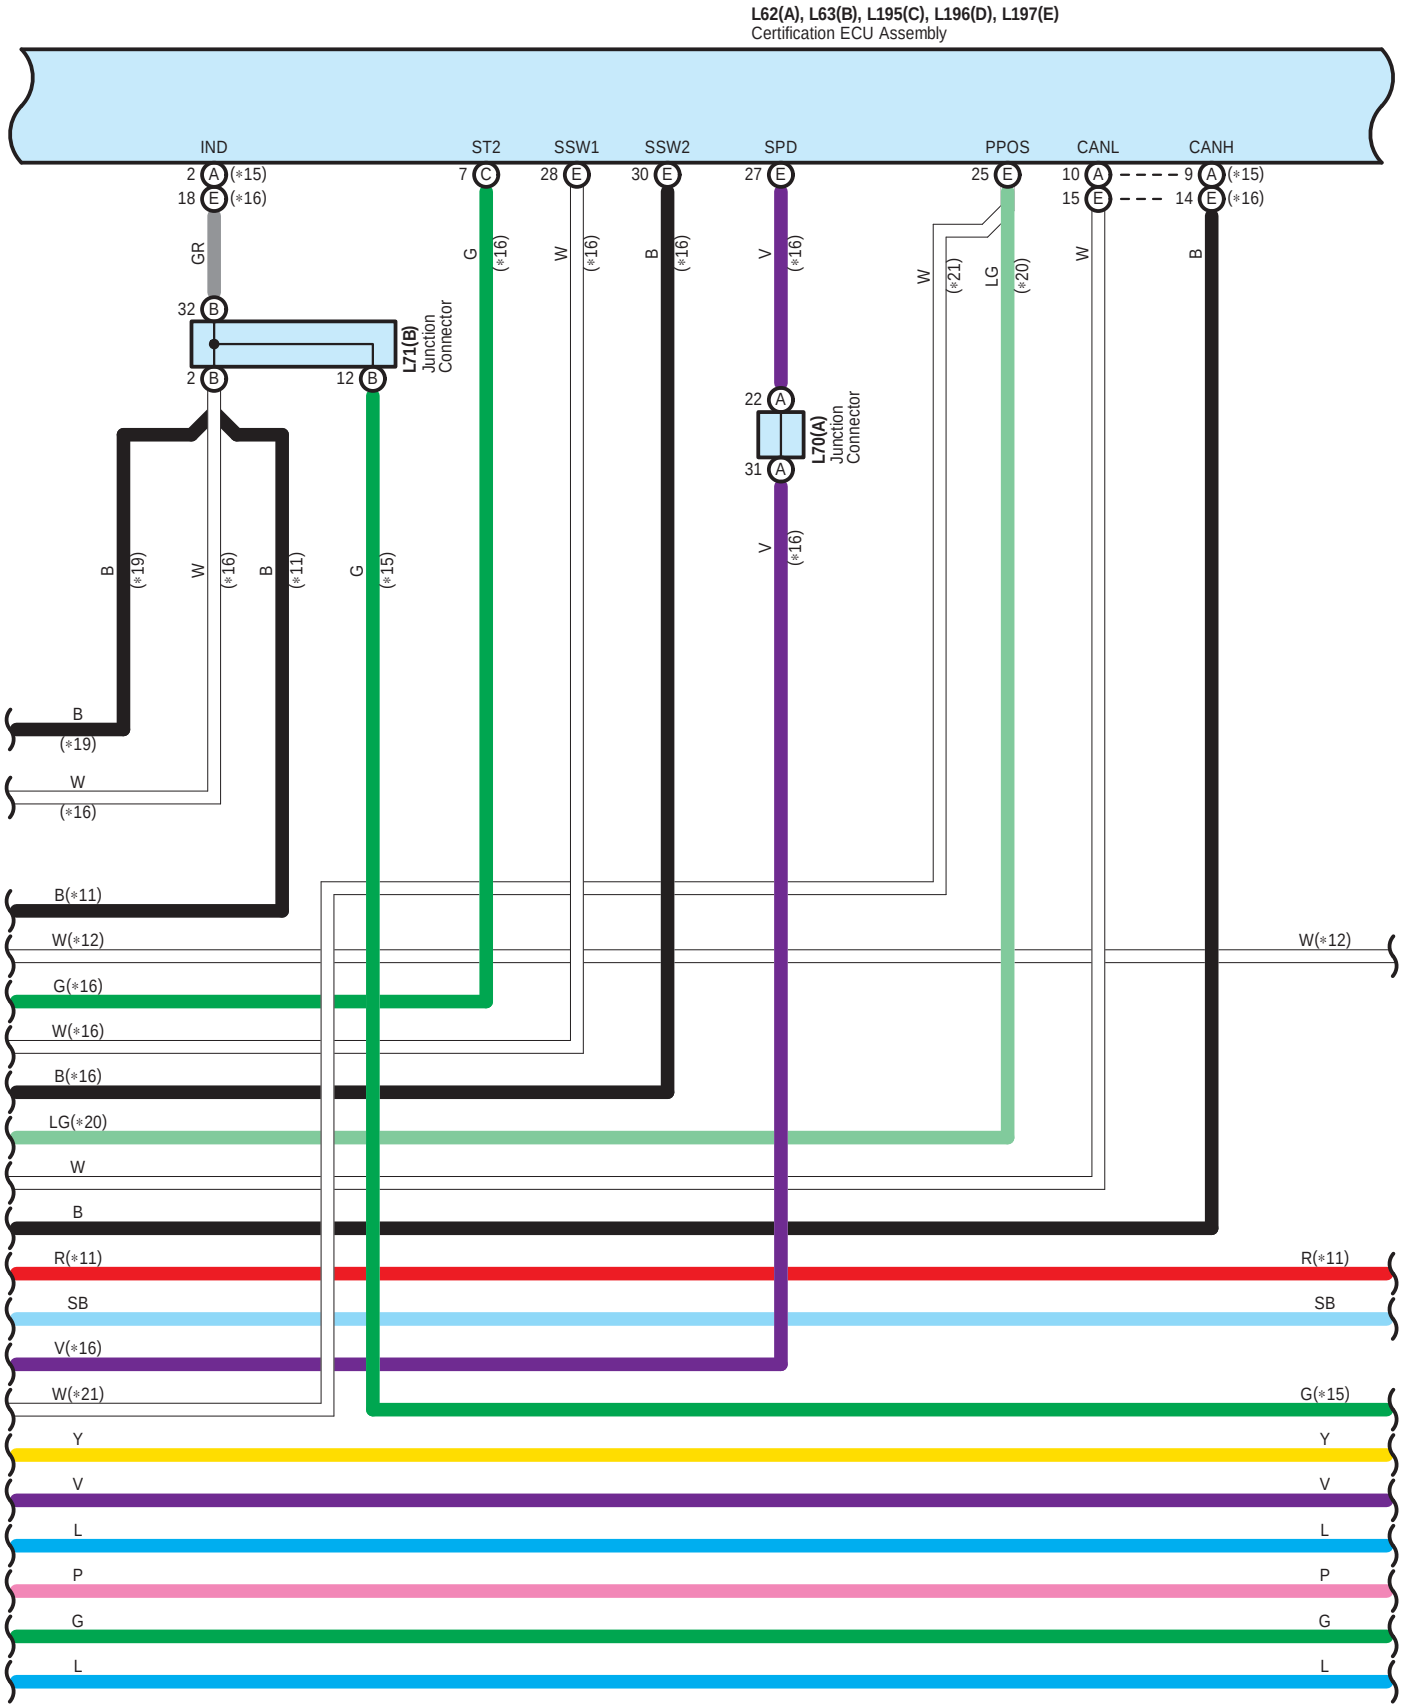


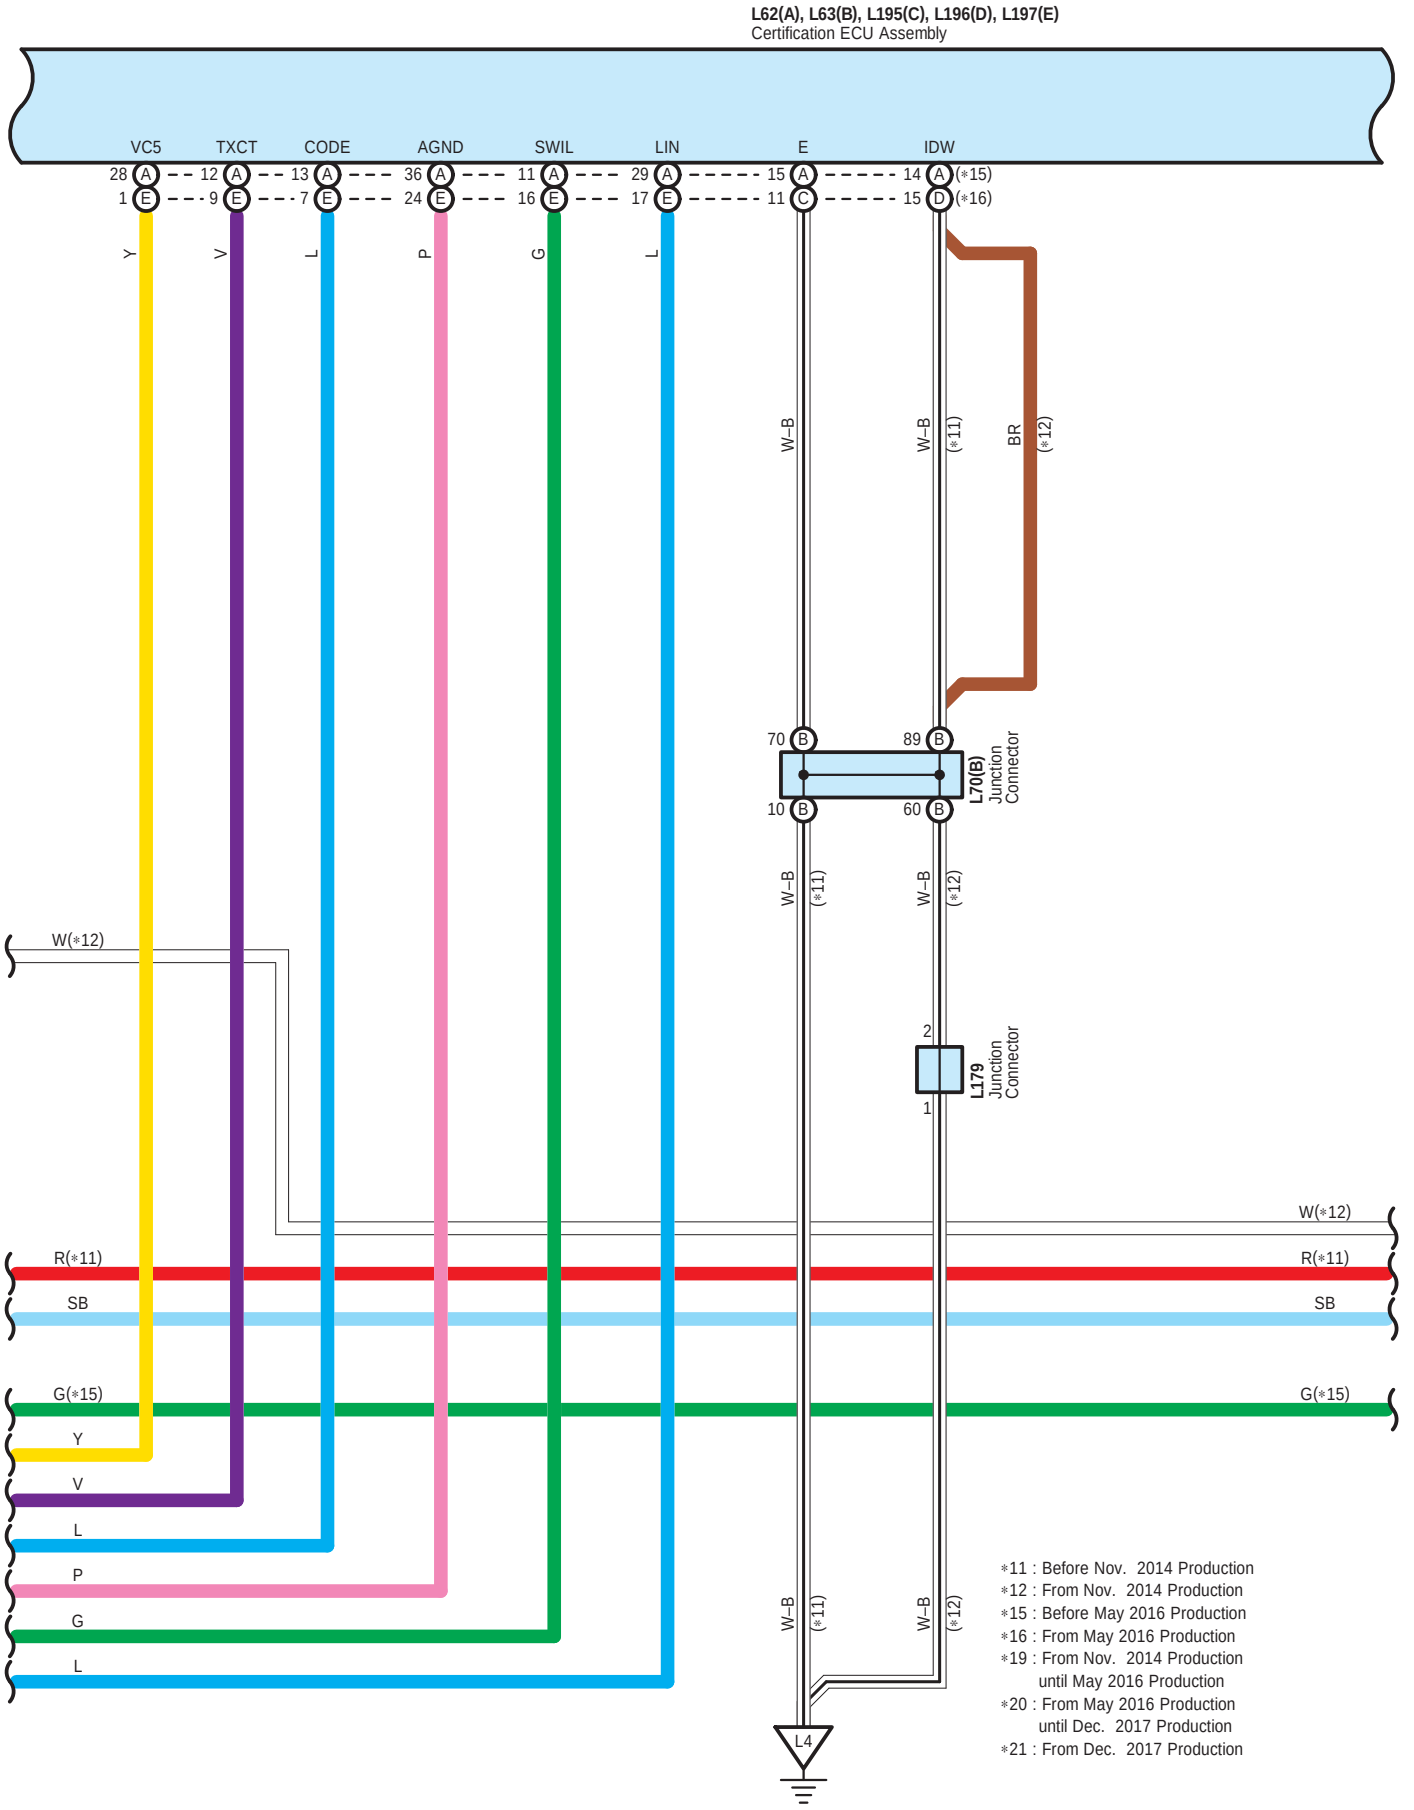


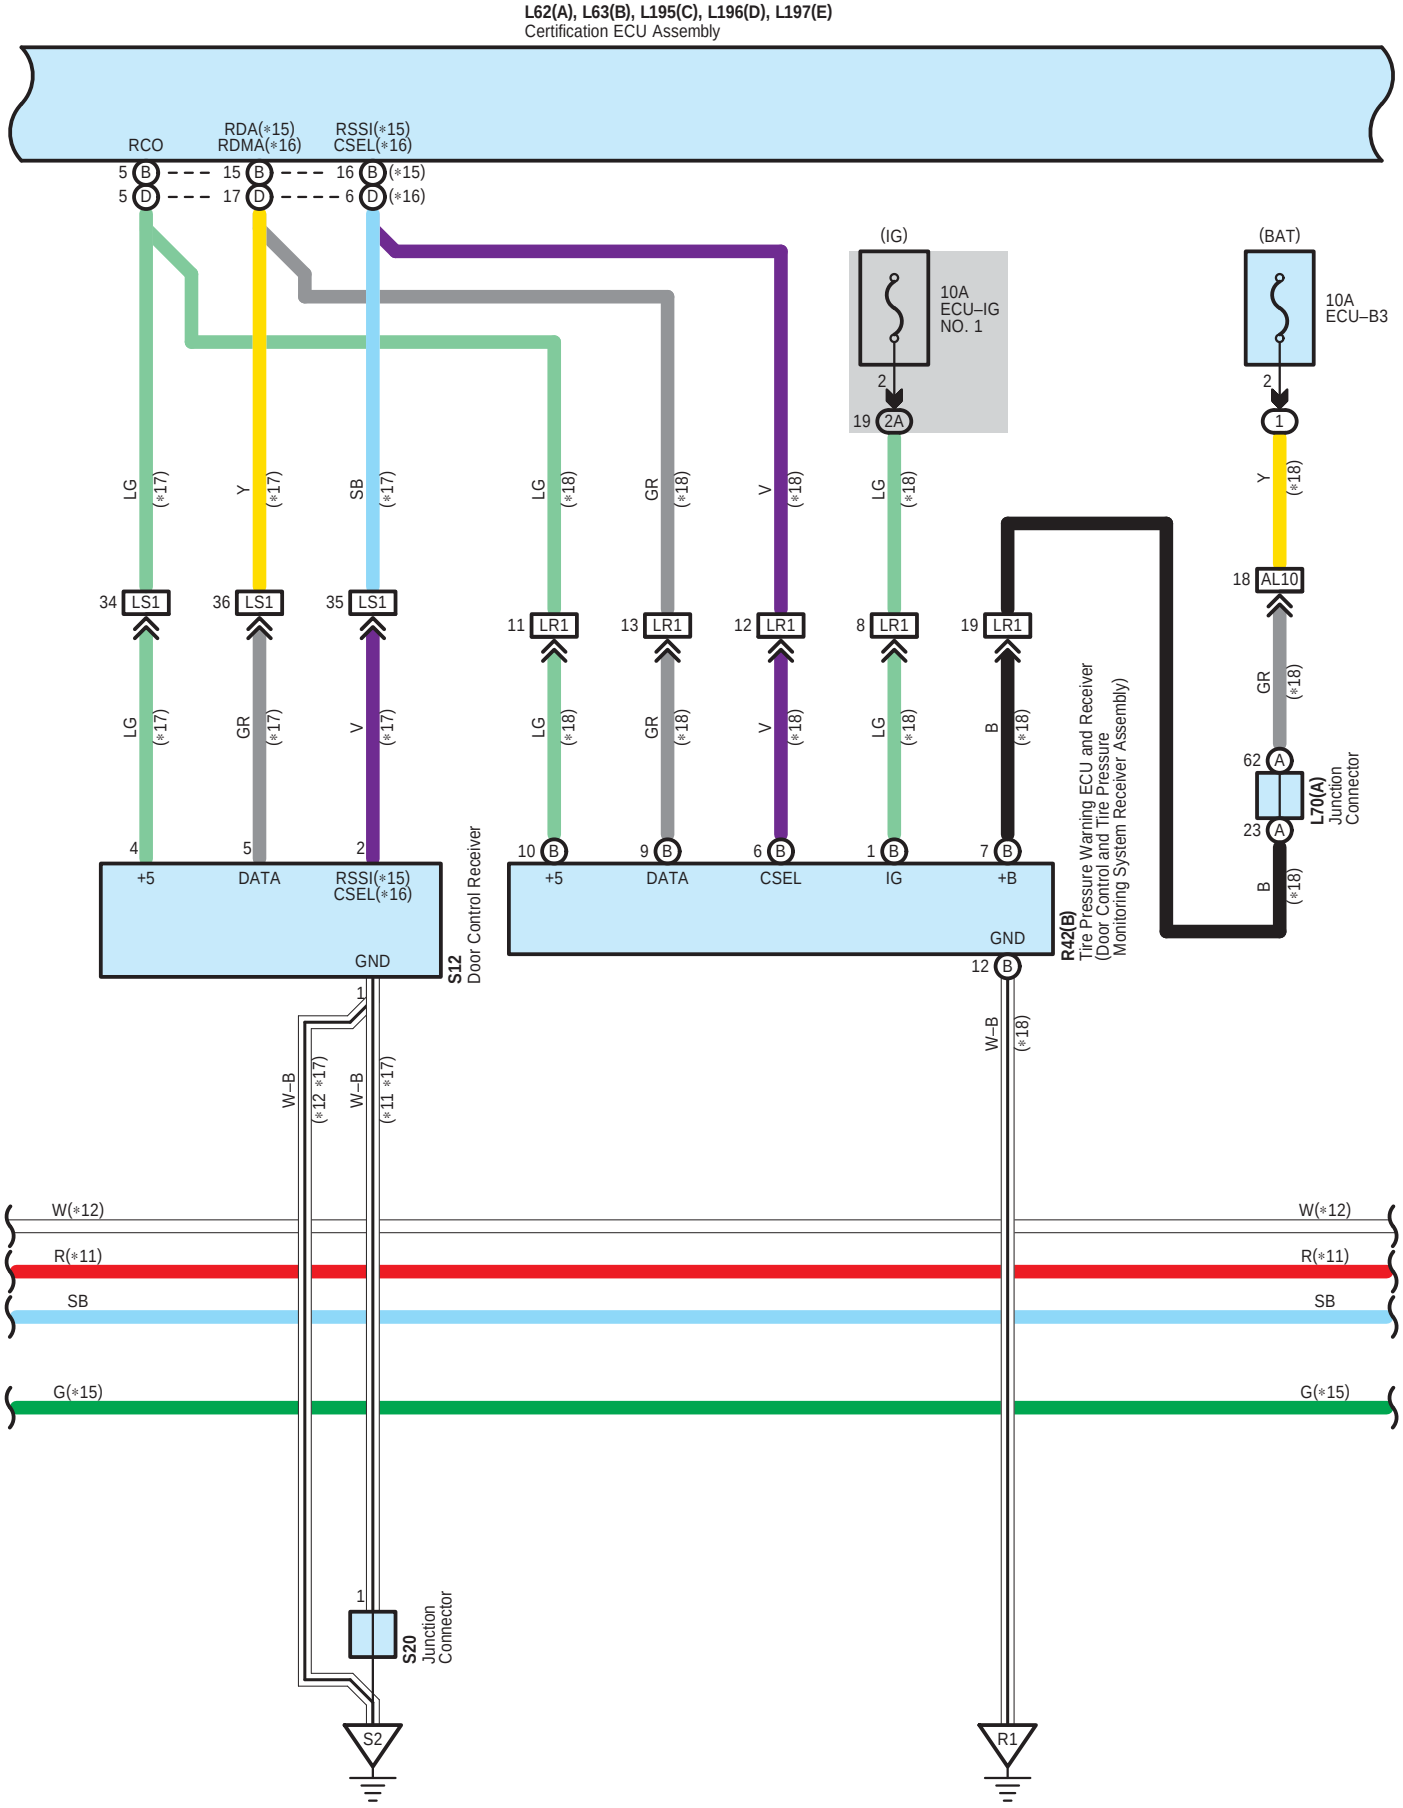


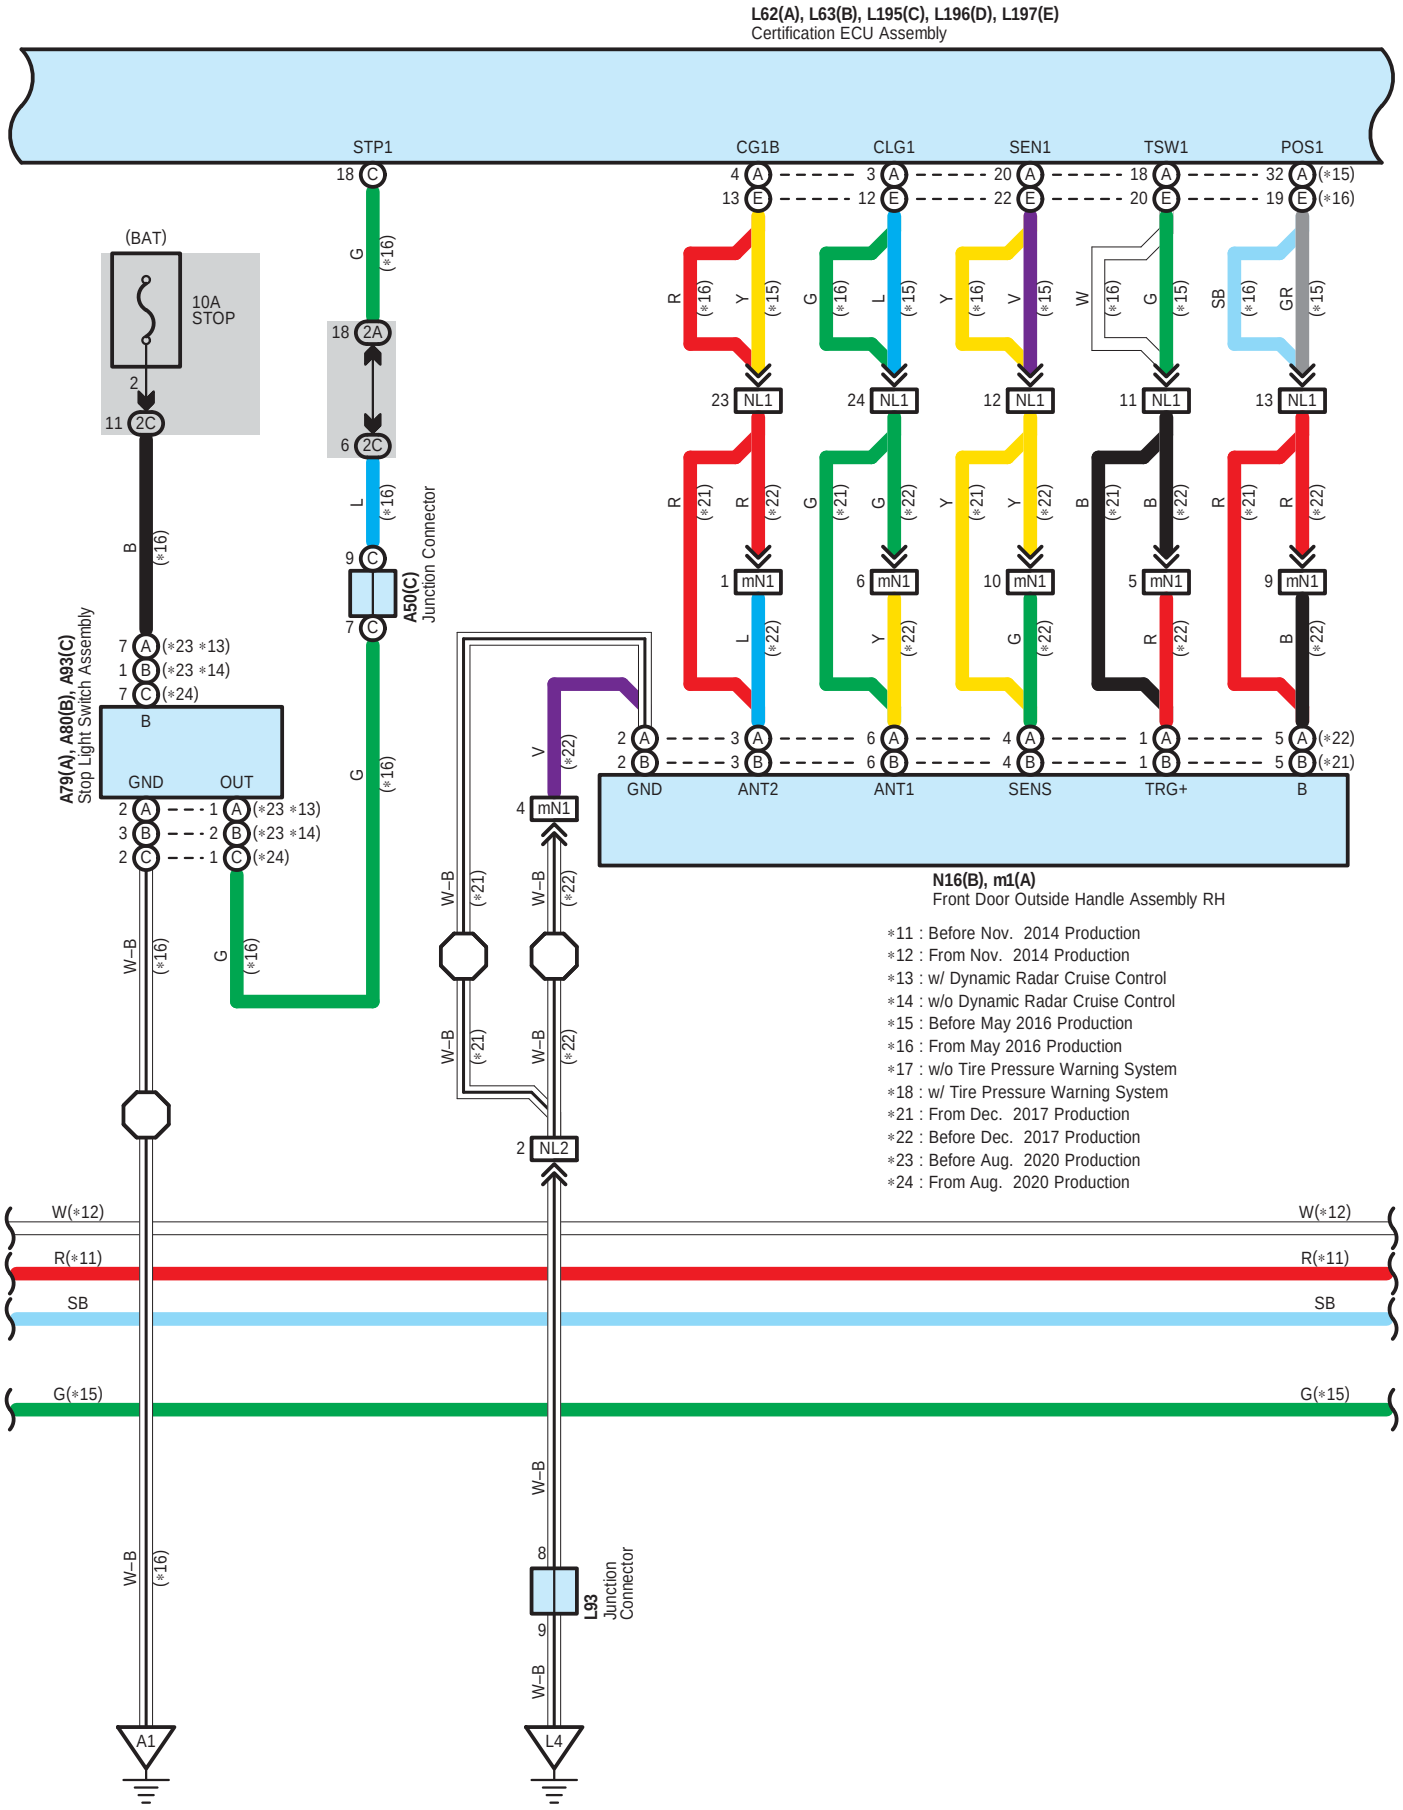


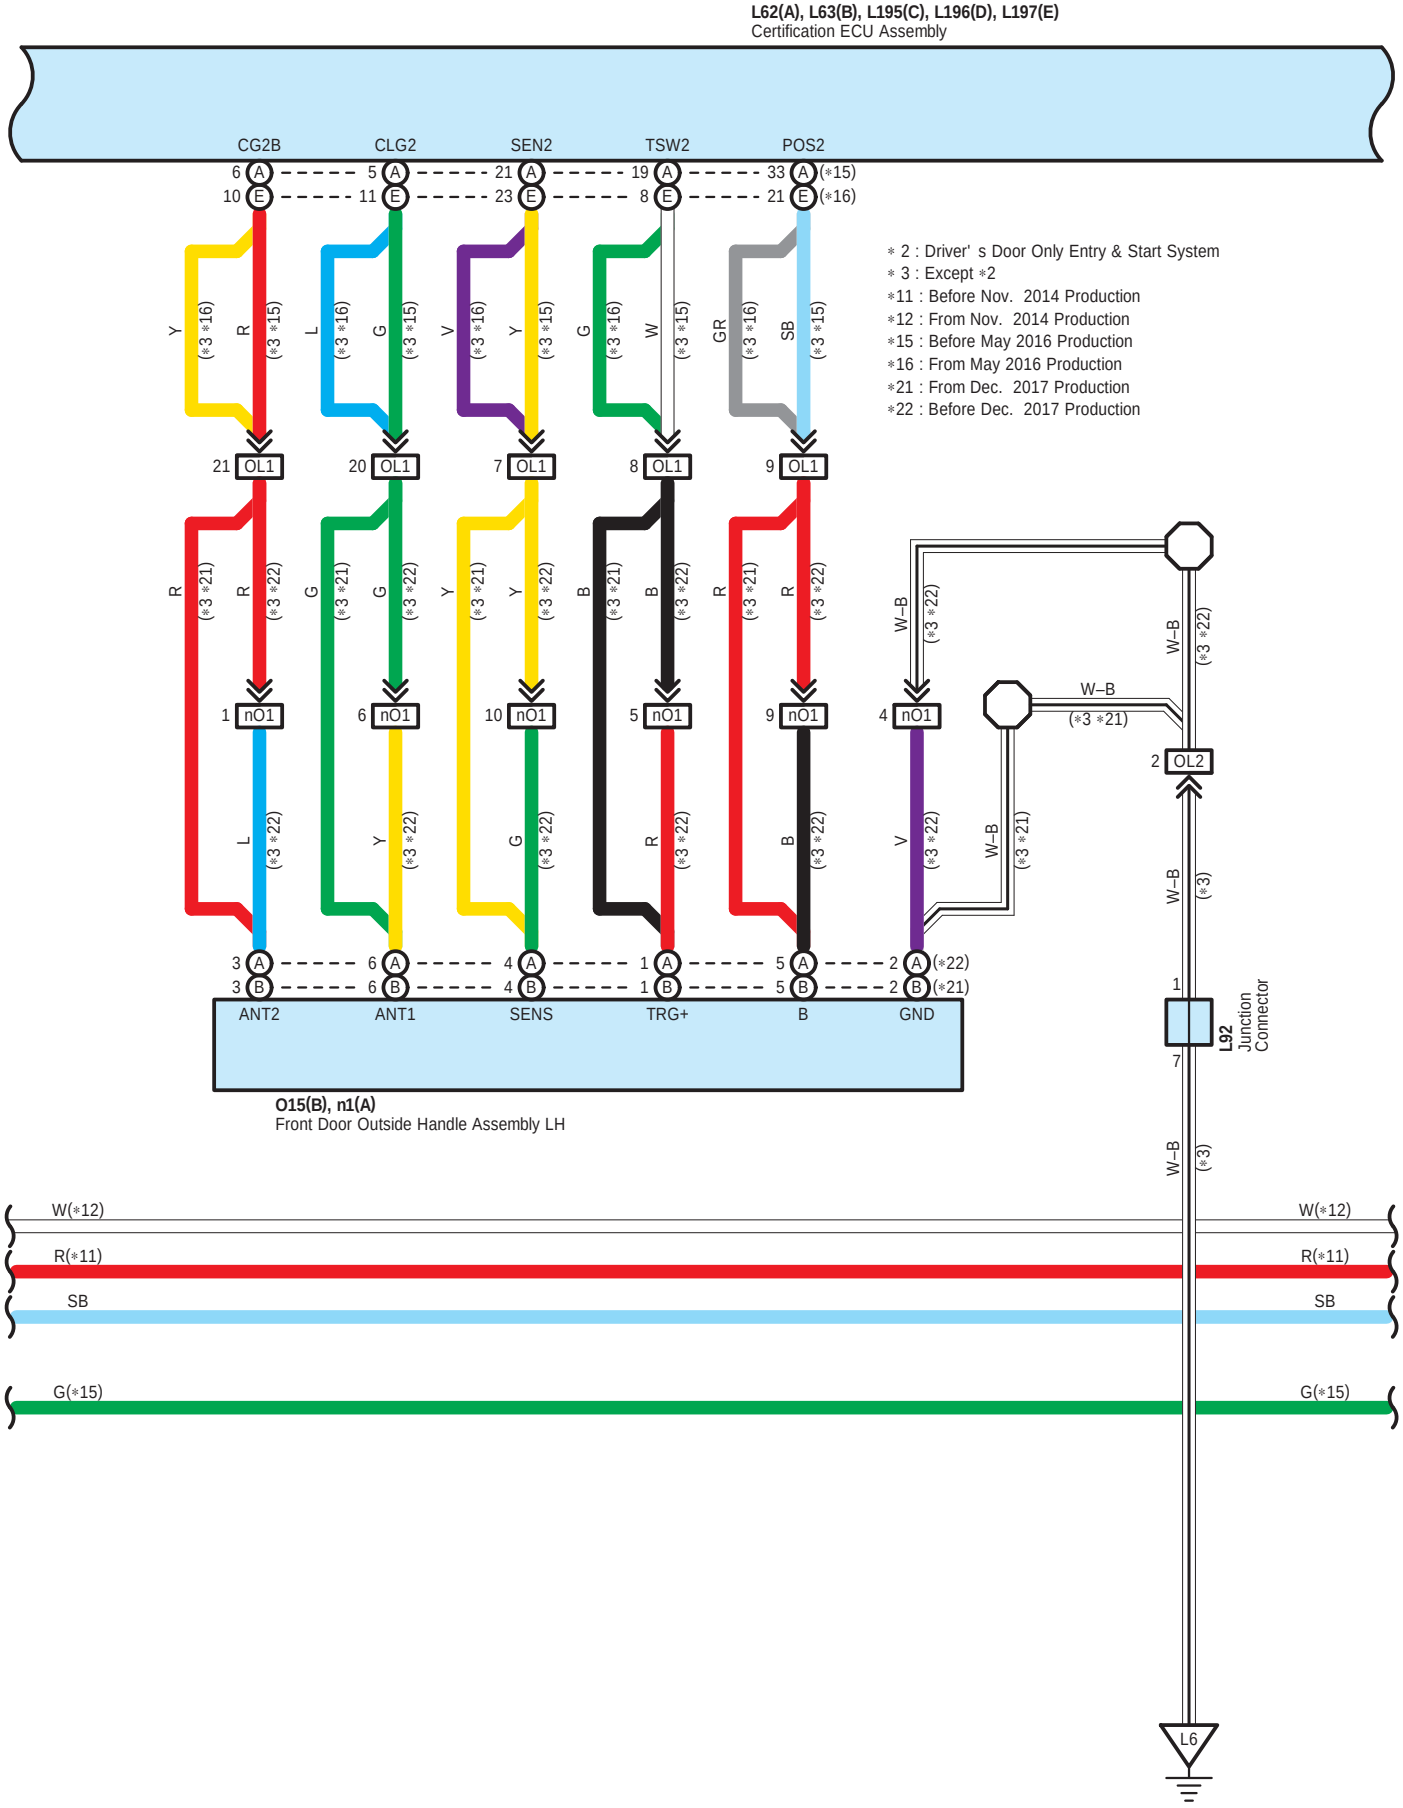

∗11 : Before Nov. 2014 Production
∗12 : From Nov. 2014 Production
∗15 : Before May 2016 Production
∗16 : From May 2016 Production
∗19 : From Nov. 2014 Production until May 2016 Production
∗20 : From May 2016 Production until Dec. 2017 Production
∗21 : From Dec. 2017 Production

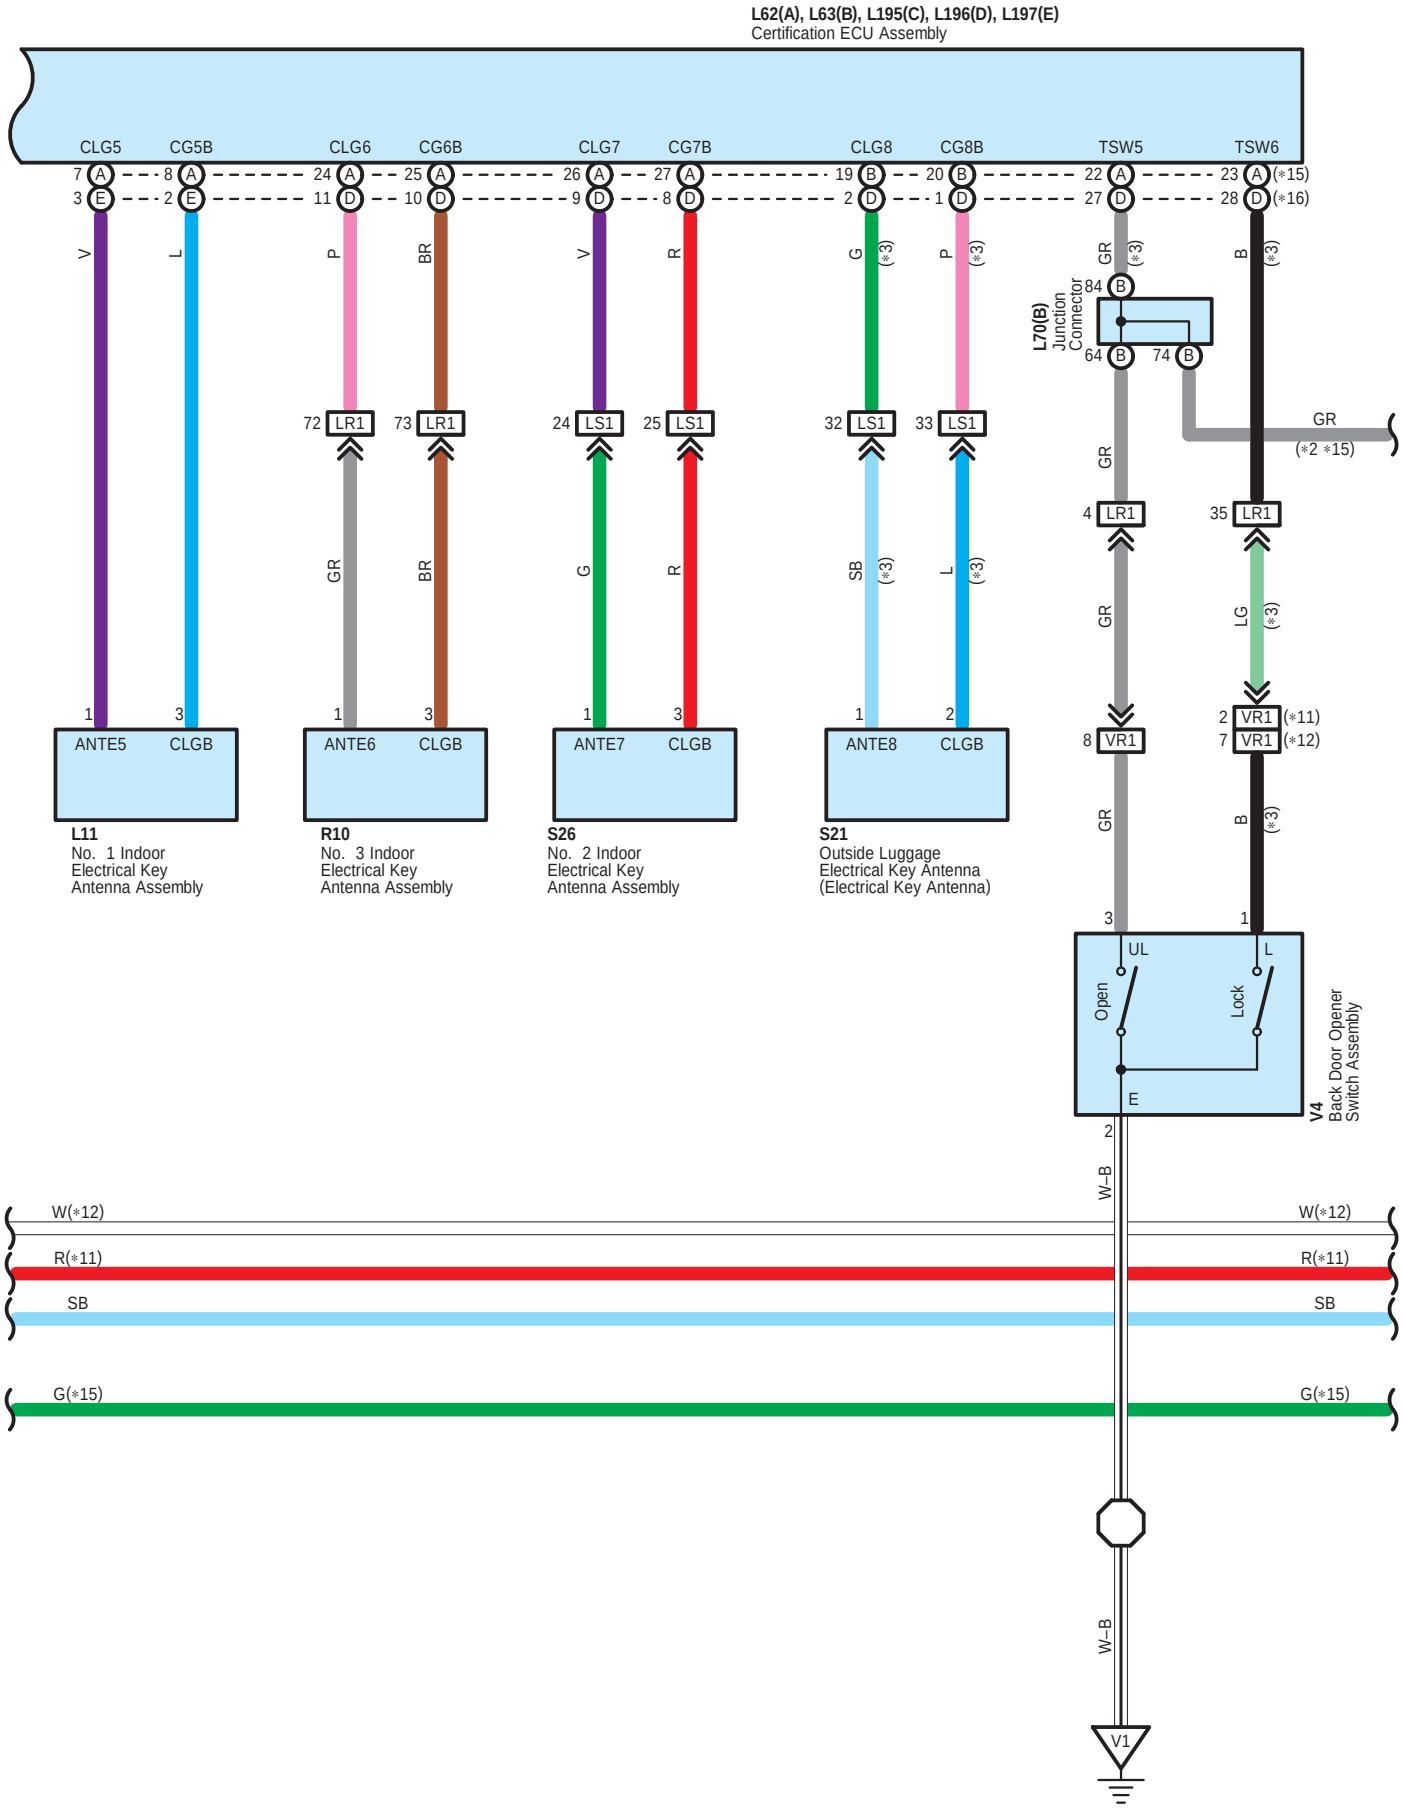

L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
IND
ST2
SSW1
SSW2
SPD
PPOS
CANL
CANH
2 A (*15)
18 E (*16)
7 C
28 E
30 E
27 E
25 E
10 A
15 E
9 A (*15)
14 E (*16)
GR
G (*16)
W (*16)
B (*16)
V (*16)
W (*21)
LG (*20)
W
B
32 B
2 B
12 B
L71(B) Junction Connector
22 A
31 A
L70(A) Junction Connector
B (*19)
W (*16)
B (*11)
G (*15)
V (*16)
B
(*19)
W
(*16)
B(*11)
W(*12)
W(*12)
G(*16)
W(*16)
B(*16)
LG(*20)
W
B
R(*11)
R(*11)
SB
SB
V(*16)
W(*21)
G(*15)
Y
Y
V
V
L
L
P
P
G
G
L
L

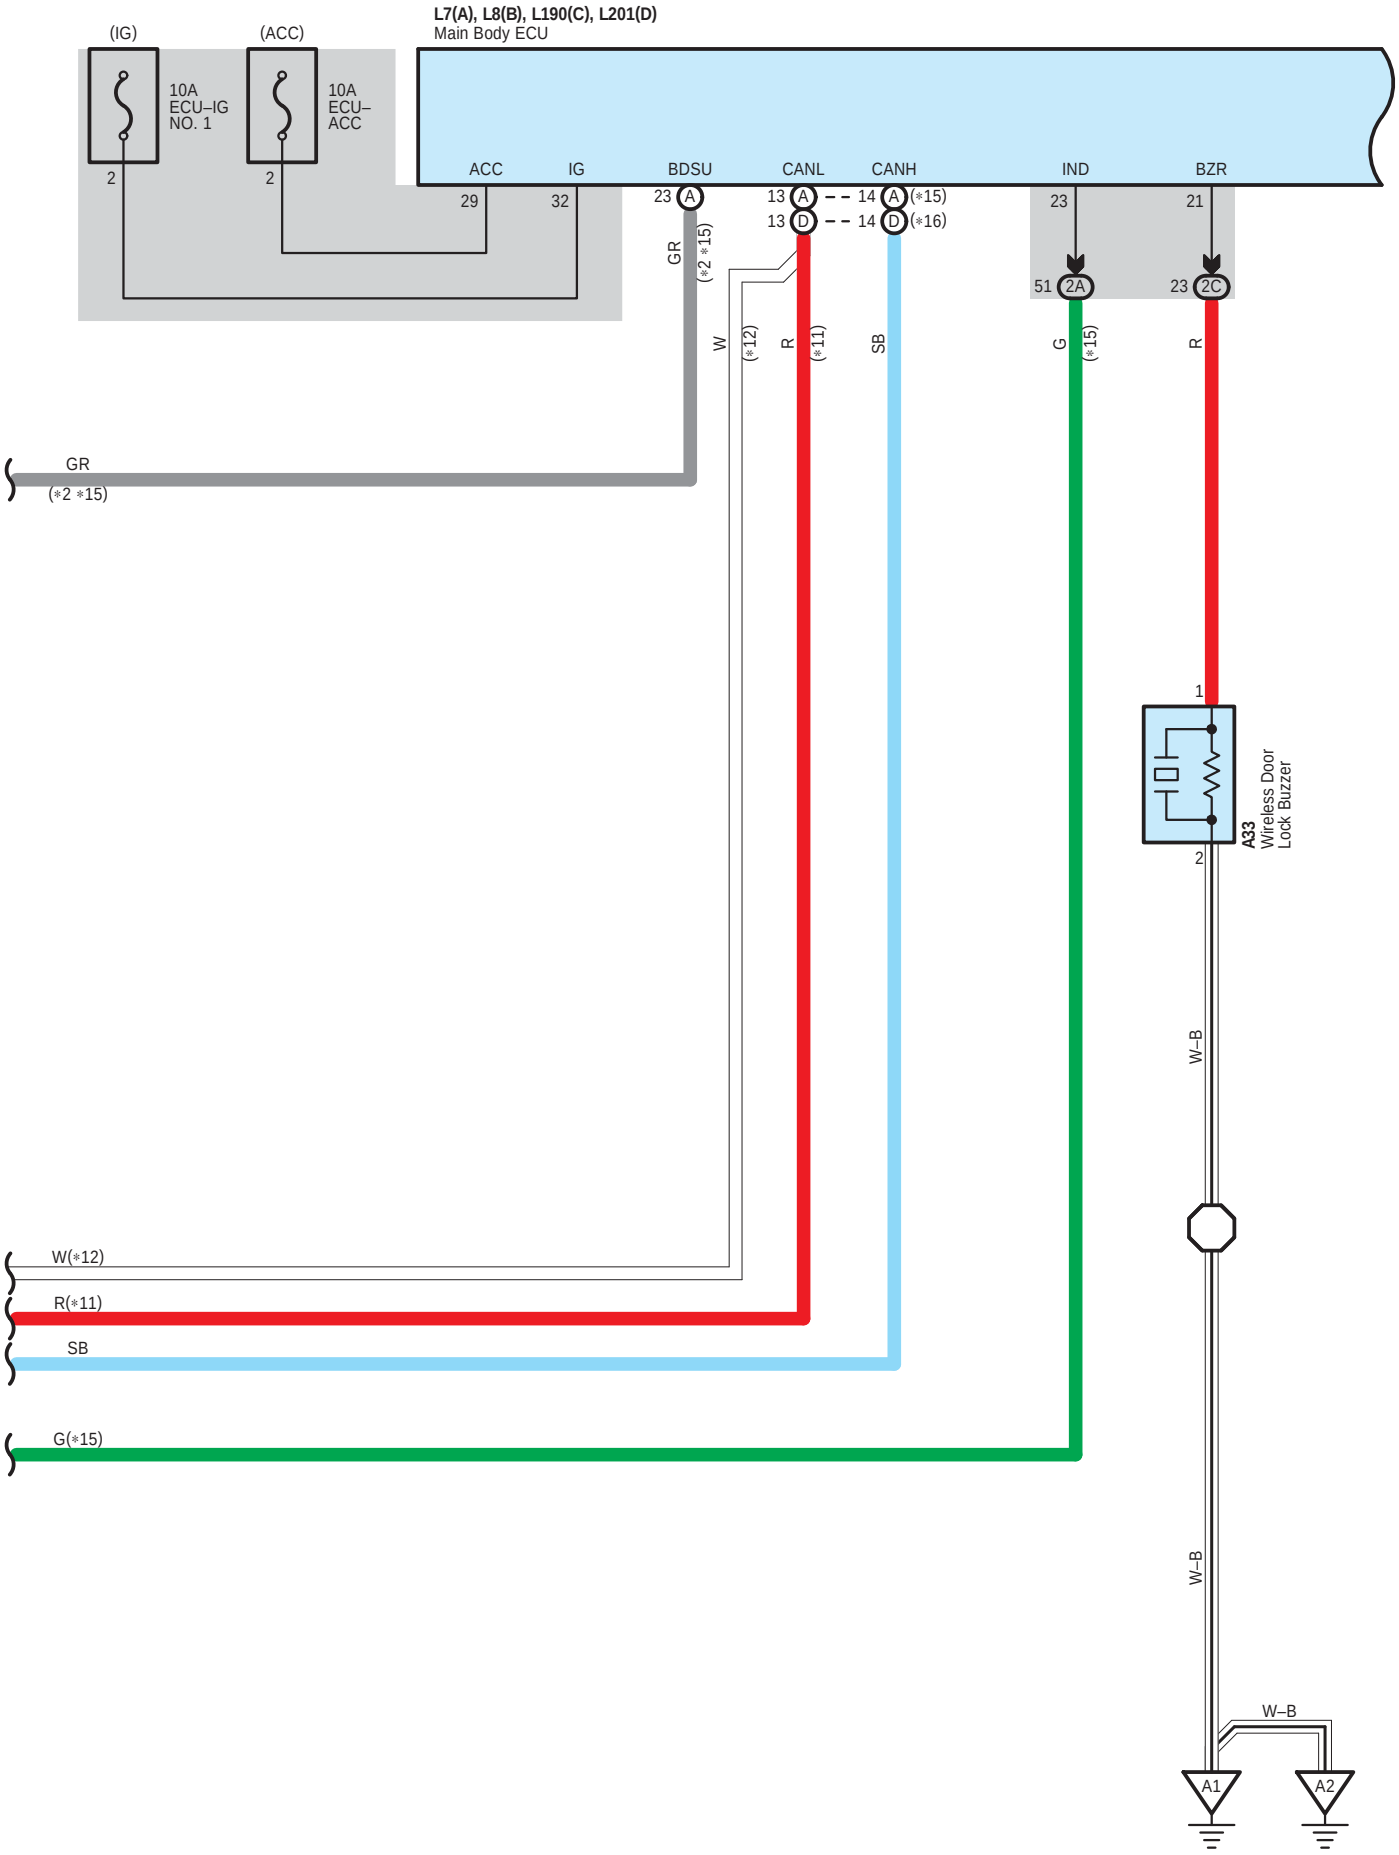

L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
VC5
TXCT
CODE
AGND
SWIL
LIN
E
IDW
28 A
1 E
12 A
9 E
13 A
7 E
36 A
24 E
11 A
16 E
29 A
17 E
15 A
11 C
14 A
15 D
(*15)
(*16)
Y
V
L
P
G
L
W–B
W–B
(*11)
BR
(*12)
70 B
89 B
10 B
60 B
L70(B) Junction Connector
W–B
(*11)
W–B
(*12)
W(*12)
2
1
L179 Junction Connector
W(*12)
R(*11)
R(*11)
SB
SB
G(*15)
G(*15)
Y
V
L
P
G
L
W–B
(*11)
W–B
(*12)
L4
*11 : Before Nov. 2014 Production
*12 : From Nov. 2014 Production
*15 : Before May 2016 Production
*16 : From May 2016 Production
*19 : From Nov. 2014 Production until May 2016 Production
*20 : From May 2016 Production until Dec. 2017 Production
*21 : From Dec. 2017 Production

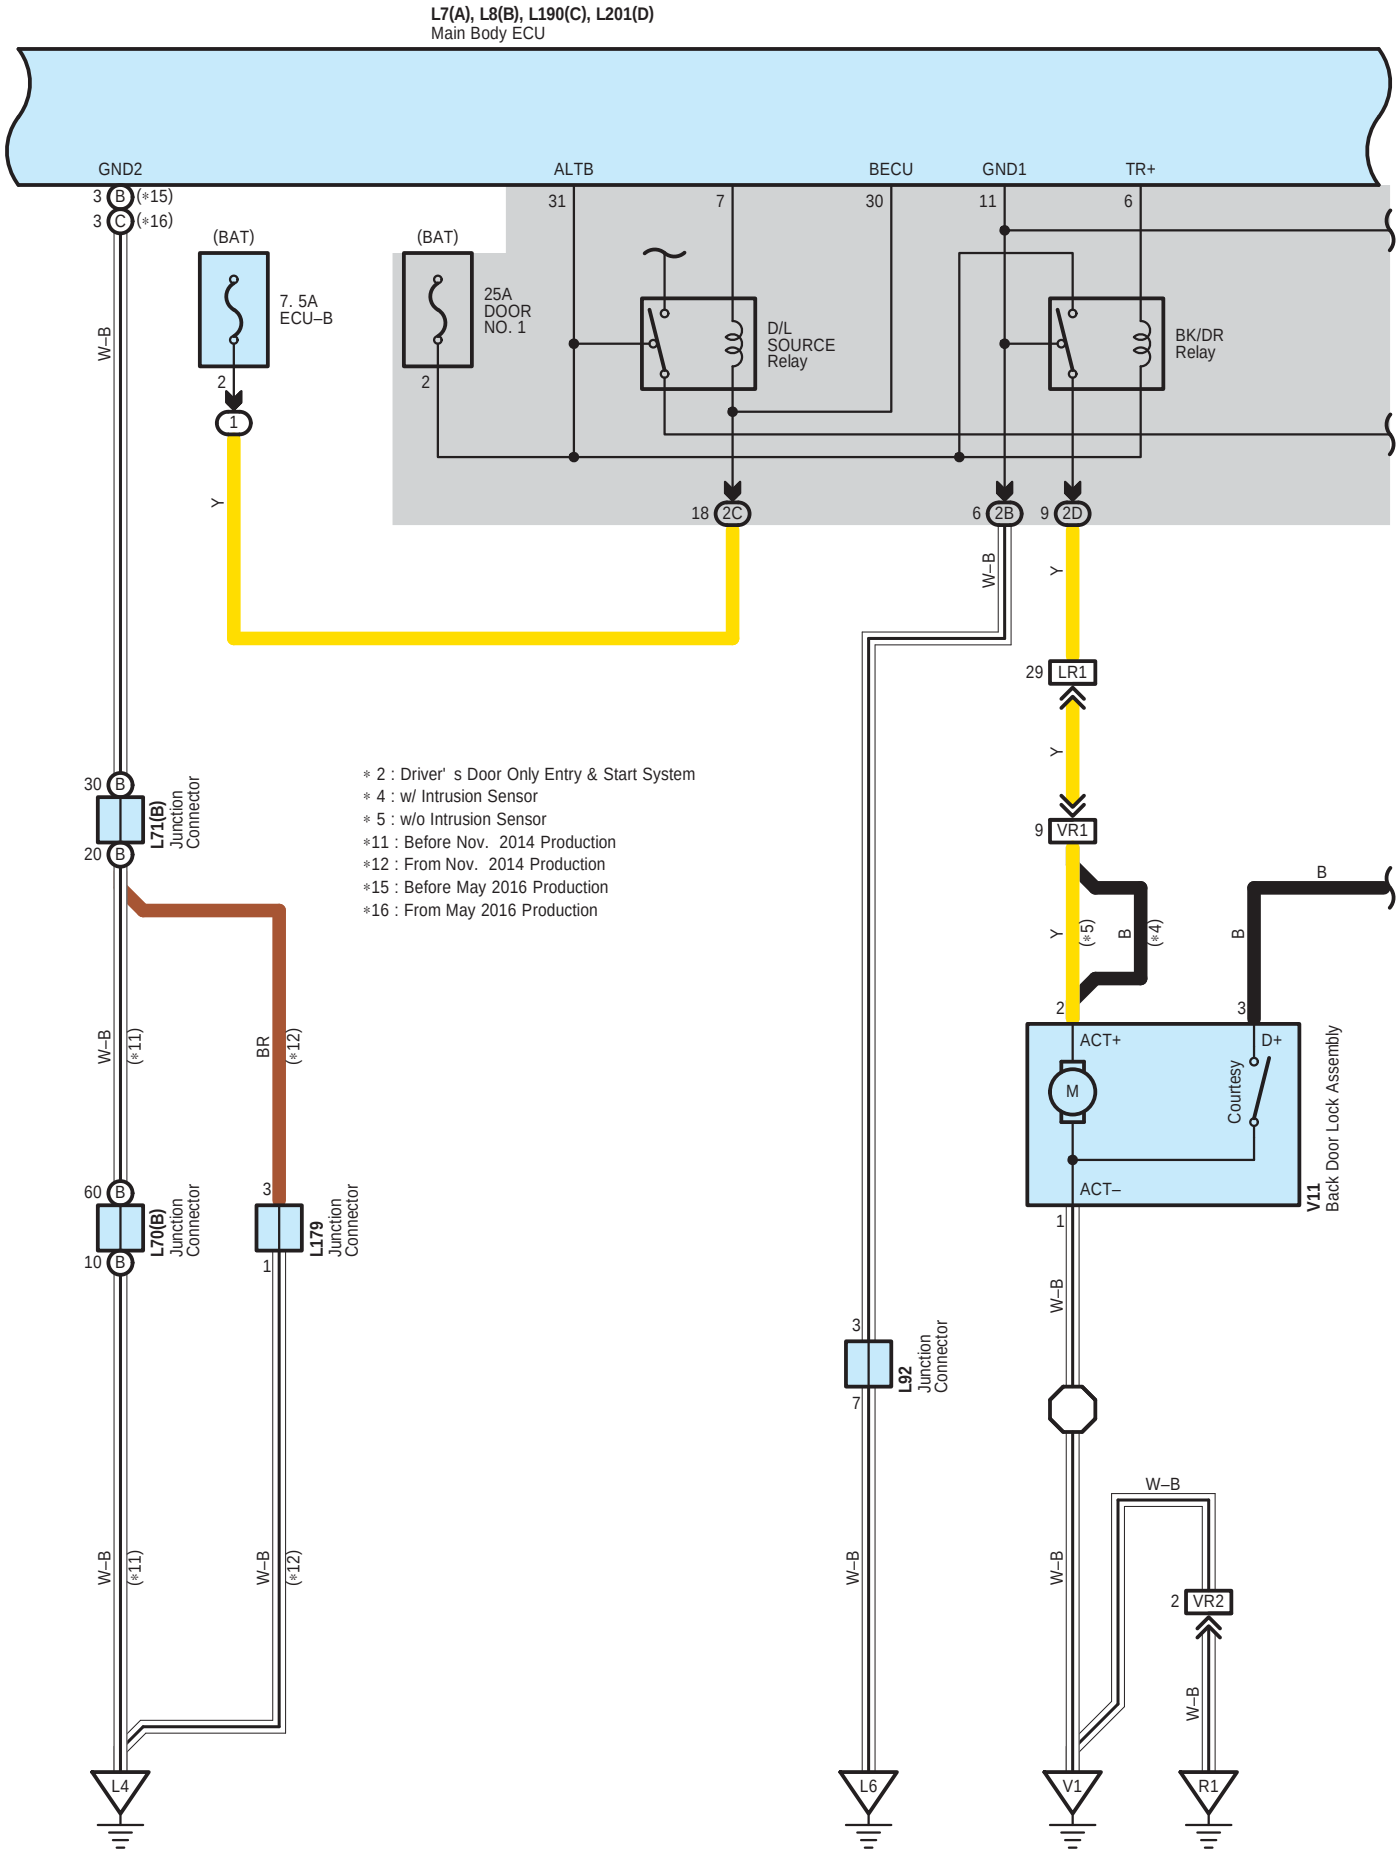

L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
RCO
RDA(*15)
RDMA(*16)
RSSI(*15)
CSEL(*16)
(IG)
10A
ECU–IG
NO. 1
(BAT)
10A
ECU–B3
LS1
LR1
AL10
S12
Door Control Receiver
+5
DATA
RSSI(*15)
CSEL(*16)
GND
CSEL
IG
+B
R42(B)
Tire Pressure Warning ECU and Receiver
(Door Control and Tire Pressure
Monitoring System Receiver Assembly)
L70(A)
Junction
Connector
S20
Junction
Connector
S2
R1
W(*12)
R(*11)
SB
G(*15)
W–B
LG
Y
SB
GR
V
B

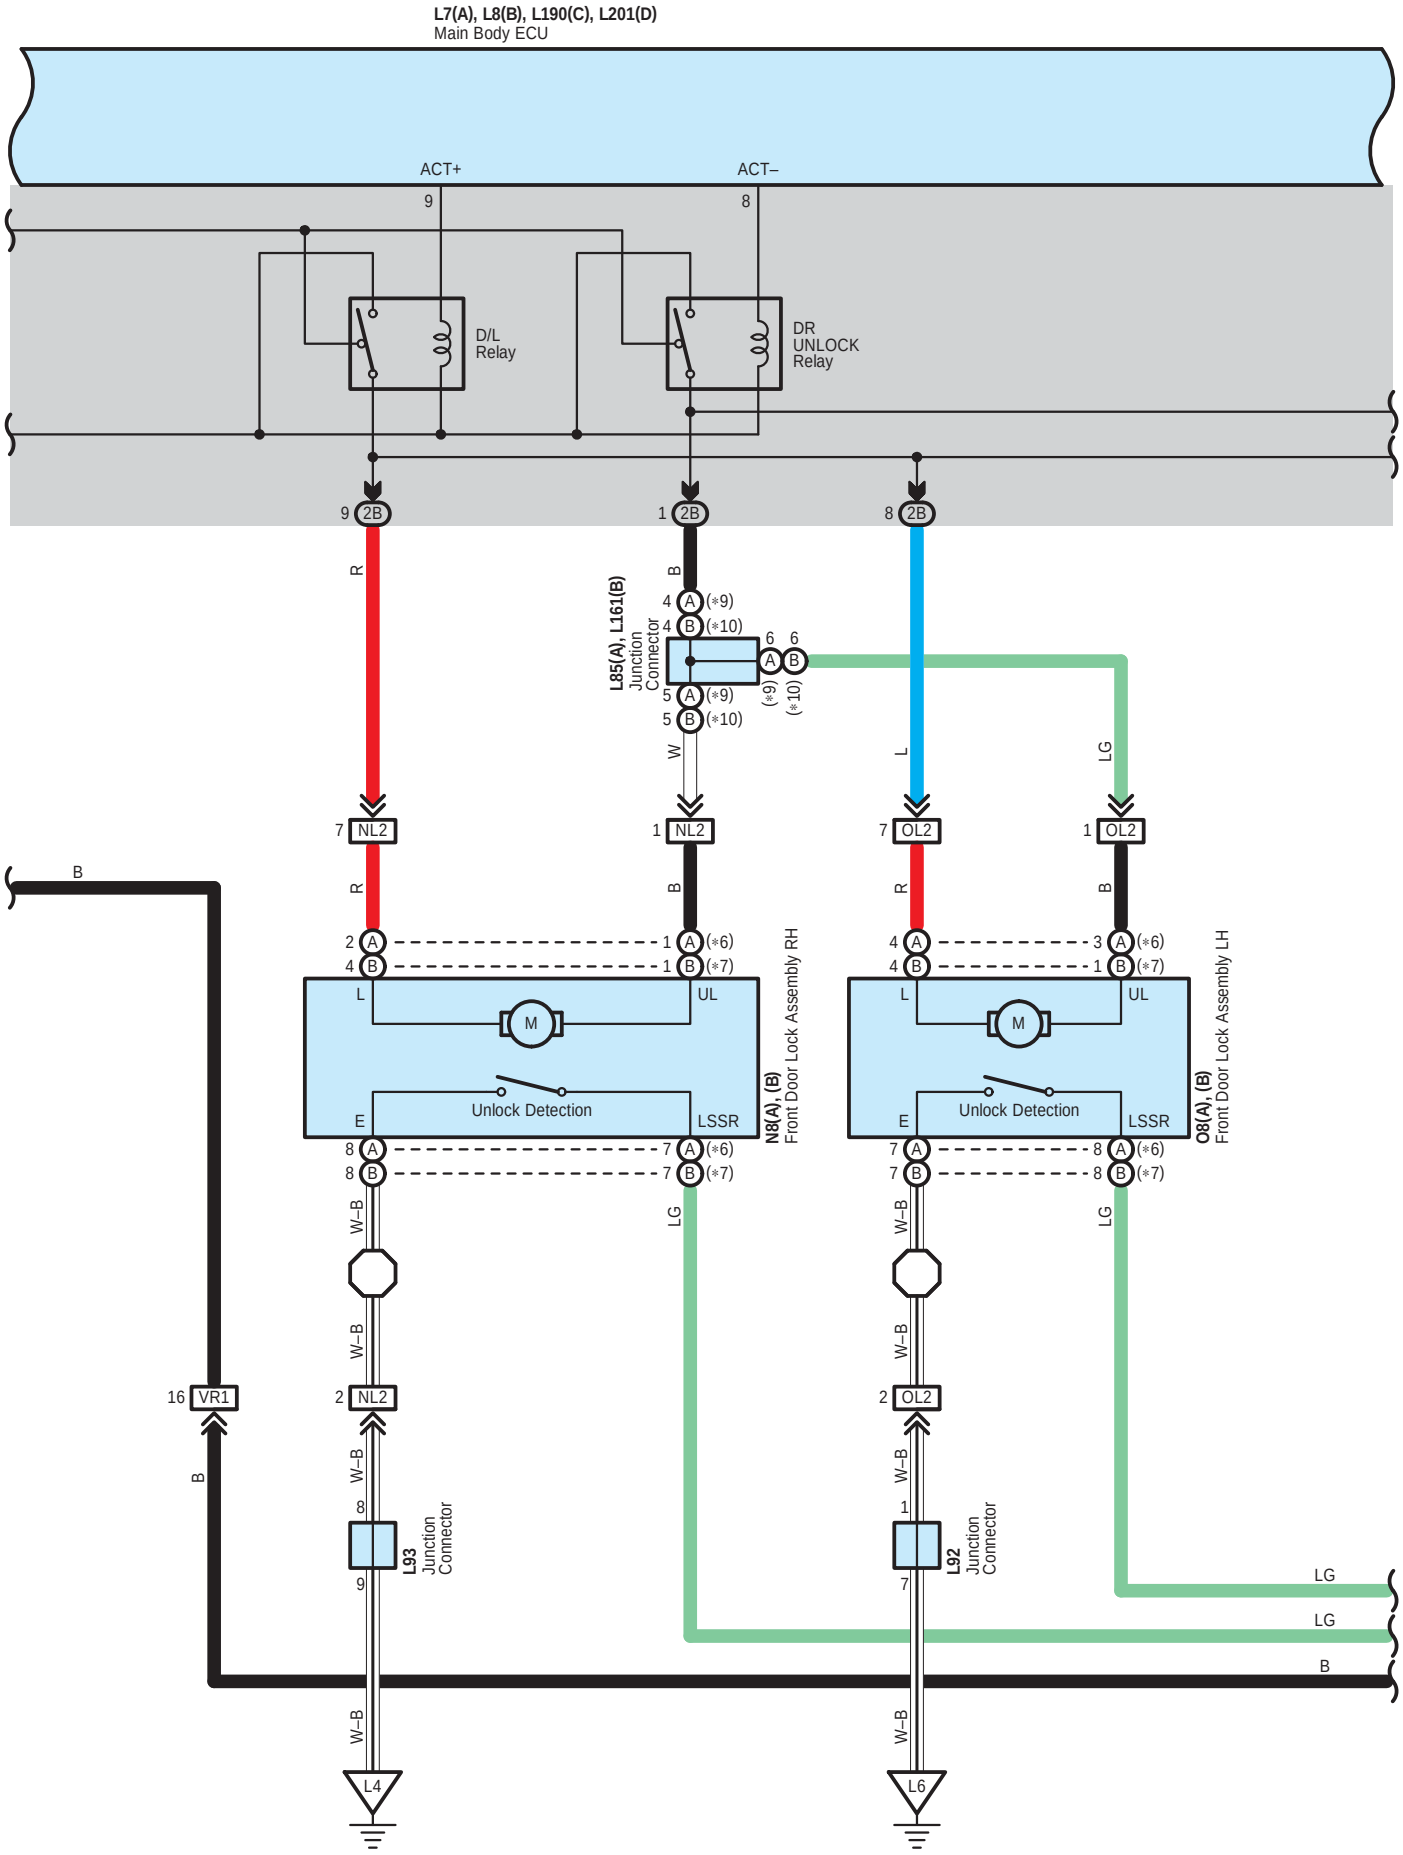

L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
STP1
CG1B
CLG1
SEN1
TSW1
POS1
(BAT)
10A
STOP
A50(C)
Junction Connector
A79(A), A80(B), A93(C)
Stop Light Switch Assembly
GND
OUT
ANT2
ANT1
SENS
TRG+
B
N16(B), m1(A)
Front Door Outside Handle Assembly RH
L93
Junction Connector
A1
L4
∗11 : Before Nov. 2014 Production
∗12 : From Nov. 2014 Production
∗13 : w/ Dynamic Radar Cruise Control
∗14 : w/o Dynamic Radar Cruise Control
∗15 : Before May 2016 Production
∗16 : From May 2016 Production
∗17 : w/o Tire Pressure Warning System
∗18 : w/ Tire Pressure Warning System
∗21 : From Dec. 2017 Production
∗22 : Before Dec. 2017 Production
∗23 : Before Aug. 2020 Production
∗24 : From Aug. 2020 Production

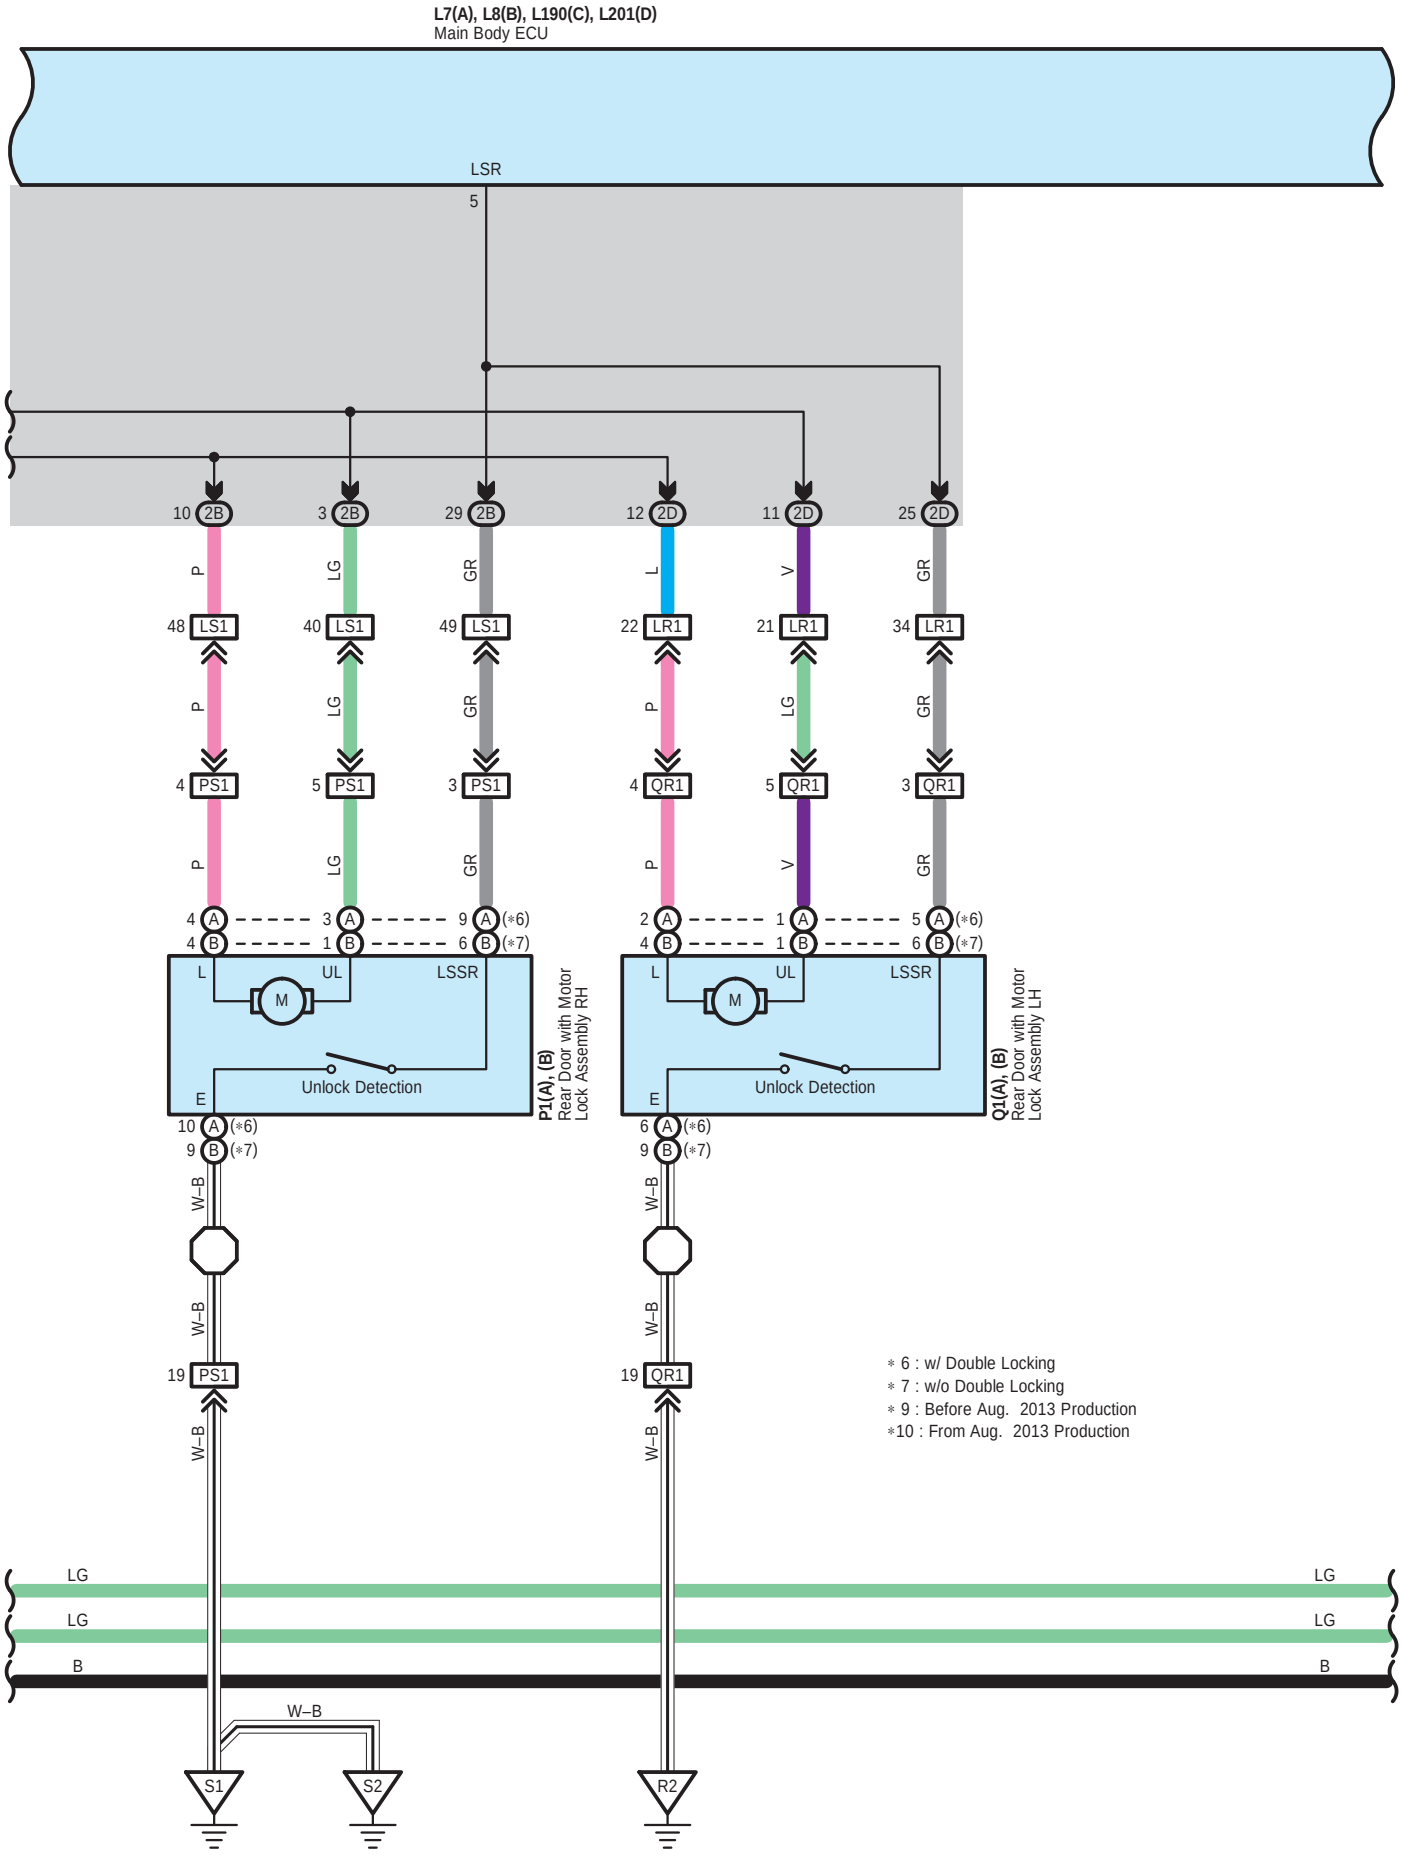

L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
CG2B
CLG2
SEN2
TSW2
POS2
＊2 : Driver' s Door Only Entry & Start System
＊3 : Except ＊2
＊11 : Before Nov. 2014 Production
＊12 : From Nov. 2014 Production
＊15 : Before May 2016 Production
＊16 : From May 2016 Production
＊21 : From Dec. 2017 Production
＊22 : Before Dec. 2017 Production
OL1
nO1
OL2
ANT2
ANT1
SENS
TRG+
B
GND
O15(B), n1(A)
Front Door Outside Handle Assembly LH
L92
Junction Connector
L6
W(＊12)
R(＊11)
SB
G(＊15)

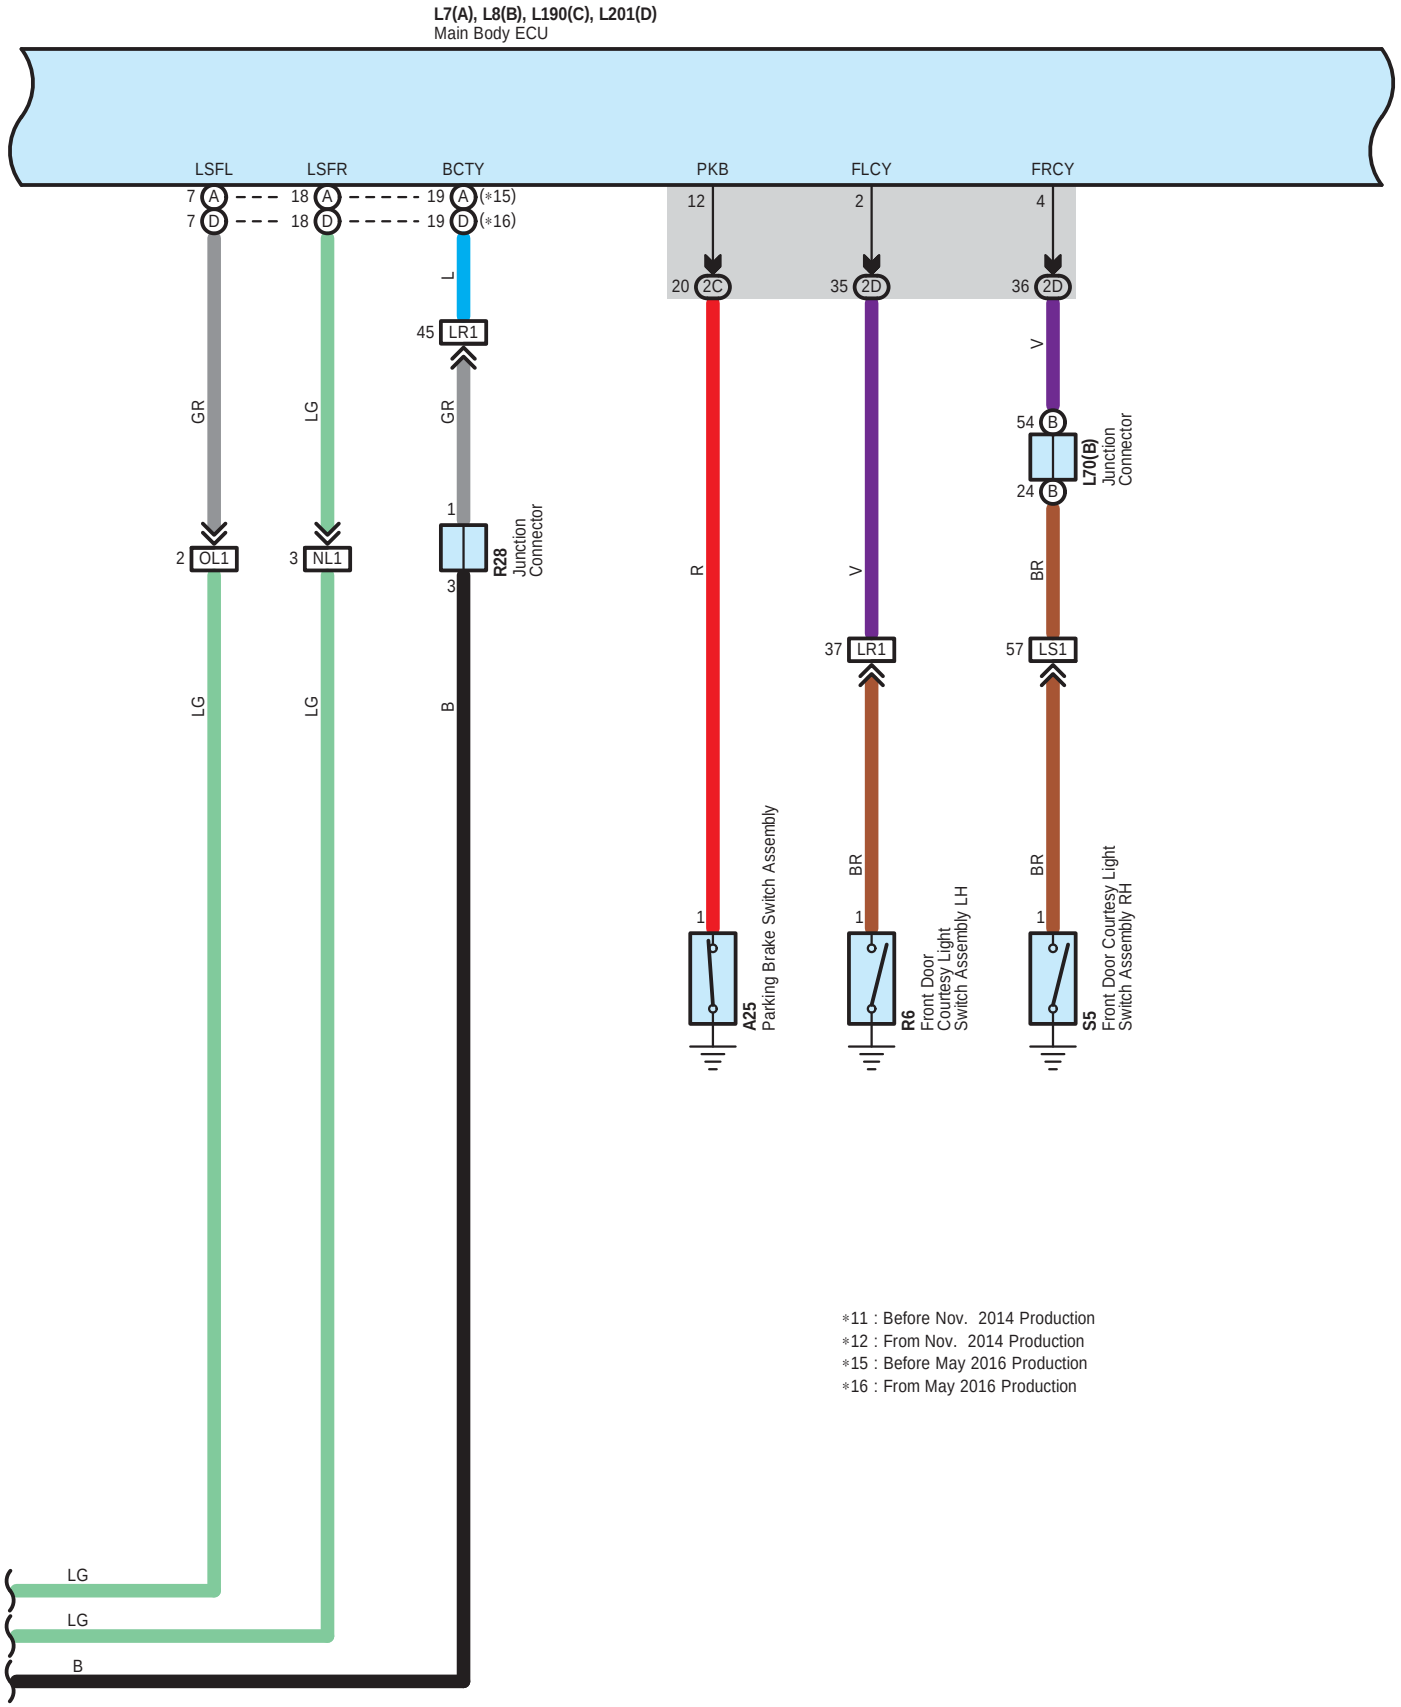

L62(A), L63(B), L195(C), L196(D), L197(E)
Certification ECU Assembly
CLG5
CG5B
CLG6
CG6B
CLG7
CG7B
CLG8
CG8B
TSW5
TSW6
L70(B)
Junction Connector
L11
No. 1 Indoor Electrical Key Antenna Assembly
R10
No. 3 Indoor Electrical Key Antenna Assembly
S26
No. 2 Indoor Electrical Key Antenna Assembly
S21
Outside Luggage Electrical Key Antenna (Electrical Key Antenna)
V4
Back Door Opener Switch Assembly
Open
Lock
UL
L
E
W(*12)
R(*11)
SB
G(*15)
W-B
V1

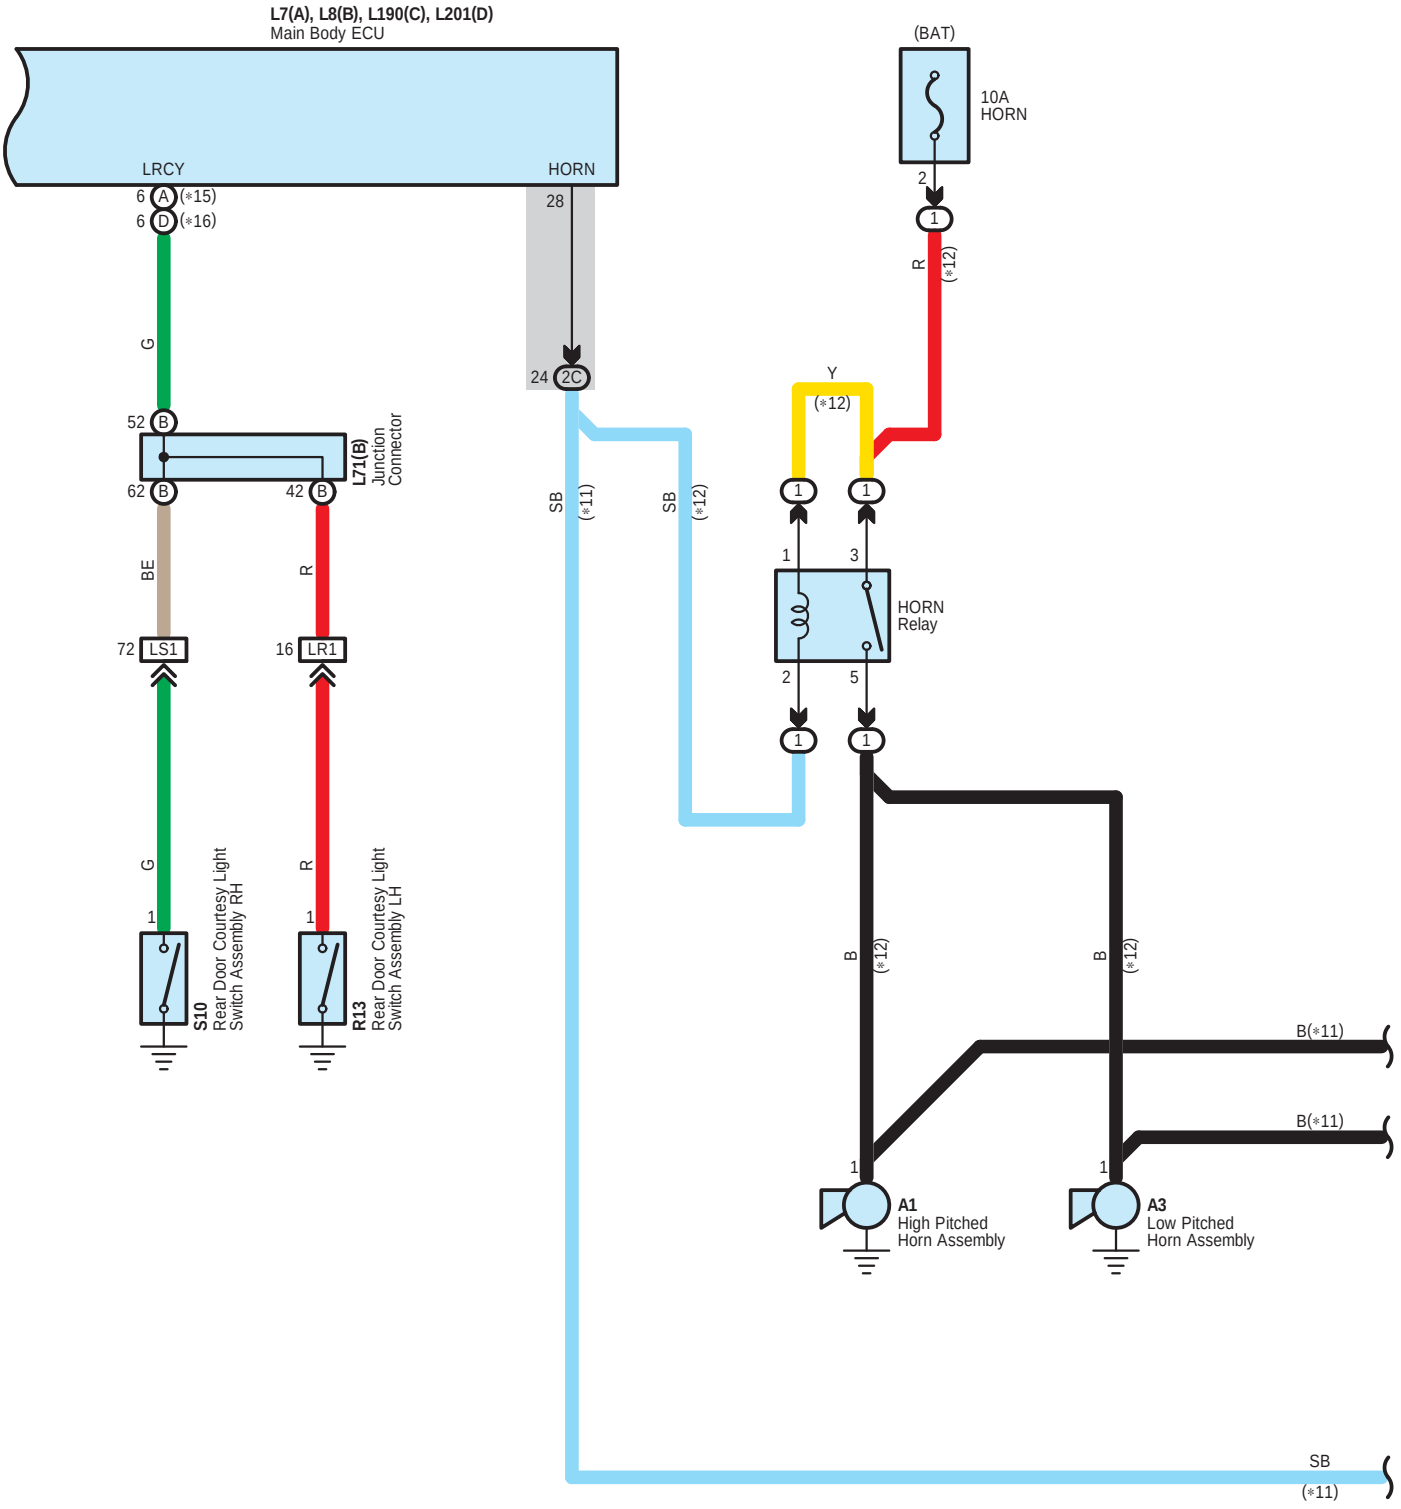

L7(A), L8(B), L190(C), L201(D)
Main Body ECU
(IG)
(ACC)
10A ECU–IG NO. 1
10A ECU–ACC
2
2
ACC
IG
BDSU
CANL
CANH
IND
BZR
29
32
23 A
13 A
13 D
14 A (*15)
14 D (*16)
23
21
51 2A
23 2C
GR
(*2 *15)
W
(*12)
R
(*11)
SB
G
(*15)
R
GR (*2 *15)
W(*12)
R(*11)
SB
G(*15)
1
2
A33
Wireless Door Lock Buzzer
W–B
W–B
W–B
A1
A2

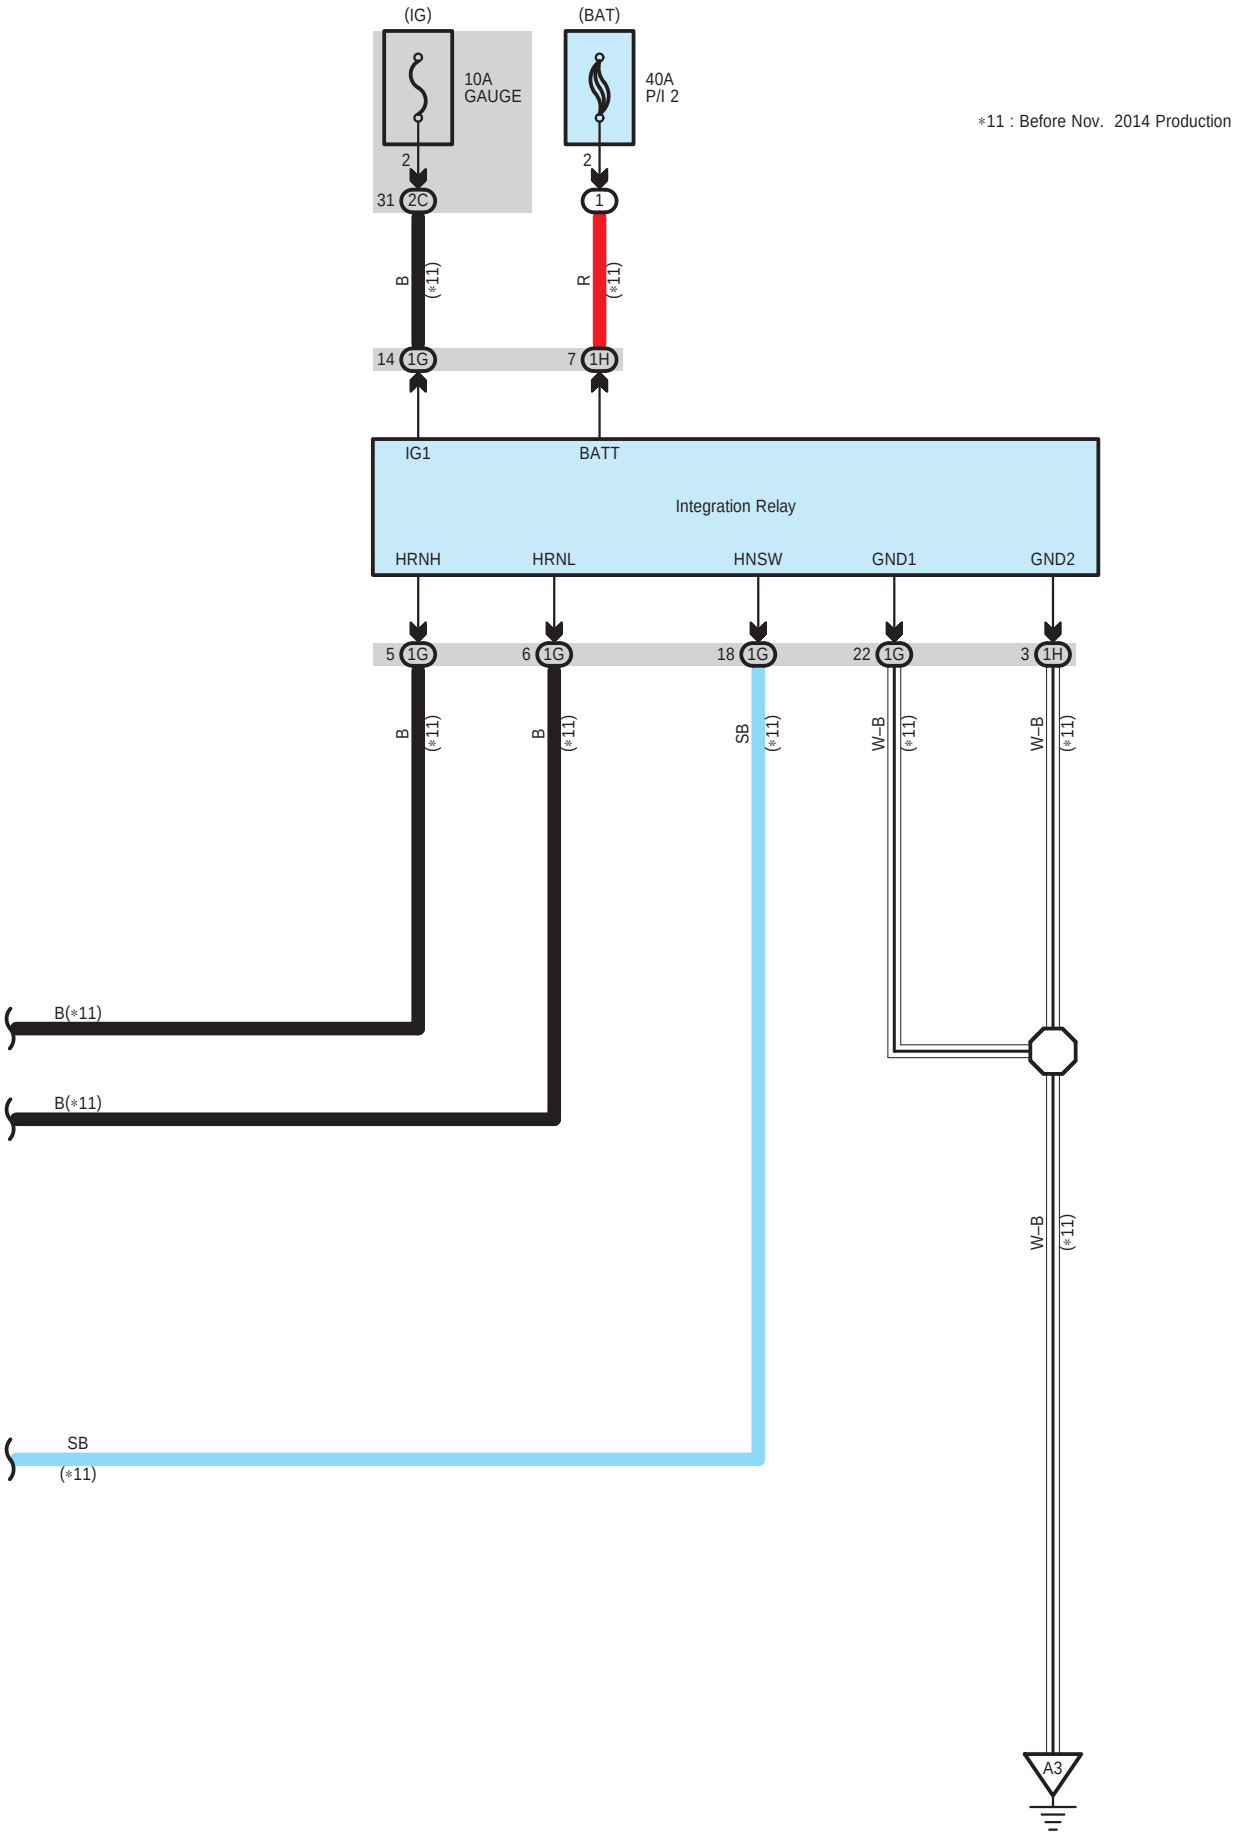

L7(A), L8(B), L190(C), L201(D)
Main Body ECU
GND2
ALTB
BECU
GND1
TR+
3 B (*15)
3 C (*16)
31
7
30
11
6
(BAT)
(BAT)
7. 5A
ECU–B
25A
DOOR
NO. 1
D/L
SOURCE
Relay
BK/DR
Relay
W–B
Y
18 2C
6 2B
9 2D
29 LR1
9 VR1
30 B
20 B
L71(B)
Junction
Connector
60 B
10 B
L70(B)
Junction
Connector
3
1
L179
Junction
Connector
3
7
L92
Junction
Connector
2
3
ACT+
D+
M
Courtesy
ACT–
V11
Back Door Lock Assembly
1
2 VR2
L4
L6
V1
R1
(*11)
(*12)
(*4)
(*5)
B
BR
* 2 : Driver' s Door Only Entry & Start System
* 4 : w/ Intrusion Sensor
* 5 : w/o Intrusion Sensor
*11 : Before Nov. 2014 Production
*12 : From Nov. 2014 Production
*15 : Before May 2016 Production
*16 : From May 2016 Production


L7(A), L8(B), L190(C), L201(D)
Main Body ECU
ACT+
ACT–
D/L Relay
DR UNLOCK Relay
L85(A), L161(B) Junction Connector
N8(A), (B) Front Door Lock Assembly RH
O8(A), (B) Front Door Lock Assembly LH
Unlock Detection
L93 Junction Connector
L92 Junction Connector
L4
L6



L7(A), L8(B), L190(C), L201(D)
Main Body ECU
LSR
5
10 2B
3 2B
29 2B
12 2D
11 2D
25 2D
P
LG
GR
L
V
GR
48 LS1
40 LS1
49 LS1
22 LR1
21 LR1
34 LR1
4 PS1
5 PS1
3 PS1
4 QR1
5 QR1
3 QR1
4 A
4 B
3 A
1 B
9 A (*6)
6 B (*7)
2 A
4 B
1 A
1 B
5 A (*6)
6 B (*7)
L
UL
LSSR
M
Unlock Detection
E
P1(A), (B)
Rear Door with Motor Lock Assembly RH
Q1(A), (B)
Rear Door with Motor Lock Assembly LH
10 A (*6)
9 B (*7)
6 A (*6)
9 B (*7)
W–B
19 PS1
19 QR1
LG
B
S1
S2
R2
* 6 : w/ Double Locking
* 7 : w/o Double Locking
* 9 : Before Aug. 2013 Production
*10 : From Aug. 2013 Production


L7(A), L8(B), L190(C), L201(D)
Main Body ECU
LSFL
LSFR
BCTY
PKB
FLCY
FRCY
7 A
7 D
18 A
18 D
19 A (*15)
19 D (*16)
12
20 2C
2
35 2D
4
36 2D
L
45 LR1
GR
LG
GR
V
54 B
24 B
L70(B) Junction Connector
2 OL1
3 NL1
1
3
R28 Junction Connector
R
V
BR
37 LR1
57 LS1
LG
LG
B
1
1
1
A25 Parking Brake Switch Assembly
R6 Front Door Courtesy Light Switch Assembly LH
S5 Front Door Courtesy Light Switch Assembly RH
LG
LG
B
*11 : Before Nov. 2014 Production
*12 : From Nov. 2014 Production
*15 : Before May 2016 Production
*16 : From May 2016 Production


L7(A), L8(B), L190(C), L201(D)
Main Body ECU
LRCY
HORN
6 A (*15)
6 D (*16)
28
24 2C
(BAT)
10A
HORN
2
1
R
(*12)
G
52 B
62 B
42 B
L71(B)
Junction
Connector
BE
R
72 LS1
16 LR1
G
R
1
1
S10
Rear Door Courtesy Light
Switch Assembly RH
R13
Rear Door Courtesy Light
Switch Assembly LH
SB
(*11)
SB
(*12)
Y
(*12)
1
1
1
3
HORN
Relay
2
5
1
1
B
(*12)
B
(*12)
B(*11)
B(*11)
1
1
A1
High Pitched
Horn Assembly
A3
Low Pitched
Horn Assembly
SB
(*11)


(IG)
(BAT)
10A
GAUGE
40A
P/I 2
∗11 : Before Nov. 2014 Production
2
2
31 2C
1
B
(∗11)
R
(∗11)
14 1G
7 1H
IG1
BATT
Integration Relay
HRNH
HRNL
HNSW
GND1
GND2
5 1G
6 1G
18 1G
22 1G
3 1H
B
(∗11)
B
(∗11)
SB
(∗11)
W–B
(∗11)
W–B
(∗11)
B(∗11)
B(∗11)
W–B
(∗11)
SB
(∗11)
A3

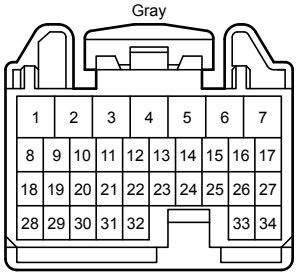
A 1
Black



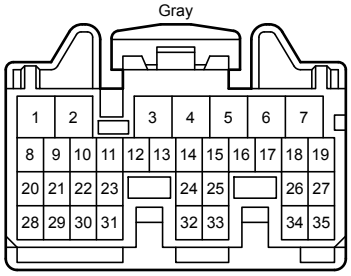

A 3
Black



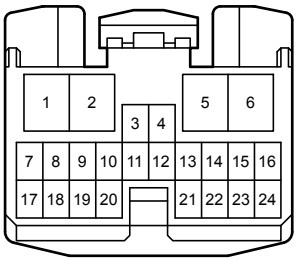

A 21
Gray



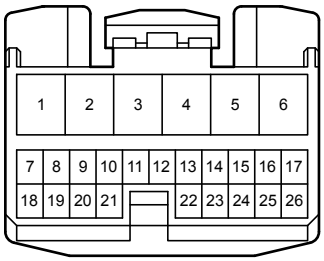

A 22
Gray




A 23
White





A 24
White



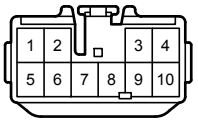

A 25
White



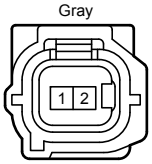

A 26
White



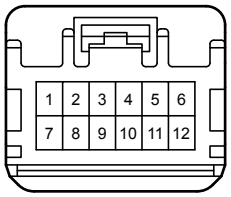

A 28
Black



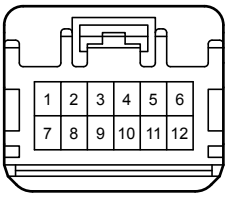

A 33
Gray



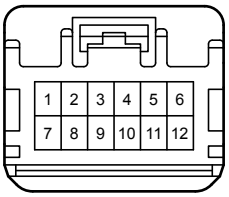

A 50
White



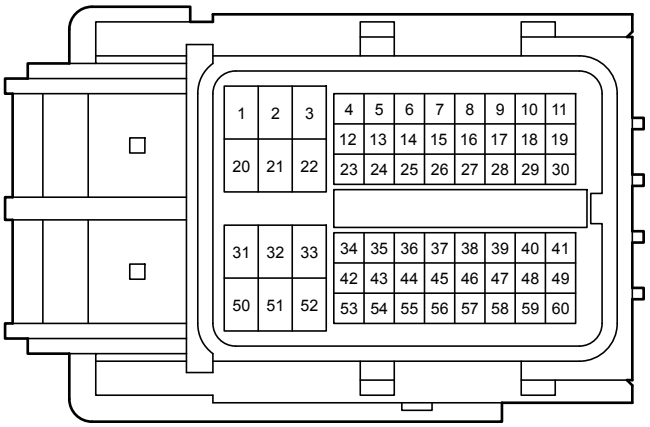

A 51
White



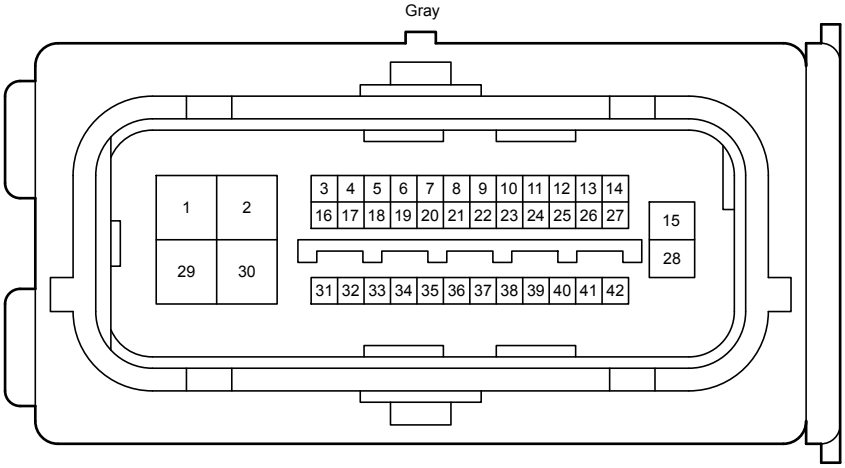

A 56
White



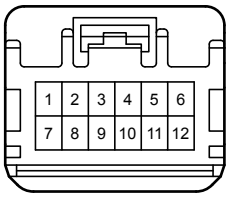

A 57
Black



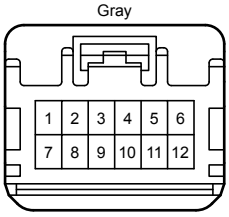
A 58
Gray



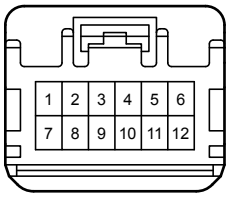

A 67
Blue



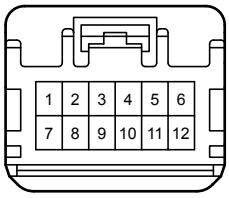

A 68
Gray



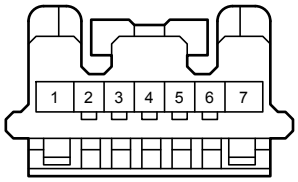

A 72
Black



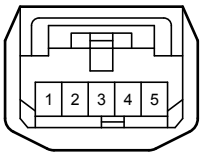

A 73
Black



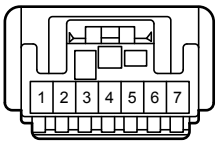

A 79
Black



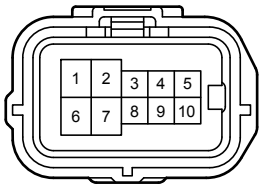

A 80
Blue



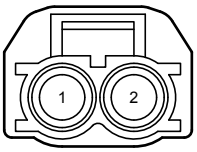

A 93
Blue



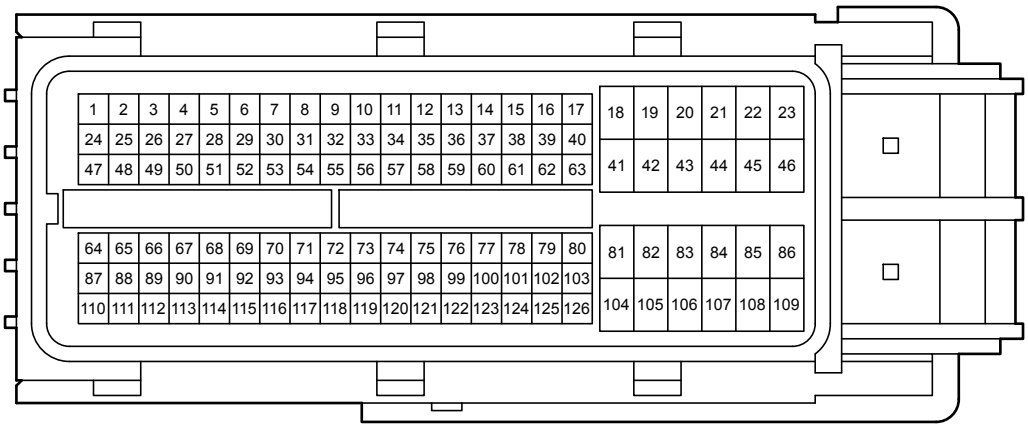

D 2
Black



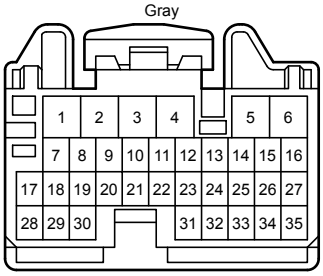

D 27
Black



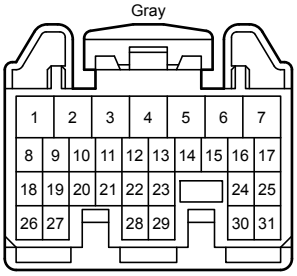

D 28
Black



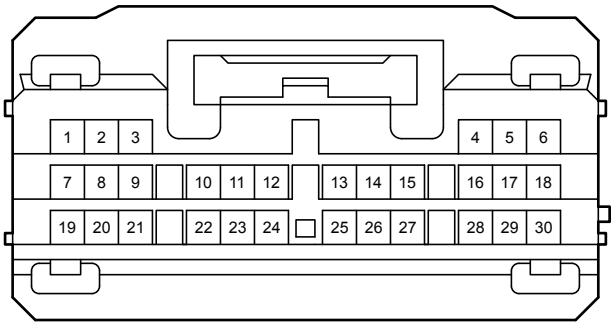
L 5
Gray



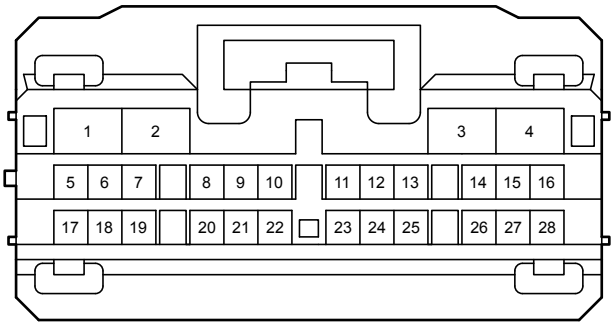

L 6
Gray



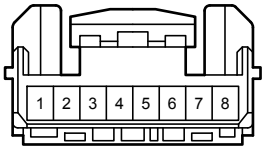

L 7
White



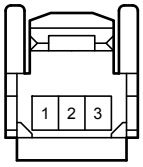

L 8
White



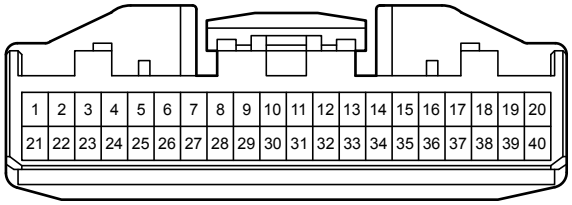

L 10
White



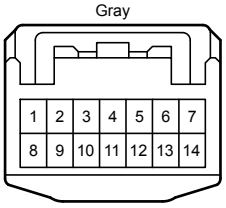

L 11
White



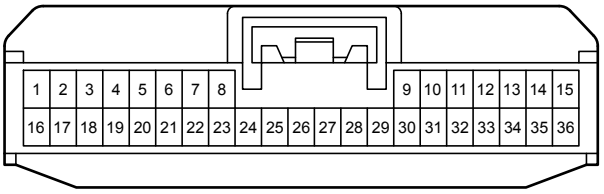

L 27
White



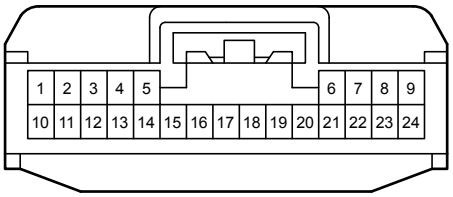

L 43
Gray



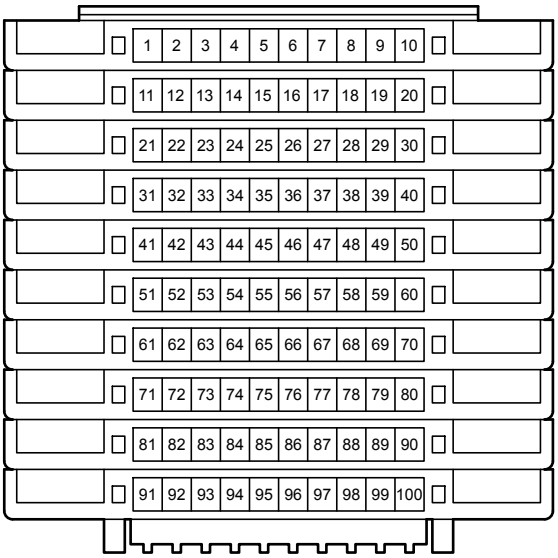

L 62
White



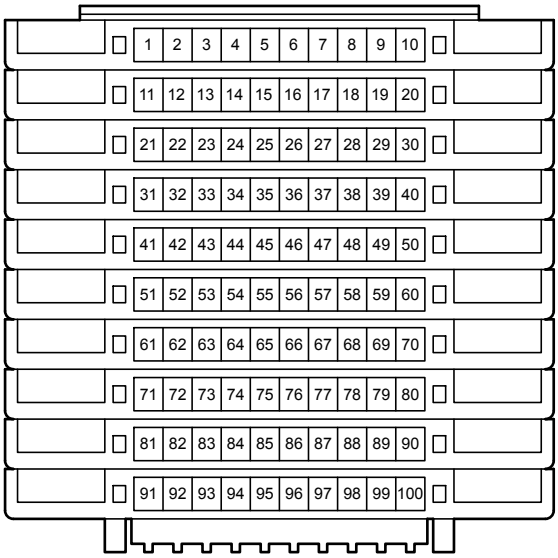
L 63
White



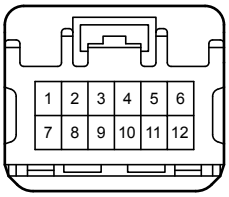

L 70
White



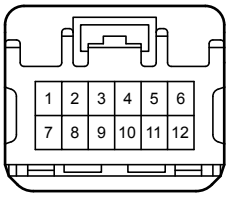

L 71
White



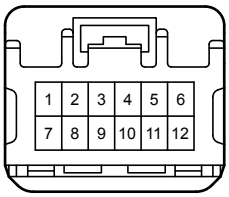

L 85
White



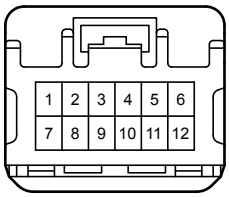

L 87
White



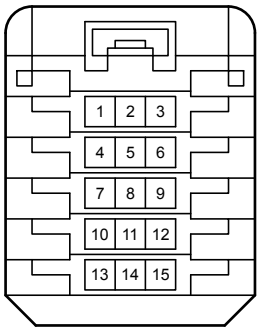

L 92
White



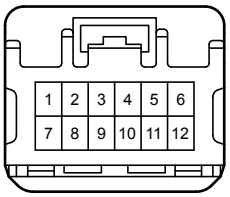

L 93
White



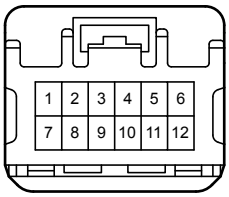

L 94
White



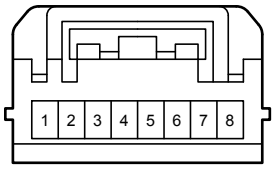

L101
White



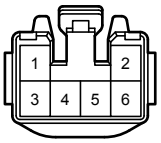
L102
White



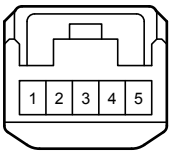

L124
Black



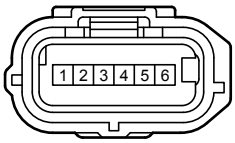

L125
White



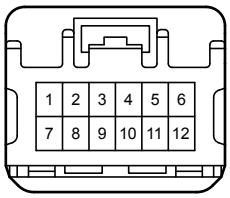

L126
White



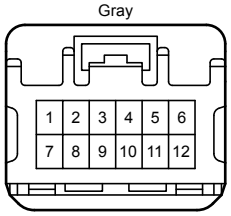

L127
Black



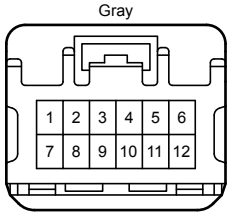

L132
Blue





L133
Gray



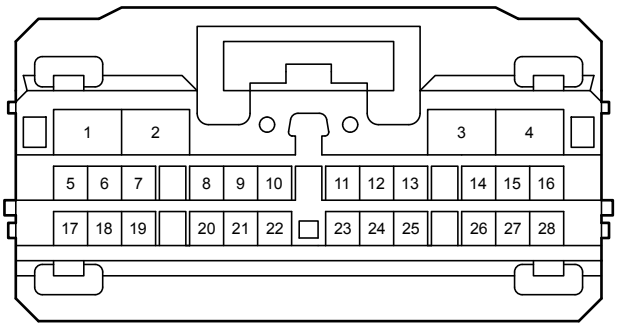

L161
Gray



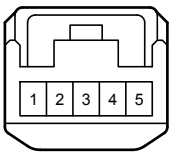

L179
Black



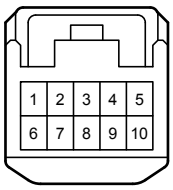

L190
White



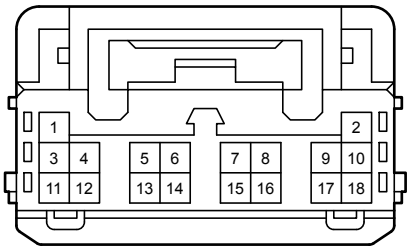

L191
White



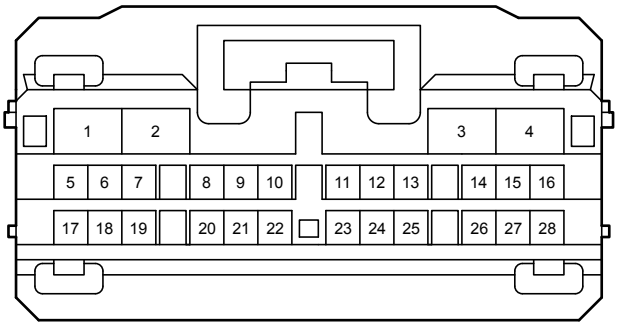

L194
Black



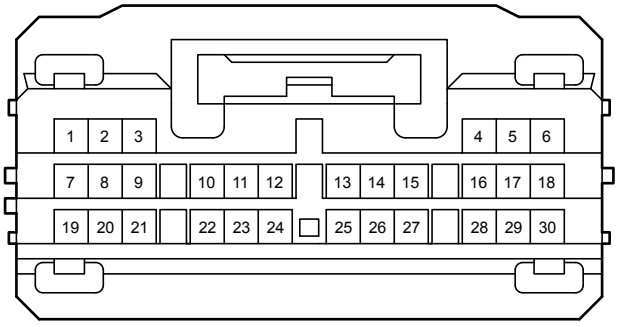

L195
White



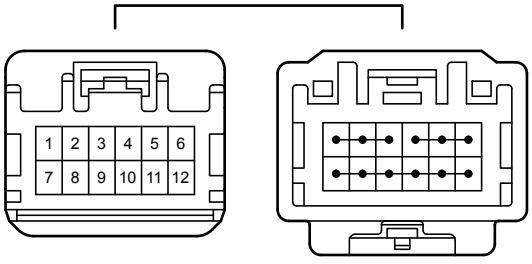

L196
White



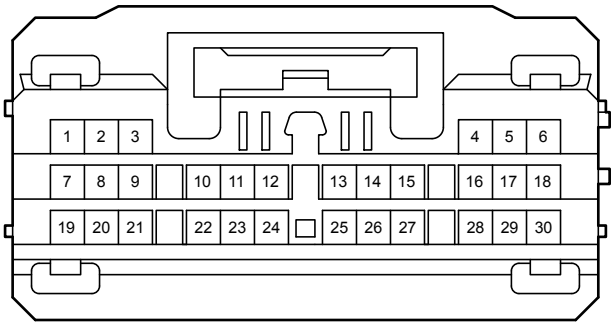

L197
White



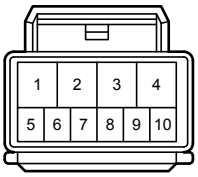

L200
Black



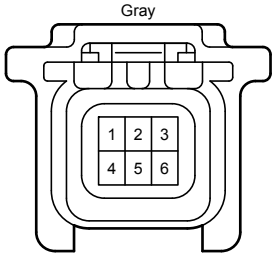
L201
White



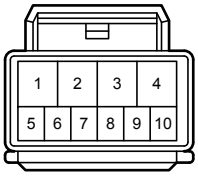

N 8
White



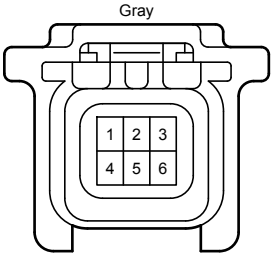

N 16
Gray



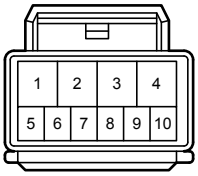

O 8
White



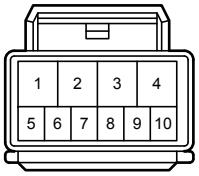

O 15
Gray




P 1
White



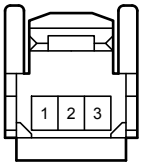

Q 1
White




R 6
Black



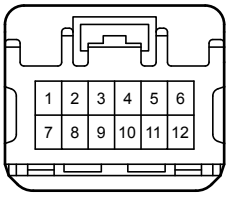

R 10
White



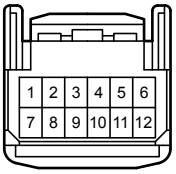

R 13
Black




R 28
Black




R 42
White



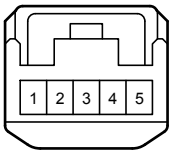

S 5
Black



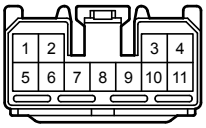

S 10
Black





S 12
Blue



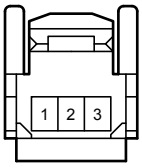

S 20
White



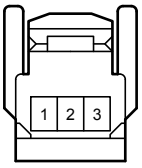

S 21
White



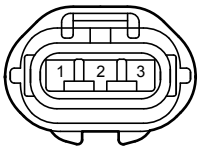

S 26
White



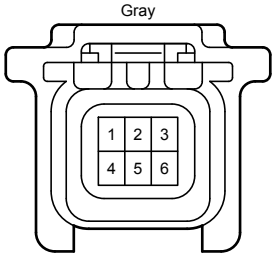

V 4
White



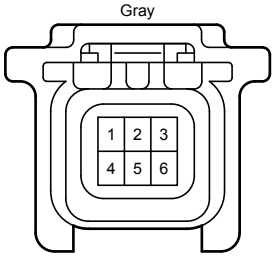

V 11
Black



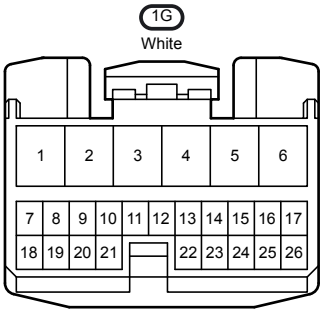

m 1
Gray



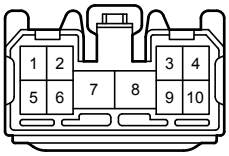

n 1
Gray



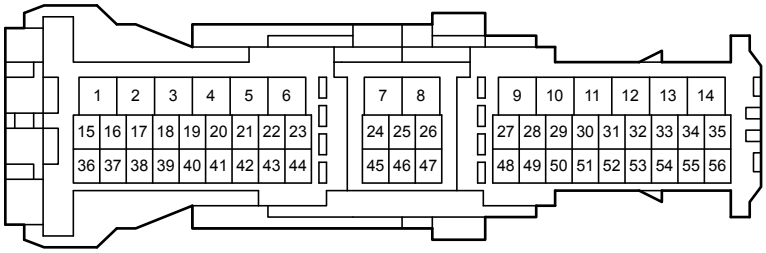

1G
White



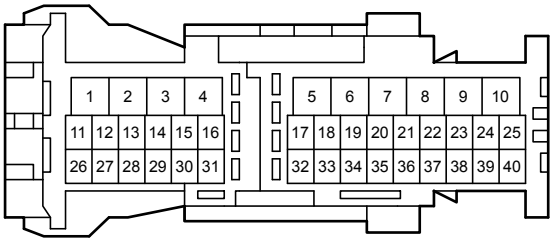
1H
White



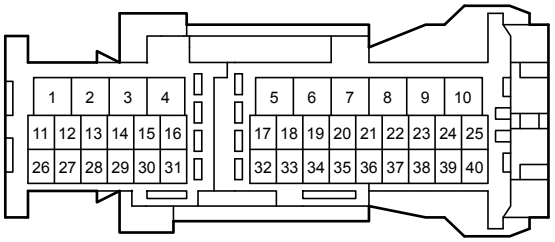

2A
White



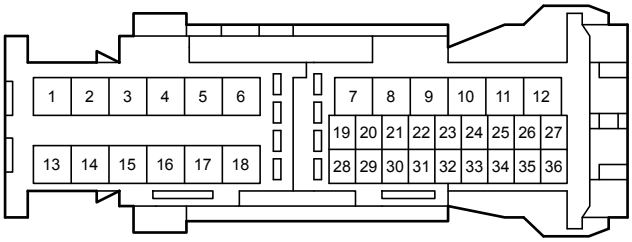

2B
White



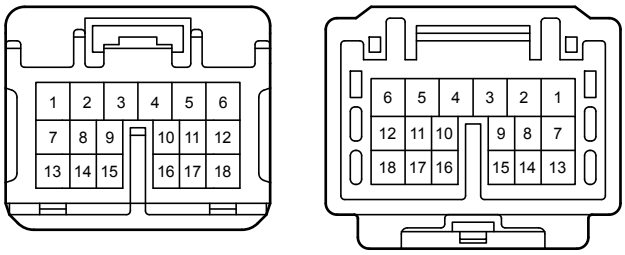

2C
White



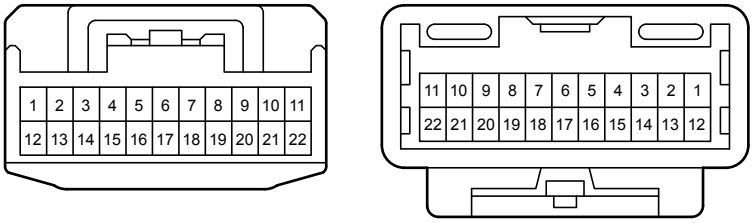

2D
White



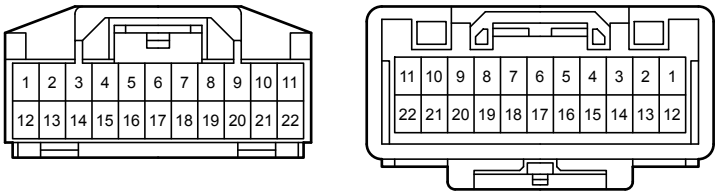

AL4
Black



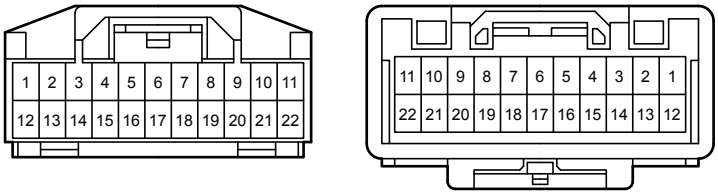

AL10
Blue



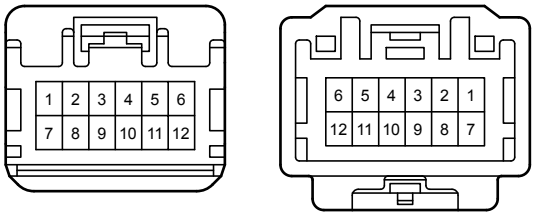
AL11
White



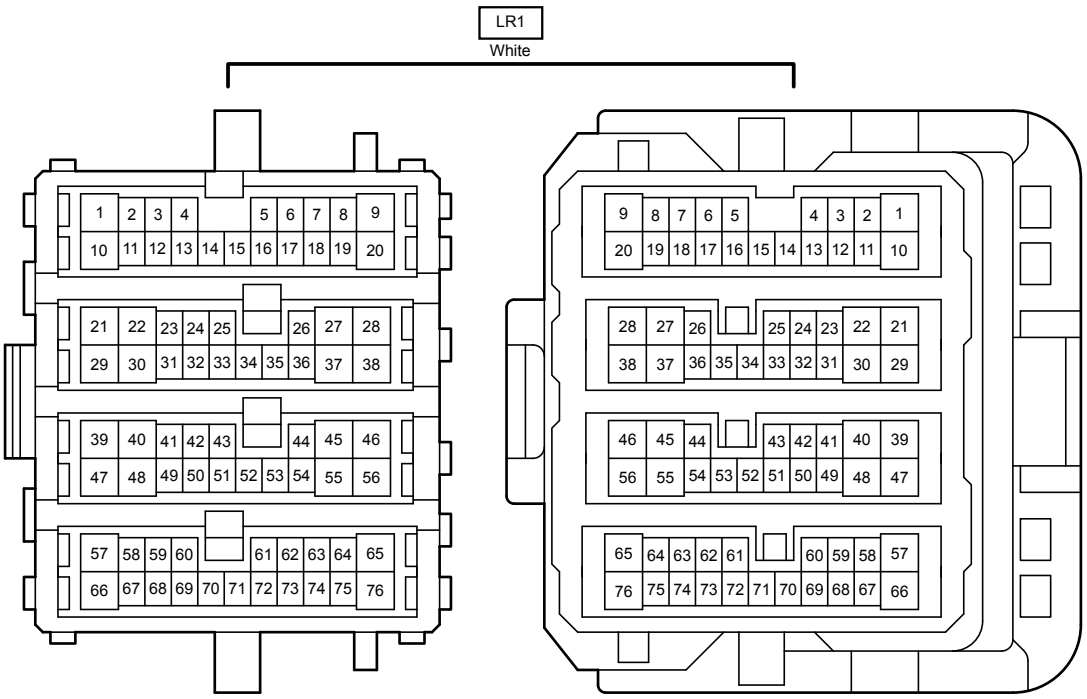

DA1
White

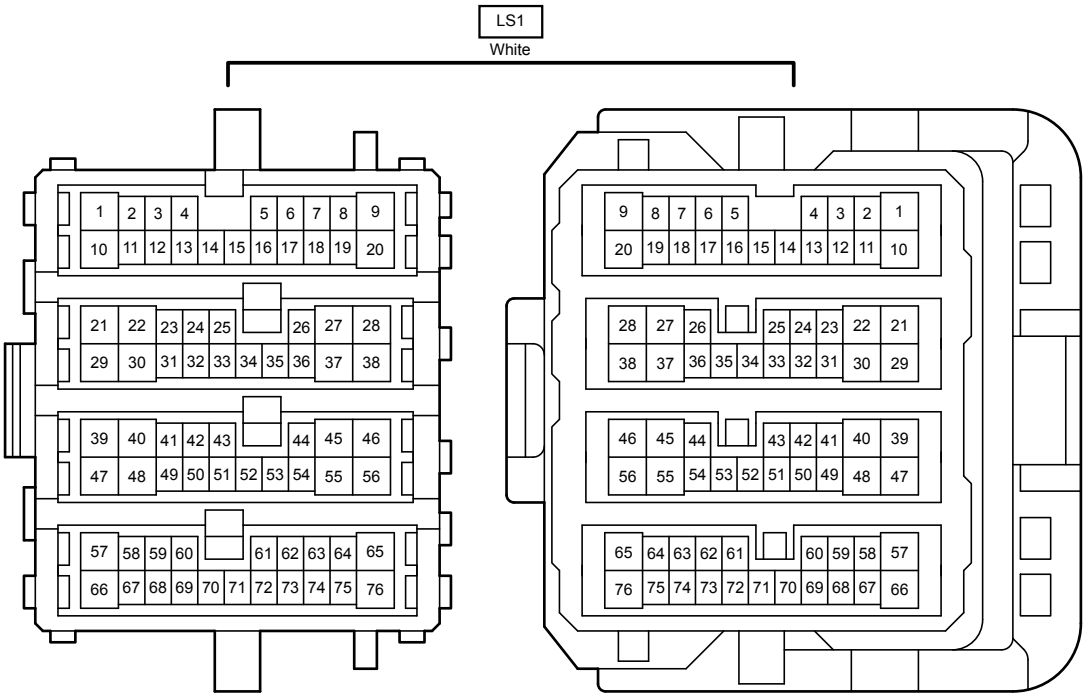


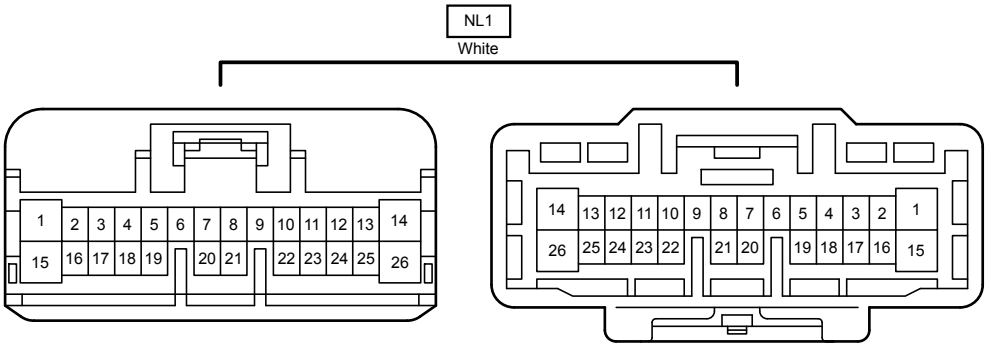

DA2
White

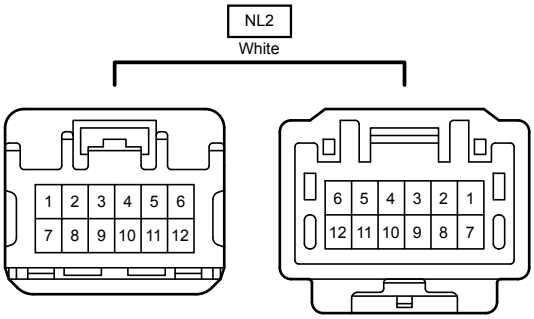



LR1
White

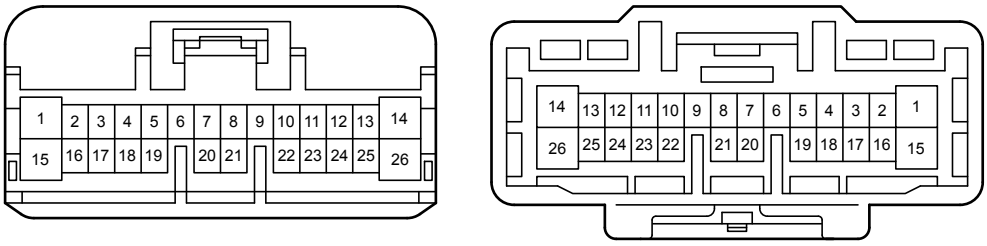



LS1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40 41 42 43 44 45 46
47 48 49 50 51 52 53 54 55 56
57 58 59 60 61 62 63 64 65
66 67 68 69 70 71 72 73 74 75 76
9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11 10
28 27 26 25 24 23 22 21
38 37 36 35 34 33 32 31 30 29
46 45 44 43 42 41 40 39
56 55 54 53 52 51 50 49 48 47
65 64 63 62 61 60 59 58 57
76 75 74 73 72 71 70 69 68 67 66

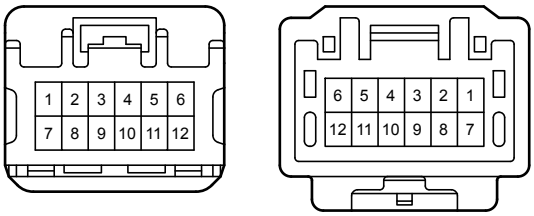

NL1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15


NL2
White
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7

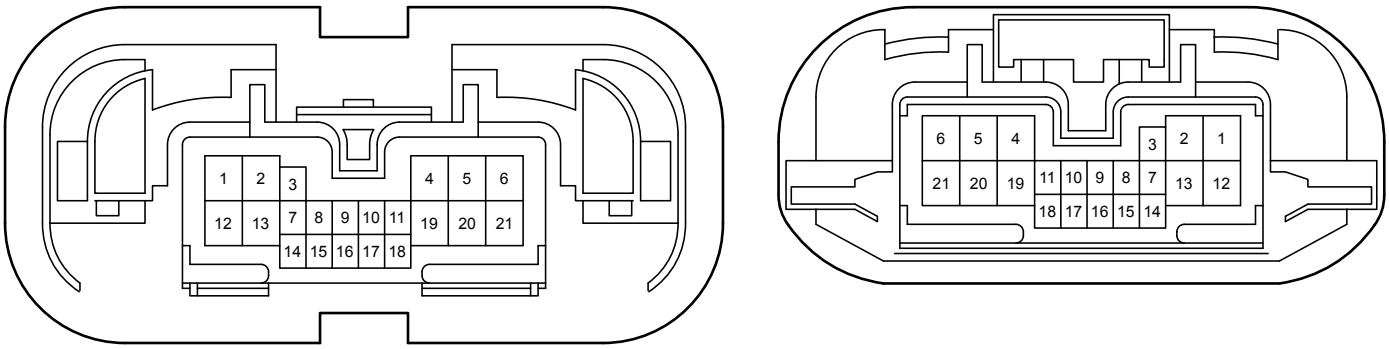
OL1
White



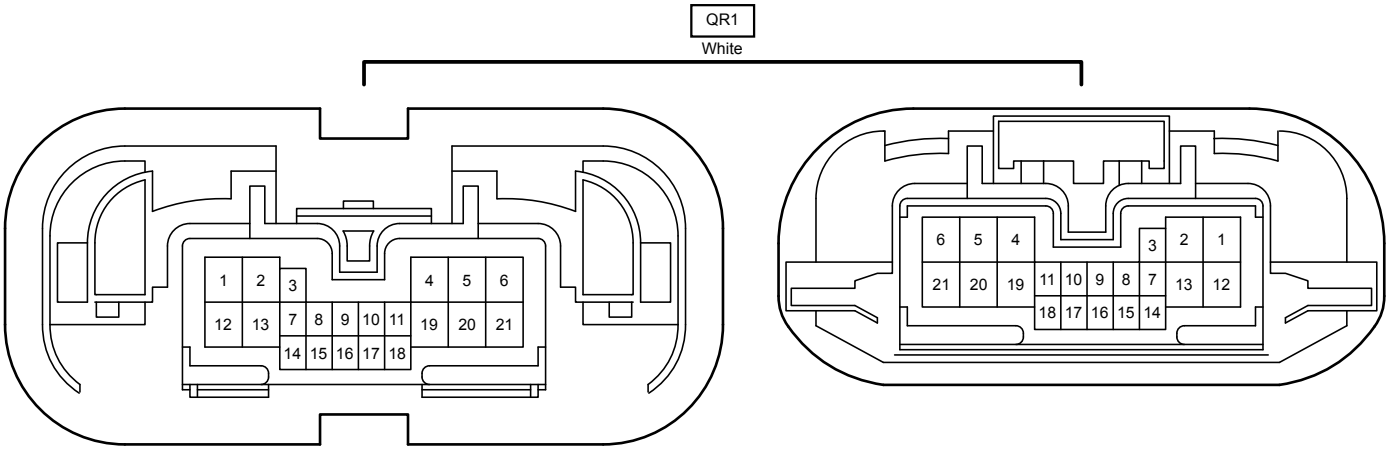

OL2
White

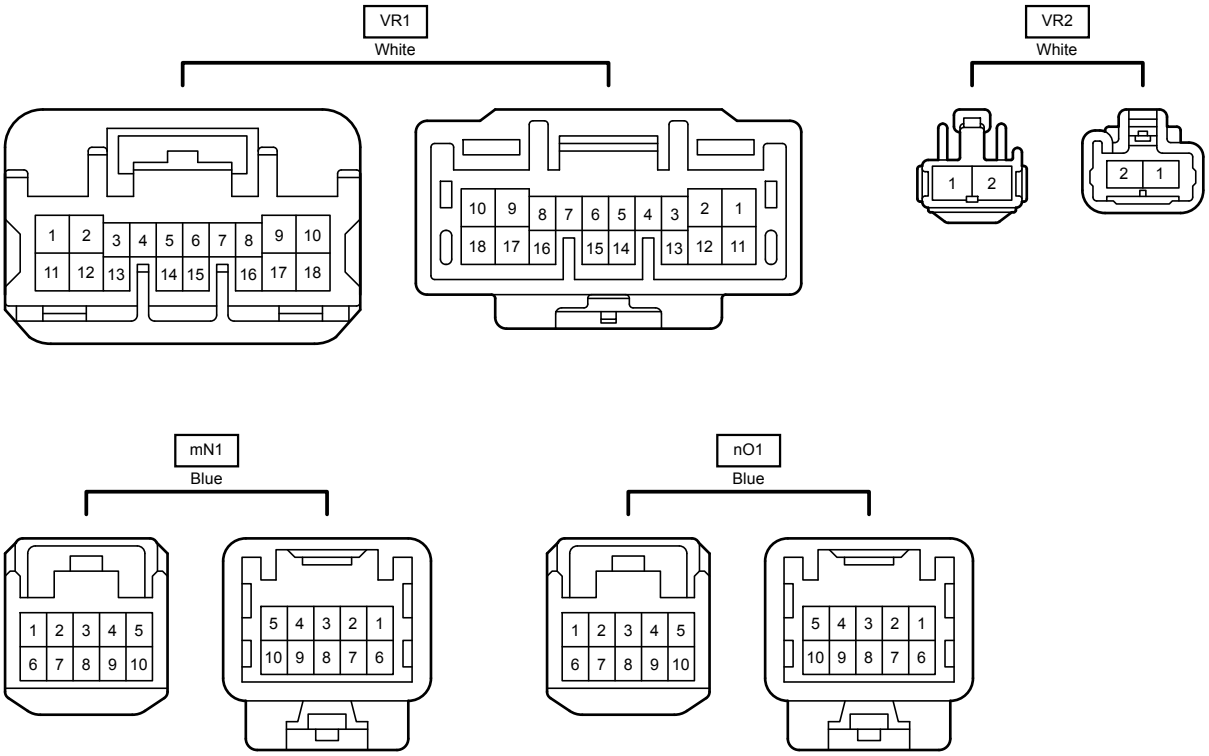



PS1
White




QR1
White




VR1
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11
VR2
White
1 2
2 1
mN1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
nO1
Blue
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6