




(IG)
30A
WIP
2
4 2C
11 2A
(IG)
15A
WASHER
2
1 2C
L48(C), L49(D)
Windshield Wiper Switch Assembly
Front Wiper Switch
+B
+2
+1
+S
INT1
INT2
B1
Mist
Off
Intermittent
Low
High
WF
+B
1 D
3 C
LG
B
L
10 C
9 C
A74(C)
Junction
Connector
2 D
6 C
A67(C), L132(D)
Junction
Connector
B
L
2
M
1
A36
Windshield Washer Motor and
Pump Assembly
LG
LG


L48(C), L49(D)
Windshield Wiper Switch Assembly
Front Washer Switch
WF
EW
Off
On
Intermittent
+2
+1
+S
EW
1 C
2 C
4 C
2 D
W
R
G
W–B
2 B
A68(A), L133(B)
Junction Connector
6 A
6 AL8
12 AL8
W
R
G
5 B
3 B
4 B
+2
+1
+S
M
7
L93
Junction Connector
9
B
E
1 B
2 B
A35(B)
Windshield Wiper Motor Assembly
LG
W–B
10
A56
Junction Connector
8
BR
W–B
A3
L4


A 35
Black

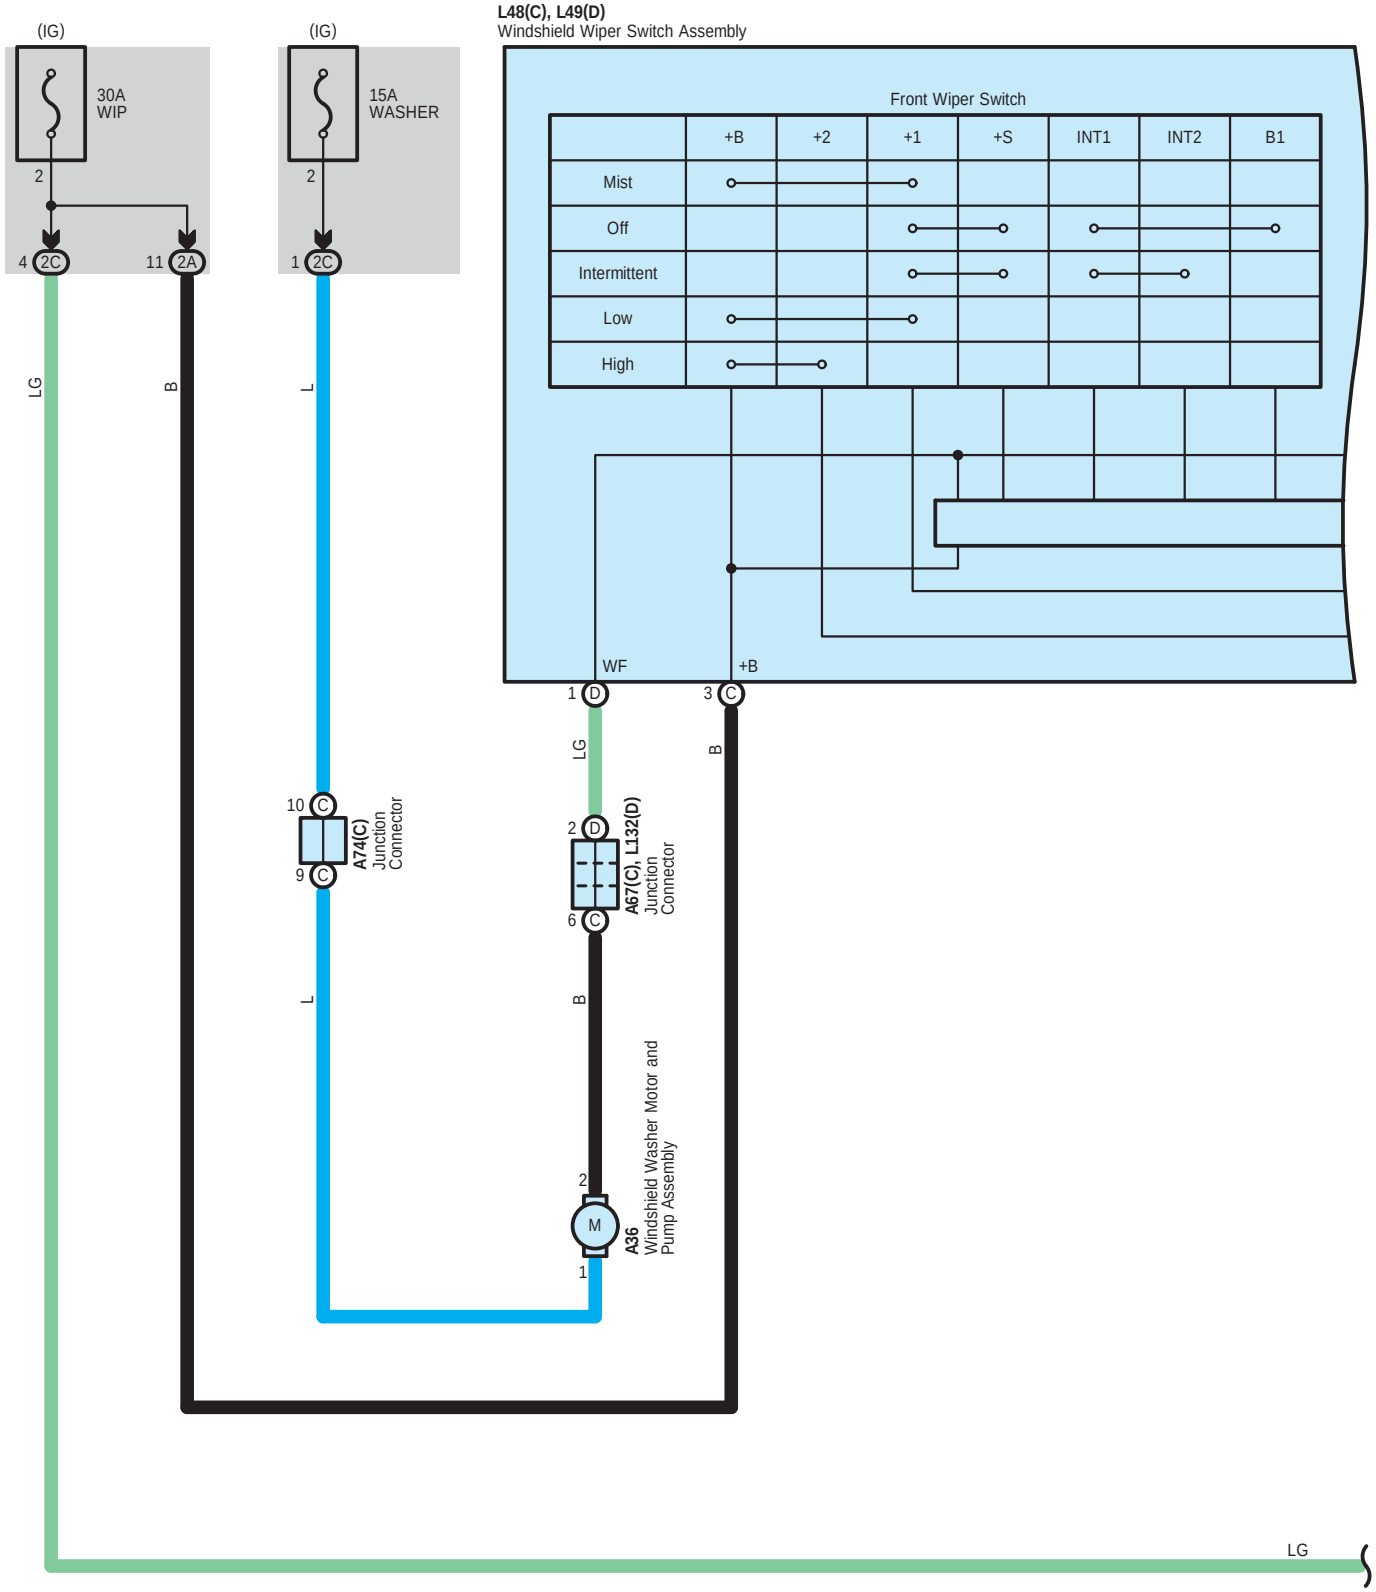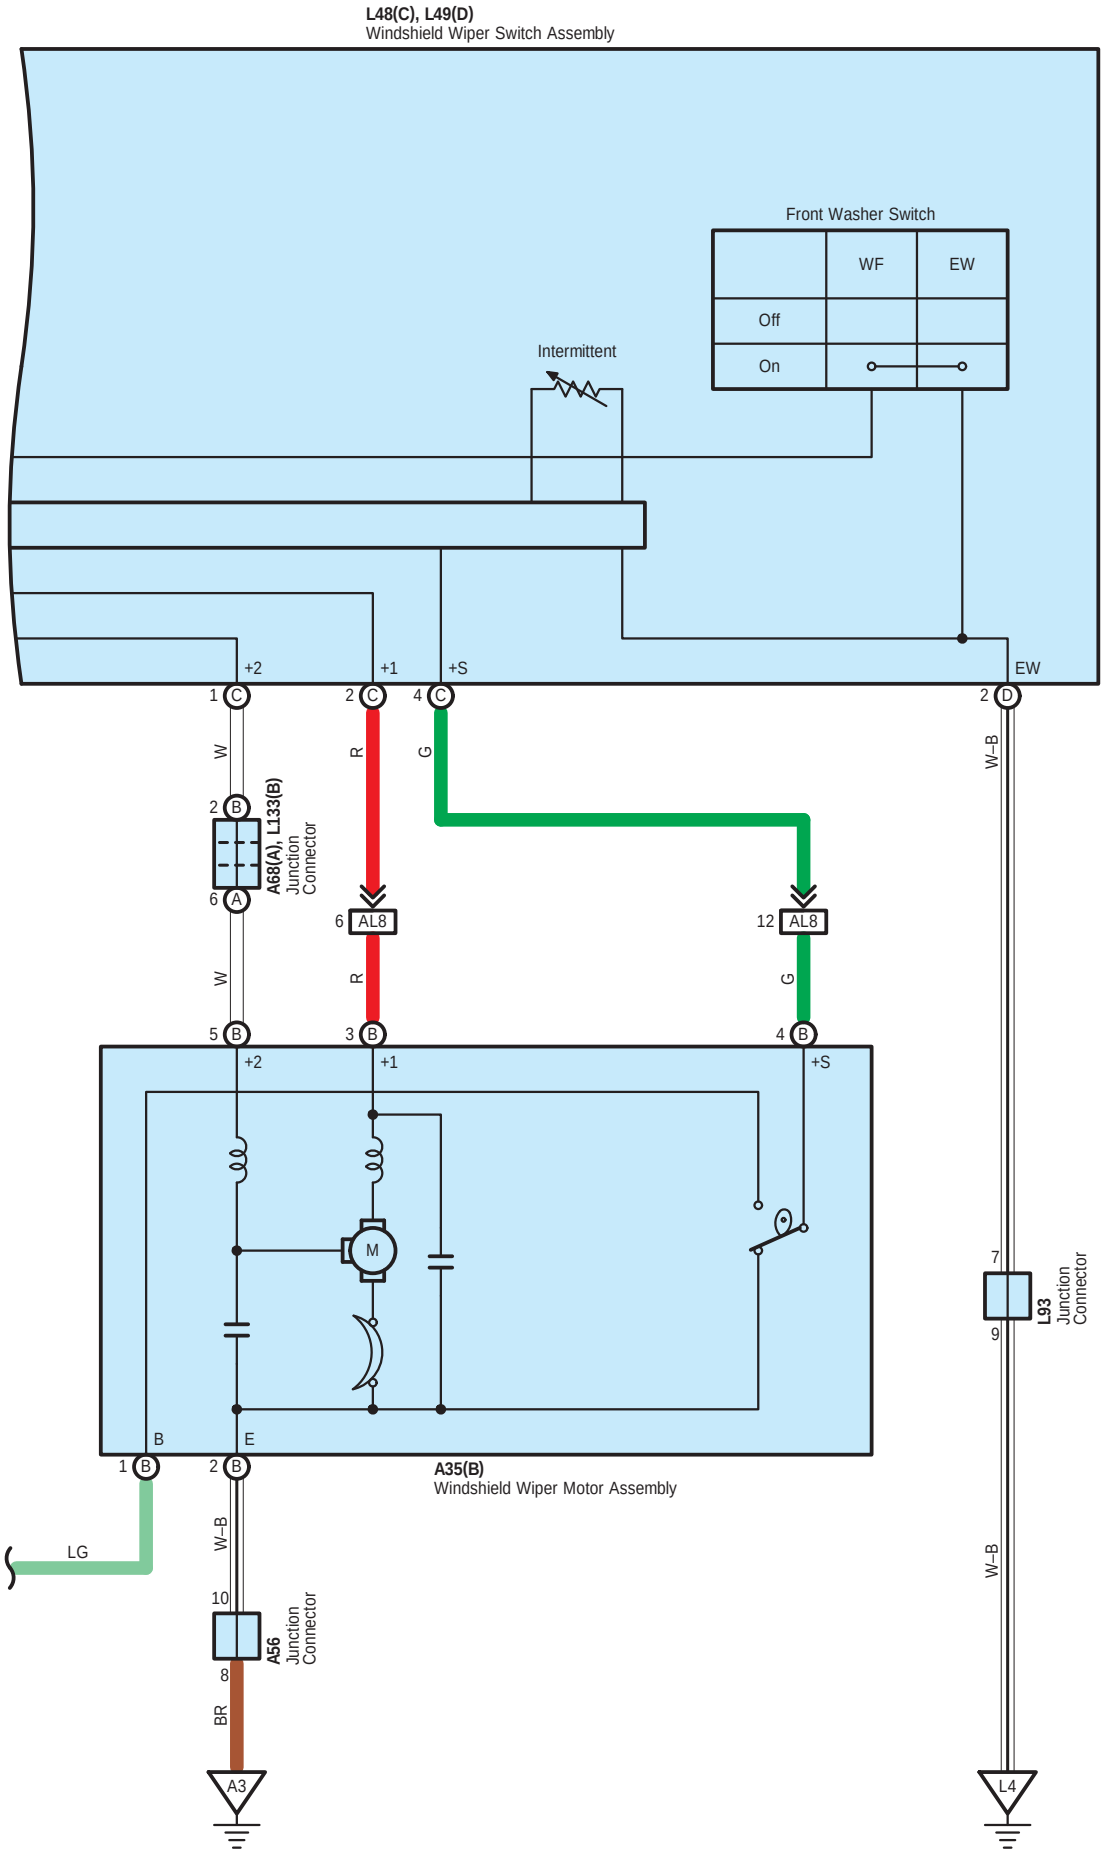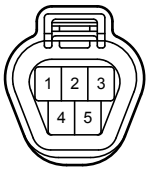


A 36
Black

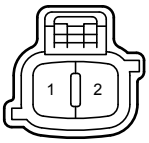


A 56
White

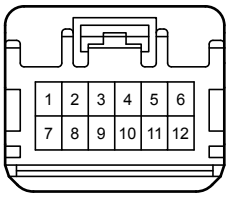


A 67
Blue

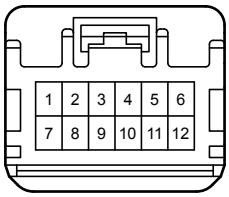


A 68
Gray

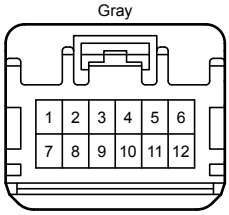


A 74
Black

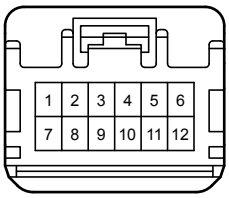


L 48
White

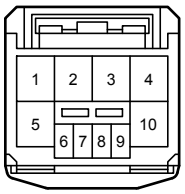


L 49
White

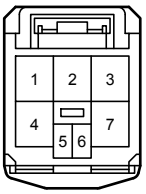


L 93
White

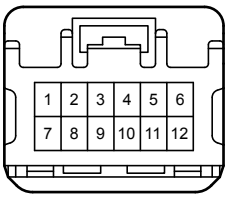


L132
Blue

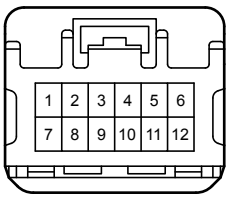


L133
Gray

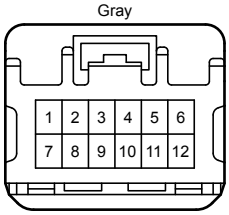

2A
White

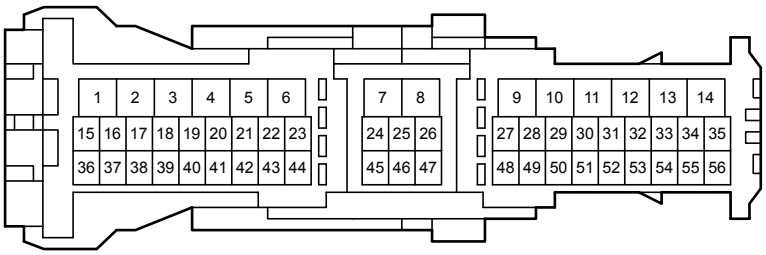

2C
White

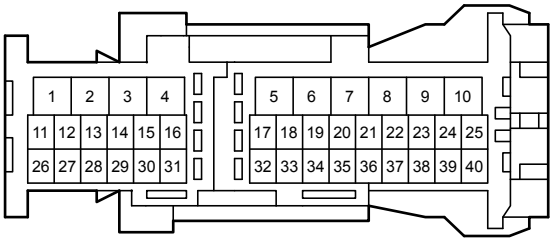

AL8
White

