




∗ 1 : w/ Dynamic Radar Cruise Control
∗ 2 : LED Headlight Type
∗ 3 : Halogen Headlight Type
∗13 : Before Oct. 2012 Production
∗14 : From Oct. 2012 Production
∗16 : Before Nov. 2014 Production
∗17 : From Nov. 2014 Production
∗21 : w/o Dynamic Radar Cruise Control
∗30 : From Aug. 2020 Production
∗31 : From Nov. 2014 Production until Aug. 2020 Production

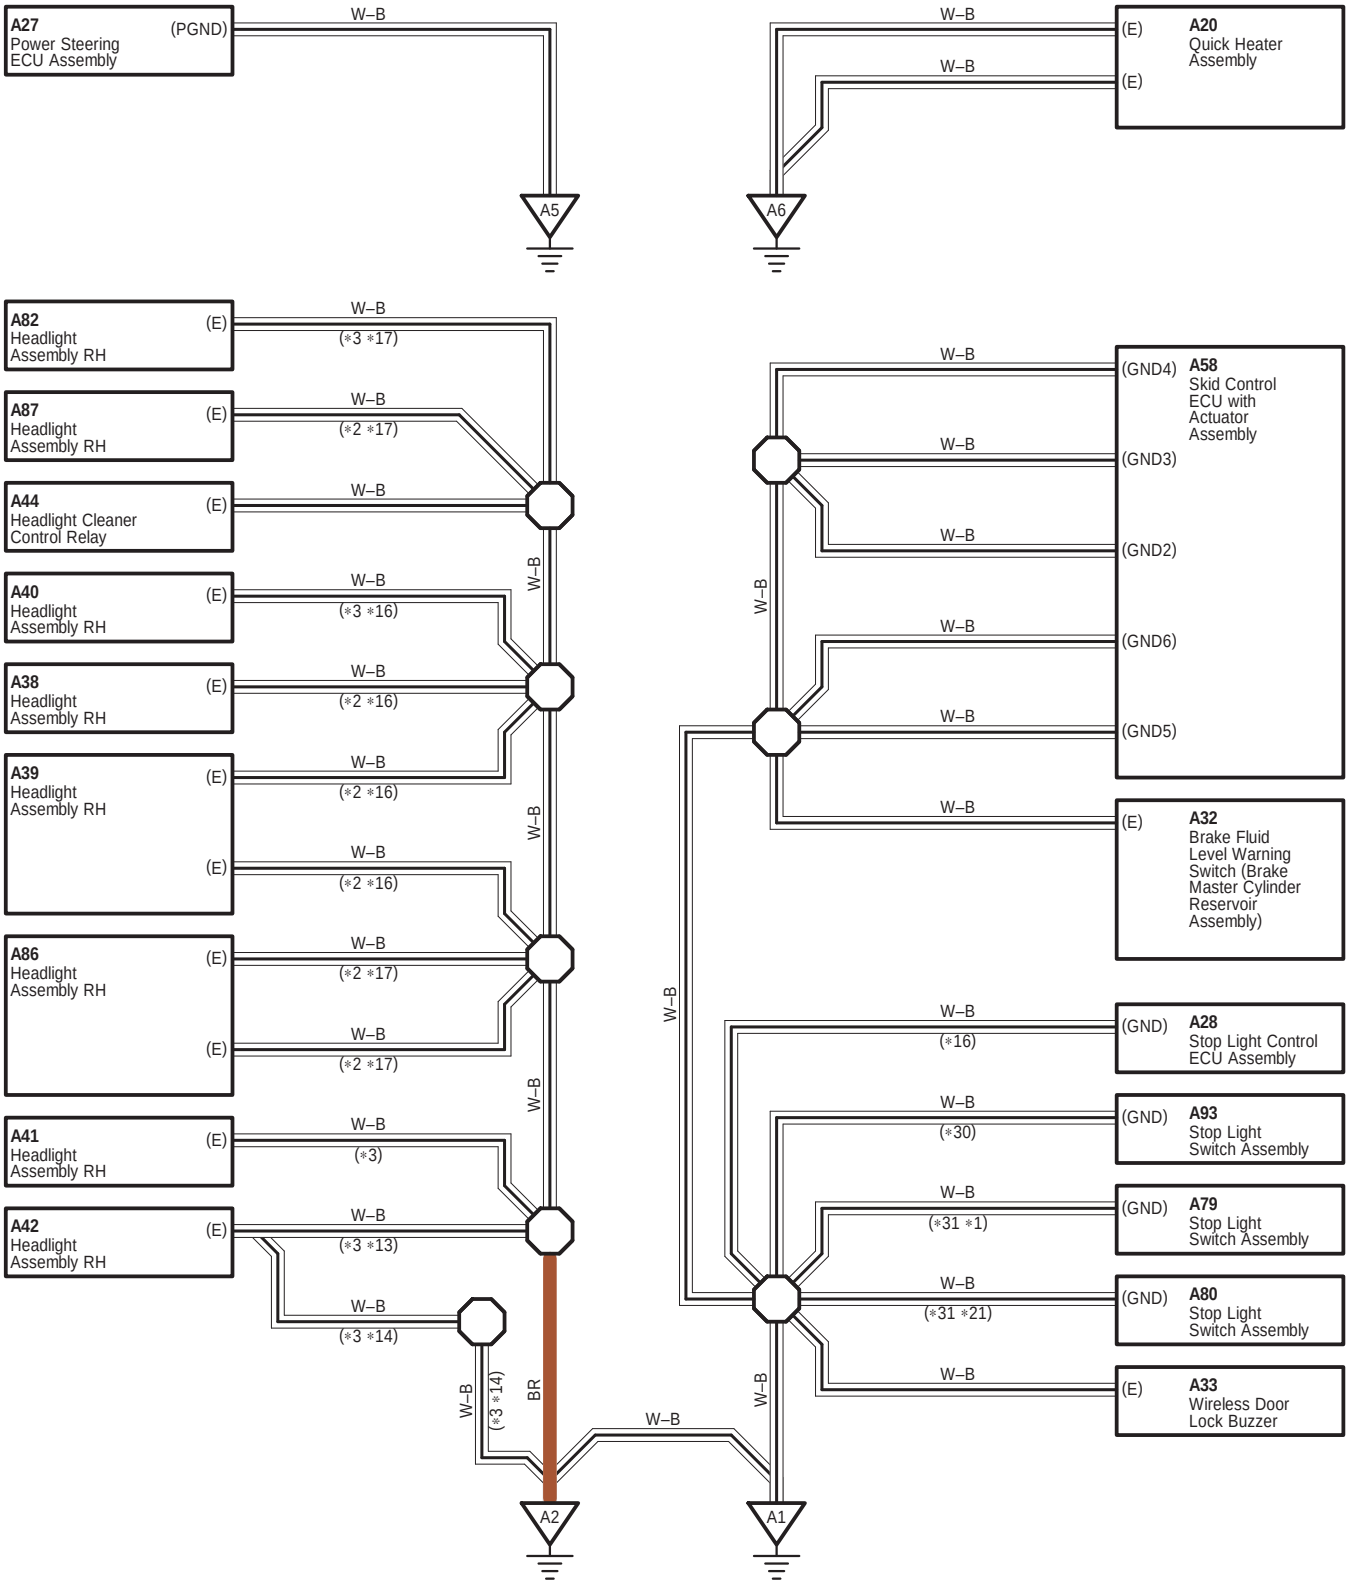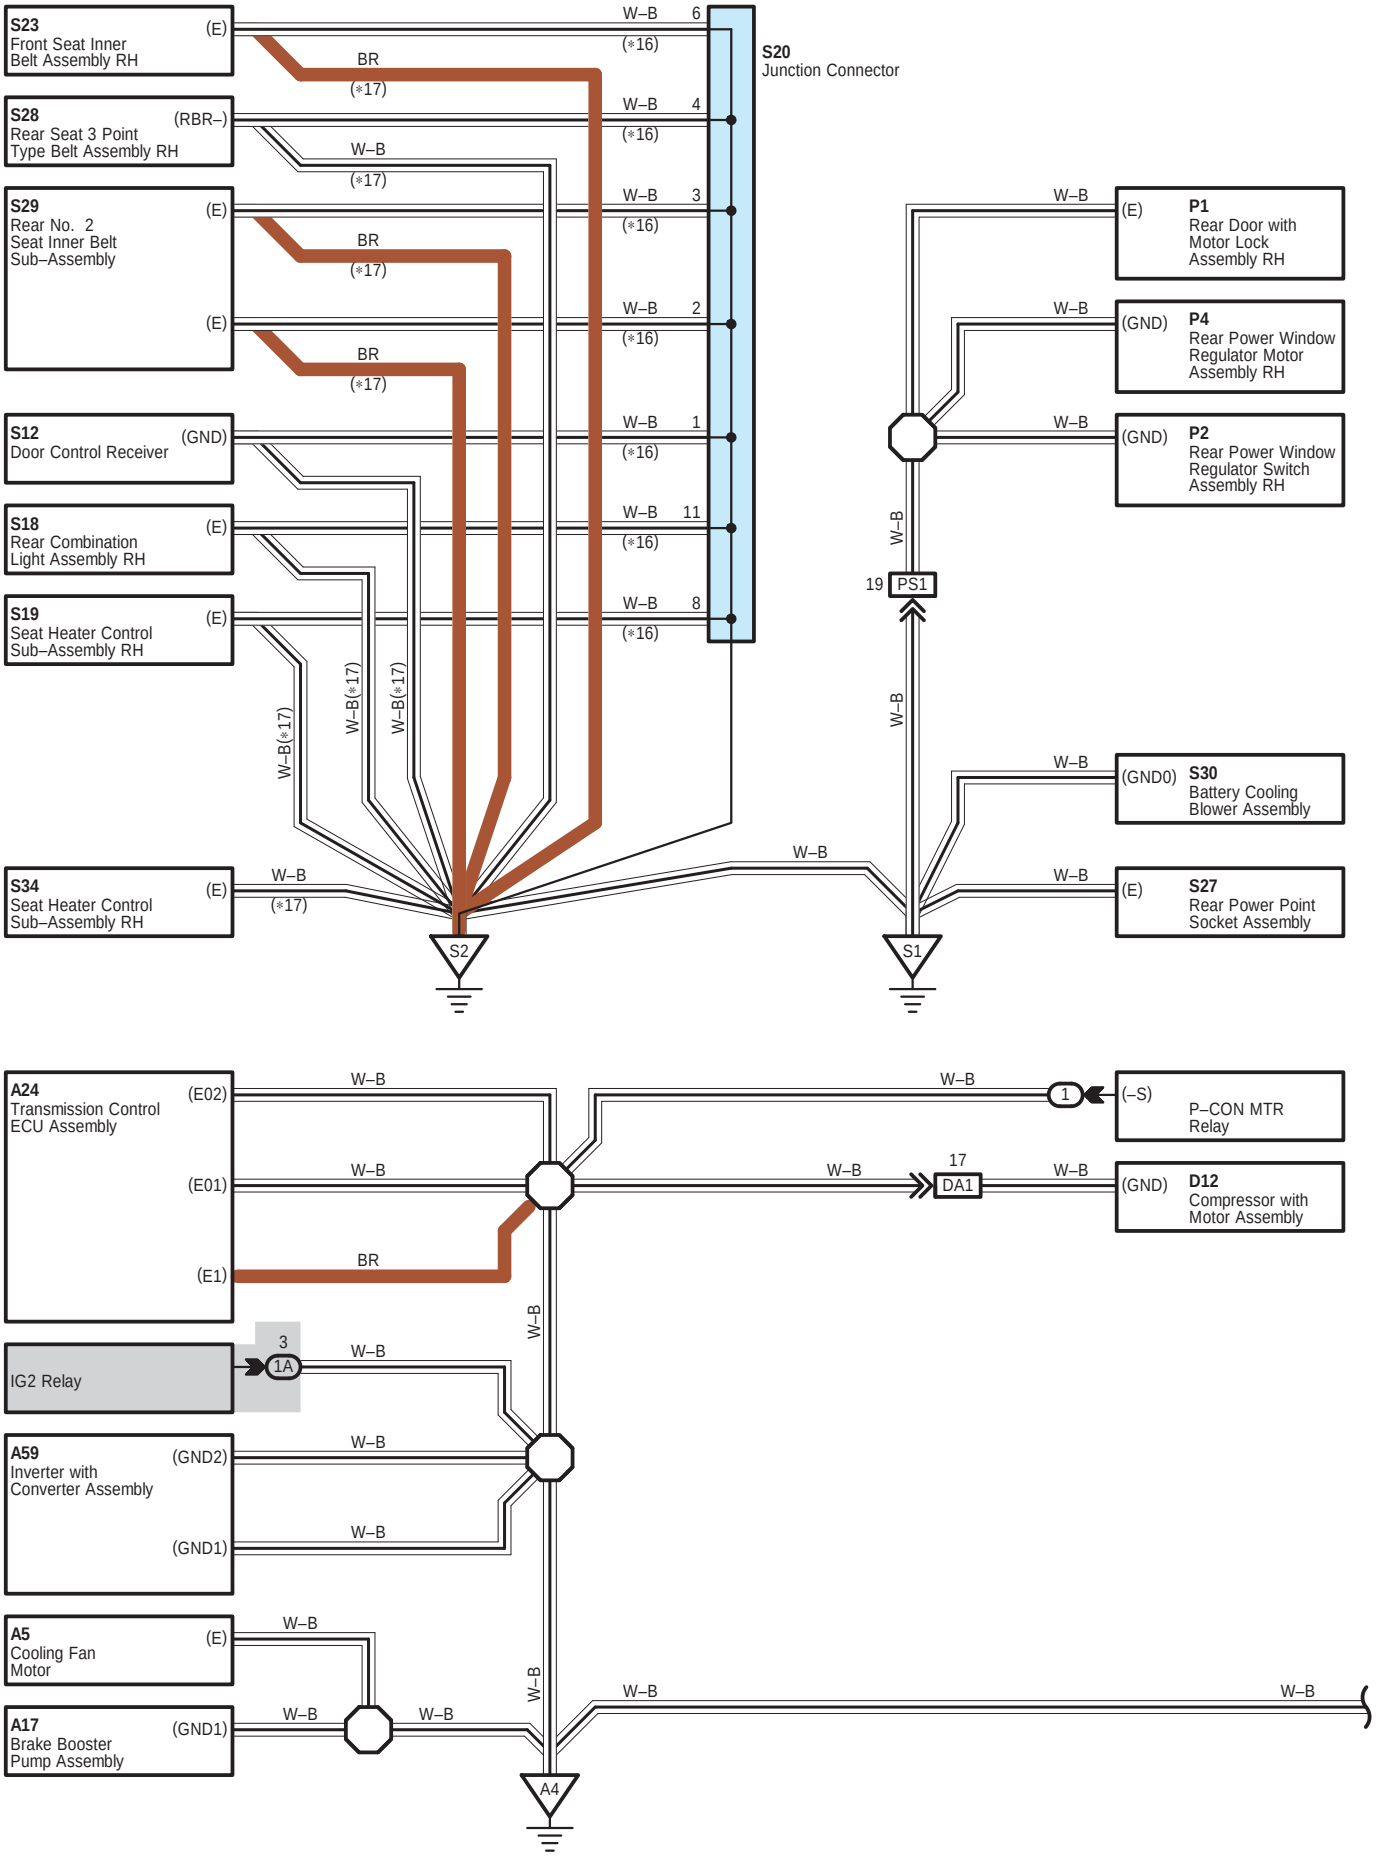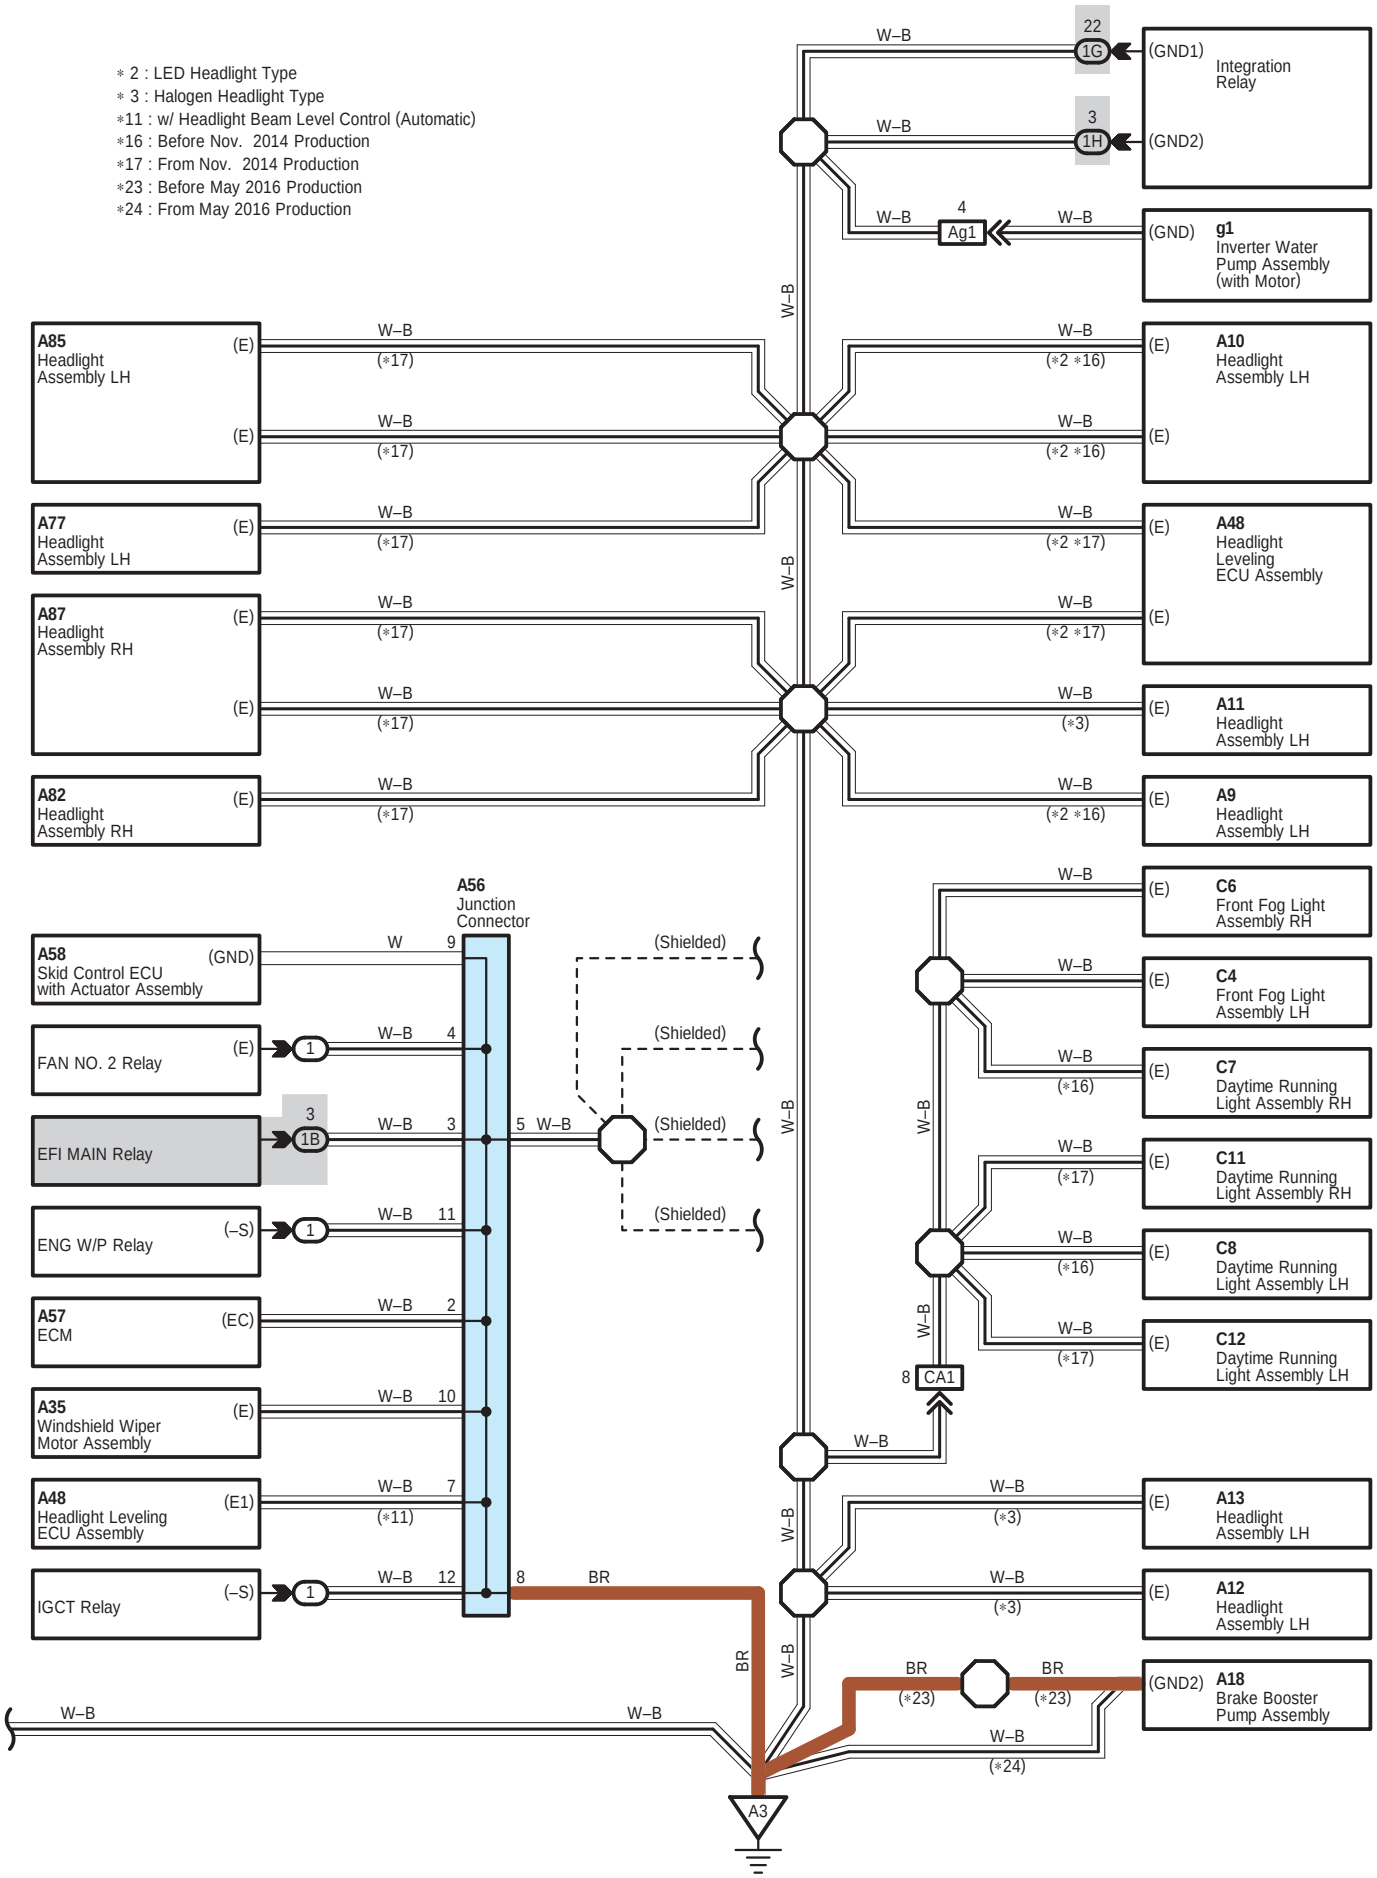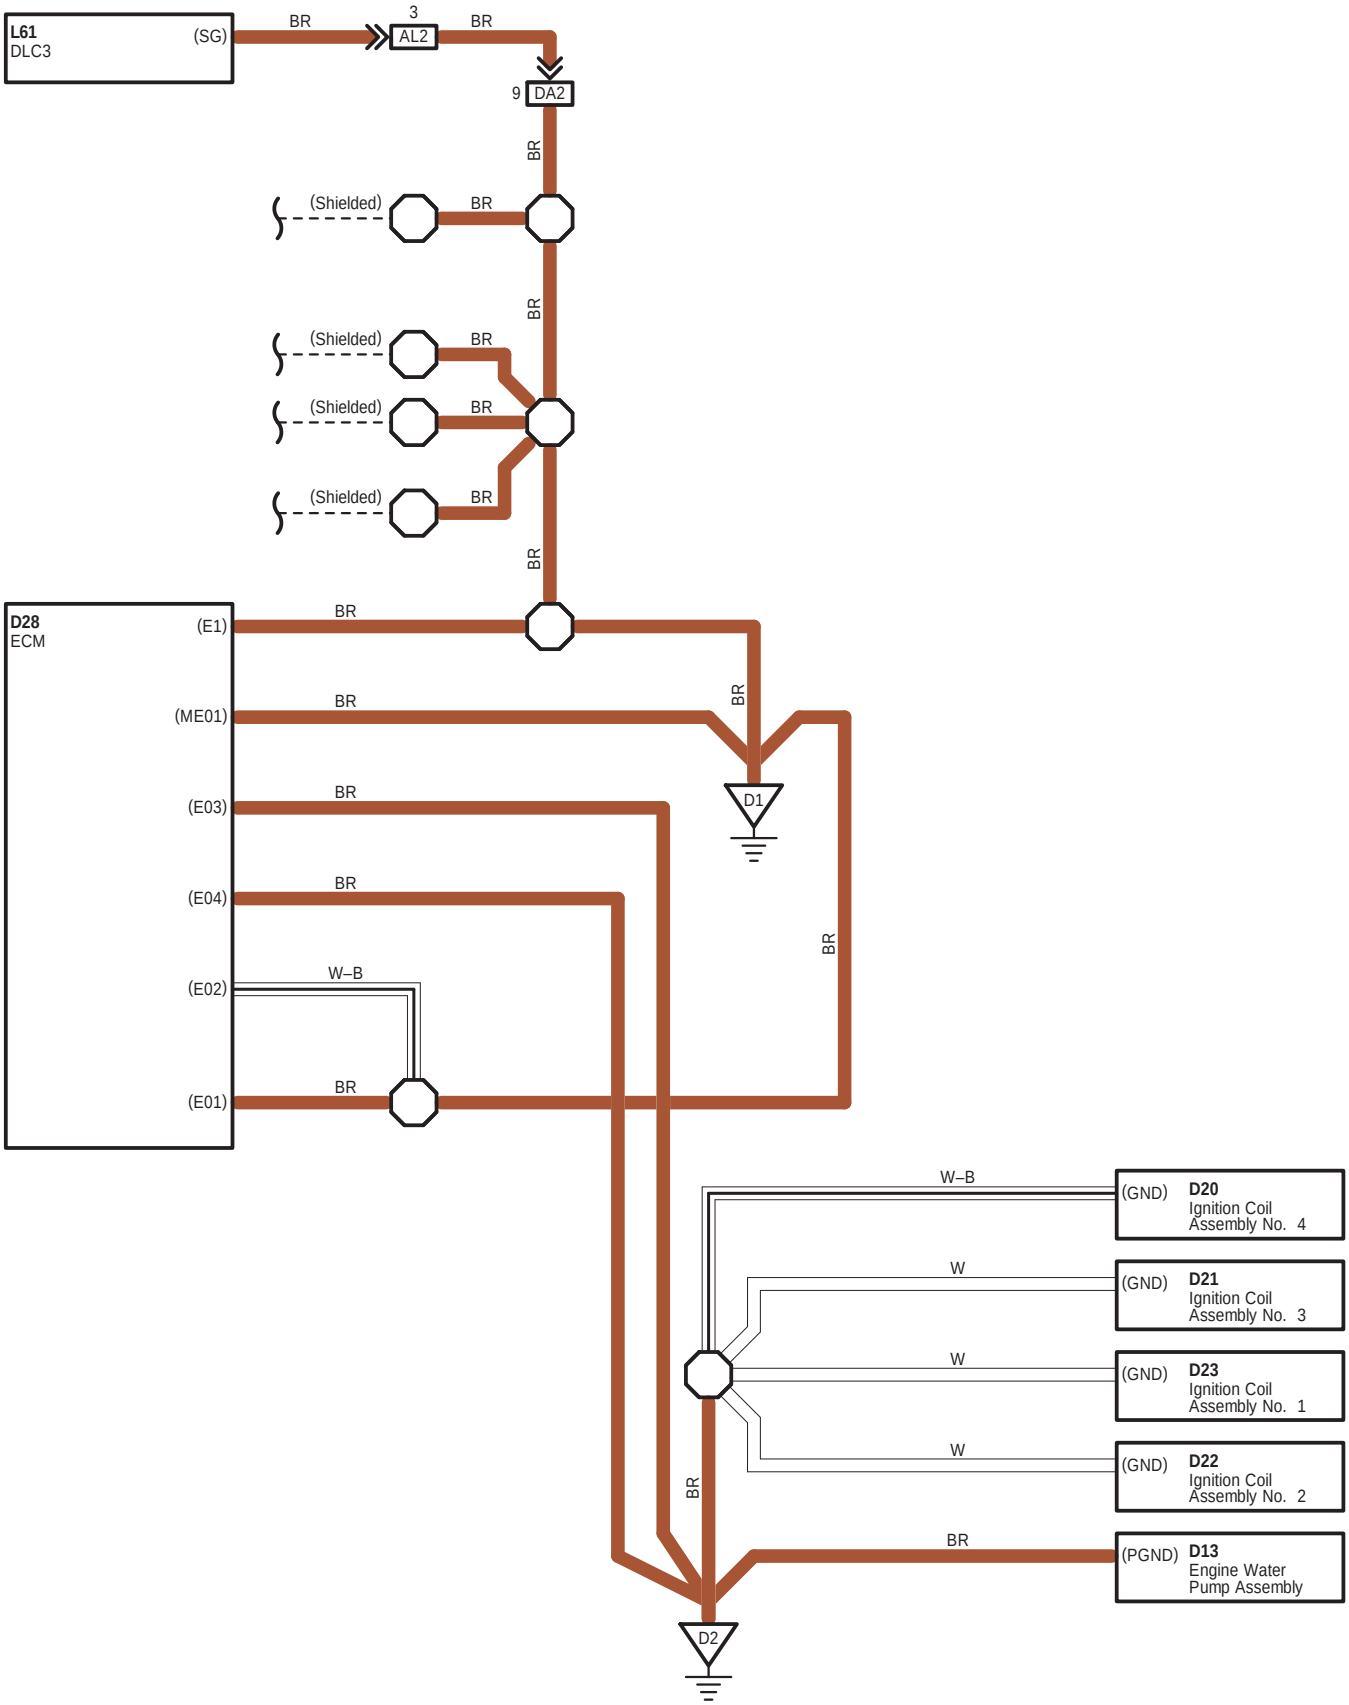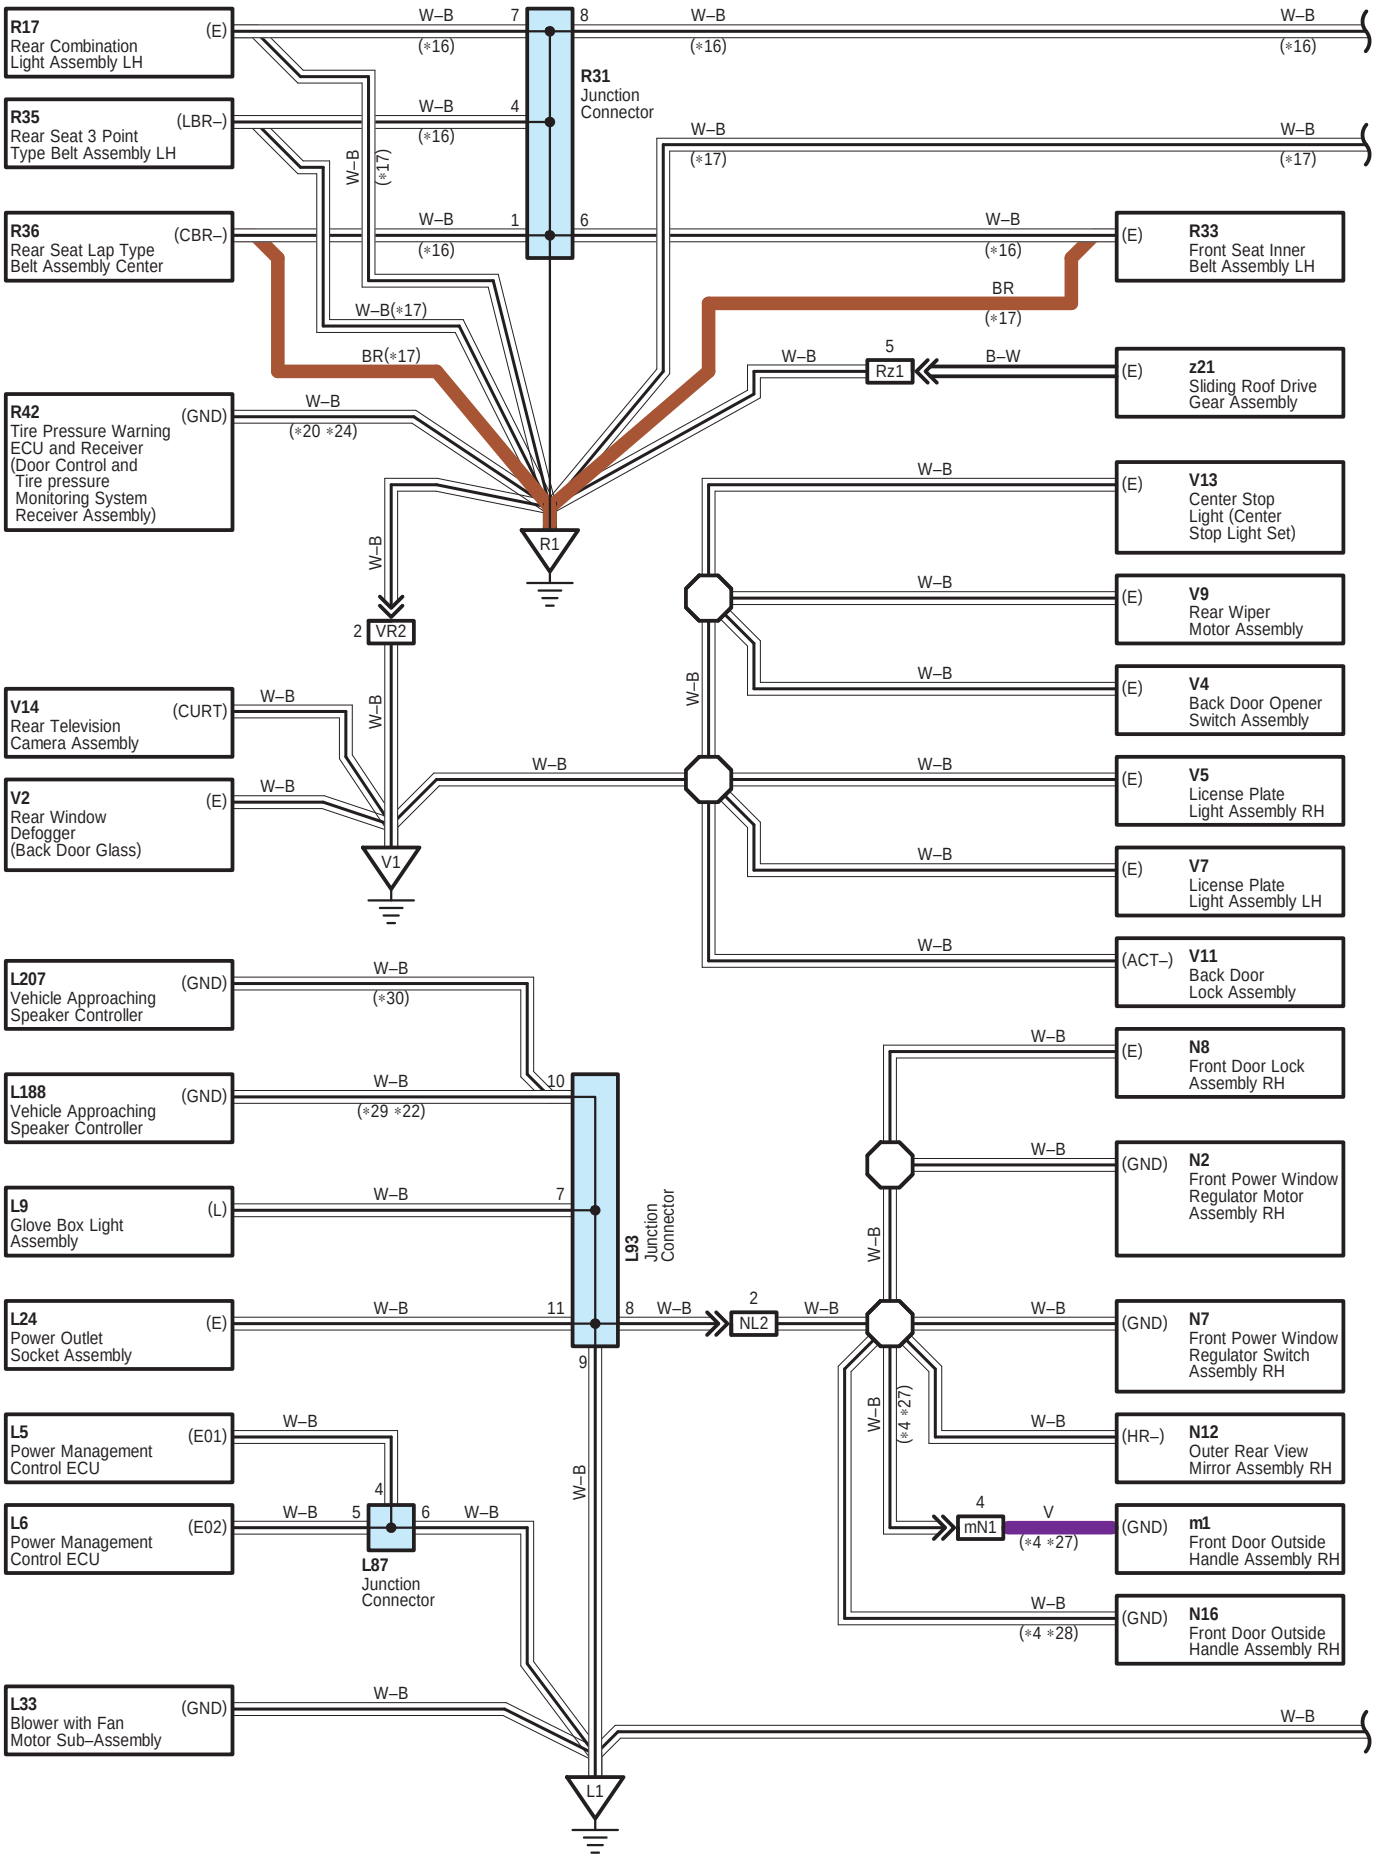



S23
Front Seat Inner Belt Assembly RH
(E)
S28
Rear Seat 3 Point Type Belt Assembly RH
(RBR–)
S29
Rear No. 2 Seat Inner Belt Sub–Assembly
(E)
(E)
S12
Door Control Receiver
(GND)
S18
Rear Combination Light Assembly RH
(E)
S19
Seat Heater Control Sub–Assembly RH
(E)
S34
Seat Heater Control Sub–Assembly RH
(E)
W–B
BR
(*17)
(*16)
6
4
3
2
1
11
8
S20
Junction Connector
W–B(*17)
S2
S1
19
PS1
P1
Rear Door with Motor Lock Assembly RH
P4
Rear Power Window Regulator Motor Assembly RH
P2
Rear Power Window Regulator Switch Assembly RH
S30
Battery Cooling Blower Assembly
S27
Rear Power Point Socket Assembly
A24
Transmission Control ECU Assembly
(E02)
(E01)
(E1)
IG2 Relay
3
1A
A59
Inverter with Converter Assembly
(GND2)
(GND1)
A5
Cooling Fan Motor
(E)
A17
Brake Booster Pump Assembly
(GND1)
A4
1
(–S)
P–CON MTR Relay
17
DA1
D12
Compressor with Motor Assembly
(GND)



∗ 2 : LED Headlight Type
∗ 3 : Halogen Headlight Type
∗11 : w/ Headlight Beam Level Control (Automatic)
∗16 : Before Nov. 2014 Production
∗17 : From Nov. 2014 Production
∗23 : Before May 2016 Production
∗24 : From May 2016 Production
Integration Relay
(GND1)
(GND2)
22
1G
3
1H
W–B
4
Ag1
(GND)
g1
Inverter Water Pump Assembly (with Motor)
A85
Headlight Assembly LH
A77
Headlight Assembly LH
A87
Headlight Assembly RH
A82
Headlight Assembly RH
A10
Headlight Assembly LH
A48
Headlight Leveling ECU Assembly
A11
Headlight Assembly LH
A9
Headlight Assembly LH
A56
Junction Connector
A58
Skid Control ECU with Actuator Assembly
FAN NO. 2 Relay
EFI MAIN Relay
ENG W/P Relay
A57
ECM
A35
Windshield Wiper Motor Assembly
A48
Headlight Leveling ECU Assembly
IGCT Relay
(Shielded)
C6
Front Fog Light Assembly RH
C4
Front Fog Light Assembly LH
C7
Daytime Running Light Assembly RH
C11
Daytime Running Light Assembly RH
C8
Daytime Running Light Assembly LH
C12
Daytime Running Light Assembly LH
8
CA1
A13
Headlight Assembly LH
A12
Headlight Assembly LH
A18
Brake Booster Pump Assembly
A3



L61
DLC3
(SG)
BR
3
AL2
BR
9
DA2
BR
(Shielded)
BR
BR
(Shielded)
BR
(Shielded)
BR
(Shielded)
BR
BR
D28
ECM
(E1)
BR
(ME01)
BR
BR
D1
(E03)
BR
(E04)
BR
BR
(E02)
W–B
(E01)
BR
W–B
(GND)
D20
Ignition Coil
Assembly No. 4
W
(GND)
D21
Ignition Coil
Assembly No. 3
W
(GND)
D23
Ignition Coil
Assembly No. 1
W
(GND)
D22
Ignition Coil
Assembly No. 2
BR
BR
(PGND)
D13
Engine Water
Pump Assembly
D2


R17
Rear Combination Light Assembly LH
(E)
R35
Rear Seat 3 Point Type Belt Assembly LH
(LBR–)
R36
Rear Seat Lap Type Belt Assembly Center
(CBR–)
R42
Tire Pressure Warning ECU and Receiver (Door Control and Tire pressure Monitoring System Receiver Assembly)
(GND)
R31
Junction Connector
R33
Front Seat Inner Belt Assembly LH
z21
Sliding Roof Drive Gear Assembly
V13
Center Stop Light (Center Stop Light Set)
V9
Rear Wiper Motor Assembly
V4
Back Door Opener Switch Assembly
V5
License Plate Light Assembly RH
V7
License Plate Light Assembly LH
V11
Back Door Lock Assembly
V14
Rear Television Camera Assembly
(CURT)
V2
Rear Window Defogger (Back Door Glass)
R1
VR2
V1
Rz1
L207
Vehicle Approaching Speaker Controller
L188
Vehicle Approaching Speaker Controller
L9
Glove Box Light Assembly
(L)
L24
Power Outlet Socket Assembly
L93
Junction Connector
NL2
N8
Front Door Lock Assembly RH
N2
Front Power Window Regulator Motor Assembly RH
N7
Front Power Window Regulator Switch Assembly RH
N12
Outer Rear View Mirror Assembly RH
m1
Front Door Outside Handle Assembly RH
N16
Front Door Outside Handle Assembly RH
mN1
L5
Power Management Control ECU
(E01)
L6
Power Management Control ECU
(E02)
L87
Junction Connector
L33
Blower with Fan Motor Sub–Assembly
L1
W–B
BR
B–W
V
(∗16)
(∗17)
(∗20 ∗24)
(∗30)
(∗29 ∗22)
(∗4 ∗27)
(∗4 ∗28)

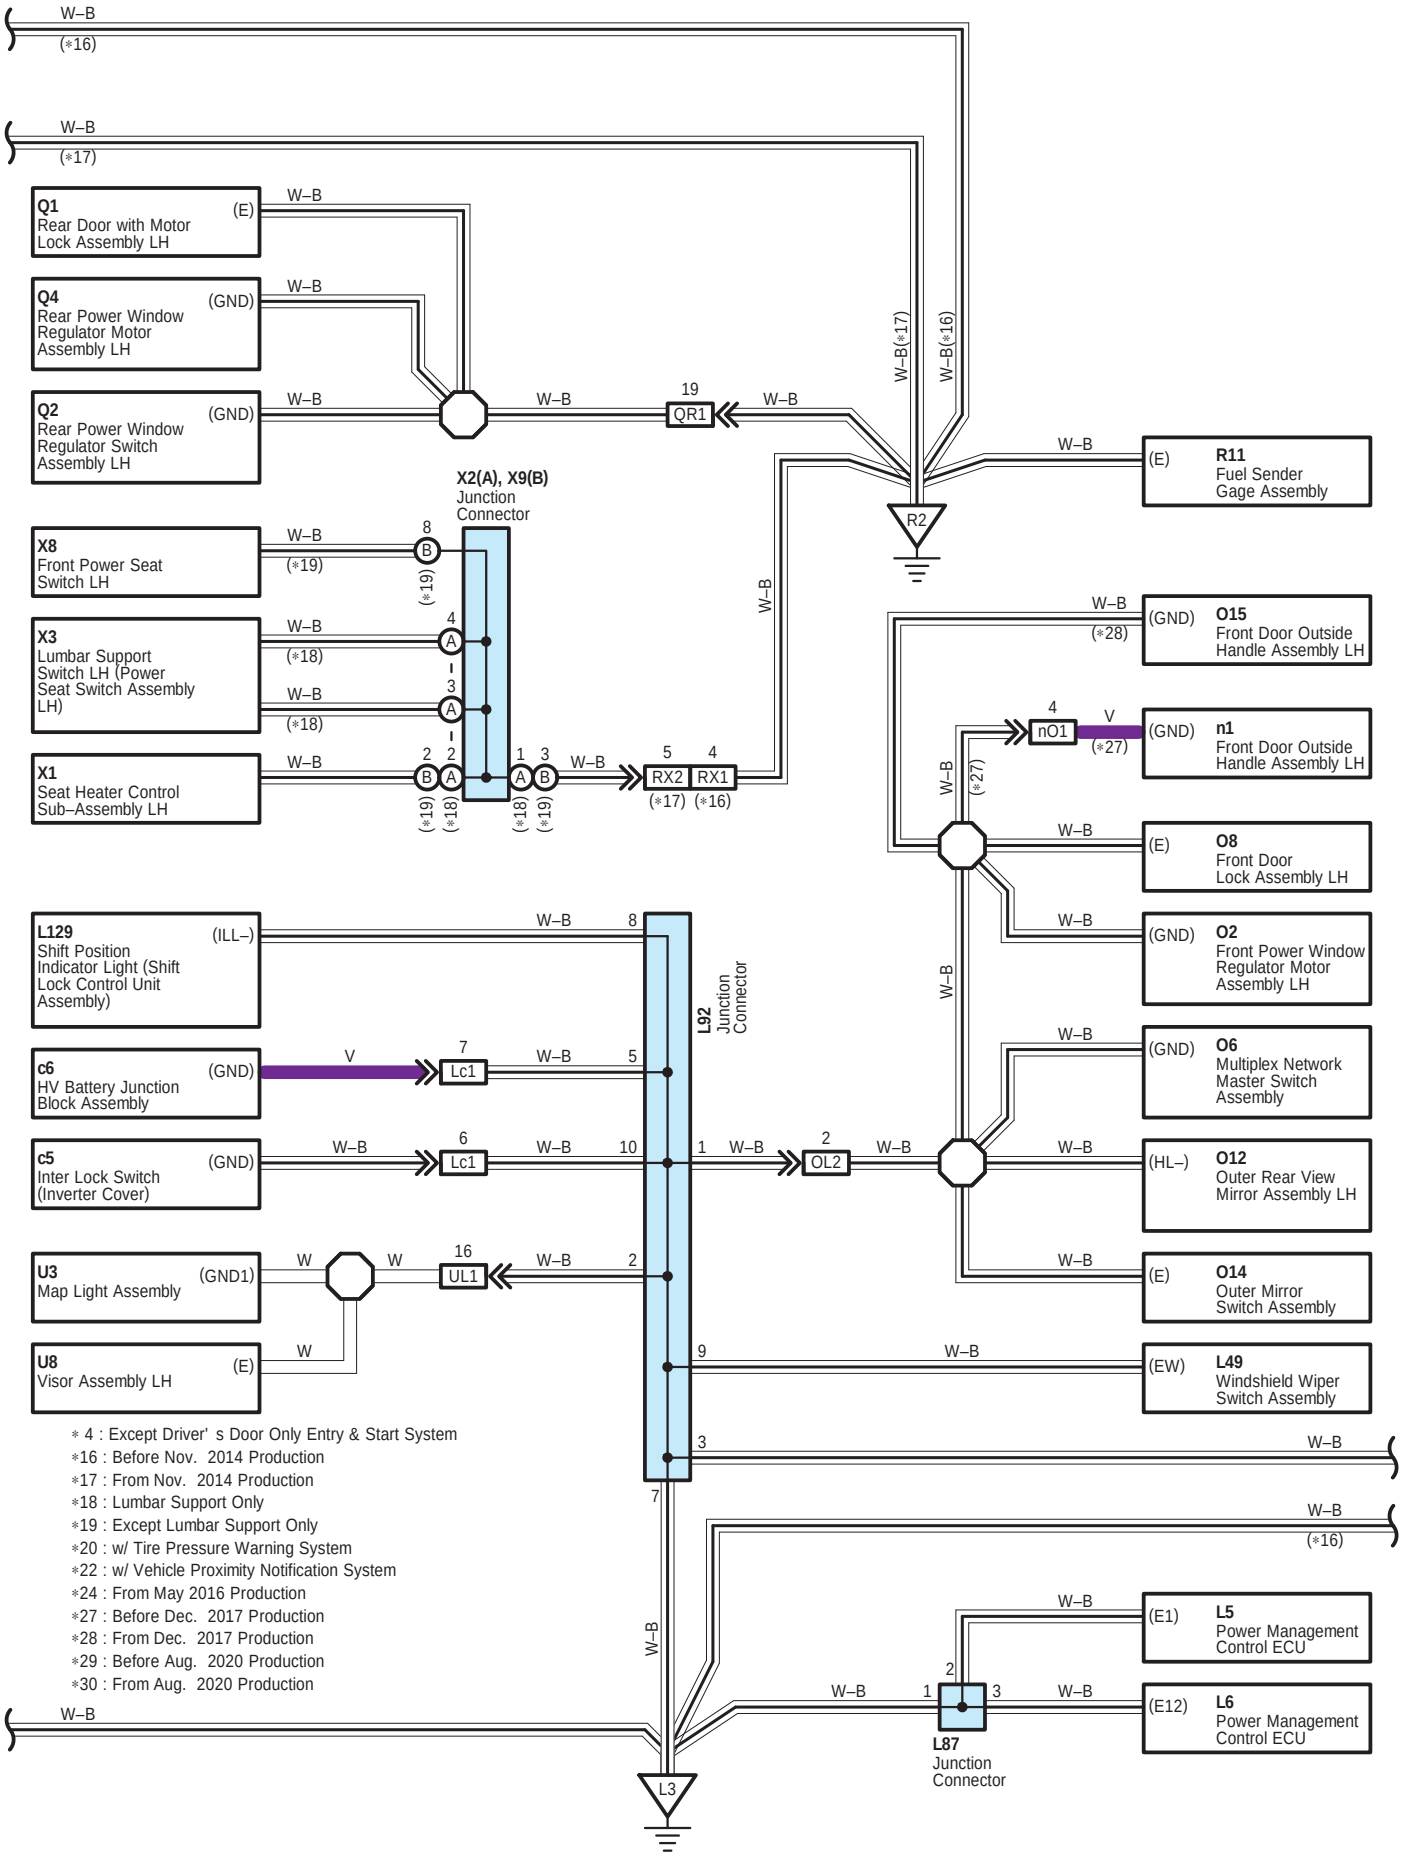

W–B
(∗16)
W–B
(∗17)
Q1
Rear Door with Motor Lock Assembly LH
(E)
Q4
Rear Power Window Regulator Motor Assembly LH
(GND)
Q2
Rear Power Window Regulator Switch Assembly LH
(GND)
19
QR1
W–B(∗17)
W–B(∗16)
R2
R11
Fuel Sender Gage Assembly
X2(A), X9(B)
Junction Connector
X8
Front Power Seat Switch LH
(∗19)
X3
Lumbar Support Switch LH (Power Seat Switch Assembly LH)
(∗18)
X1
Seat Heater Control Sub–Assembly LH
RX2
RX1
(∗17) (∗16)
O15
Front Door Outside Handle Assembly LH
(∗28)
nO1
(∗27)
n1
Front Door Outside Handle Assembly LH
O8
Front Door Lock Assembly LH
O2
Front Power Window Regulator Motor Assembly LH
O6
Multiplex Network Master Switch Assembly
O12
Outer Rear View Mirror Assembly LH
O14
Outer Mirror Switch Assembly
L49
Windshield Wiper Switch Assembly
L129
Shift Position Indicator Light (Shift Lock Control Unit Assembly)
(ILL–)
L92
Junction Connector
c6
HV Battery Junction Block Assembly
Lc1
c5
Inter Lock Switch (Inverter Cover)
OL2
U3
Map Light Assembly
(GND1)
UL1
U8
Visor Assembly LH
(E)
∗ 4 : Except Driver' s Door Only Entry & Start System
∗16 : Before Nov. 2014 Production
∗17 : From Nov. 2014 Production
∗18 : Lumbar Support Only
∗19 : Except Lumbar Support Only
∗20 : w/ Tire Pressure Warning System
∗22 : w/ Vehicle Proximity Notification System
∗24 : From May 2016 Production
∗27 : Before Dec. 2017 Production
∗28 : From Dec. 2017 Production
∗29 : Before Aug. 2020 Production
∗30 : From Aug. 2020 Production
L5
Power Management Control ECU
L6
Power Management Control ECU
L87
Junction Connector
L3

∗ 1 : w/ Dynamic Radar Cruise Control
∗ 5 : w/ Pre–Crash Safety System
∗ 7 : w/ Intelligent Parking Assist
∗ 9 : Navigation Receiver Type
∗10 : Radio & Display Receiver Type
∗12 : w/ Headlight Beam Level Control (Manual)
∗15 : Radio Receiver Type
∗16 : Before Nov. 2014 Production
∗17 : From Nov. 2014 Production
∗20 : w/ Tire Pressure Warning System
∗23 : Before May 2016 Production
∗24 : From May 2016 Production
∗25 : From Nov. 2014 Production until May 2016 Production
∗26 : w/ Lane Departure Alert
∗27 : Before Dec. 2017 Production
∗28 : From Dec. 2017 Production
∗32 : From May 2016 Production until Aug. 2020 Production

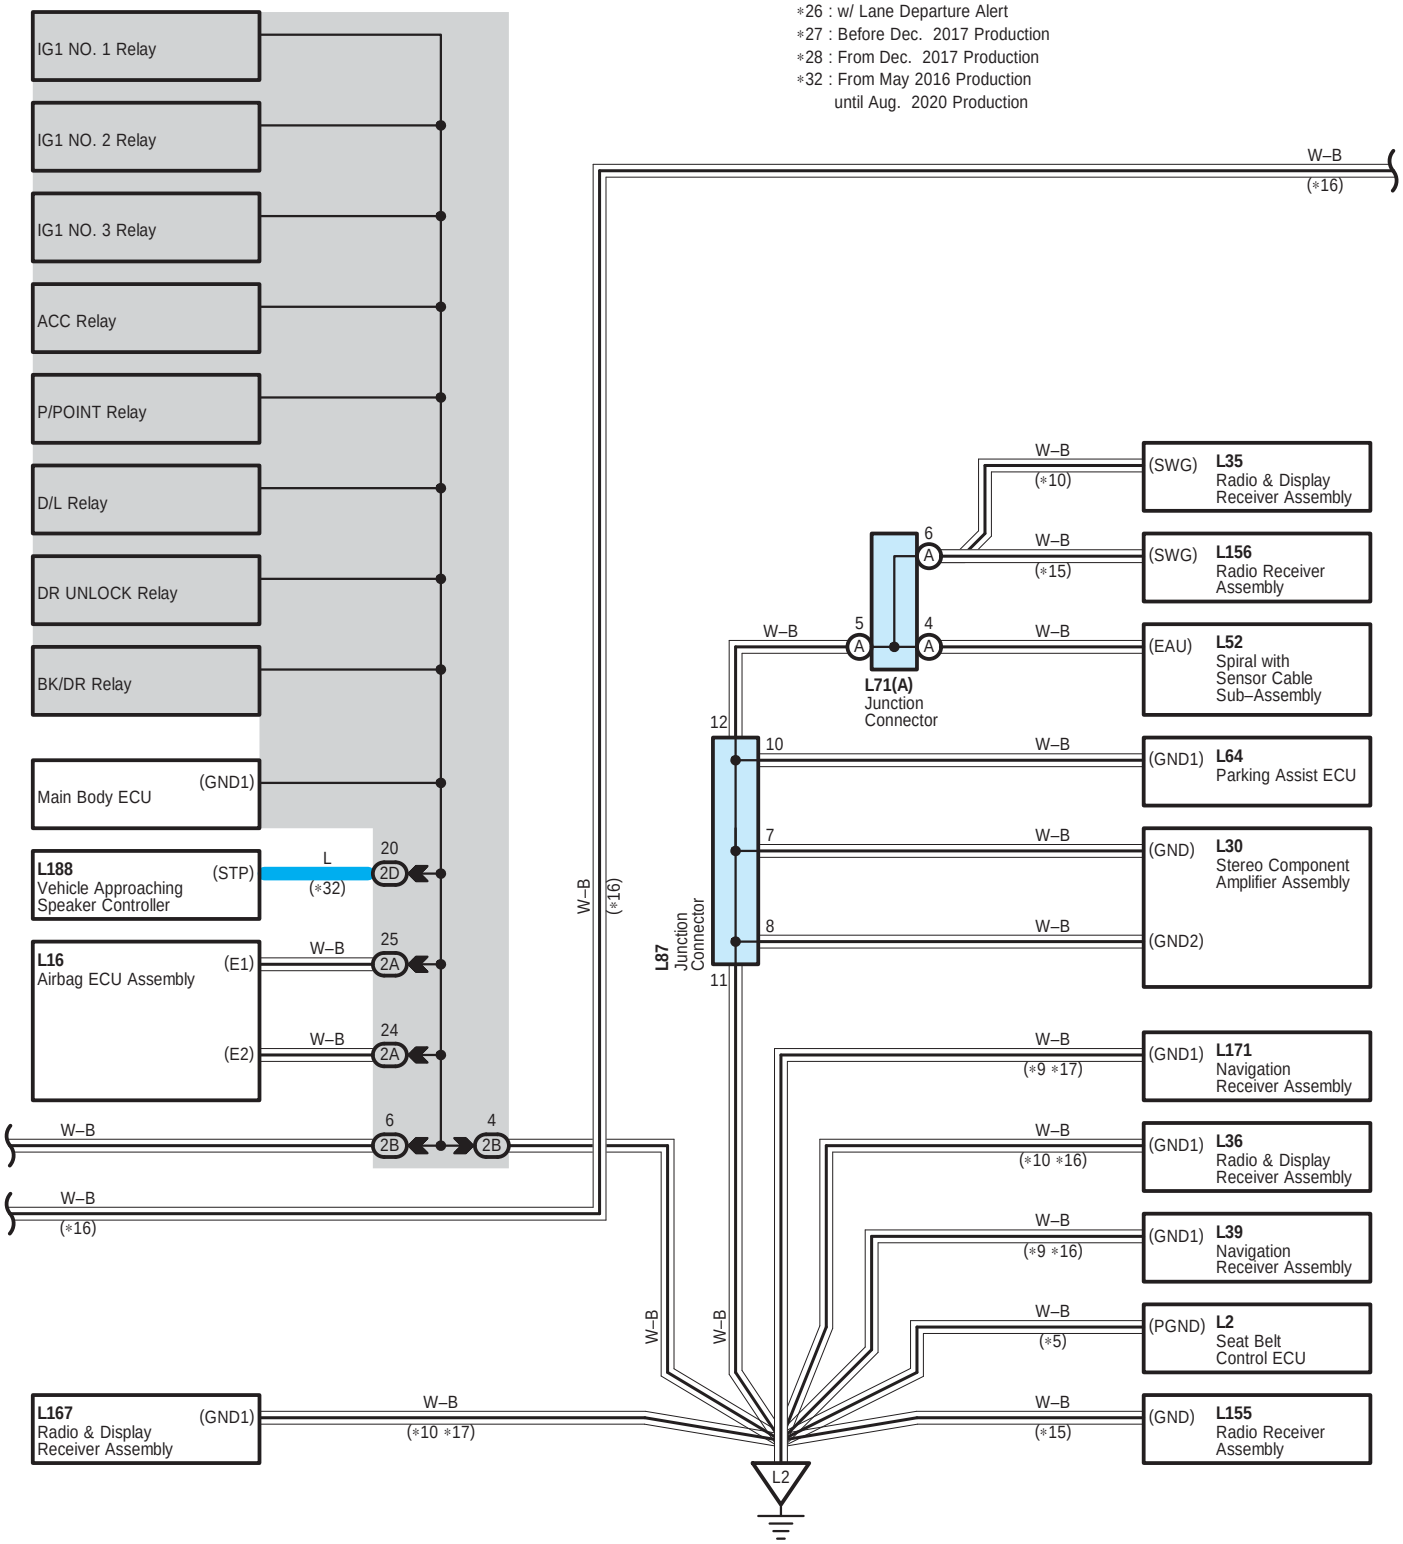

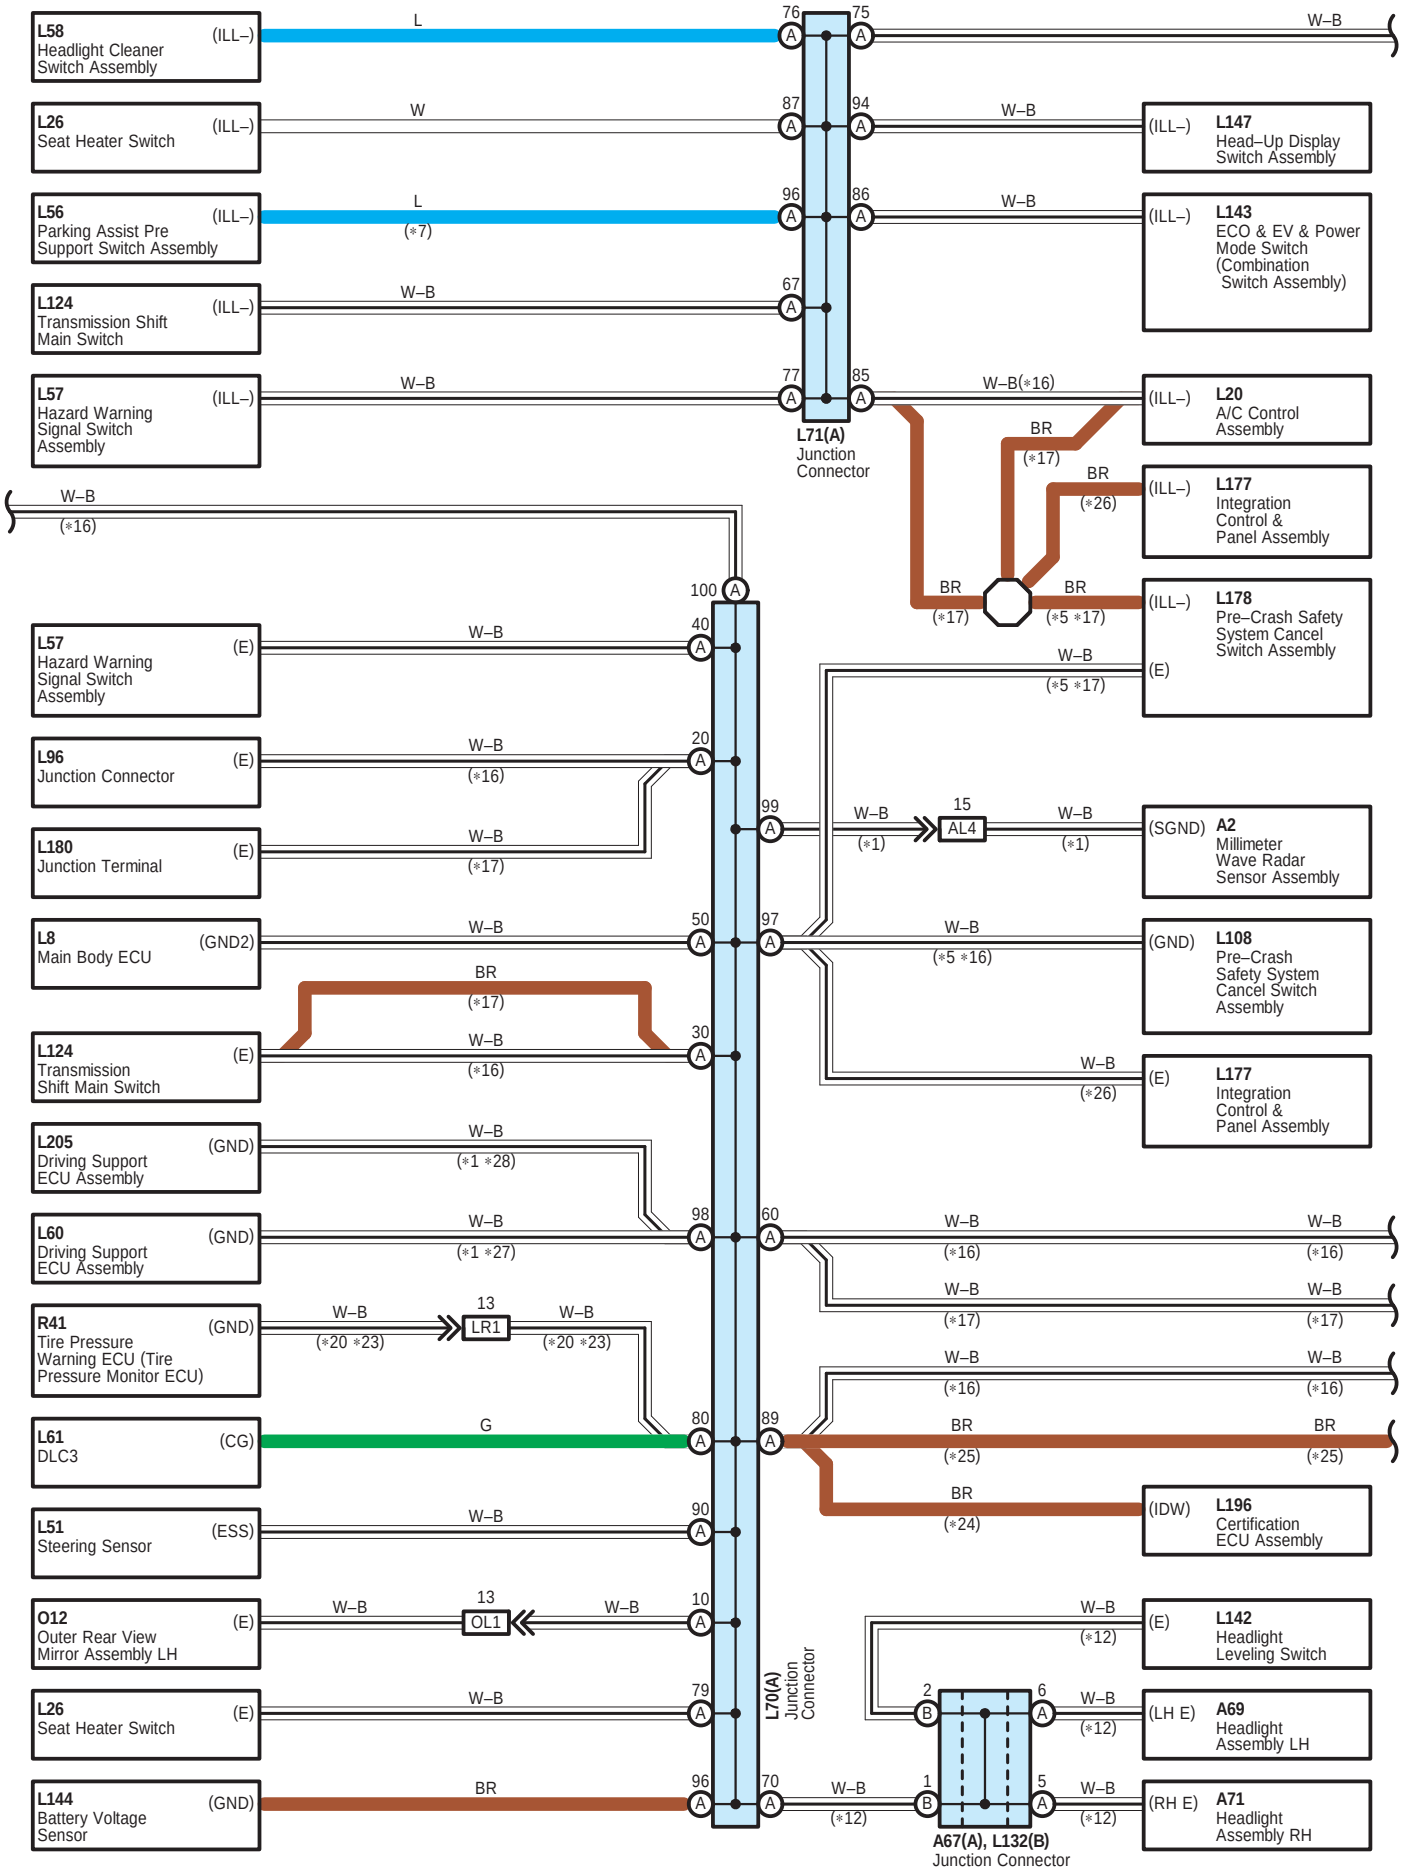

L58 Headlight Cleaner Switch Assembly (ILL–)
L26 Seat Heater Switch (ILL–)
L56 Parking Assist Pre Support Switch Assembly (ILL–)
L124 Transmission Shift Main Switch (ILL–)
L57 Hazard Warning Signal Switch Assembly (ILL–)
L71(A) Junction Connector
L147 Head–Up Display Switch Assembly (ILL–)
L143 ECO & EV & Power Mode Switch (Combination Switch Assembly) (ILL–)
L20 A/C Control Assembly (ILL–)
L177 Integration Control & Panel Assembly (ILL–)
L178 Pre–Crash Safety System Cancel Switch Assembly (ILL–)
L57 Hazard Warning Signal Switch Assembly (E)
L96 Junction Connector (E)
L180 Junction Terminal (E)
L8 Main Body ECU (GND2)
L124 Transmission Shift Main Switch (E)
L205 Driving Support ECU Assembly (GND)
L60 Driving Support ECU Assembly (GND)
R41 Tire Pressure Warning ECU (Tire Pressure Monitor ECU) (GND)
L61 DLC3 (CG)
L51 Steering Sensor (ESS)
O12 Outer Rear View Mirror Assembly LH (E)
L26 Seat Heater Switch (E)
L144 Battery Voltage Sensor (GND)
L70(A) Junction Connector
A2 Millimeter Wave Radar Sensor Assembly (SGND)
L108 Pre–Crash Safety System Cancel Switch Assembly (GND)
L177 Integration Control & Panel Assembly (E)
L196 Certification ECU Assembly (IDW)
L142 Headlight Leveling Switch (E)
A69 Headlight Assembly LH (LH E)
A71 Headlight Assembly RH (RH E)
A67(A), L132(B) Junction Connector
AL4
LR1
OL1

Ground Point <LHD>

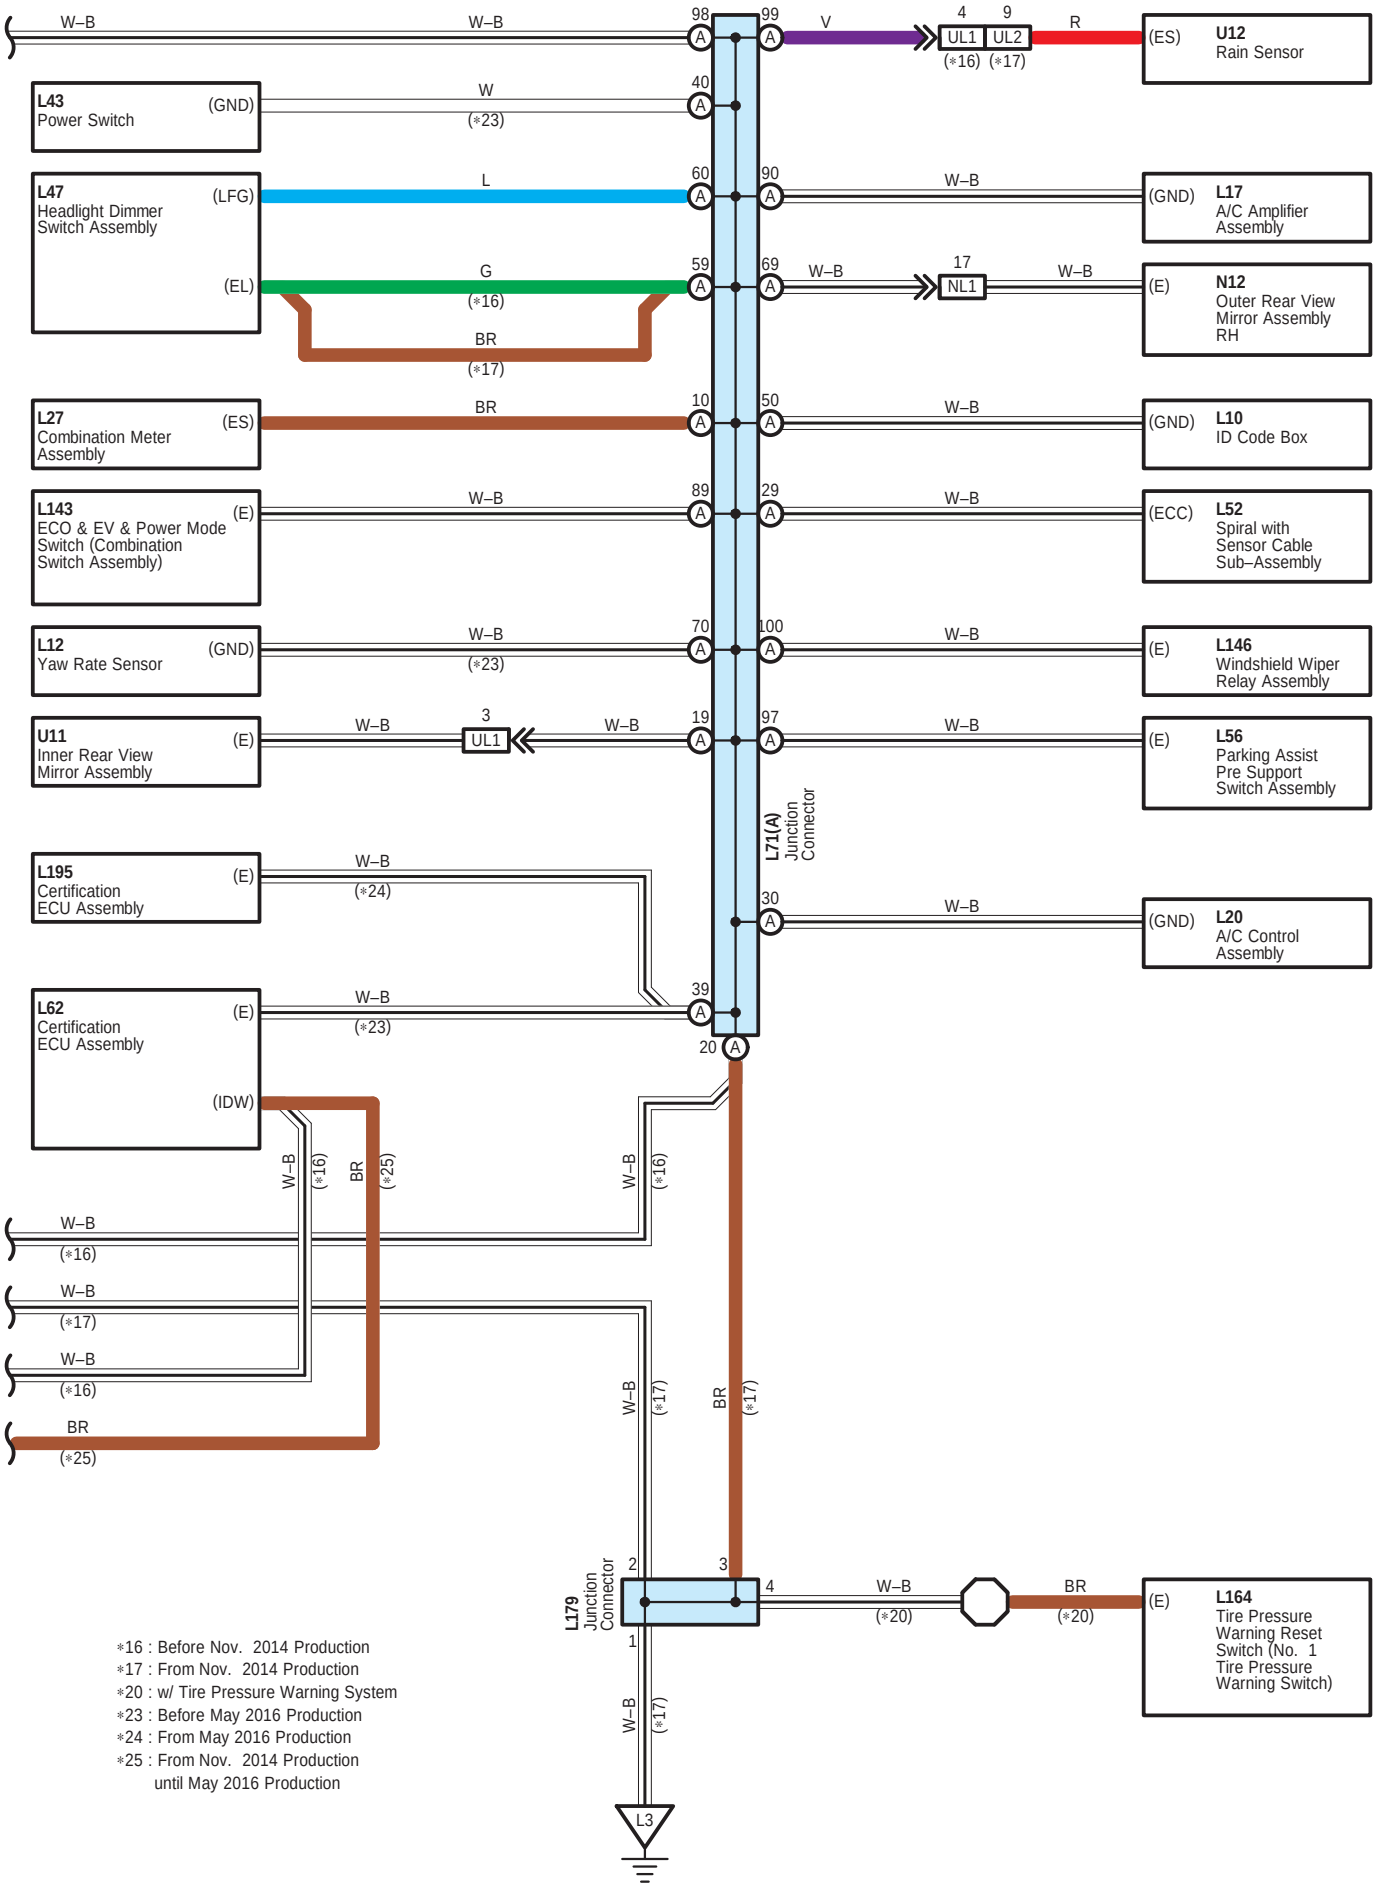


∗16 : Before Nov. 2014 Production
∗17 : From Nov. 2014 Production
∗20 : w/ Tire Pressure Warning System
∗23 : Before May 2016 Production
∗24 : From May 2016 Production
∗25 : From Nov. 2014 Production
until May 2016 Production


A 56
White

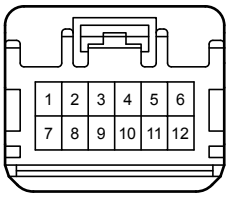


A 67
Blue

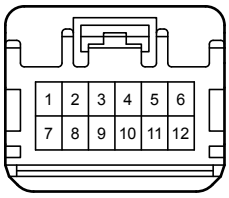


L 70
White

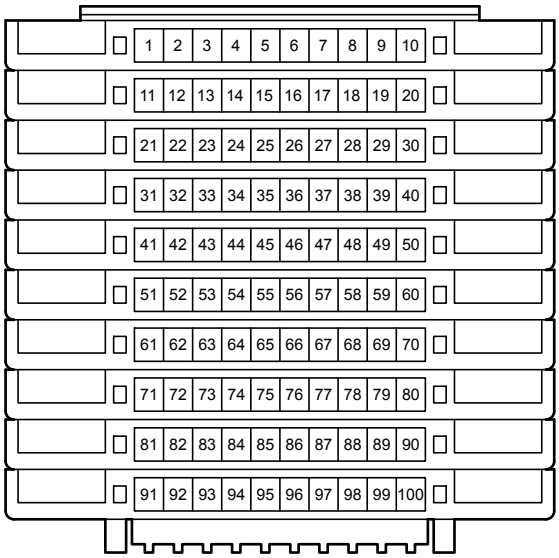


L 71
White

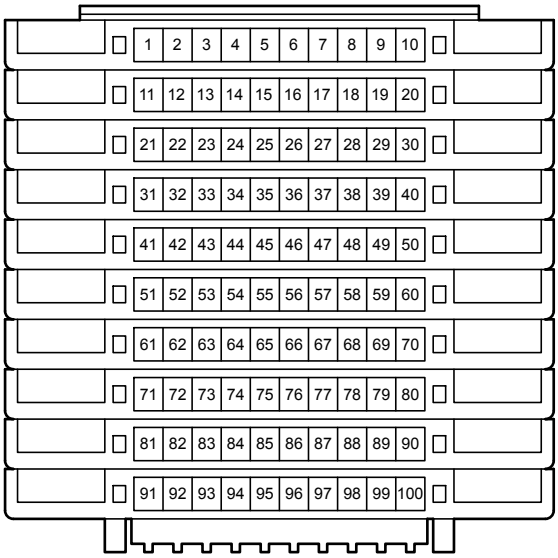


L 87
White

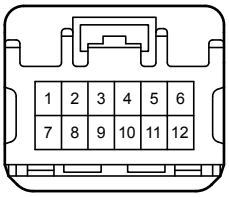


L 92
White

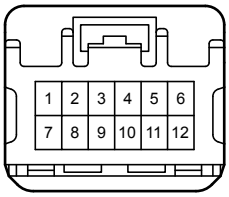


L 93
White

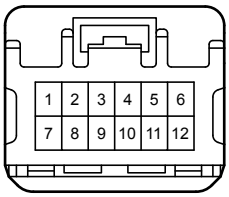


L132
Blue

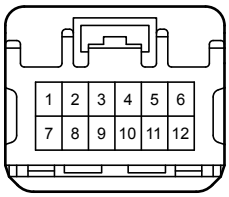


L179
Black




R 31
White

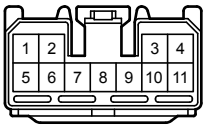


S 20
White

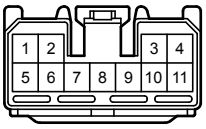


X 2
Black




X 9
White

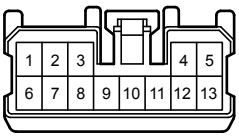


1A
White

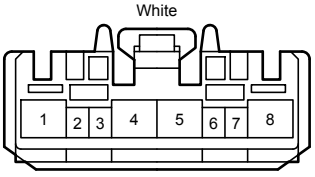


1B
White

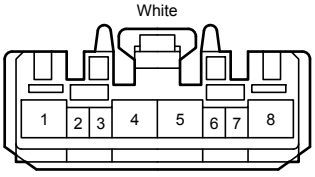


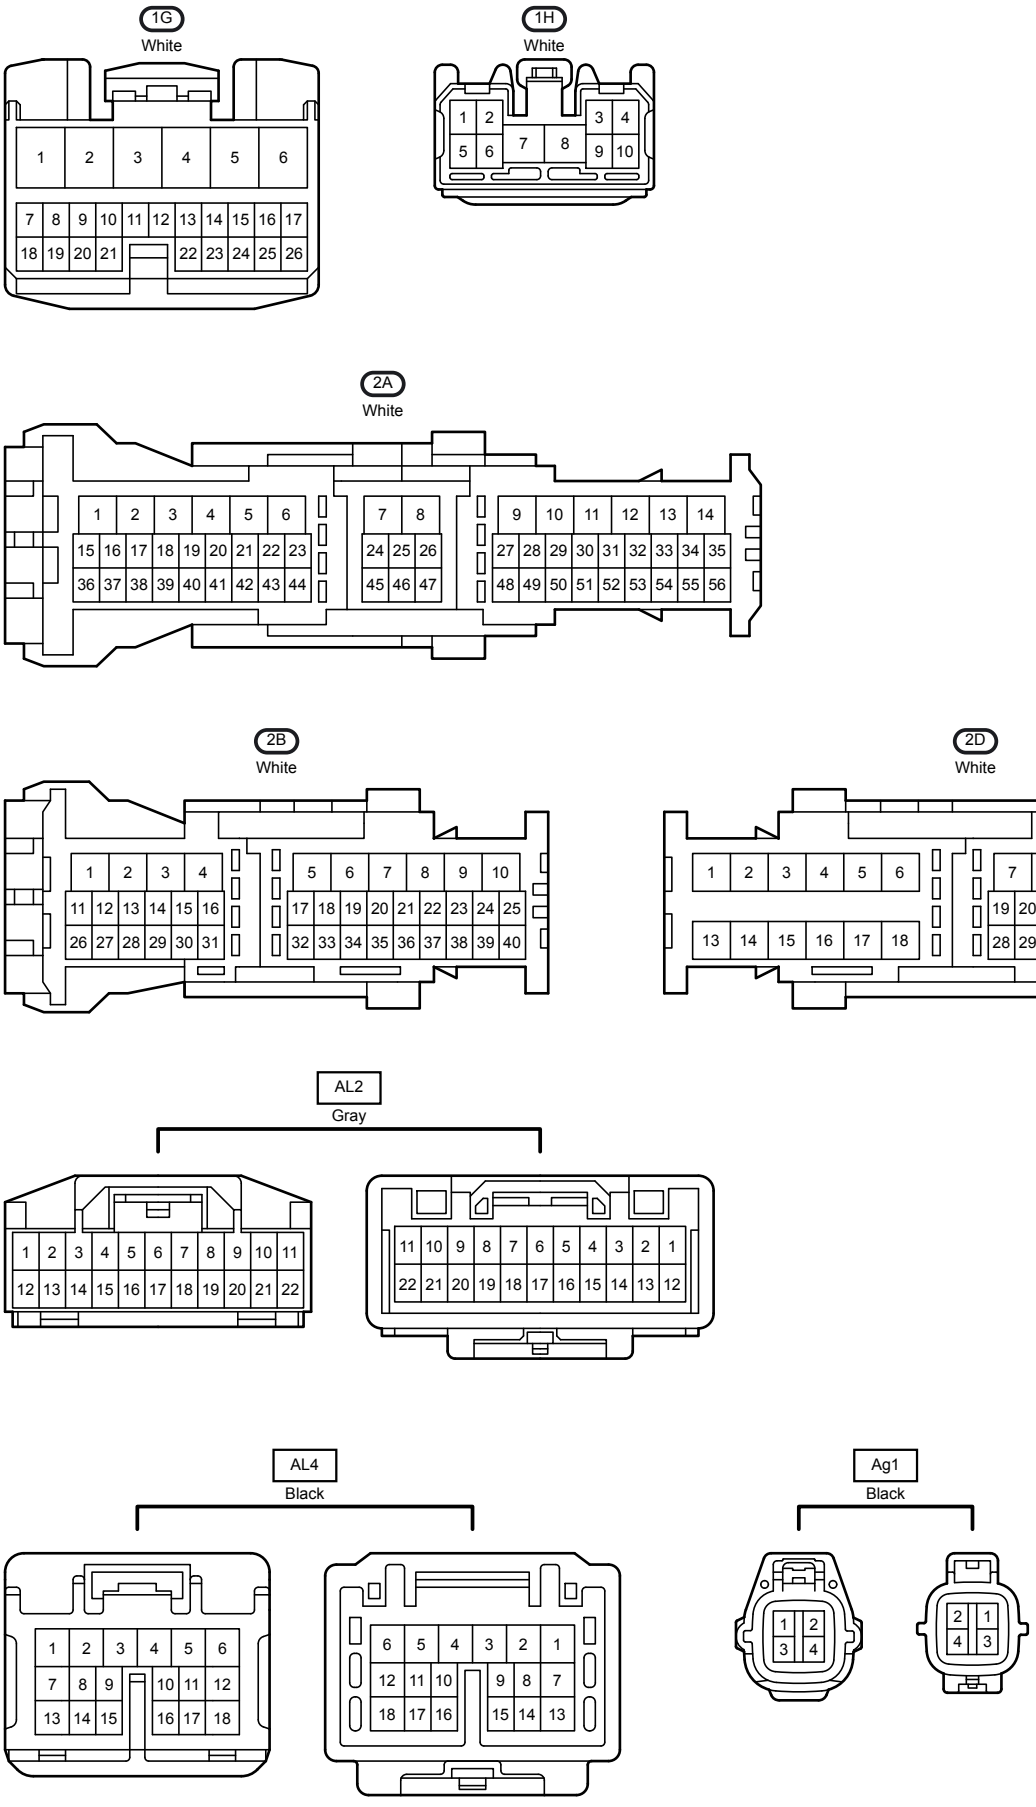
1G
White
1 2 3 4 5 6
7 8 9 10 11 12 13 14 15 16 17
18 19 20 21 22 23 24 25 26
1H
White
1 2 3 4
5 6 7 8 9 10
2A
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35
36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56
2B
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20 21 22 23 24 25
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40
2D
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27
28 29 30 31 32 33 34 35 36
AL2
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
AL4
Black
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13
Ag1
Black
1 2
3 4
2 1
4 3


CA1
Black

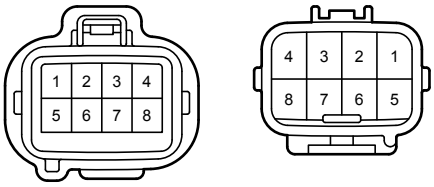


DA1
White

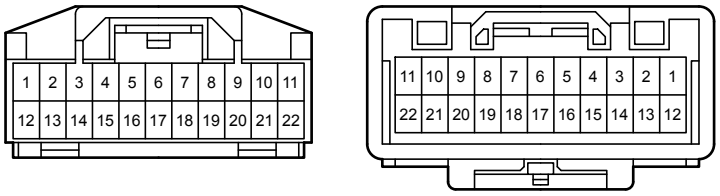



DA2
White

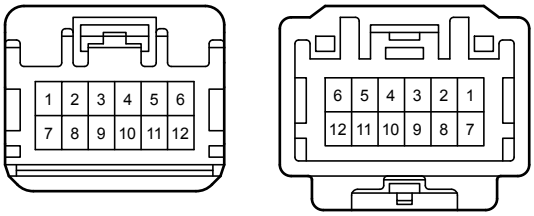



LR1
White

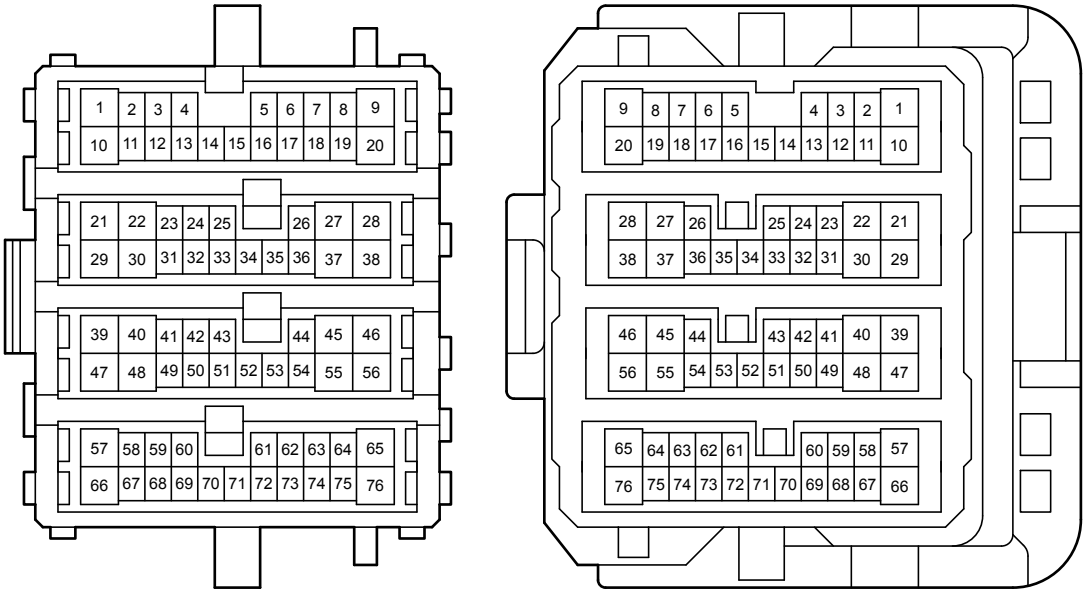


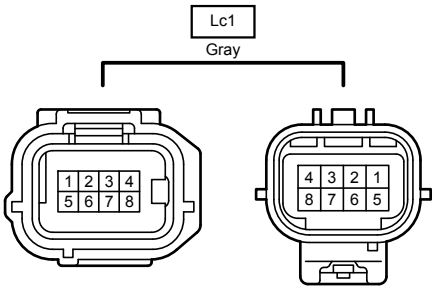

Lc1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5

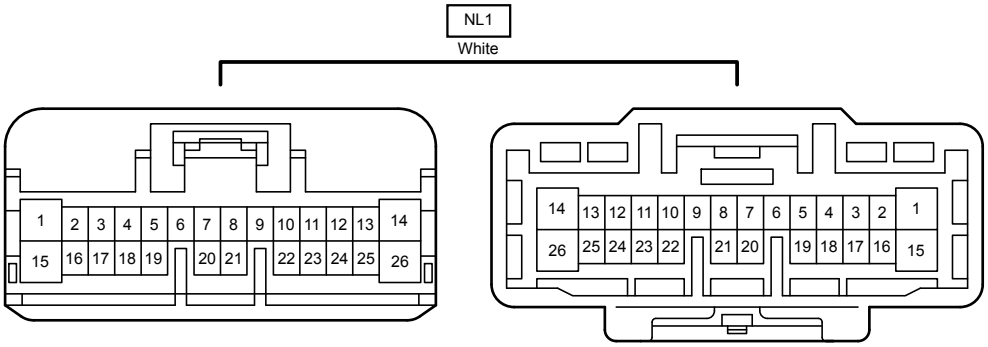

NL1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15

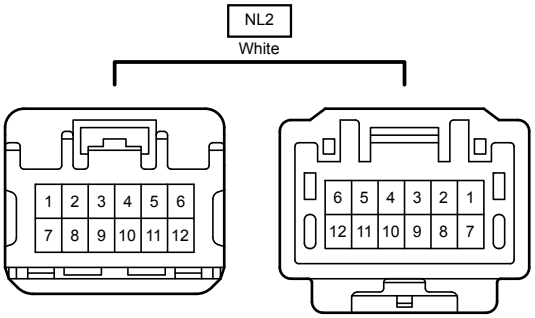
NL2
White
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7

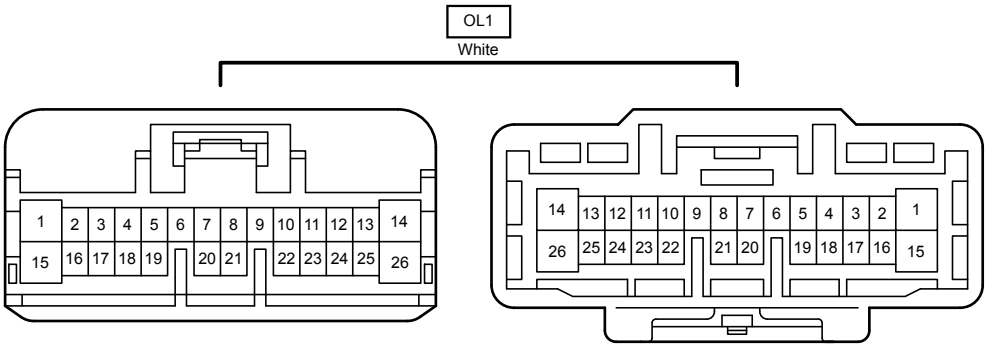

OL1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15

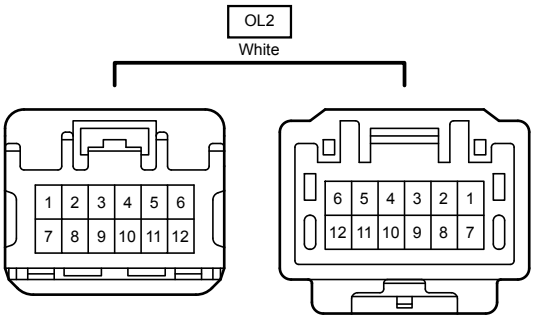
OL2
White
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7

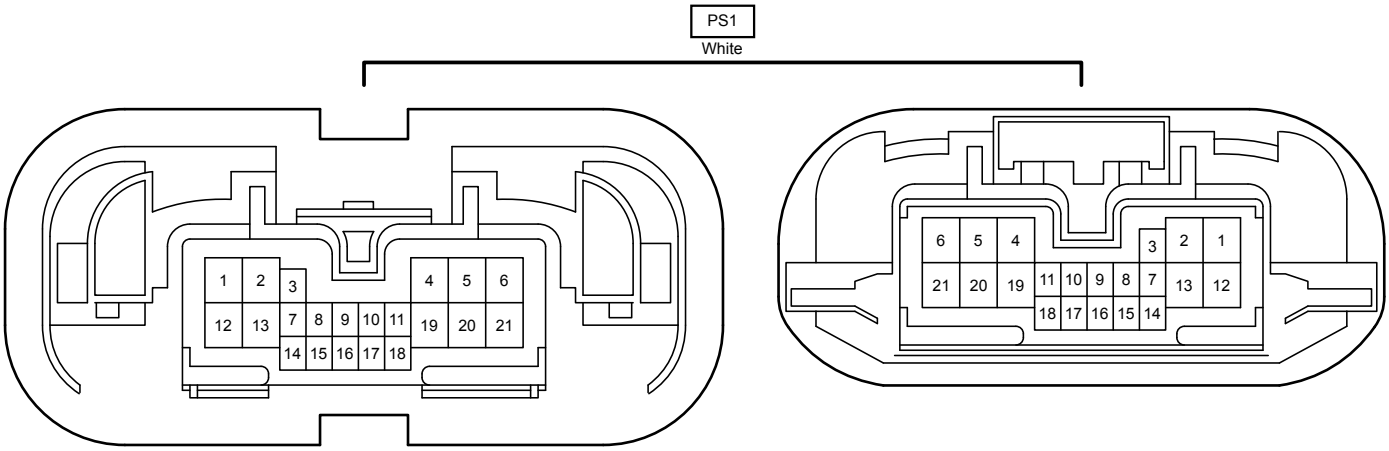

PS1
White
1 2 3 4 5 6
12 13 7 8 9 10 11 19 20 21
14 15 16 17 18
6 5 4 3 2 1
21 20 19 11 10 9 8 7 13 12
18 17 16 15 14

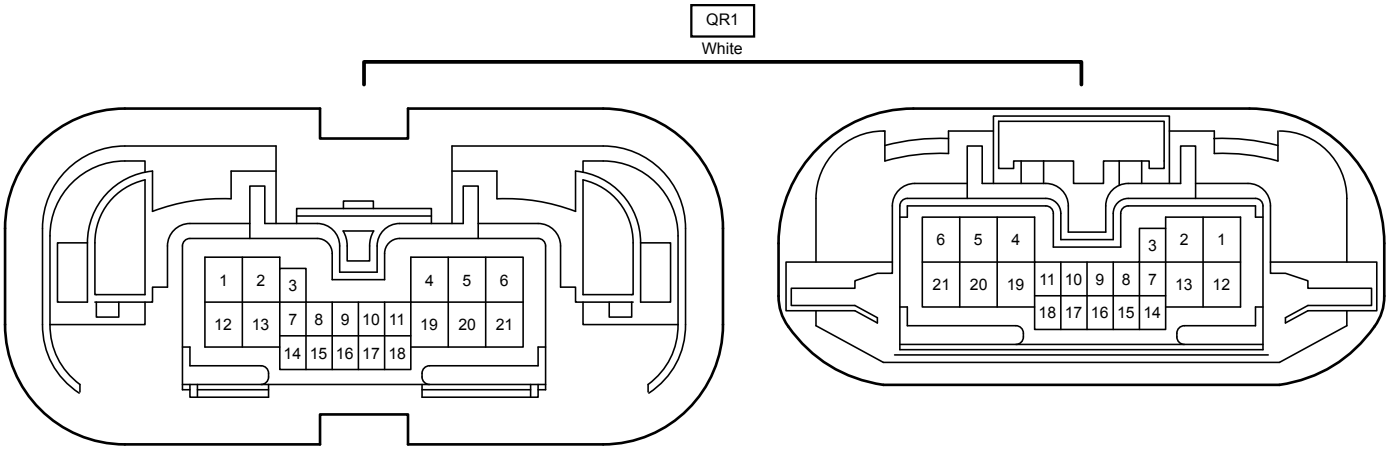
QR1
White
1 2 3 4 5 6
12 13 7 8 9 10 11 19 20 21
14 15 16 17 18
6 5 4 3 2 1
21 20 19 11 10 9 8 7 13 12
18 17 16 15 14


RX1
White

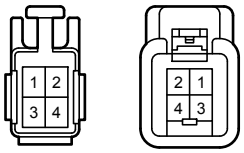


RX2
White

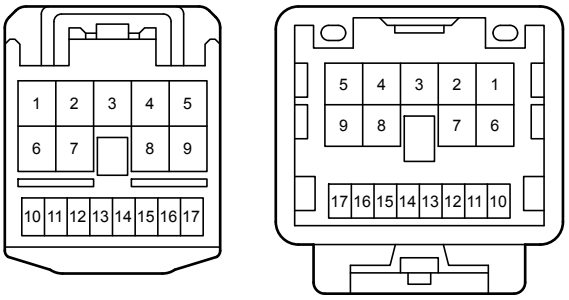


Rz1
White

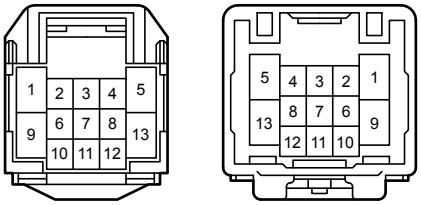


UL1
White

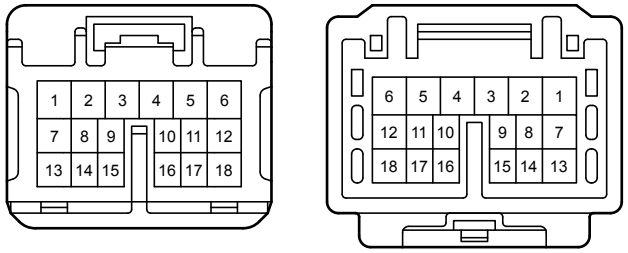


UL2
White

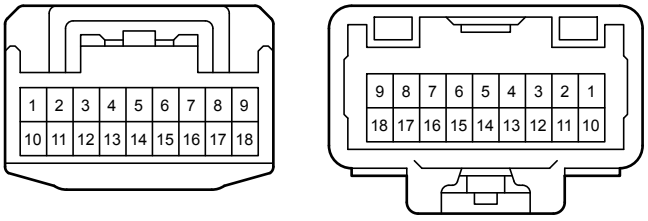

VR2
White

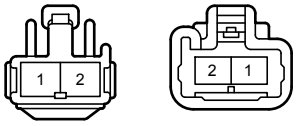

mN1
Blue

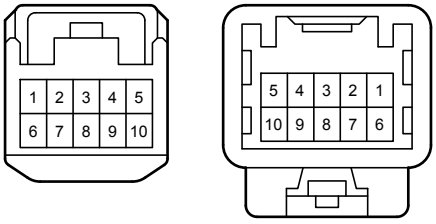

nO1
Blue

