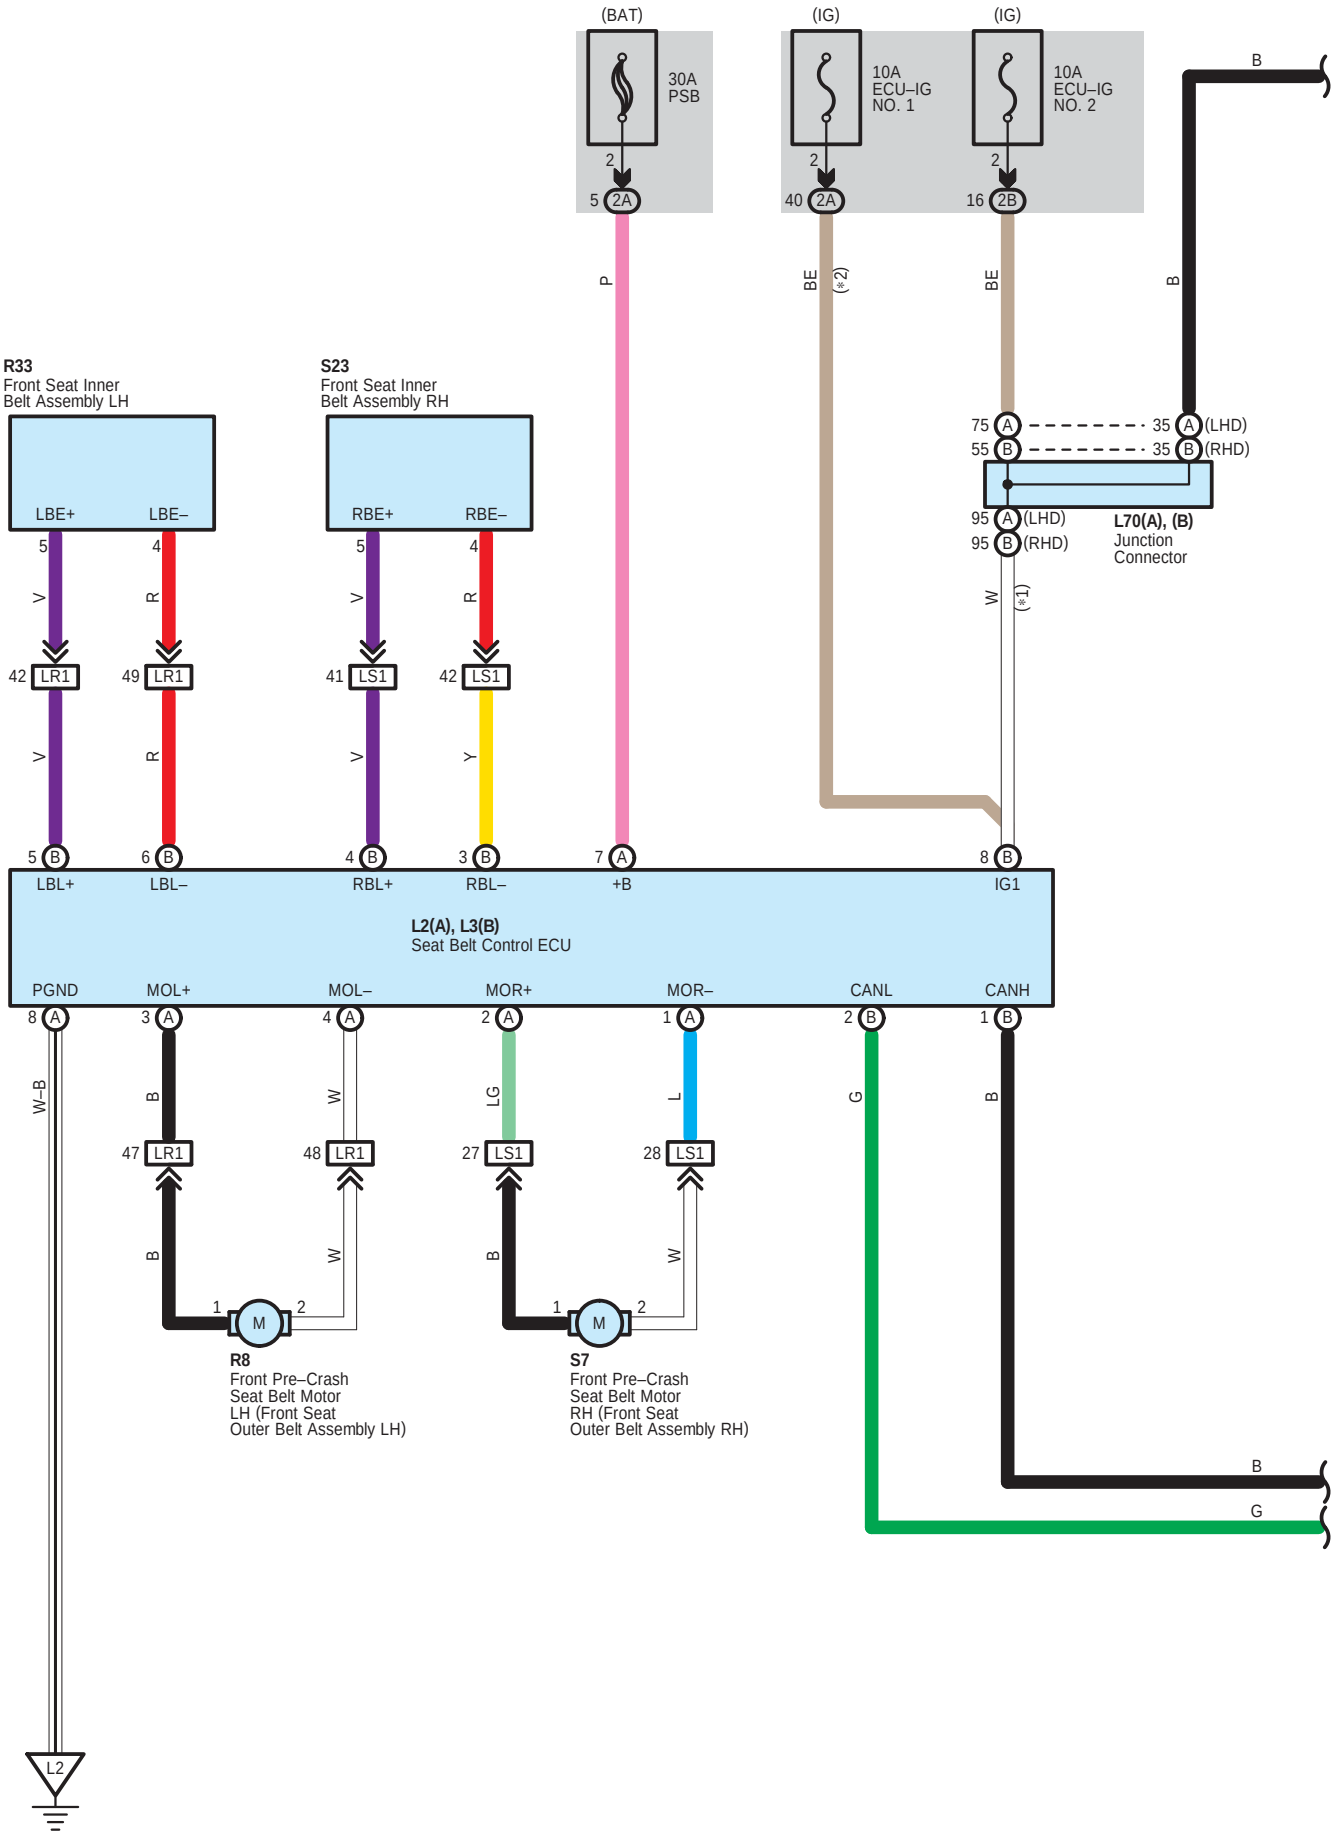
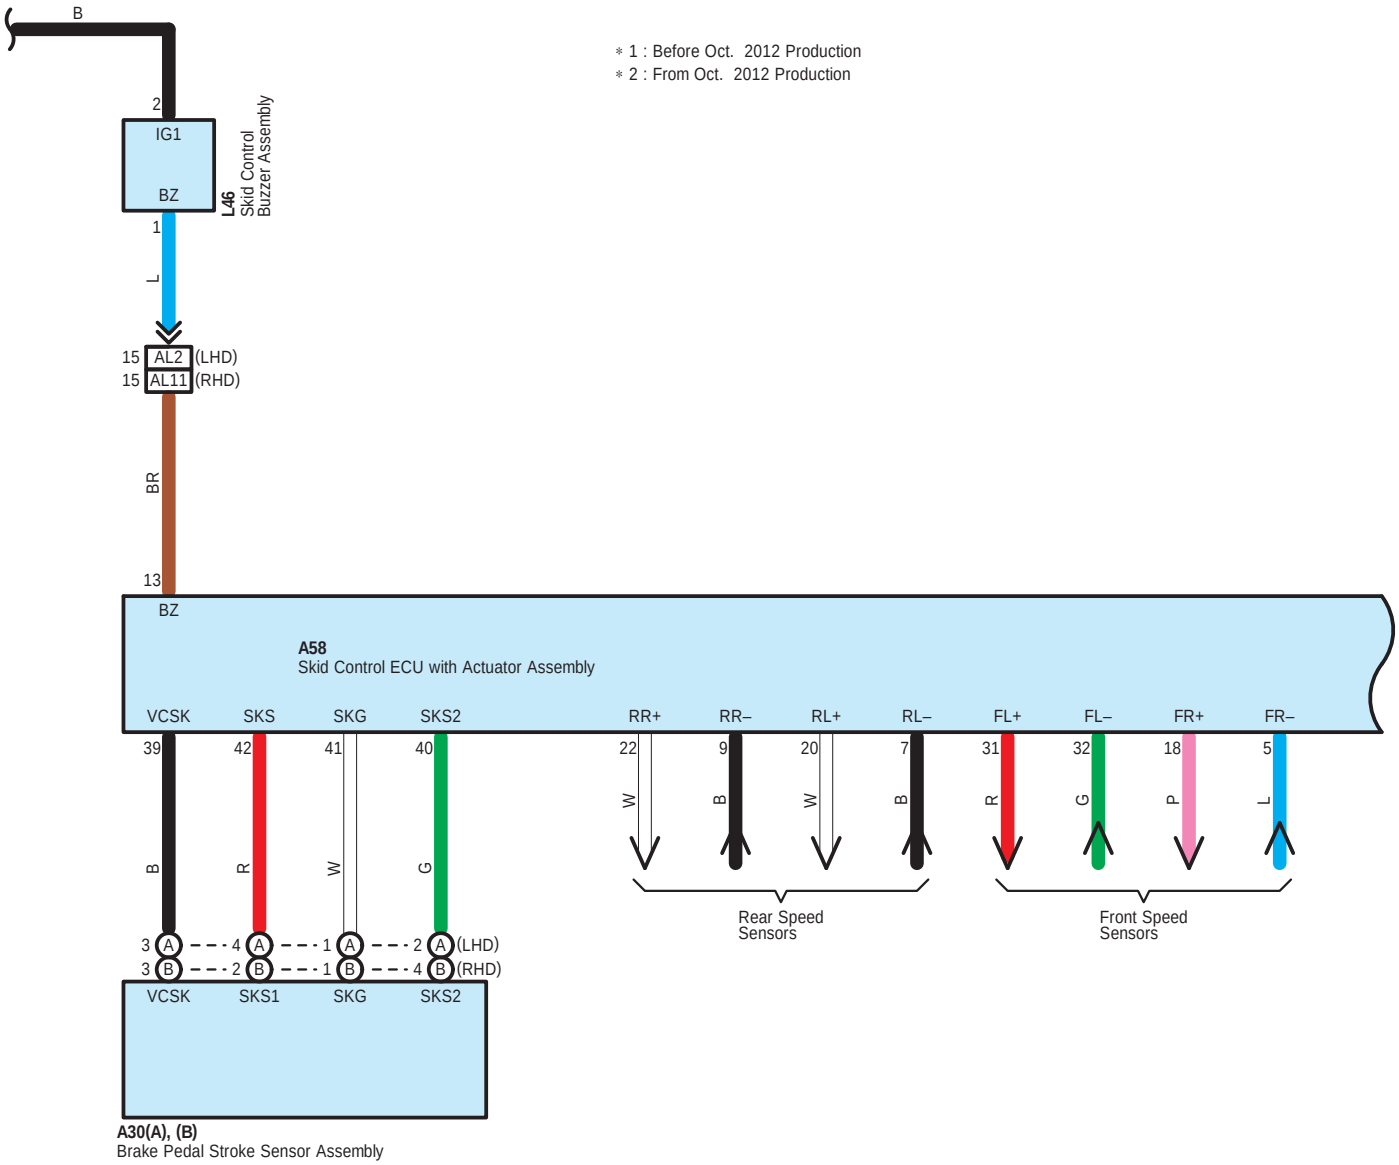
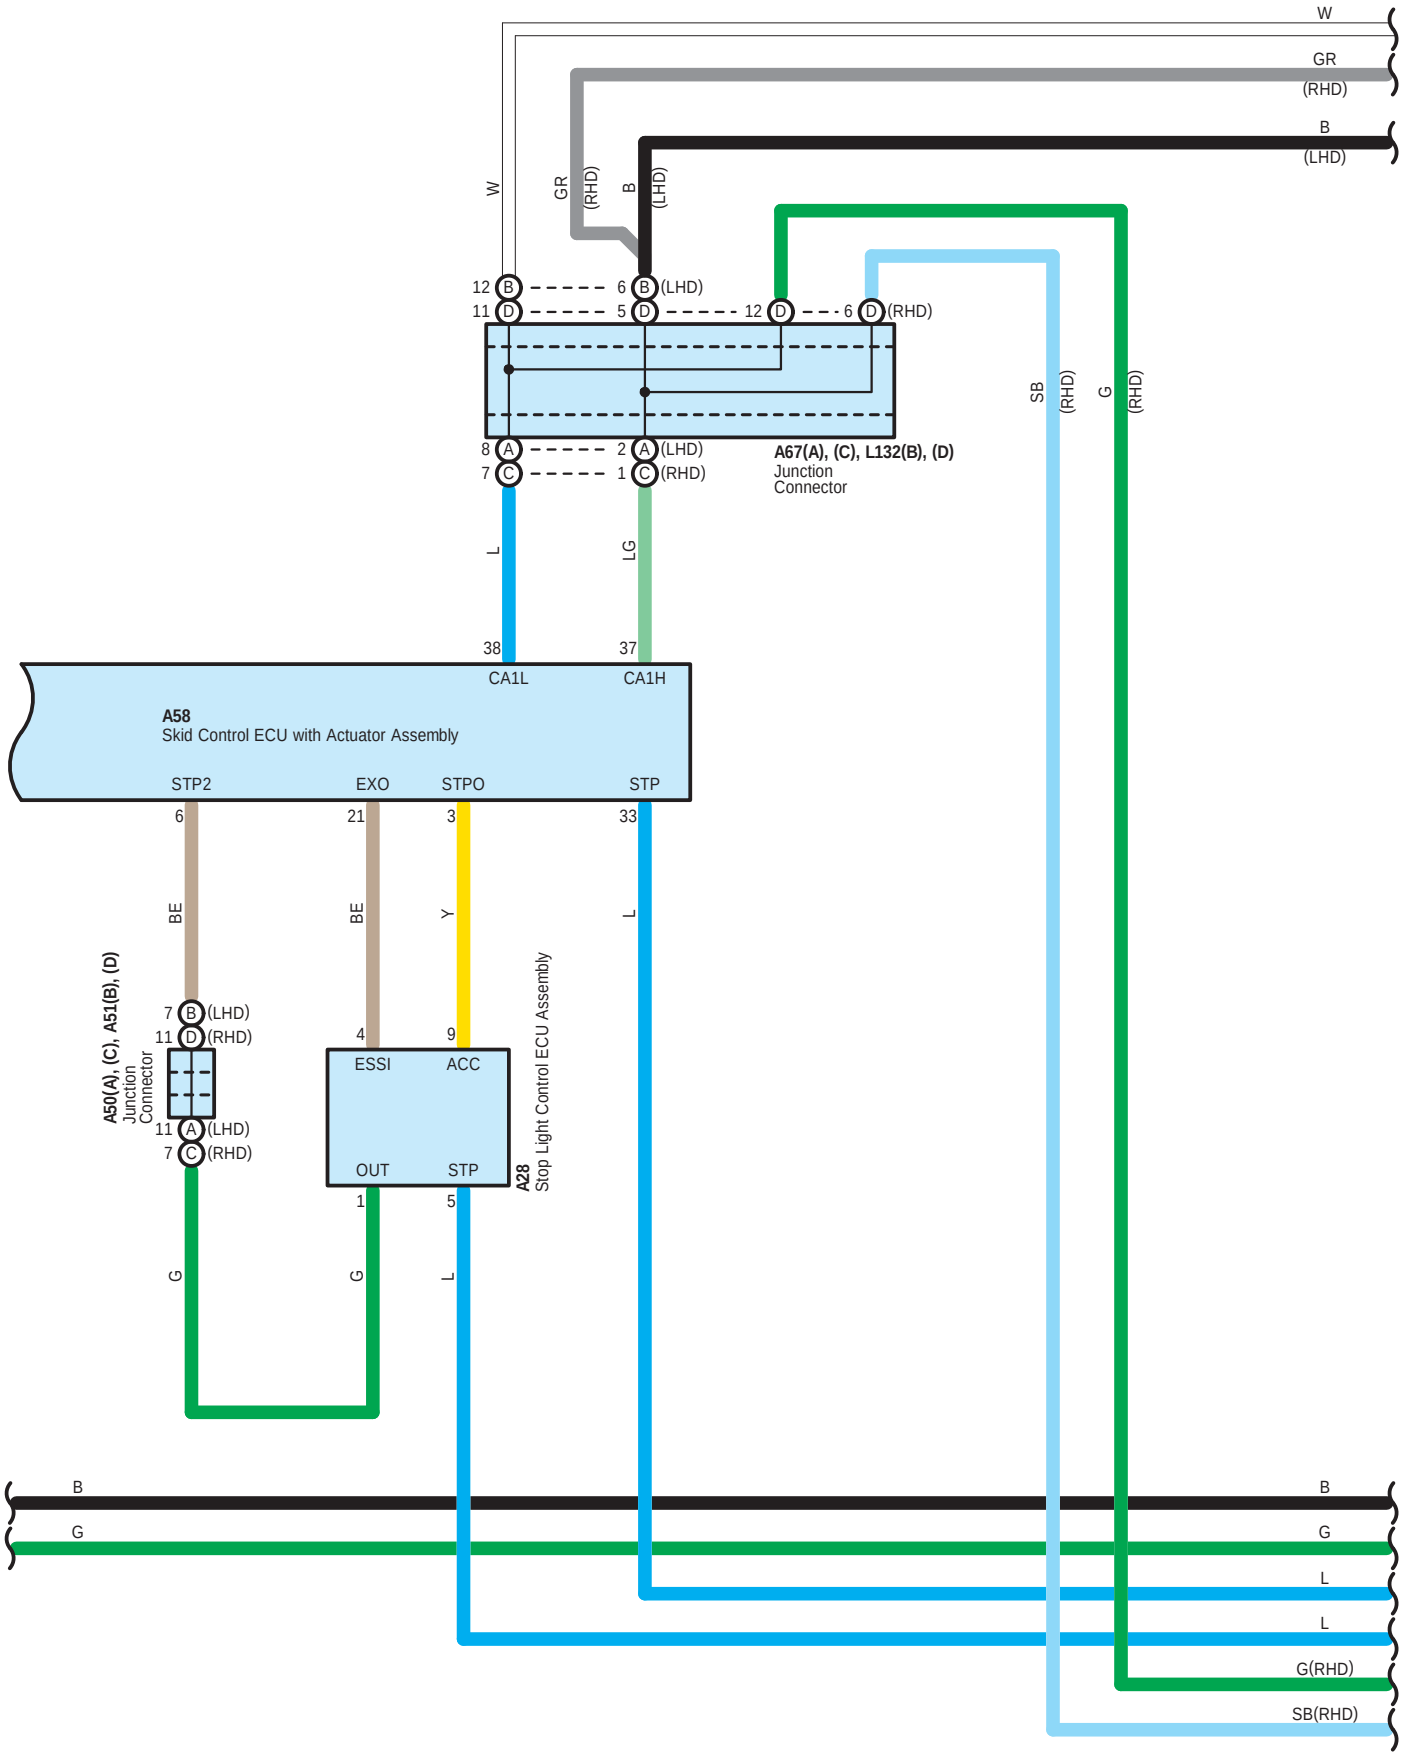
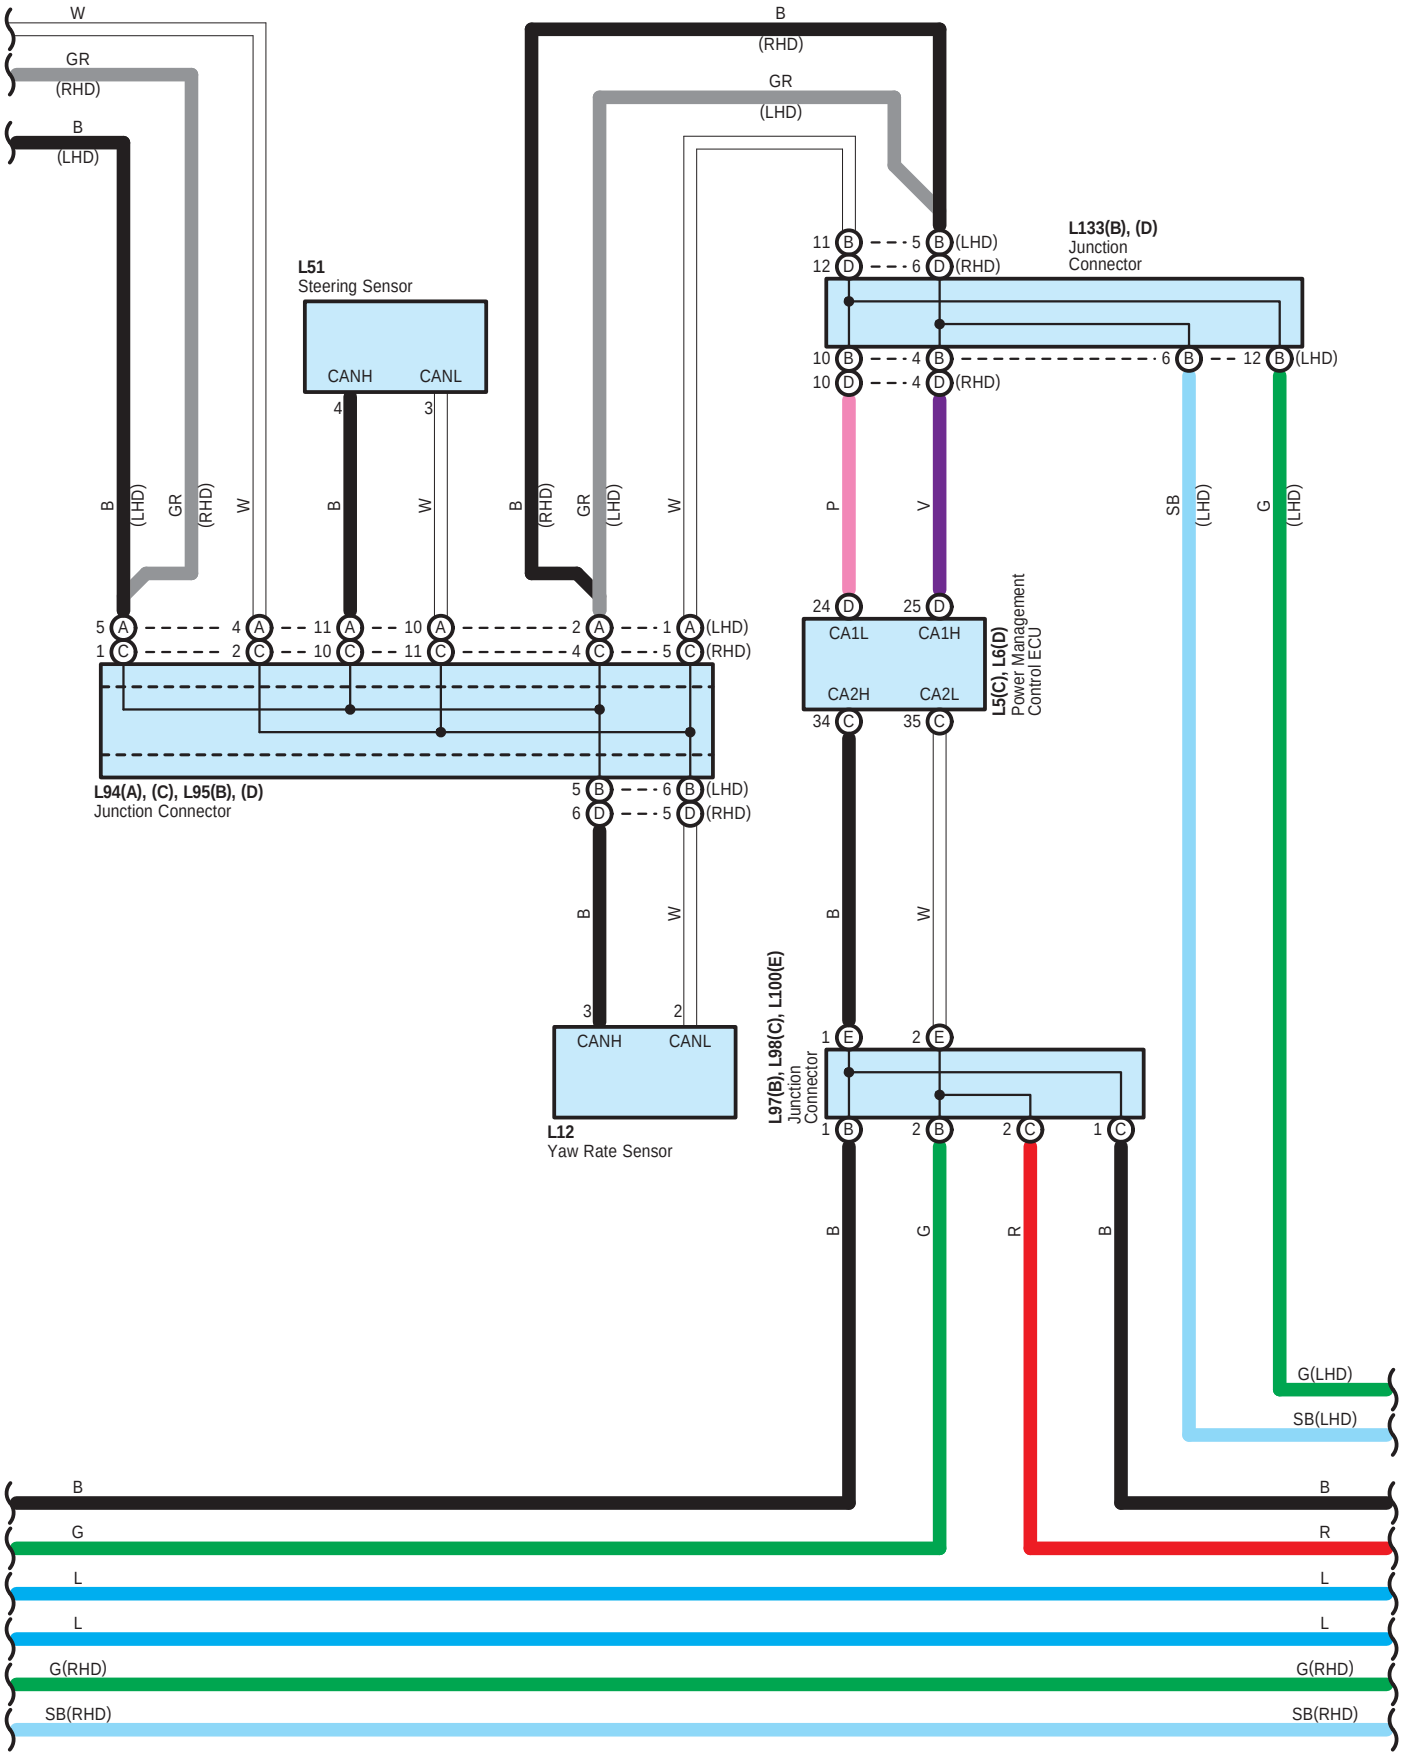
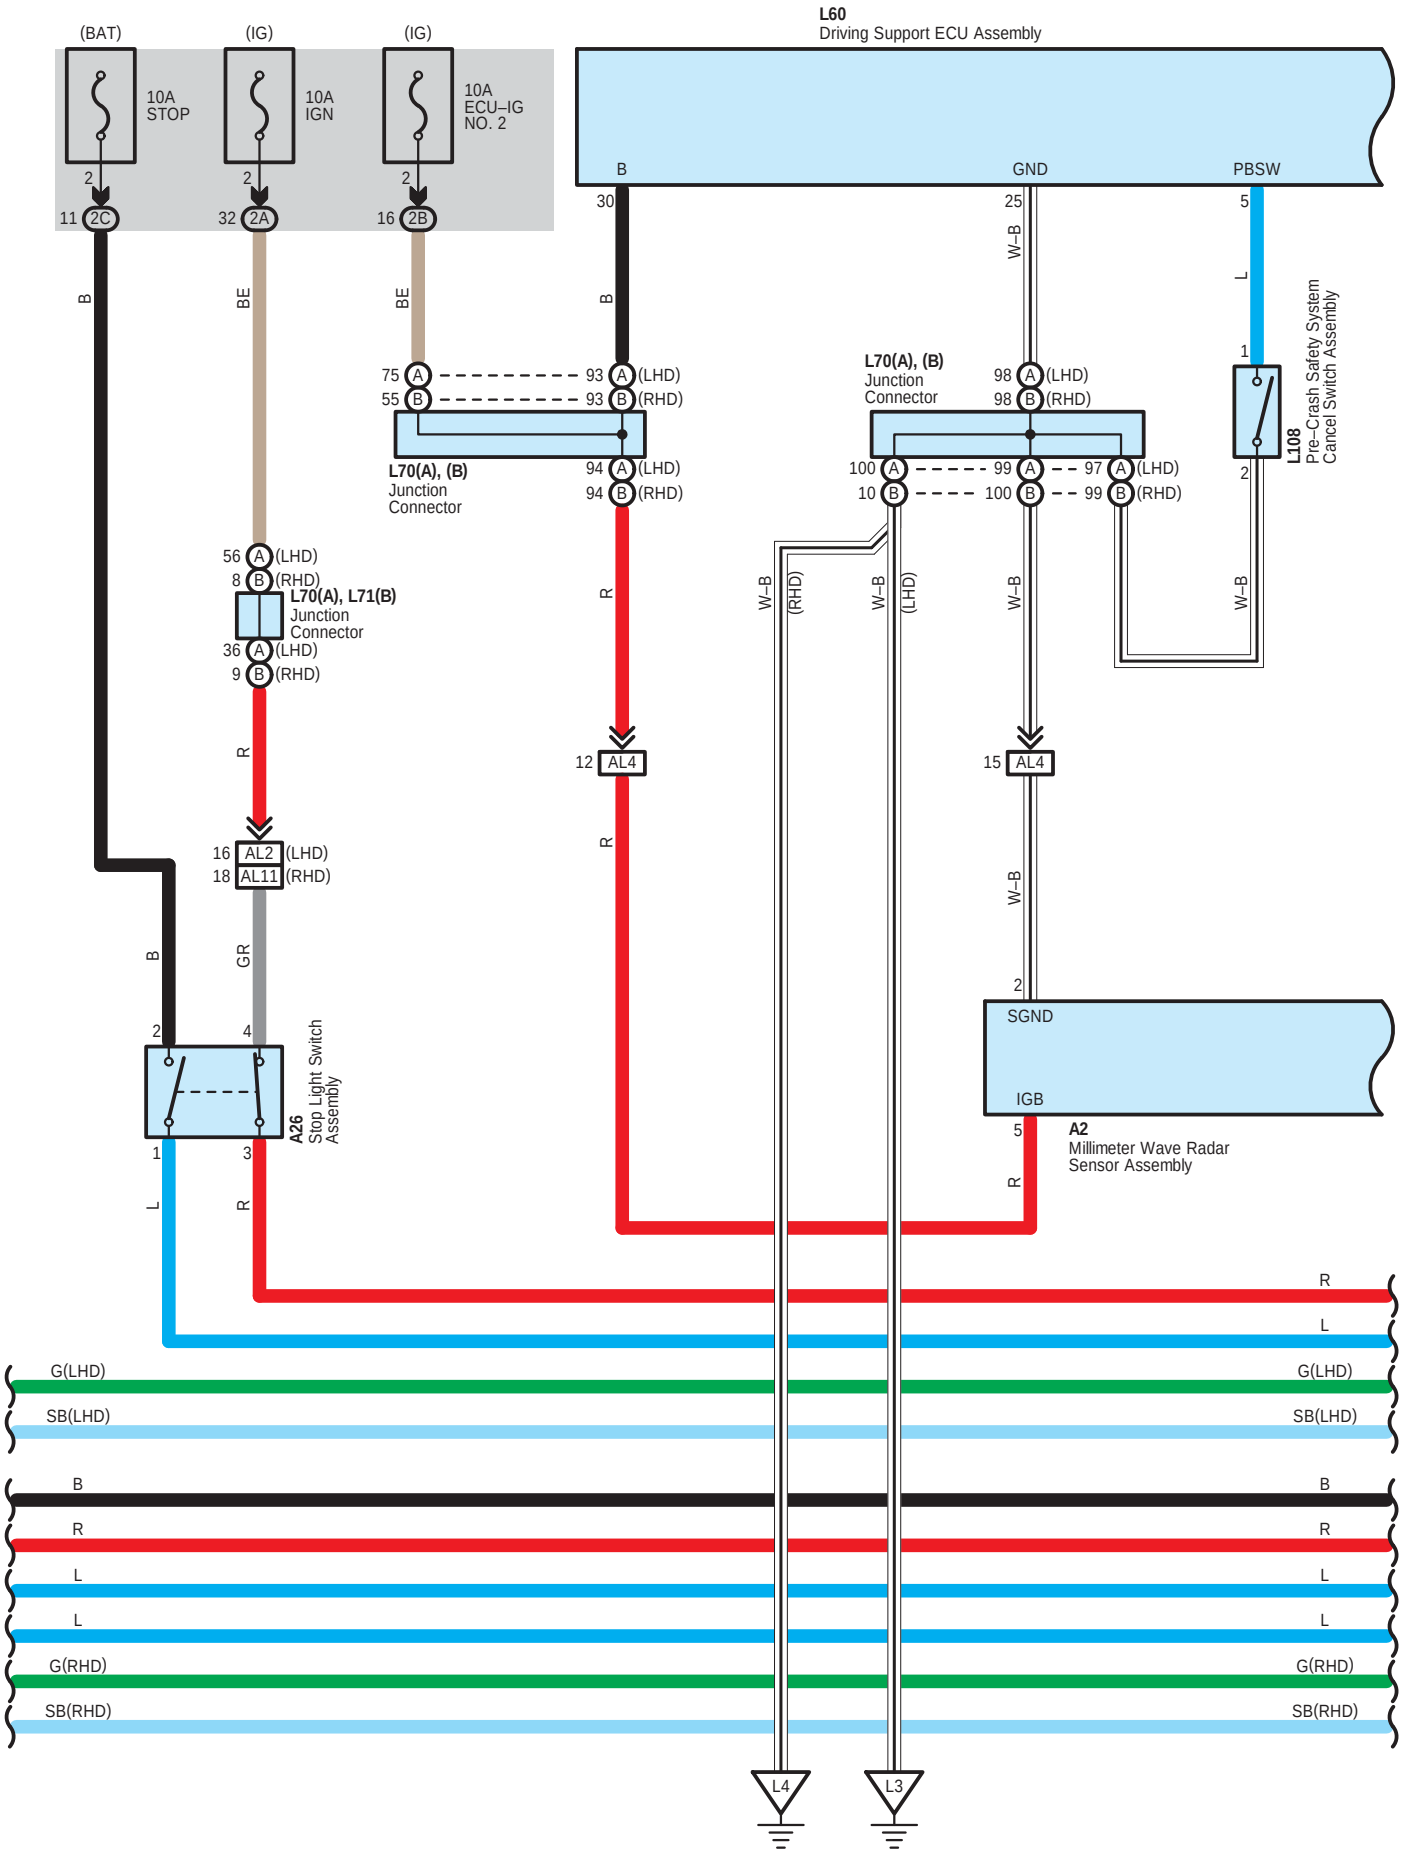

(BAT)
30A
PSB
2
5 2A
P
(IG)
10A
ECU–IG
NO. 1
2
40 2A
BE
(*2)
(IG)
10A
ECU–IG
NO. 2
2
16 2B
BE
B
B
75 A
55 B
35 A (LHD)
35 B (RHD)
95 A (LHD)
95 B (RHD)
L70(A), (B)
Junction
Connector
W
(*1)
R33
Front Seat Inner
Belt Assembly LH
LBE+
LBE–
5
4
V
R
42 LR1
49 LR1
V
R
5 B
6 B
LBL+
LBL–
S23
Front Seat Inner
Belt Assembly RH
RBE+
RBE–
5
4
V
R
41 LS1
42 LS1
V
Y
4 B
3 B
RBL+
RBL–
7 A
+B
8 B
IG1
L2(A), L3(B)
Seat Belt Control ECU
PGND
MOL+
MOL–
MOR+
MOR–
CANL
CANH
8 A
3 A
4 A
2 A
1 A
2 B
1 B
W–B
B
W
LG
L
G
B
47 LR1
48 LR1
27 LS1
28 LS1
B
W
B
W
1
M
2
1
M
2
R8
Front Pre–Crash
Seat Belt Motor
LH (Front Seat
Outer Belt Assembly LH)
S7
Front Pre–Crash
Seat Belt Motor
RH (Front Seat
Outer Belt Assembly RH)
B
G
L2



* 1 : Before Oct. 2012 Production
* 2 : From Oct. 2012 Production
B
2
IG1
BZ
L46
Skid Control Buzzer Assembly
1
L
15 AL2 (LHD)
15 AL11 (RHD)
BR
13
BZ
A58
Skid Control ECU with Actuator Assembly
VCSK SKS SKG SKS2 RR+ RR– RL+ RL– FL+ FL– FR+ FR–
39 42 41 40 22 9 20 7 31 32 18 5
B R W G W B W B R G P L
Rear Speed Sensors
Front Speed Sensors
3 A 4 A 1 A 2 A (LHD)
3 B 2 B 1 B 4 B (RHD)
VCSK SKS1 SKG SKS2
A30(A), (B)
Brake Pedal Stroke Sensor Assembly



B
B
G
G


W
GR
(RHD)
B
(LHD)
W
GR
(RHD)
B
(LHD)
12 B
11 D
6 B (LHD)
5 D
12 D
6 D (RHD)
8 A
7 C
2 A (LHD)
1 C (RHD)
A67(A), (C), L132(B), (D)
Junction
Connector
SB
(RHD)
G
(RHD)
L
LG
38
37
CA1L
CA1H
A58
Skid Control ECU with Actuator Assembly
STP2
EXO
STPO
STP
6
21
3
33
BE
BE
Y
L
A50(A), (C), A51(B), (D)
Junction
Connector
7 B (LHD)
11 D (RHD)
11 A (LHD)
7 C (RHD)
4
9
ESSI
ACC
OUT
STP
1
5
A28
Stop Light Control ECU Assembly
G
G
L
B
G
B
G
L
L
G(RHD)
SB(RHD)



W
GR
(RHD)
B
(LHD)
B
(RHD)
GR
(LHD)
L51
Steering Sensor
CANH
CANL
L133(B), (D)
Junction
Connector
11 B 5 B (LHD)
12 D 6 D (RHD)
10 B 4 B 6 B 12 B (LHD)
10 D 4 D (RHD)
P
V
SB (LHD)
G (LHD)
24 D 25 D
CA1L
CA1H
CA2H
CA2L
34 C 35 C
L5(C), L6(D)
Power Management
Control ECU
5 A 4 A 11 A 10 A 2 A 1 A (LHD)
1 C 2 C 10 C 11 C 4 C 5 C (RHD)
L94(A), (C), L95(B), (D)
Junction Connector
5 B 6 B (LHD)
6 D 5 D (RHD)
3
2
CANH
CANL
L12
Yaw Rate Sensor
L97(B), L98(C), L100(E)
Junction
Connector
1 E 2 E
1 B 2 B 2 C 1 C
B
G
R
B
G(LHD)
SB(LHD)
B
G
L
L
G(RHD)
SB(RHD)
B
R
L
L
G(RHD)
SB(RHD)


(BAT)
(IG)
(IG)
10A
STOP
10A
IGN
10A
ECU–IG
NO. 2
L60
Driving Support ECU Assembly
B
GND
PBSW
11 2C
32 2A
16 2B
30
25
5
W–B
L
1
L108
Pre–Crash Safety System
Cancel Switch Assembly
2
B
BE
BE
B
75 A
55 B
93 A (LHD)
93 B (RHD)
L70(A), (B)
Junction
Connector
94 A (LHD)
94 B (RHD)
L70(A), (B)
Junction
Connector
98 A (LHD)
98 B (RHD)
100 A
10 B
99 A
100 B
97 A (LHD)
99 B (RHD)
56 A (LHD)
8 B (RHD)
L70(A), L71(B)
Junction
Connector
36 A (LHD)
9 B (RHD)
R
W–B
(RHD)
W–B
(LHD)
W–B
W–B
12 AL4
15 AL4
R
R
16 AL2 (LHD)
18 AL11 (RHD)
W–B
B
GR
2
SGND
2
4
IGB
A26
Stop Light Switch
Assembly
1
3
5
A2
Millimeter Wave Radar
Sensor Assembly
L
R
R
L
G(LHD)
G(LHD)
SB(LHD)
SB(LHD)
B
B
R
R
L
L
L
L
G(RHD)
G(RHD)
SB(RHD)
SB(RHD)
L4
L3

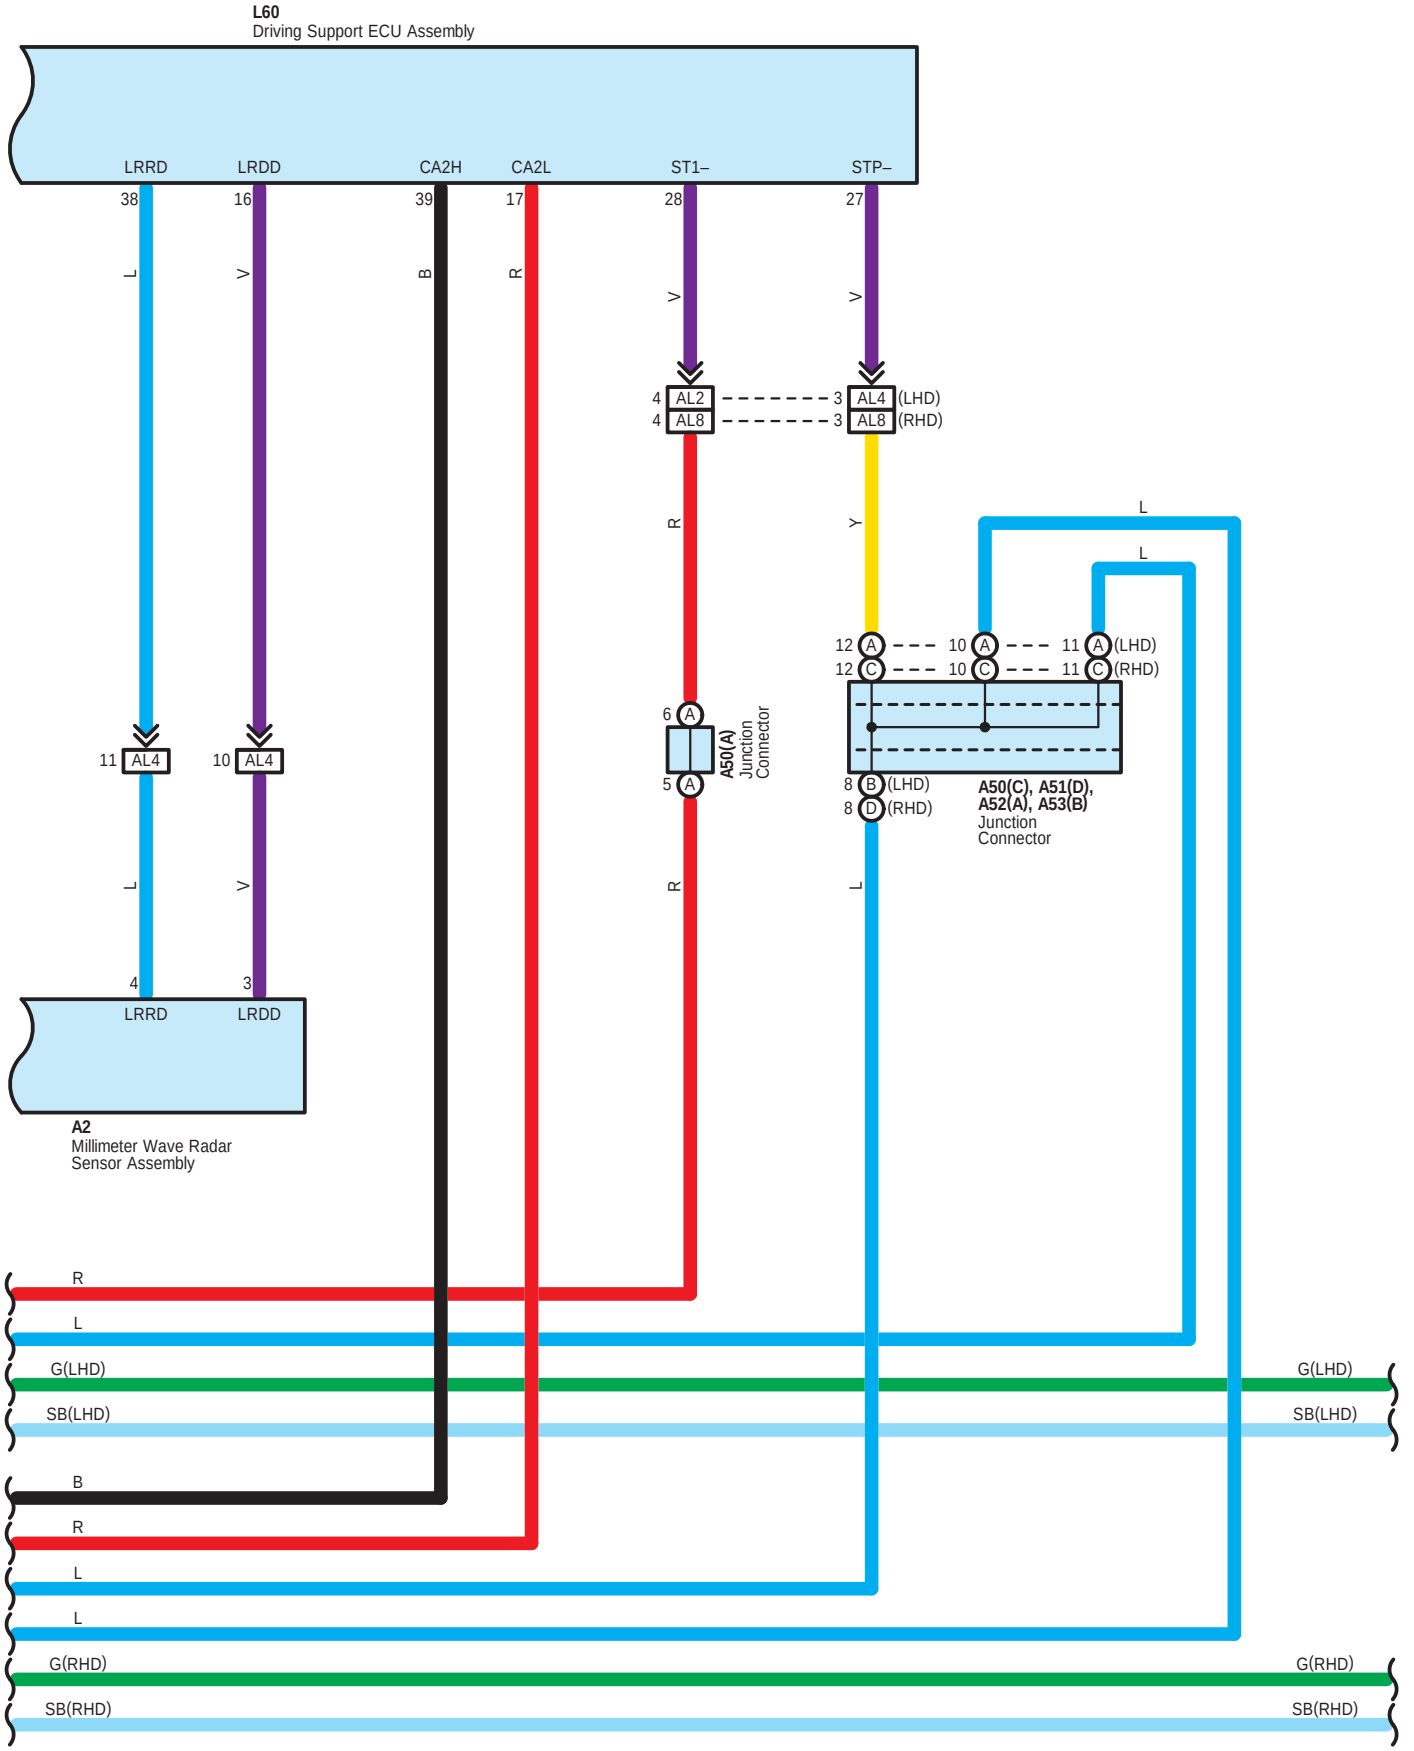

L60
Driving Support ECU Assembly
LRRD
LRDD
CA2H
CA2L
ST1–
STP–
38
16
39
17
28
27
L
V
B
R
V
V
4 AL2
4 AL8
3 AL4 (LHD)
3 AL8 (RHD)
R
Y
L
L
12 A
12 C
10 A
10 C
11 A (LHD)
11 C (RHD)
6 A
5 A
A50(A) Junction Connector
8 B (LHD)
8 D (RHD)
A50(C), A51(D), A52(A), A53(B) Junction Connector
11 AL4
10 AL4
L
V
R
L
4
3
LRRD
LRDD
A2
Millimeter Wave Radar Sensor Assembly
R
L
G(LHD)
SB(LHD)
G(LHD)
SB(LHD)
B
R
L
L
G(RHD)
SB(RHD)
G(RHD)
SB(RHD)

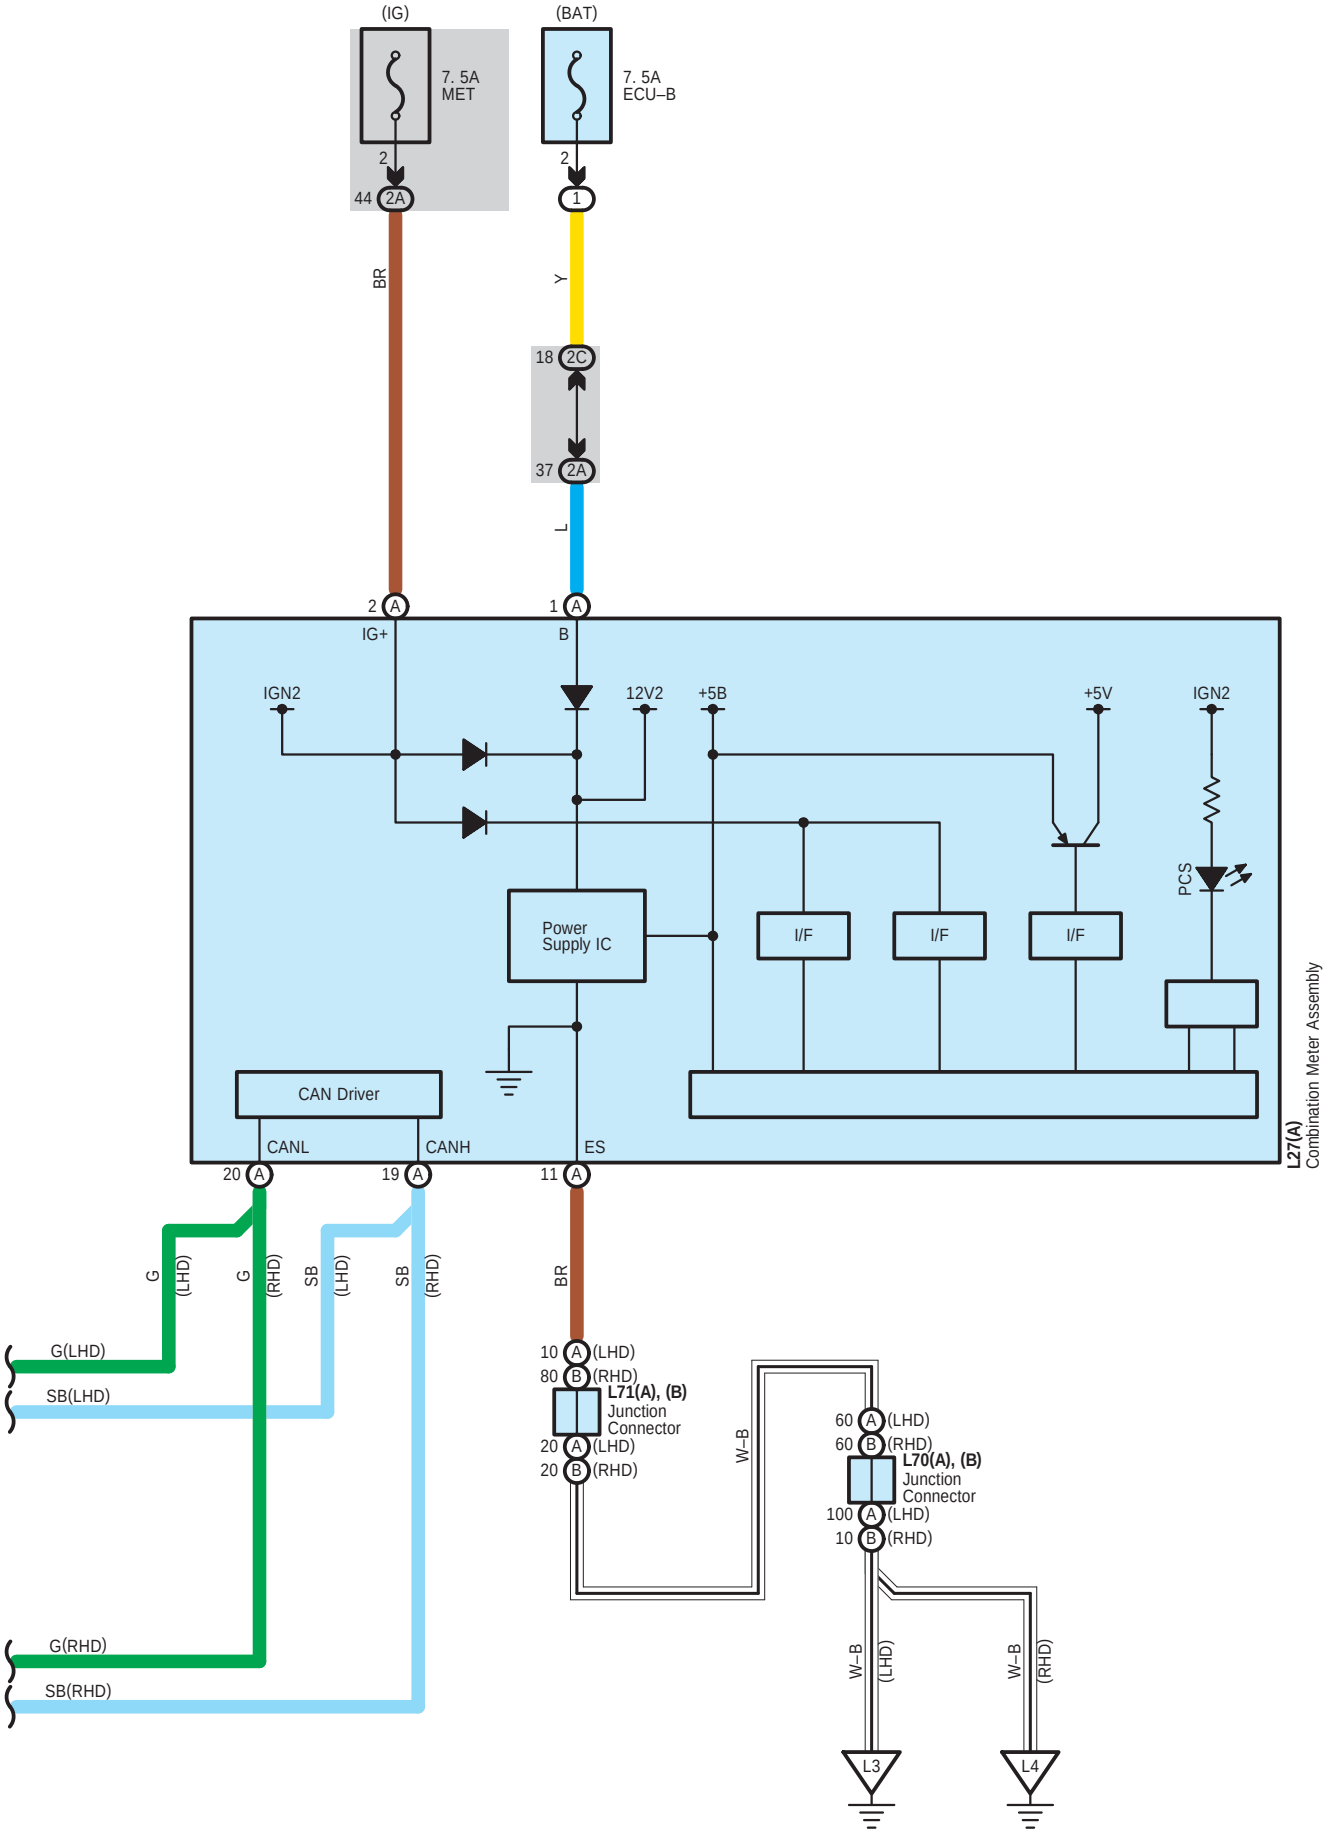
(IG)
(BAT)
7. 5A
MET
7. 5A
ECU–B
2
44 2A
2
1
BR
Y
18 2C
37 2A
L
2 A
IG+
1 A
B
IGN2
12V2
+5B
+5V
IGN2
PCS
Power
Supply IC
I/F
I/F
I/F
CAN Driver
CANL
CANH
ES
20 A
19 A
11 A
L27(A)
Combination Meter Assembly
G
(LHD)
G
(RHD)
SB
(LHD)
SB
(RHD)
BR
G(LHD)
SB(LHD)
10 A (LHD)
80 B (RHD)
L71(A), (B)
Junction
Connector
20 A (LHD)
20 B (RHD)
W–B
60 A (LHD)
60 B (RHD)
L70(A), (B)
Junction
Connector
100 A (LHD)
10 B (RHD)
W–B
(LHD)
W–B
(RHD)
L3
L4
G(RHD)
SB(RHD)


A 2
Black

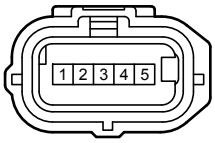


A 26
White




A 28
Black

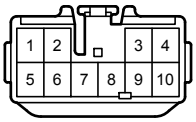


A 30
Black

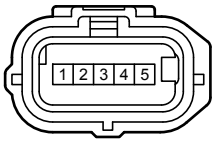


A 50
White

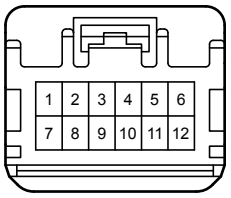


A 51
White

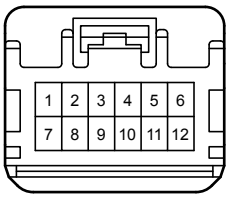


A 52
Black

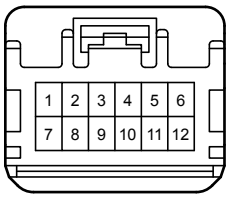


A 53
Black

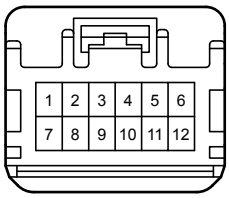


A 58
Gray

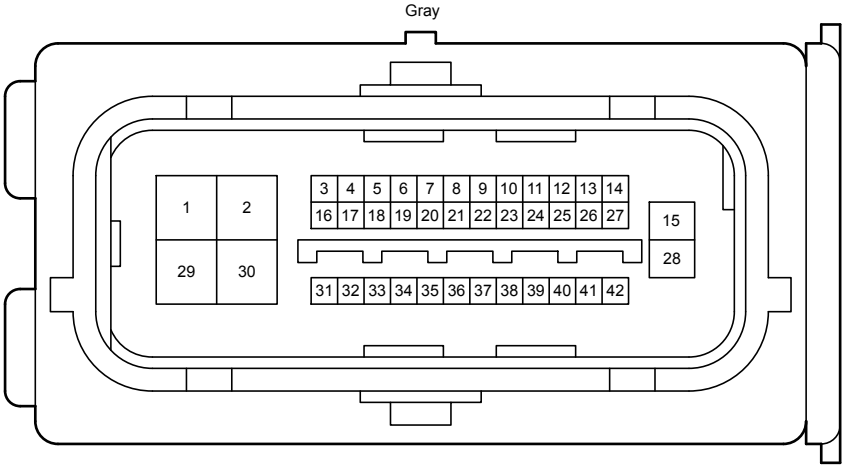


A 67
Blue

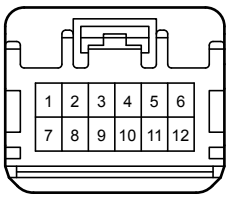


L 2
White

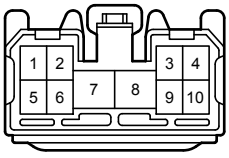


L 3
White

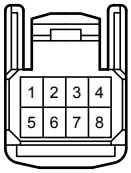


L 5
Gray

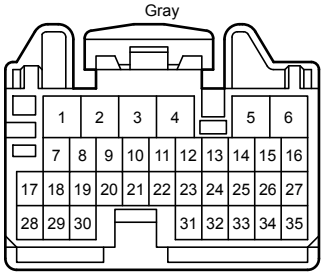


L 6
Gray

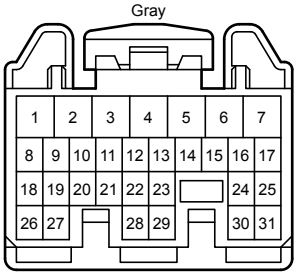


L 12
Black

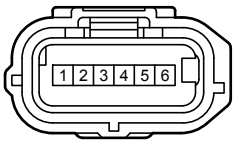


L 27
White

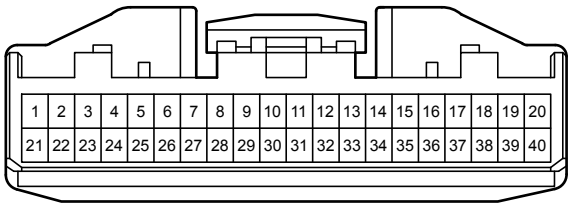


L 46
Blue




L 51
White

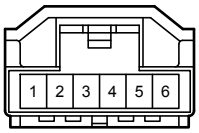


L 60
White

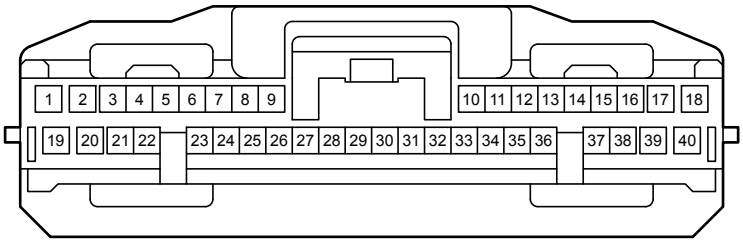


L 70
White

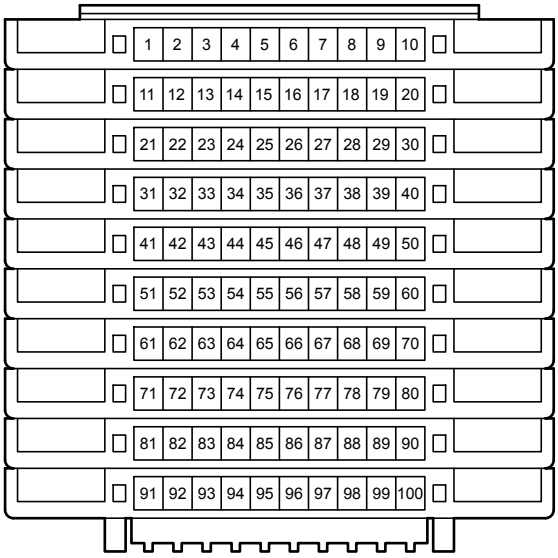


L 71
White

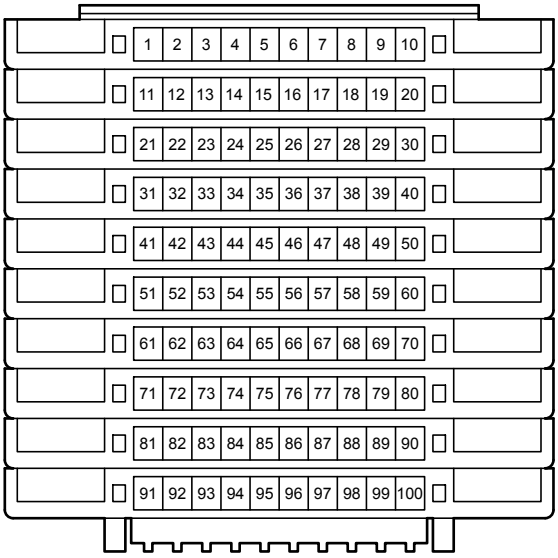


L 94
White

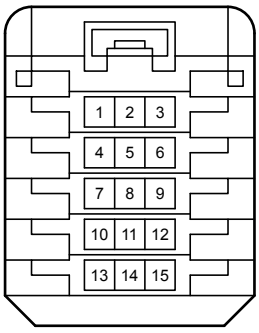


L 95
White

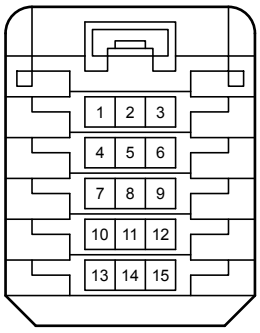


L 97
White




L 98
White




L100
White




L108
Black




L132
Blue

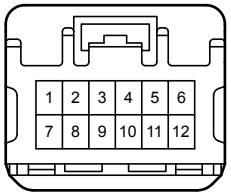


L133
Gray

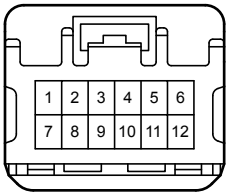


R 8
White




R 33
White

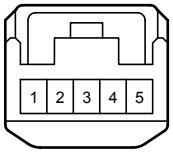


S 7
White




S 23
White

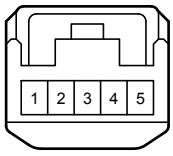


2A
White

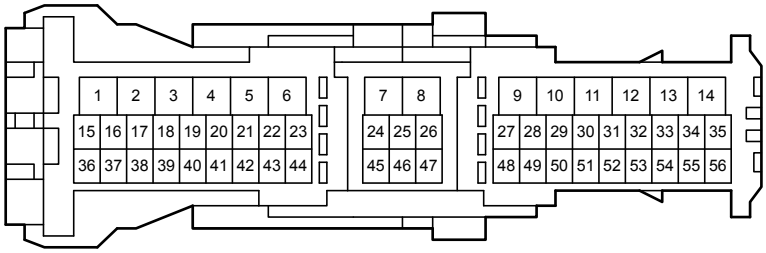


2B
White

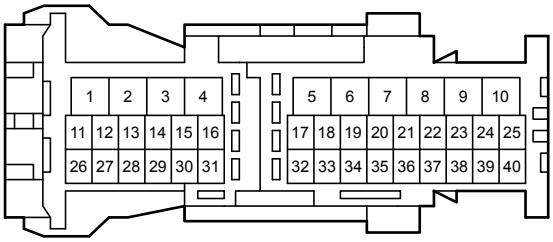


2C
White

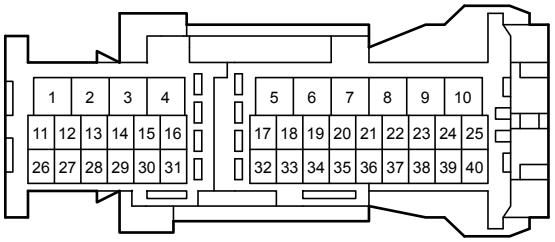


AL2
Gray

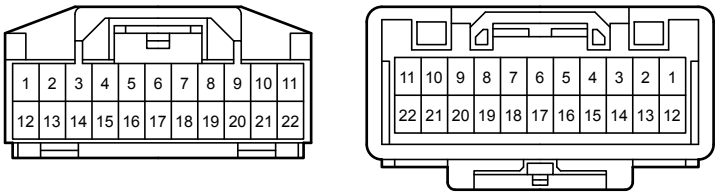


AL4
Black

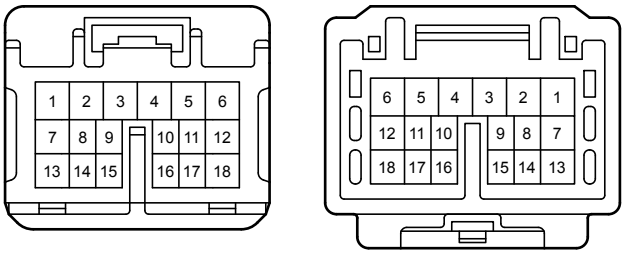


AL8
White

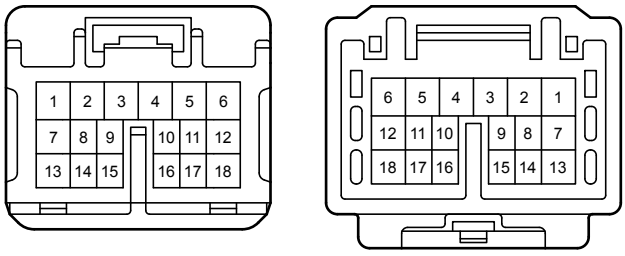

AL11
White

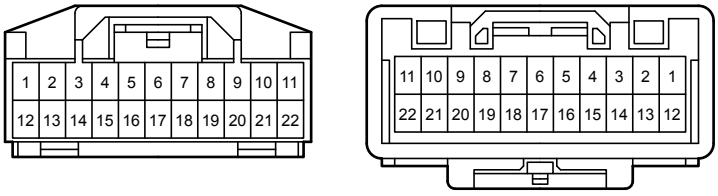

LR1
White

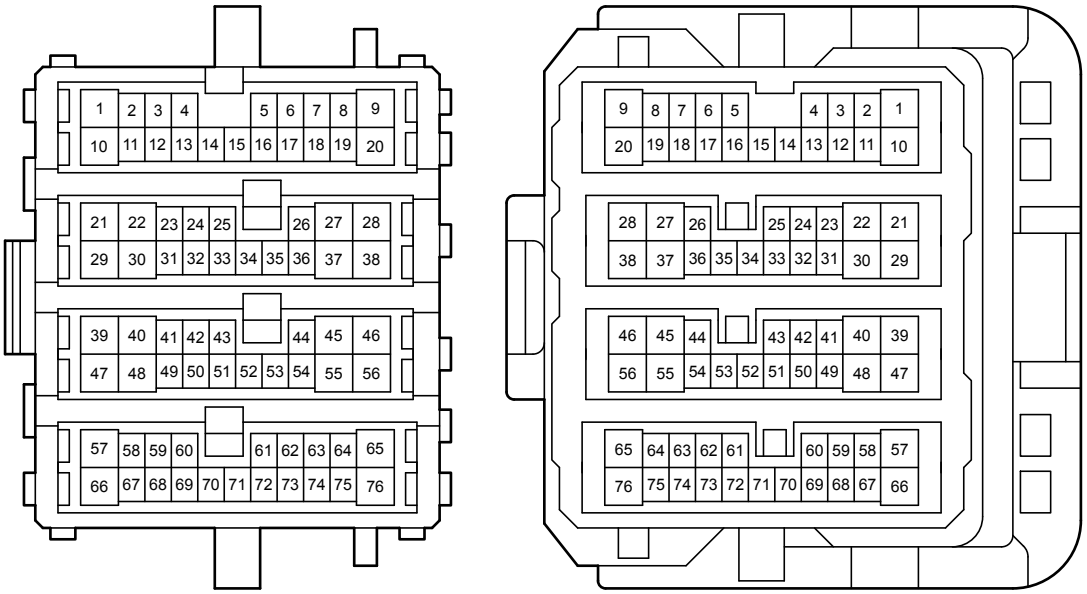

LS1
White

