




(BAT)
10A
STOP
2
11 2C
12 2C
R
(*4)
L
G
(*5)
B
(*5)
B
(*4)
1 A
2 B
1 C
7 A (*9 *1)
1 B (*9 *6)
7 C (*10)
OUT
B
GND
A79(A), A80(B), A93(C)
Stop Light
Switch Assembly
2 A (*9 *1)
3 B (*9 *6)
2 C (*10)
W–B
(*5)
2
1
A26
Stop Light
Switch Assembly
L
(*4)
L
(*4)
R
(*4)
5
6
STP
+B
GND
OUT
A28
Stop Light
Control ECU Assembly
8
1
G
(*4)
G
(*5)
L
5 AR1
L
(LHD)
L
(RHD)
L
(RHD)
11 A
11 C
10 A (LHD)
10 C (RHD)
A50(C), A52(A)
Junction
Connector
L
(*4)
W–B
(*4)
11 A
7 C
12 A (LHD)
8 C (RHD)
8 B (LHD)
12 D (RHD)
A50(A), (C),
A51(B), (D)
Junction
Connector
L
(LHD)
8 AS1
B
(*8)
G
(*7)
L
2
4
B
B
Stop/Tail
E
S18
Rear Combination
Light Assembly RH
W–B
(*5)
5
W–B
(*4)
W–B
(*5)
11
S20
Junction
Connector
W–B
A1
S2


∗ 1 : w/ Dynamic Radar Cruise Control
∗ 2 : w/ Intrusion Sensor
∗ 3 : w/o Intrusion Sensor
∗ 4 : Before Nov. 2014 Production
∗ 5 : From Nov. 2014 Production
∗ 6 : w/o Dynamic Radar Cruise Control
∗ 7 : Before May 2016 Production
∗ 8 : From May 2016 Production
∗ 9 : Before Aug. 2020 Production
∗10 : From Aug. 2020 Production
L
17 VR1
L
4
6
5
R28 Junction Connector
L
L
L
L (∗3)
B (∗2)
R32 Noise Filter (Rear Window Defogger & Stop Light)
1
2
B
E
V13 Center Stop Light (Center Stop Light Set)
1
W–B
G
2
4
B
B
Stop/Tail
E
R17 Rear Combination Light Assembly LH
5
W–B (∗4)
7
R31 Junction Connector
W–B (∗5)
W–B
R1
V1


A 26
White

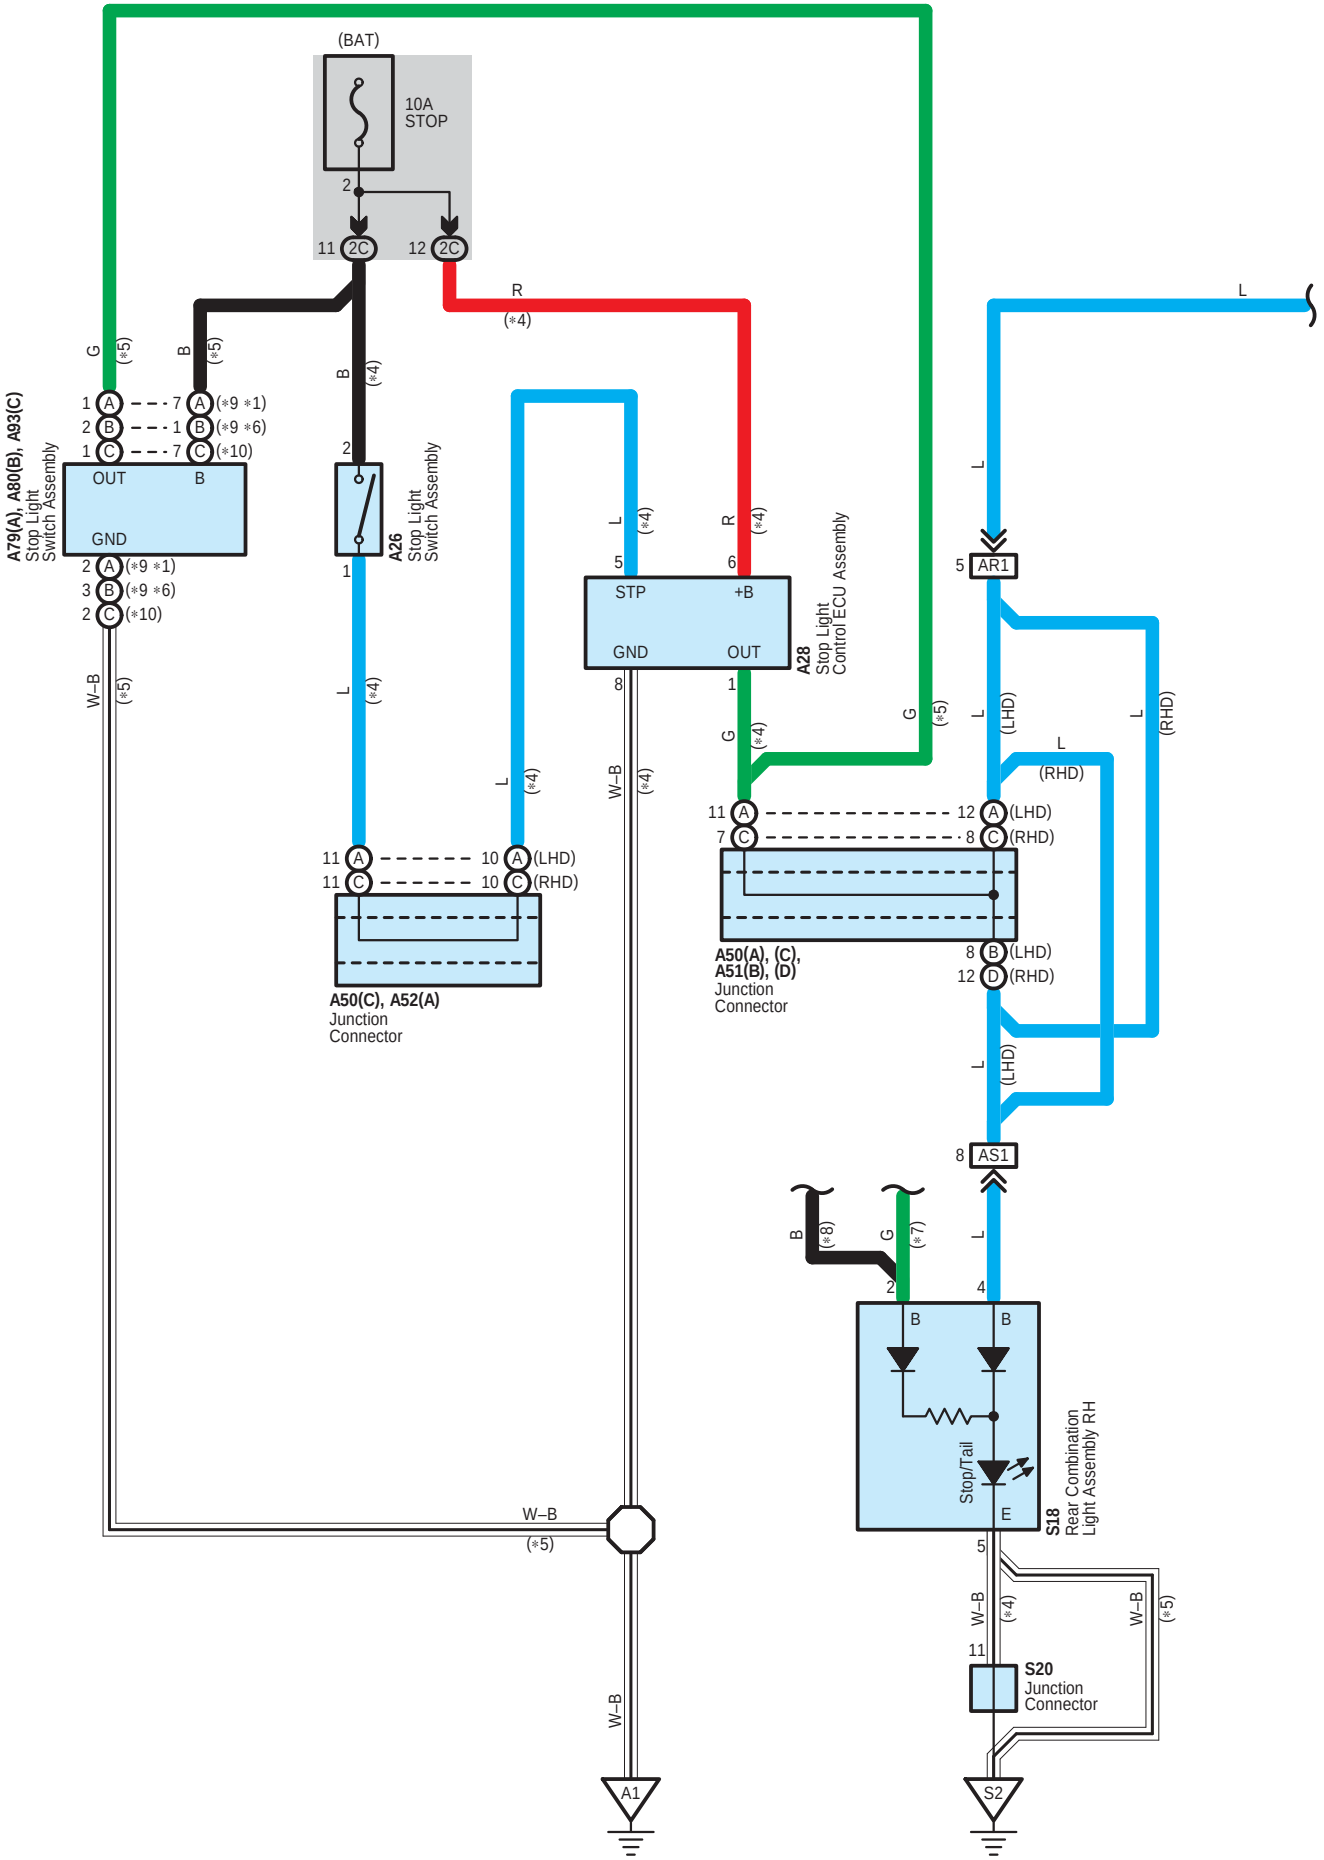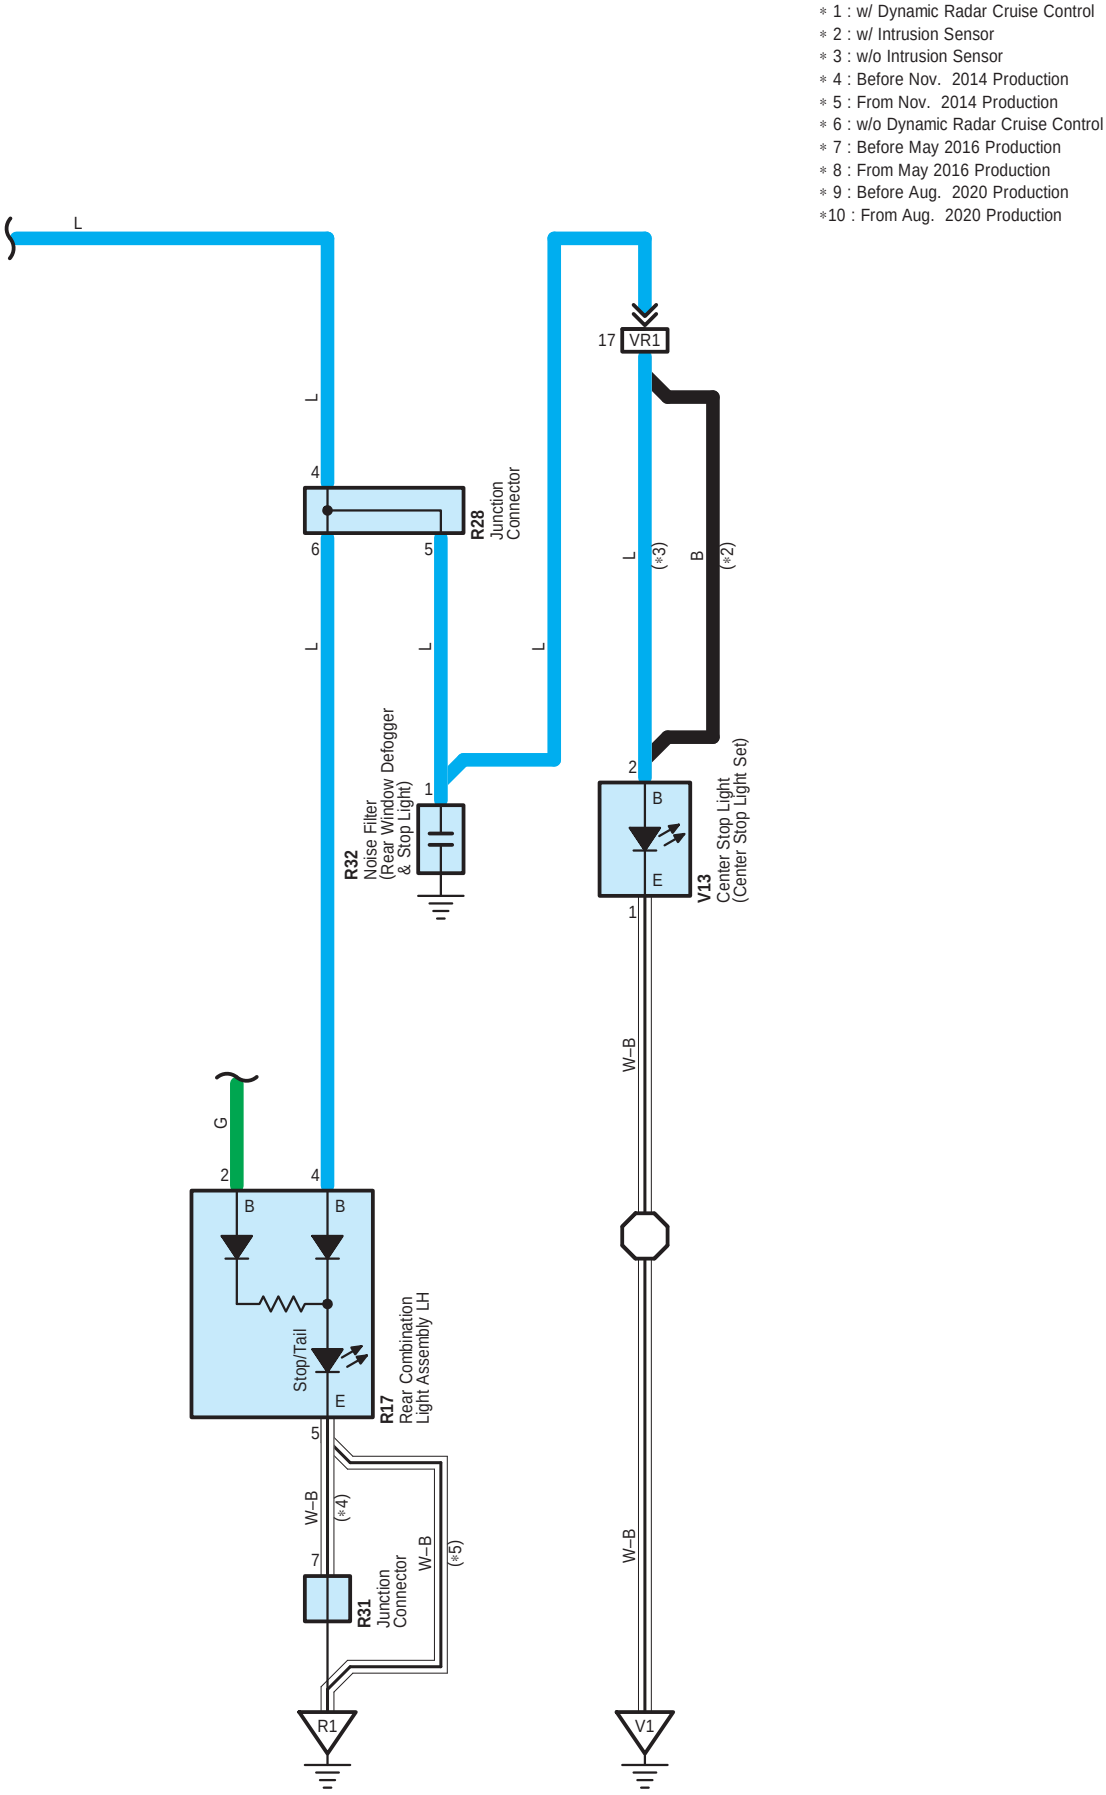


A 28
Black

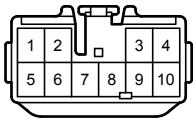


A 50
White

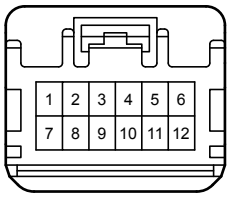


A 51
White

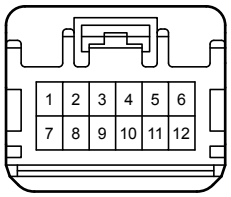


A 52
Black

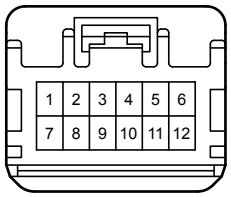


A 79
Black

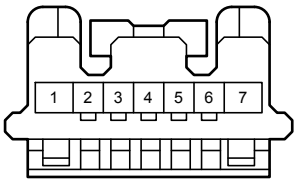


A 80
Blue

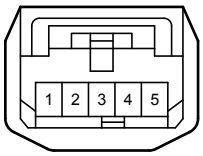


A 93
Blue

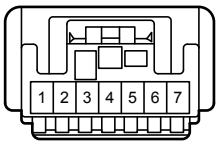


R 17
White

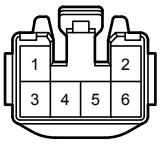


R 28
Black

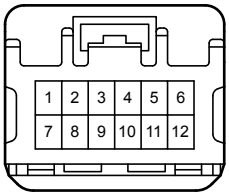


R 31
White

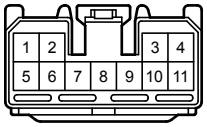


R 32
White




S 18
White

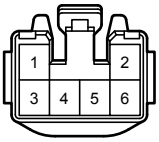


S 20
White

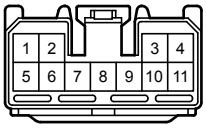


V 13
White

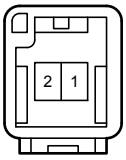



2C
White

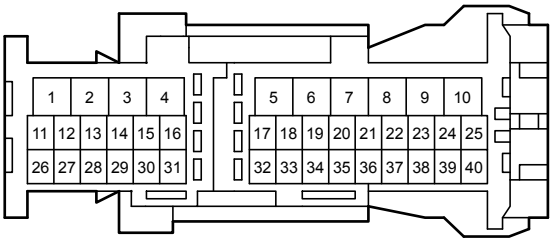

AR1
White

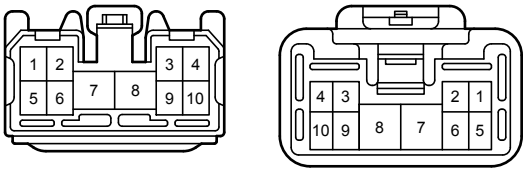

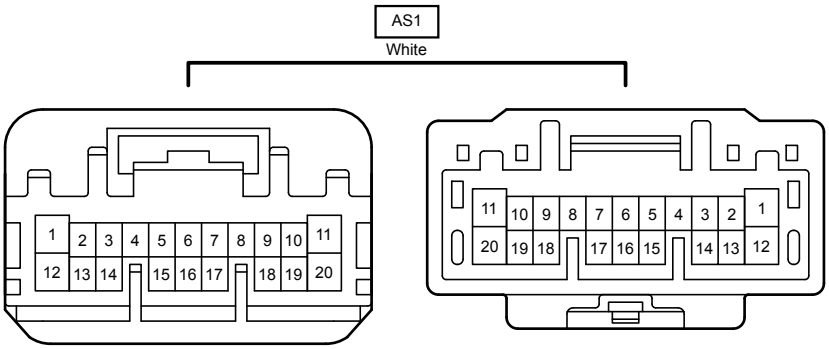
AS1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

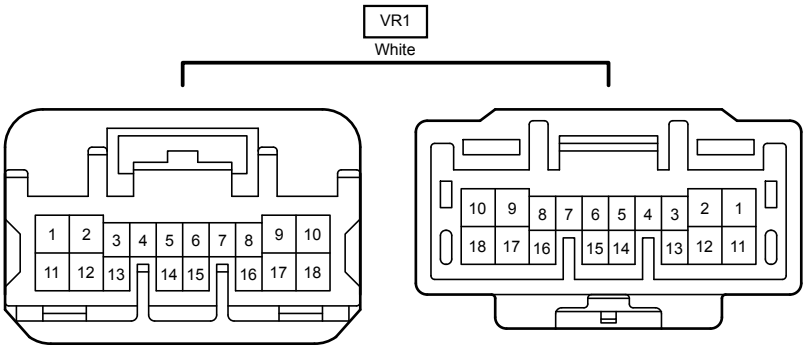
VR1
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11