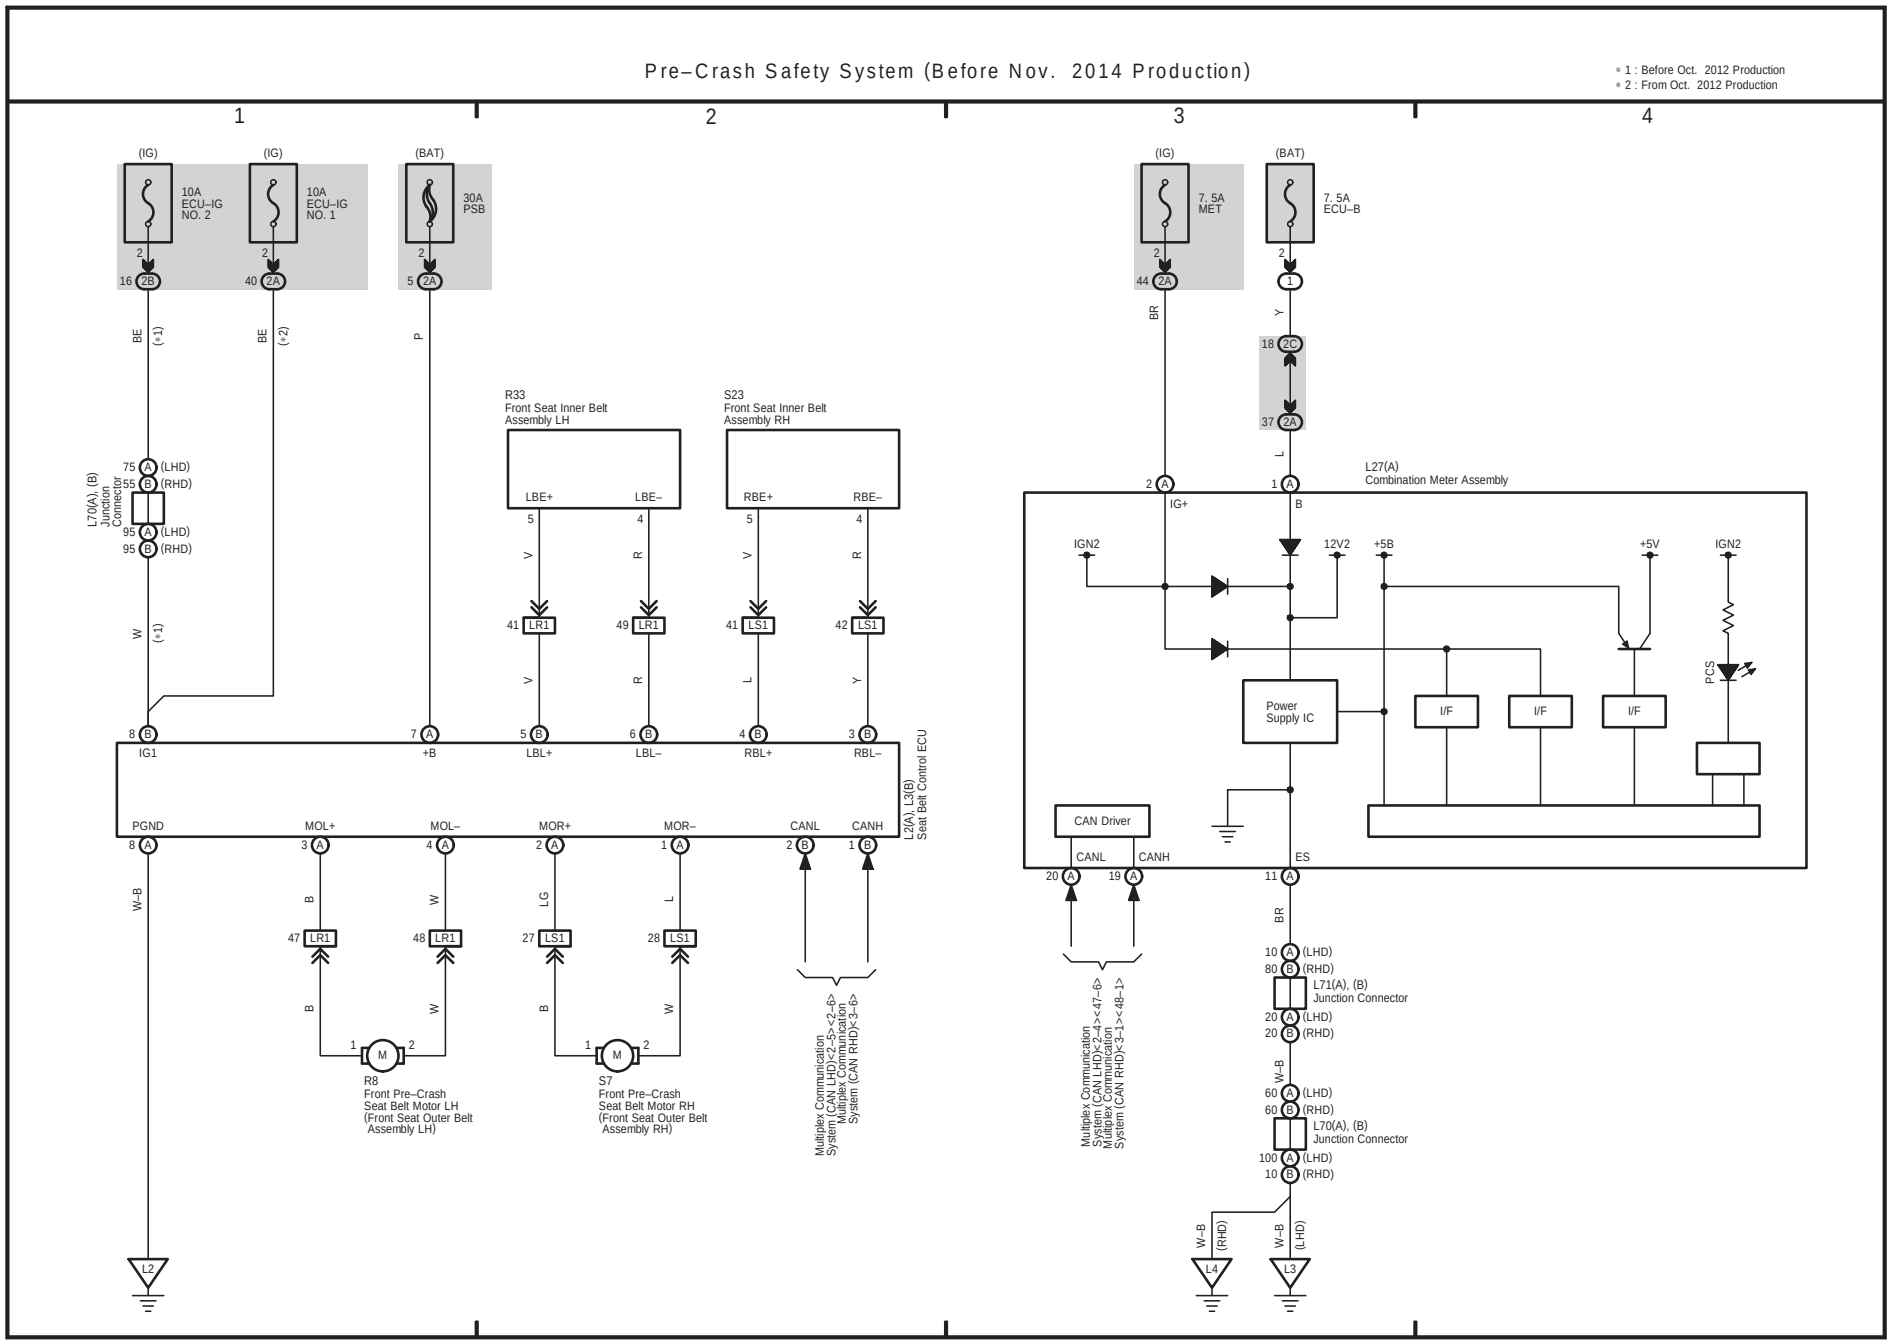

Pre–Crash Safety System (Before Nov. 2014 Production)
* 1 : Before Oct. 2012 Production
* 2 : From Oct. 2012 Production
1
2
3
4
(IG)
10A ECU–IG NO. 2
(IG)
10A ECU–IG NO. 1
(BAT)
30A PSB
(IG)
7. 5A MET
(BAT)
7. 5A ECU–B
R33 Front Seat Inner Belt Assembly LH
S23 Front Seat Inner Belt Assembly RH
L70(A), (B) Junction Connector
L27(A) Combination Meter Assembly
IG1
+B
LBL+
LBL–
RBL+
RBL–
L2(A), L3(B) Seat Belt Control ECU
PGND
MOL+
MOL–
MOR+
MOR–
CANL
CANH
IG+
B
IGN2
12V2
+5B
+5V
PCS
Power Supply IC
I/F
CAN Driver
ES
R8 Front Pre–Crash Seat Belt Motor LH (Front Seat Outer Belt Assembly LH)
S7 Front Pre–Crash Seat Belt Motor RH (Front Seat Outer Belt Assembly RH)
Multiplex Communication System (CAN LHD)<2–5><2–4>
Multiplex Communication System (CAN RHD)<3–1><3–6>
Multiplex Communication System (CAN LHD)<2–4><47–6>
Multiplex Communication System (CAN RHD)<3–1><48–1>
L71(A), (B) Junction Connector
L70(A), (B) Junction Connector
L2
L3
L4