




Light Auto Turn Off System (LHD)

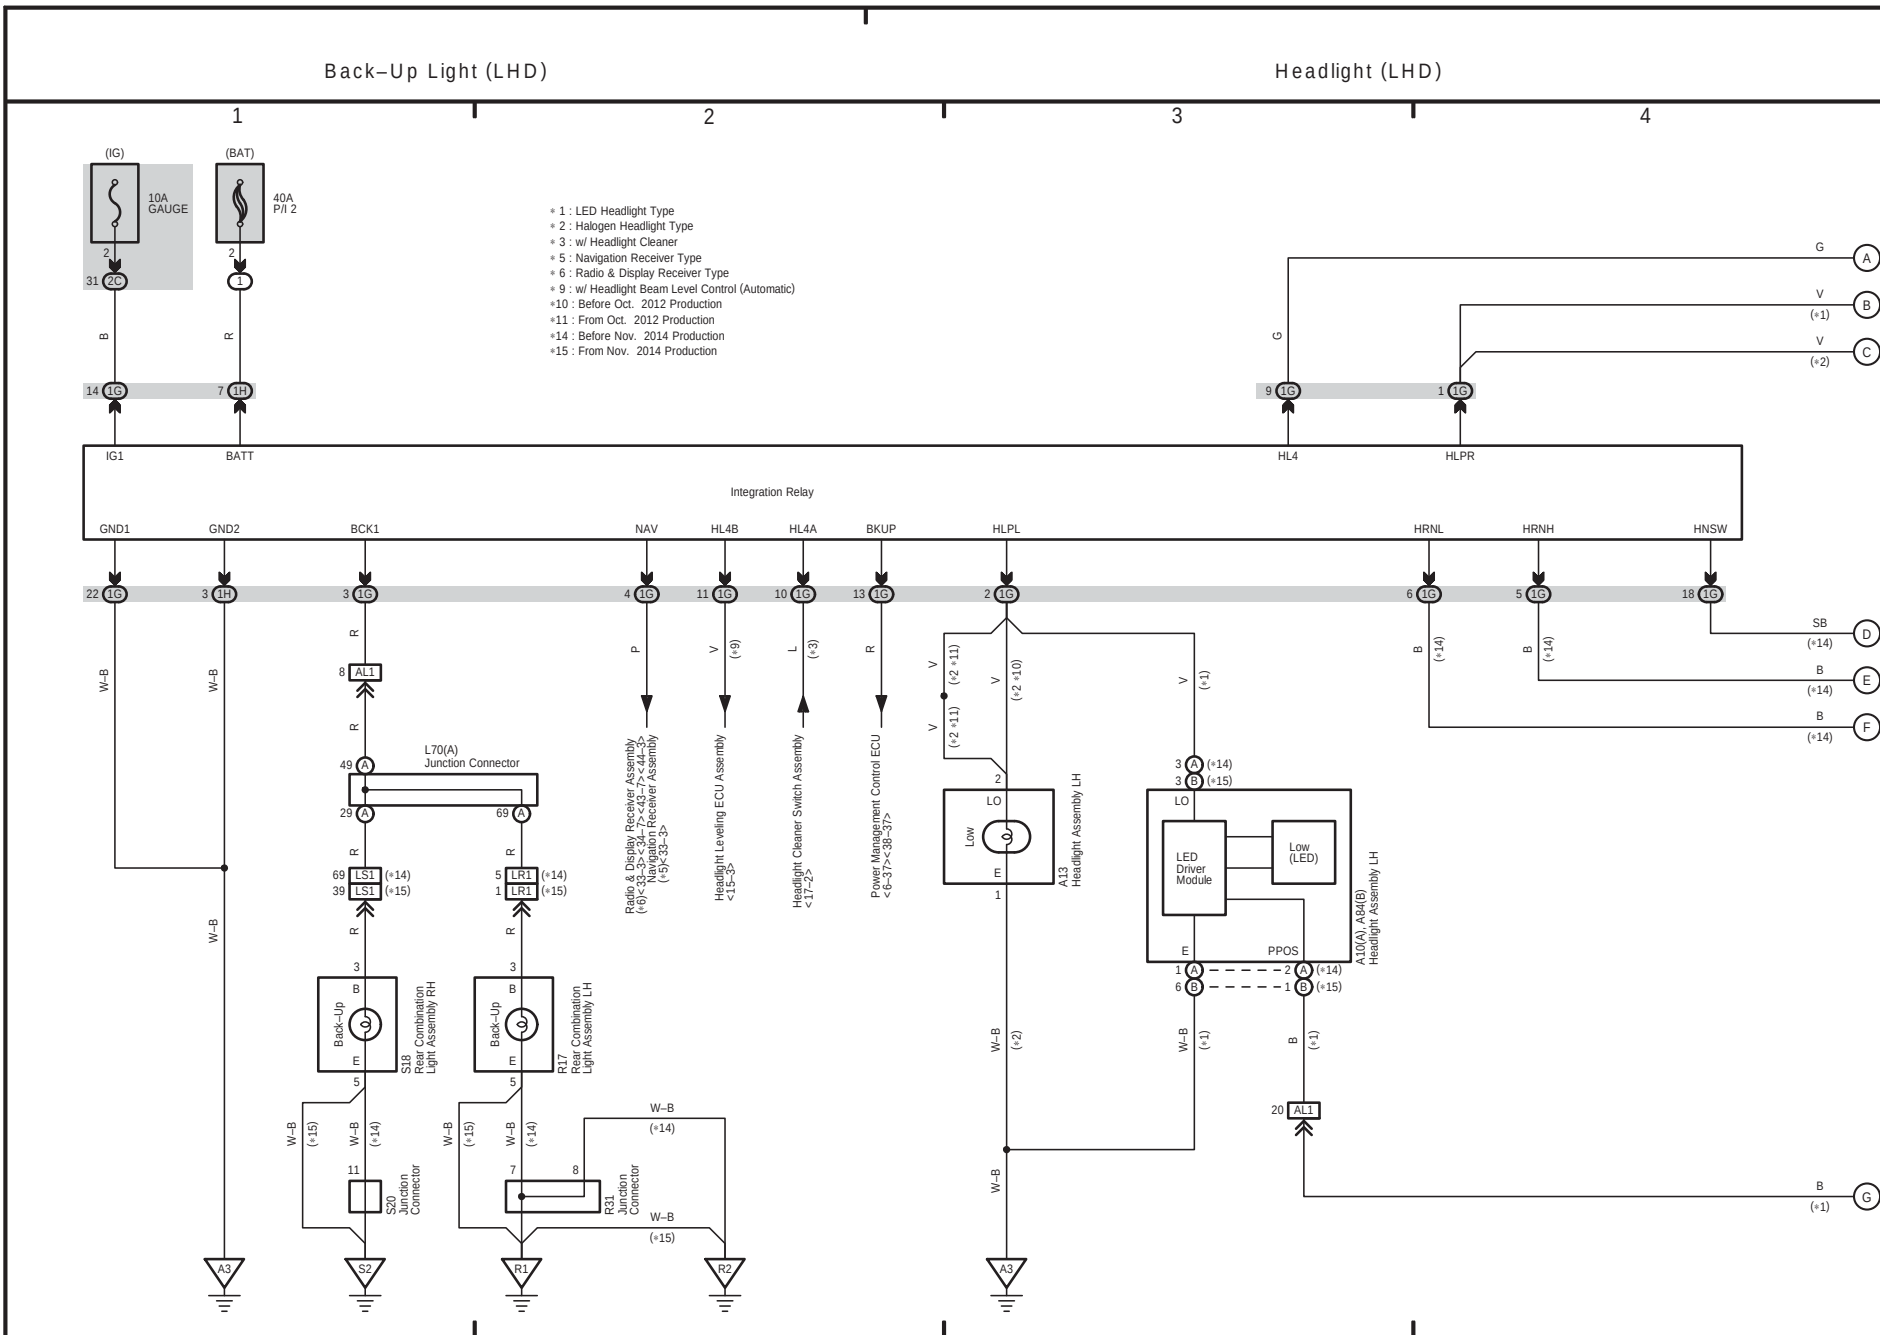


Light Auto Turn Off System (LHD)

Front Fog Light (LHD)

Rear Fog Light (LHD)

Automatic Light Control (LHD)

L7(A), L8(B), L190(C), L201(D)
Main Body ECU

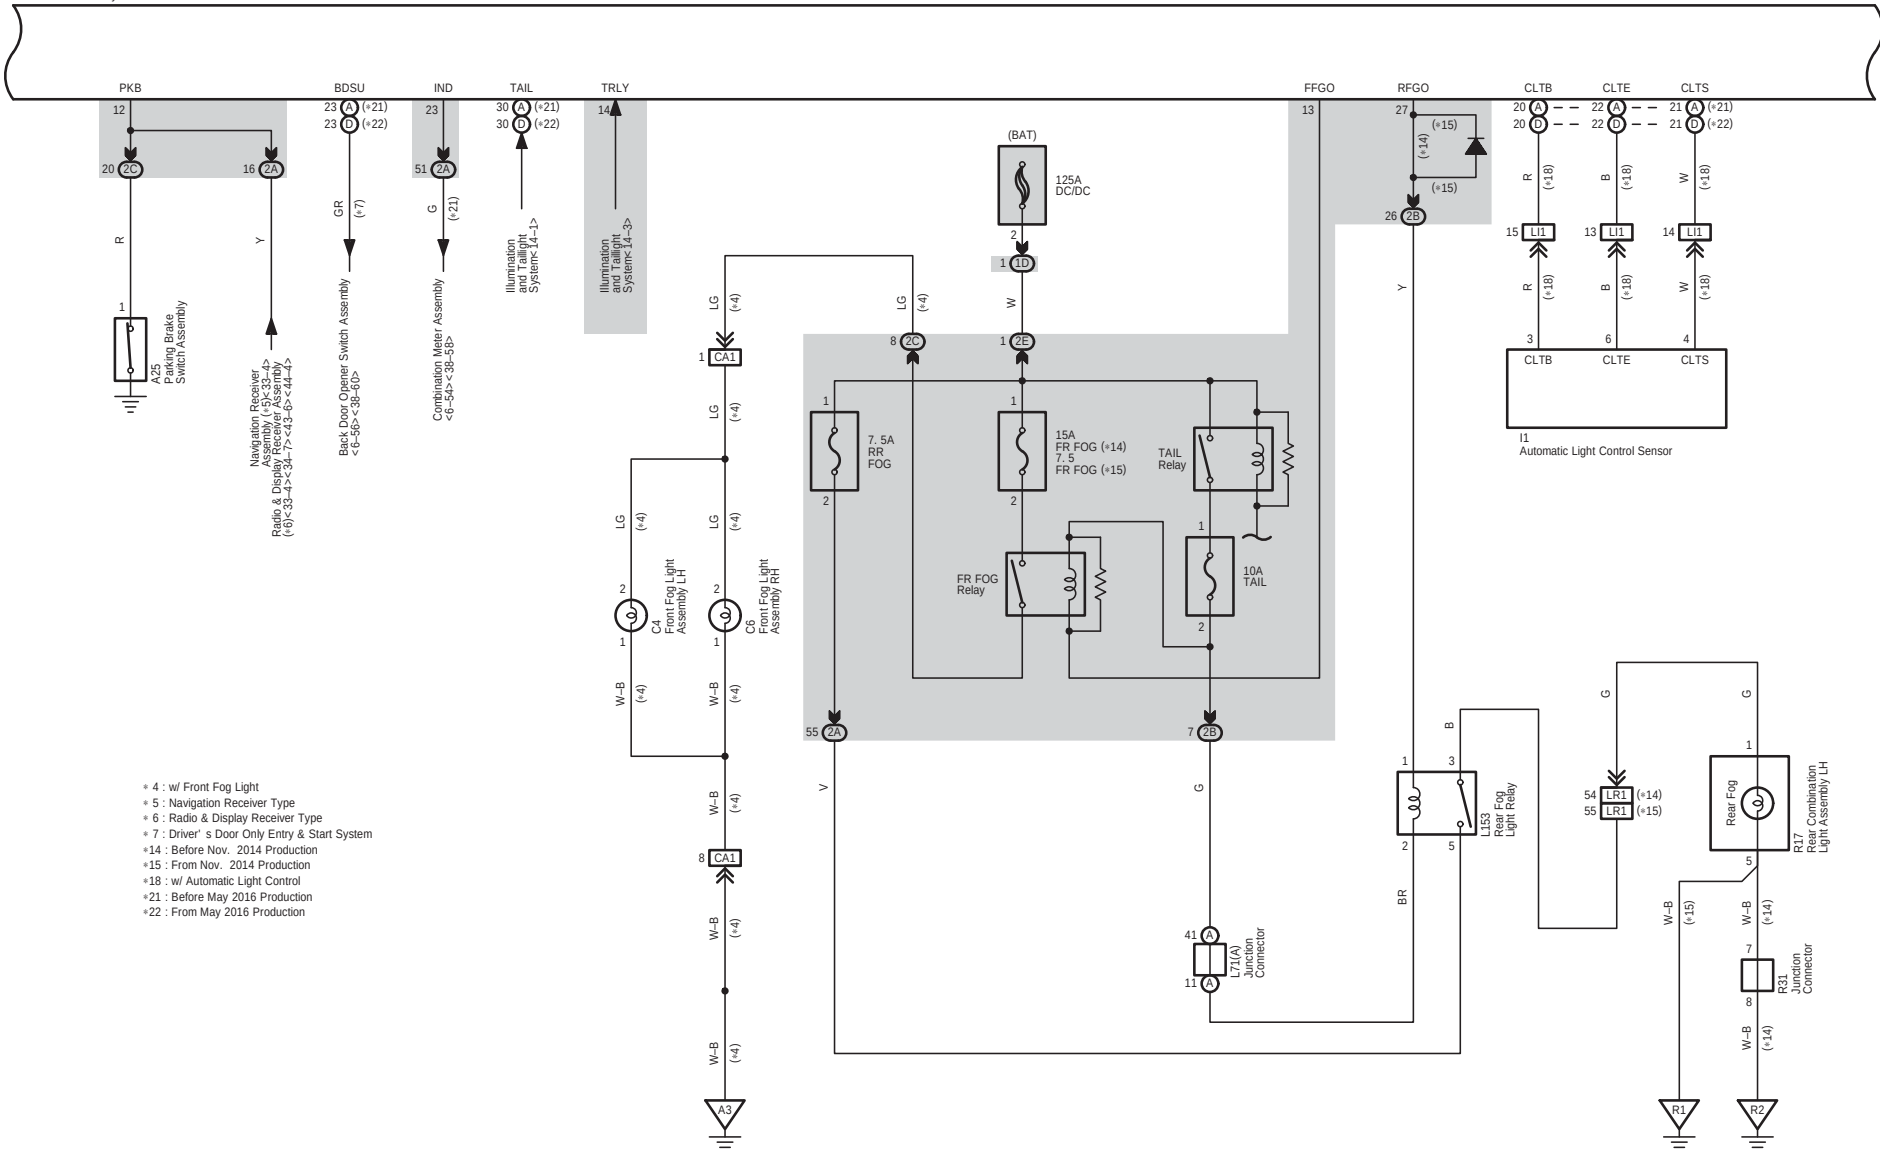


*12 : Before Aug. 2013 Production
*13 : From Aug. 2013 Production
*21 : Before May 2016 Production
*22 : From May 2016 Production




Door Lock Control (LHD)


*21 : Before May 2016 Production
*22 : From May 2016 Production

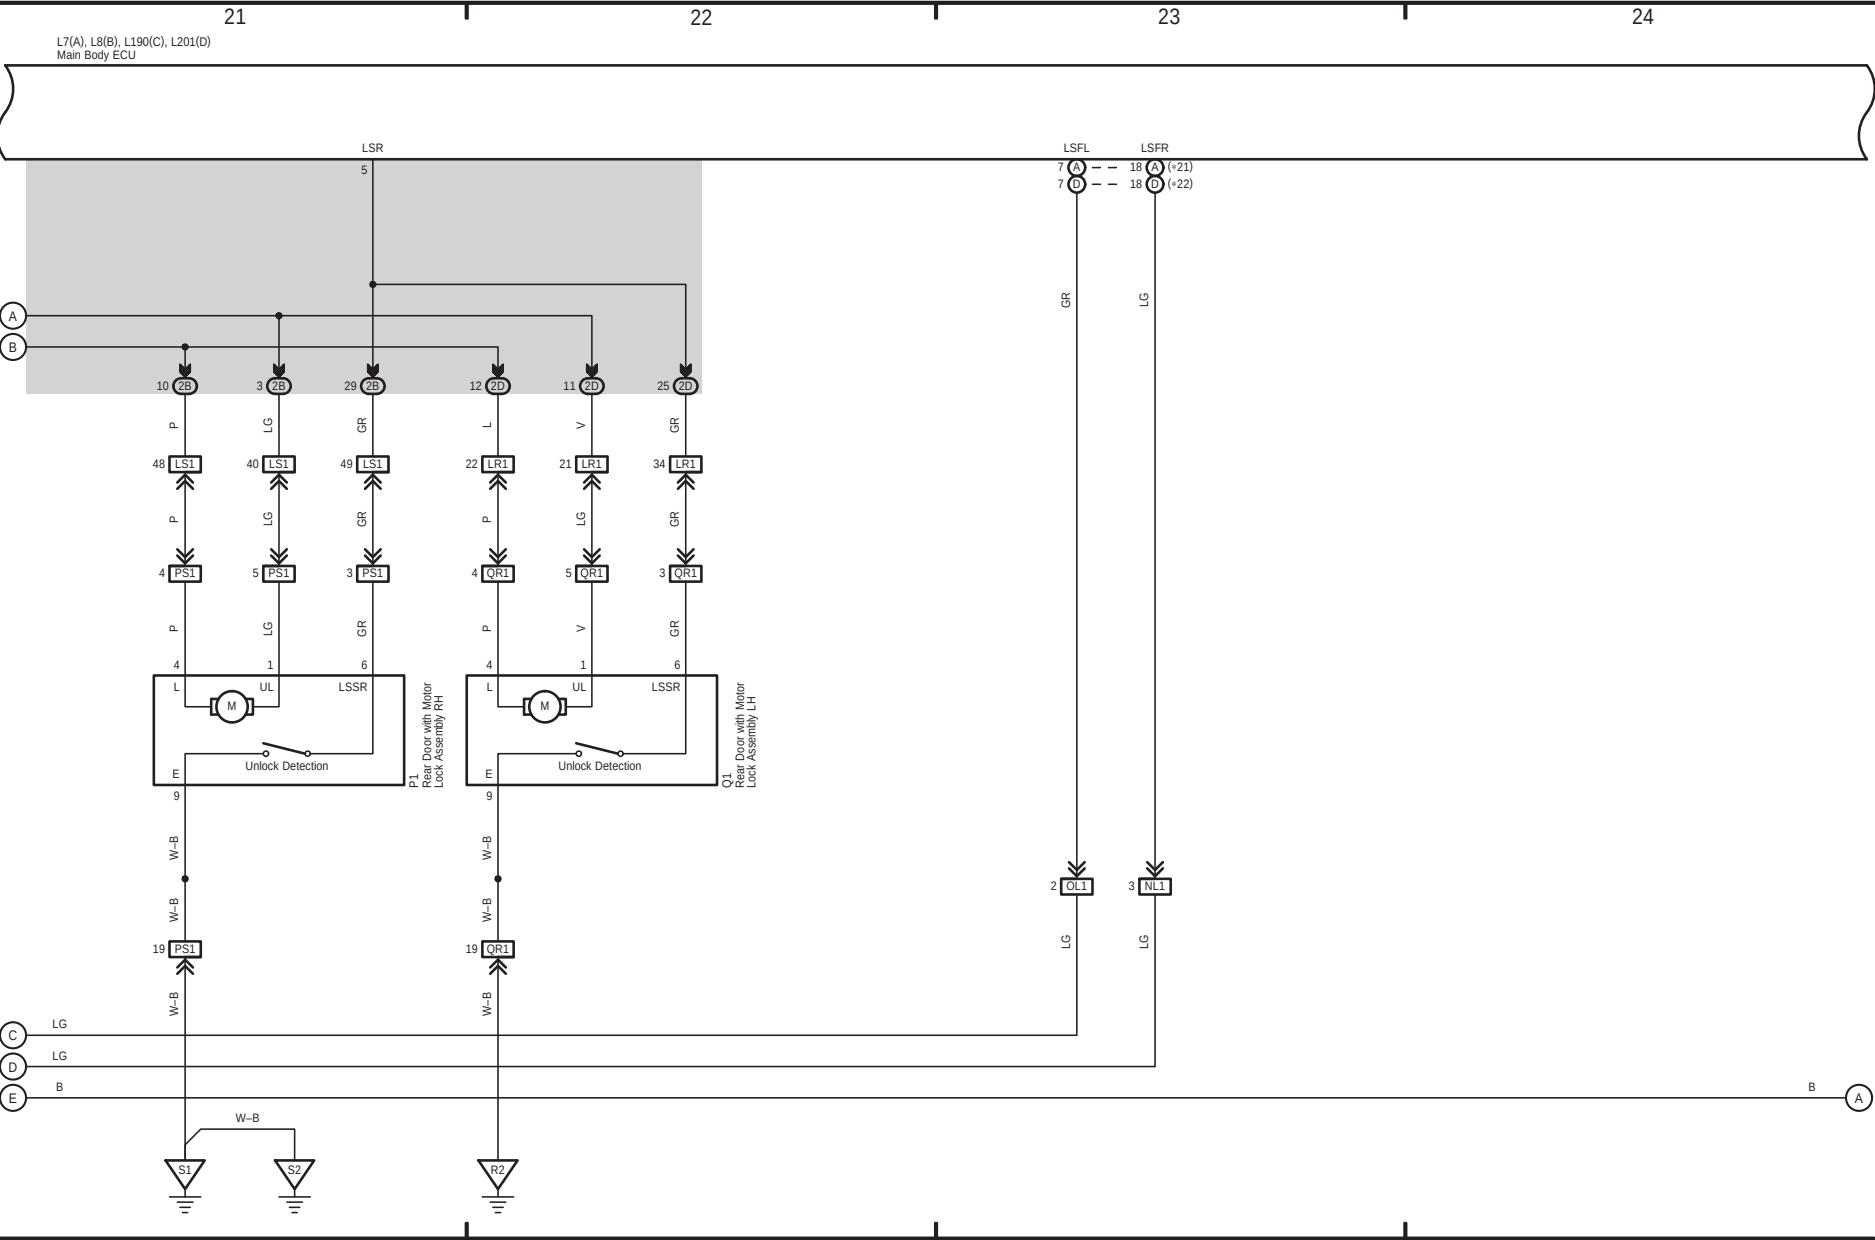


PRIUS +/PRIUS V/PRIUSα (EM2077E)

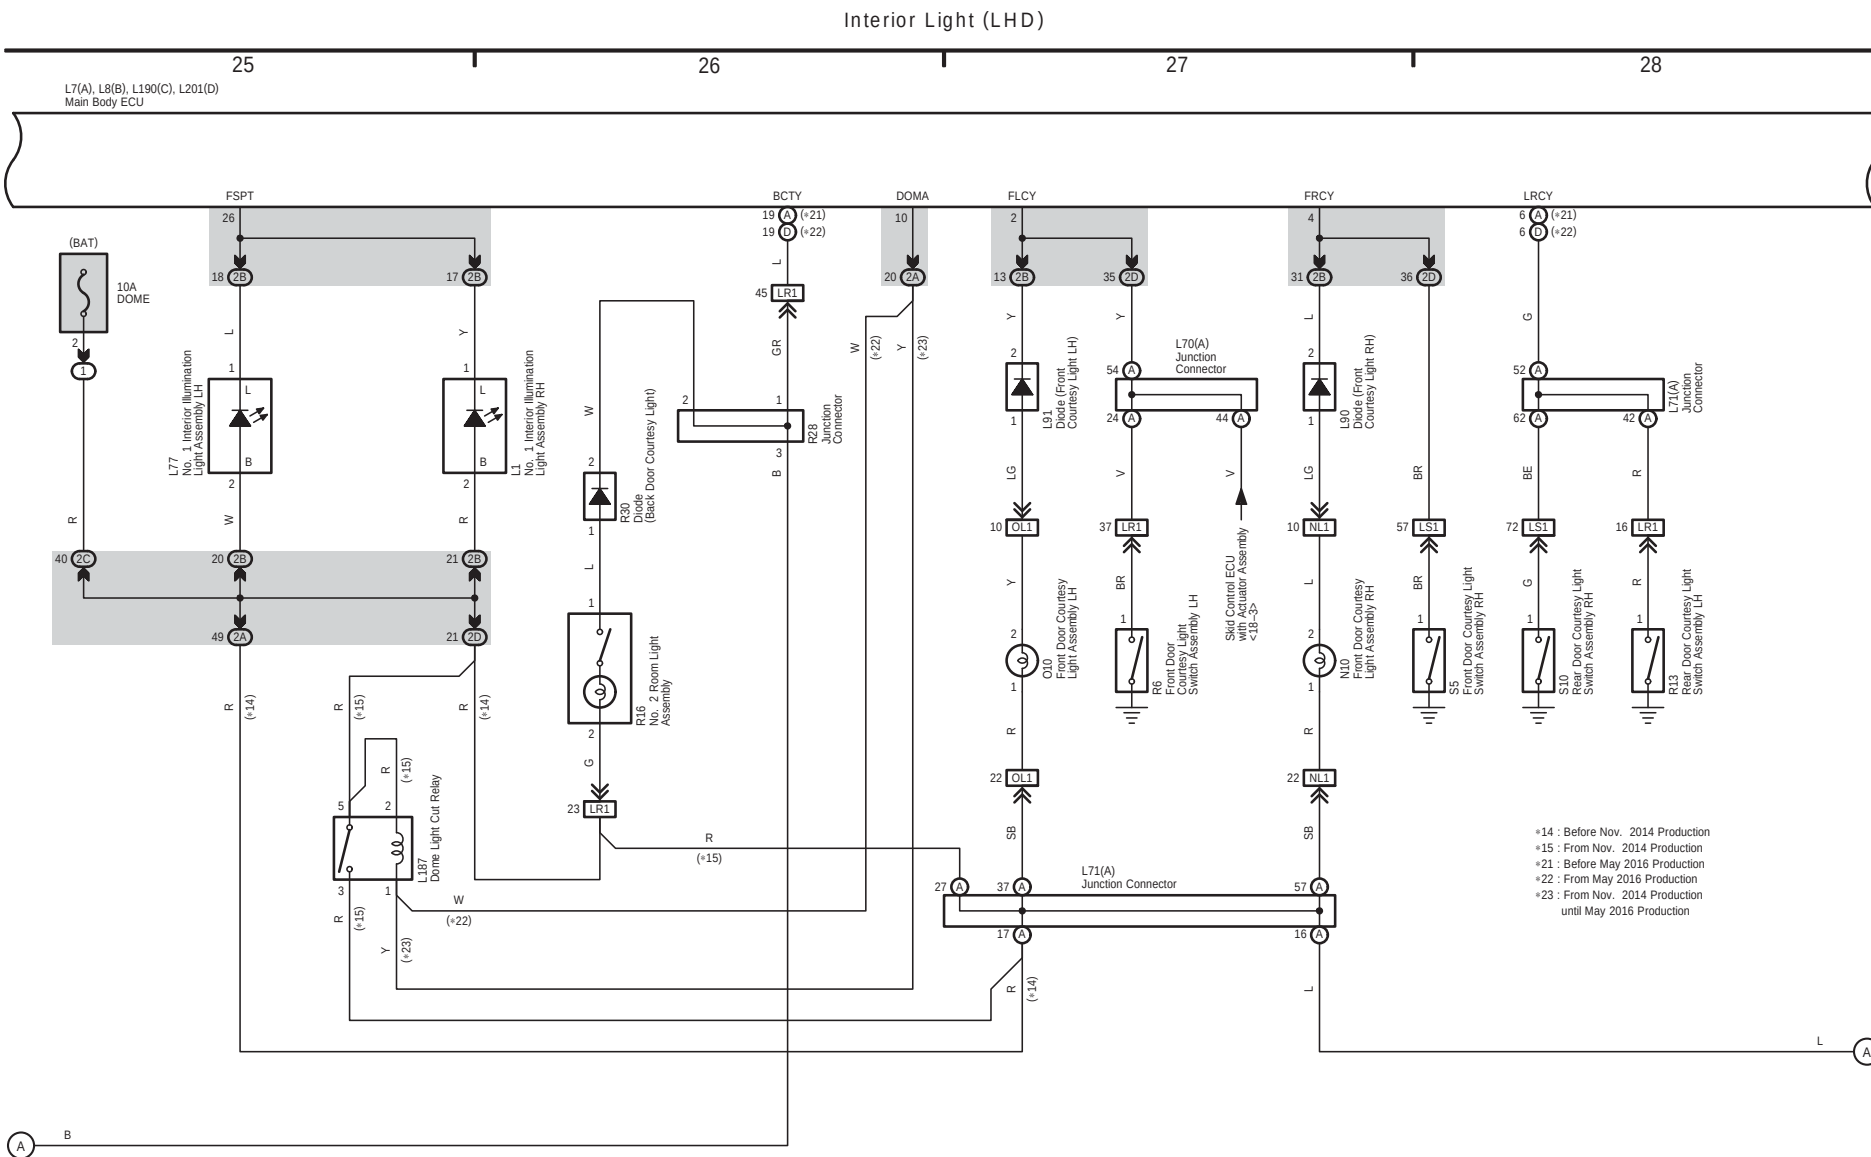


A horizontal number line with arrows at both ends. It has major tick marks labeled 29, 30, 31, and 32. There are also minor tick marks between each major tick mark, representing half-integers.

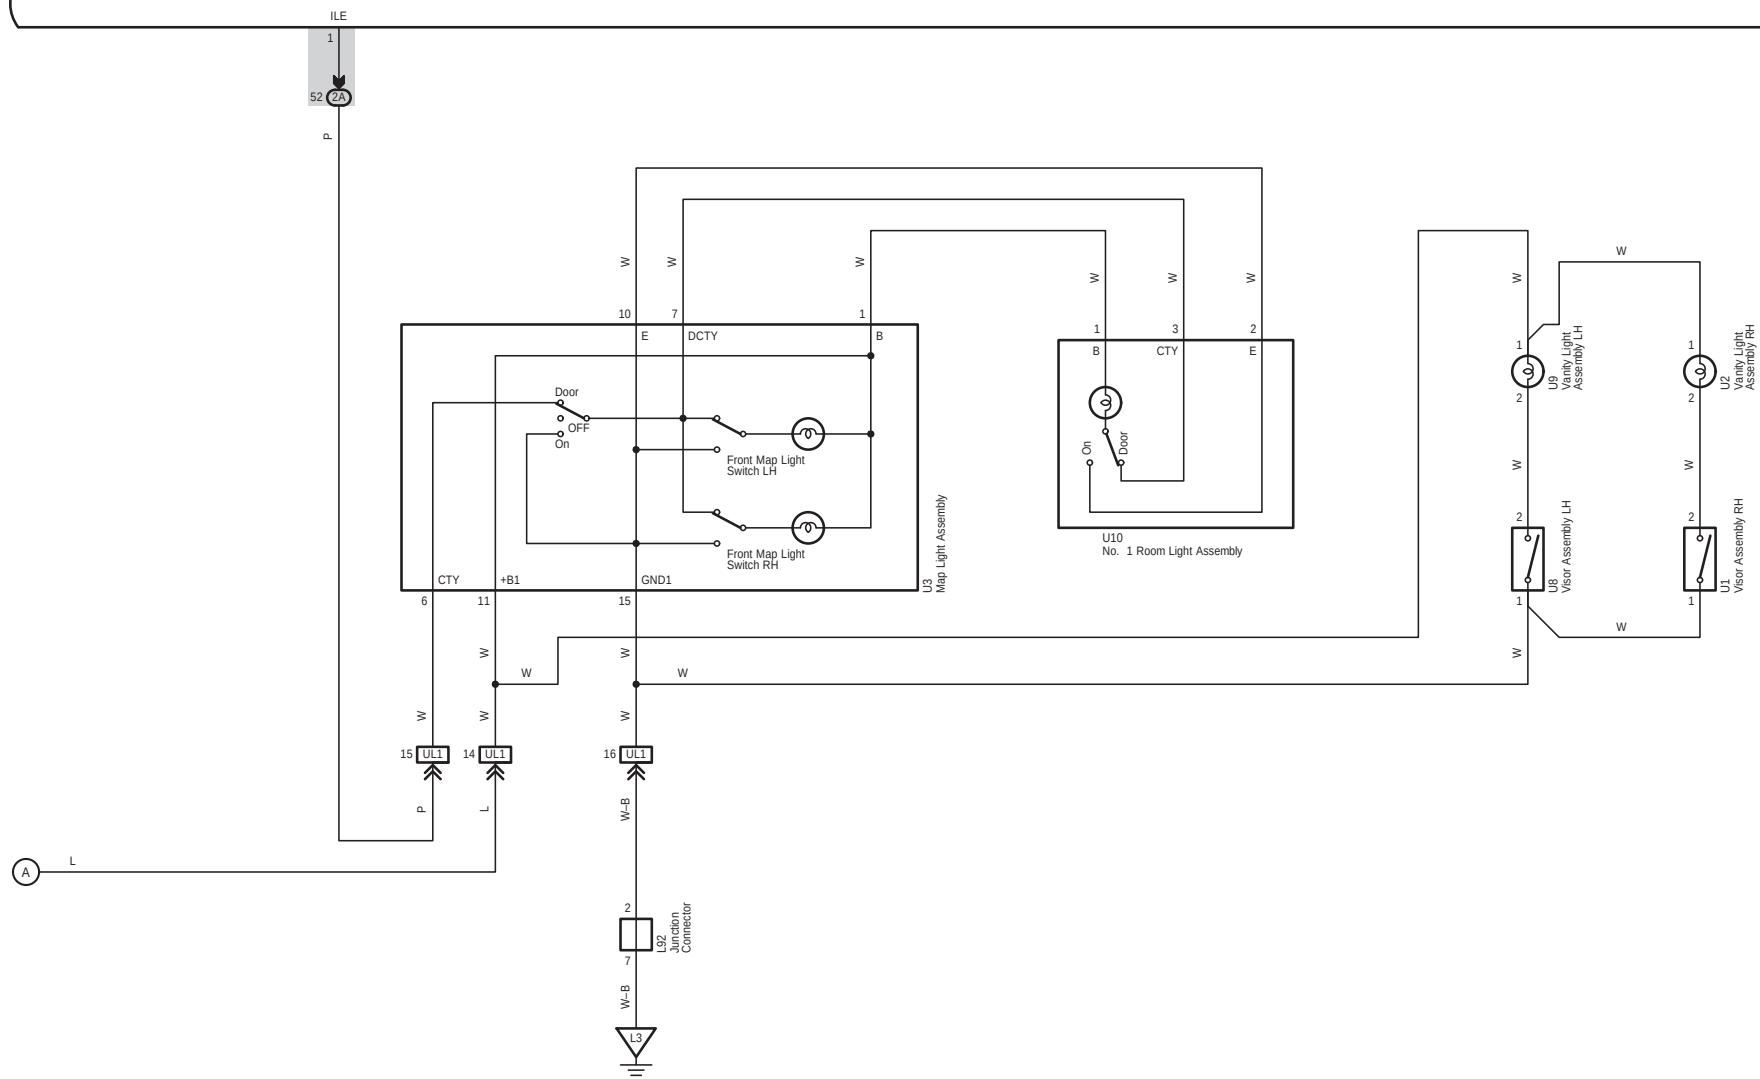

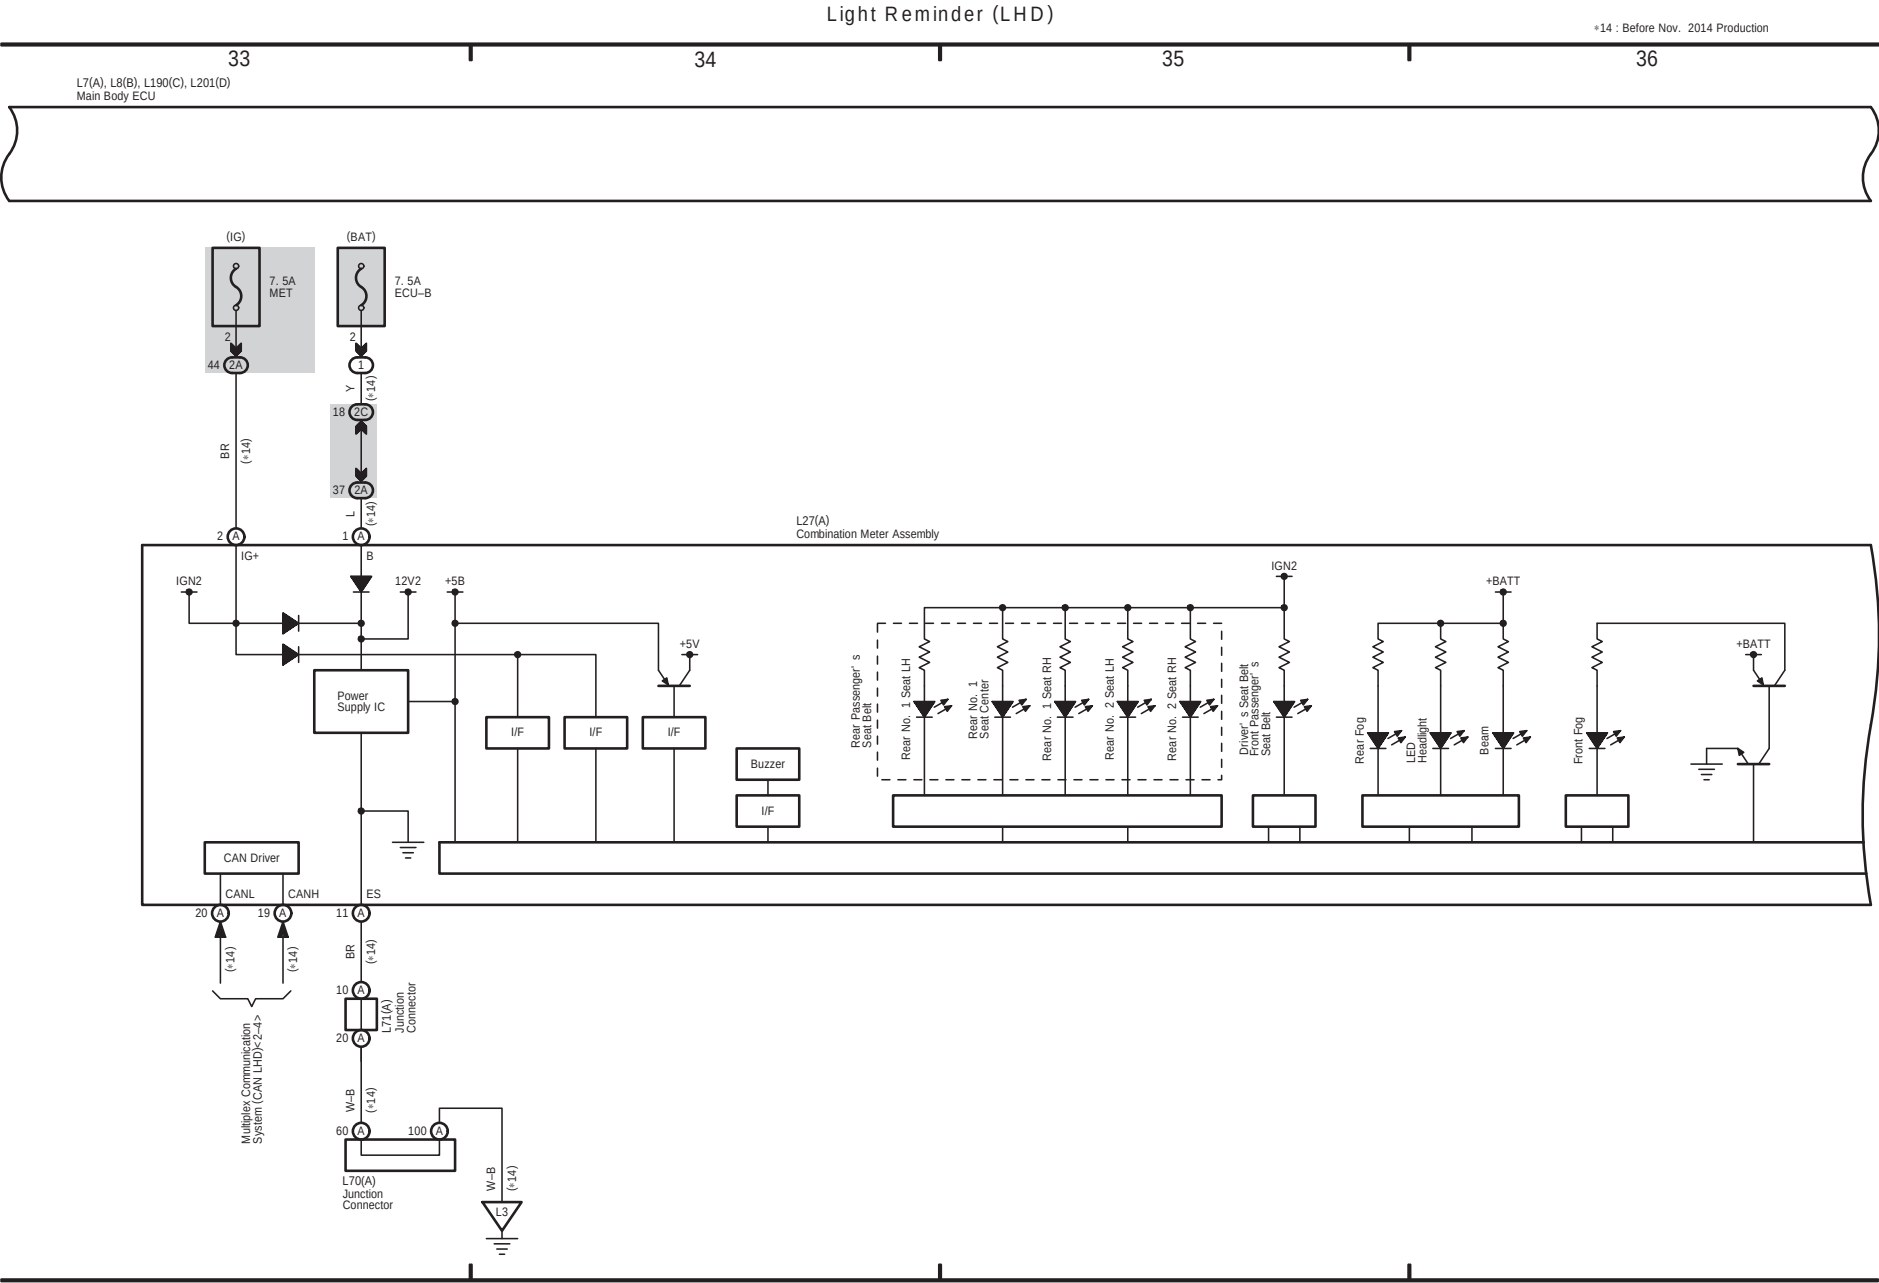

PRIUS +/PRIUS V/PRIUSα (EM2077E)

*14 : Before Nov. 2014 Production
*15 : From Nov. 2014 Production
*16 : w/ Head-Up Display Assembly
*17 : w/o Head-Up Display Assembly

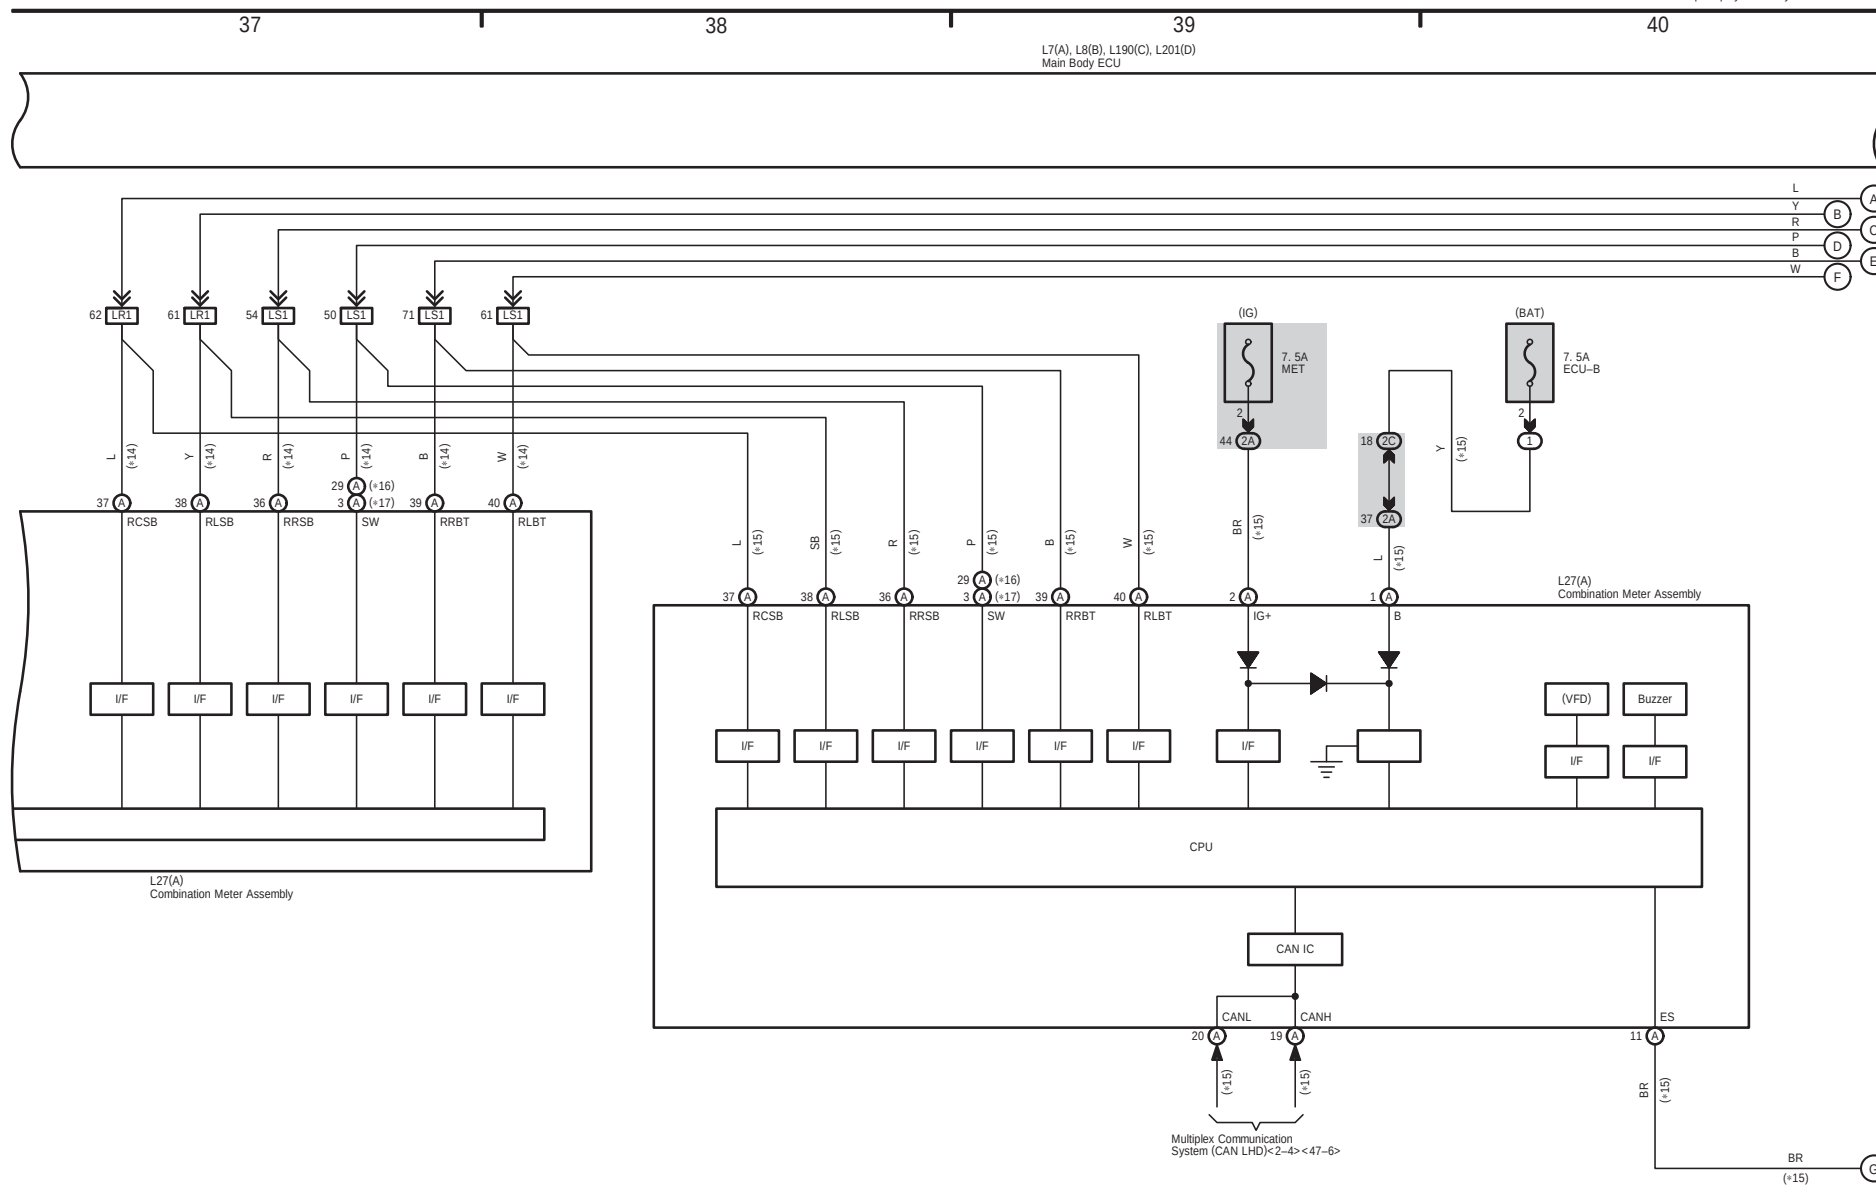


4 PRIUS + / PRIUS V / PRIUSα (Cont' d)

(Cont. next page)

Light Reminder (LHD)


Seat Belt Warning (LHD)

- *14 : Before Nov. 2014 Production
- *15 : From Nov. 2014 Production
- *21 : Before May 2016 Production
- *22 : From May 2016 Production

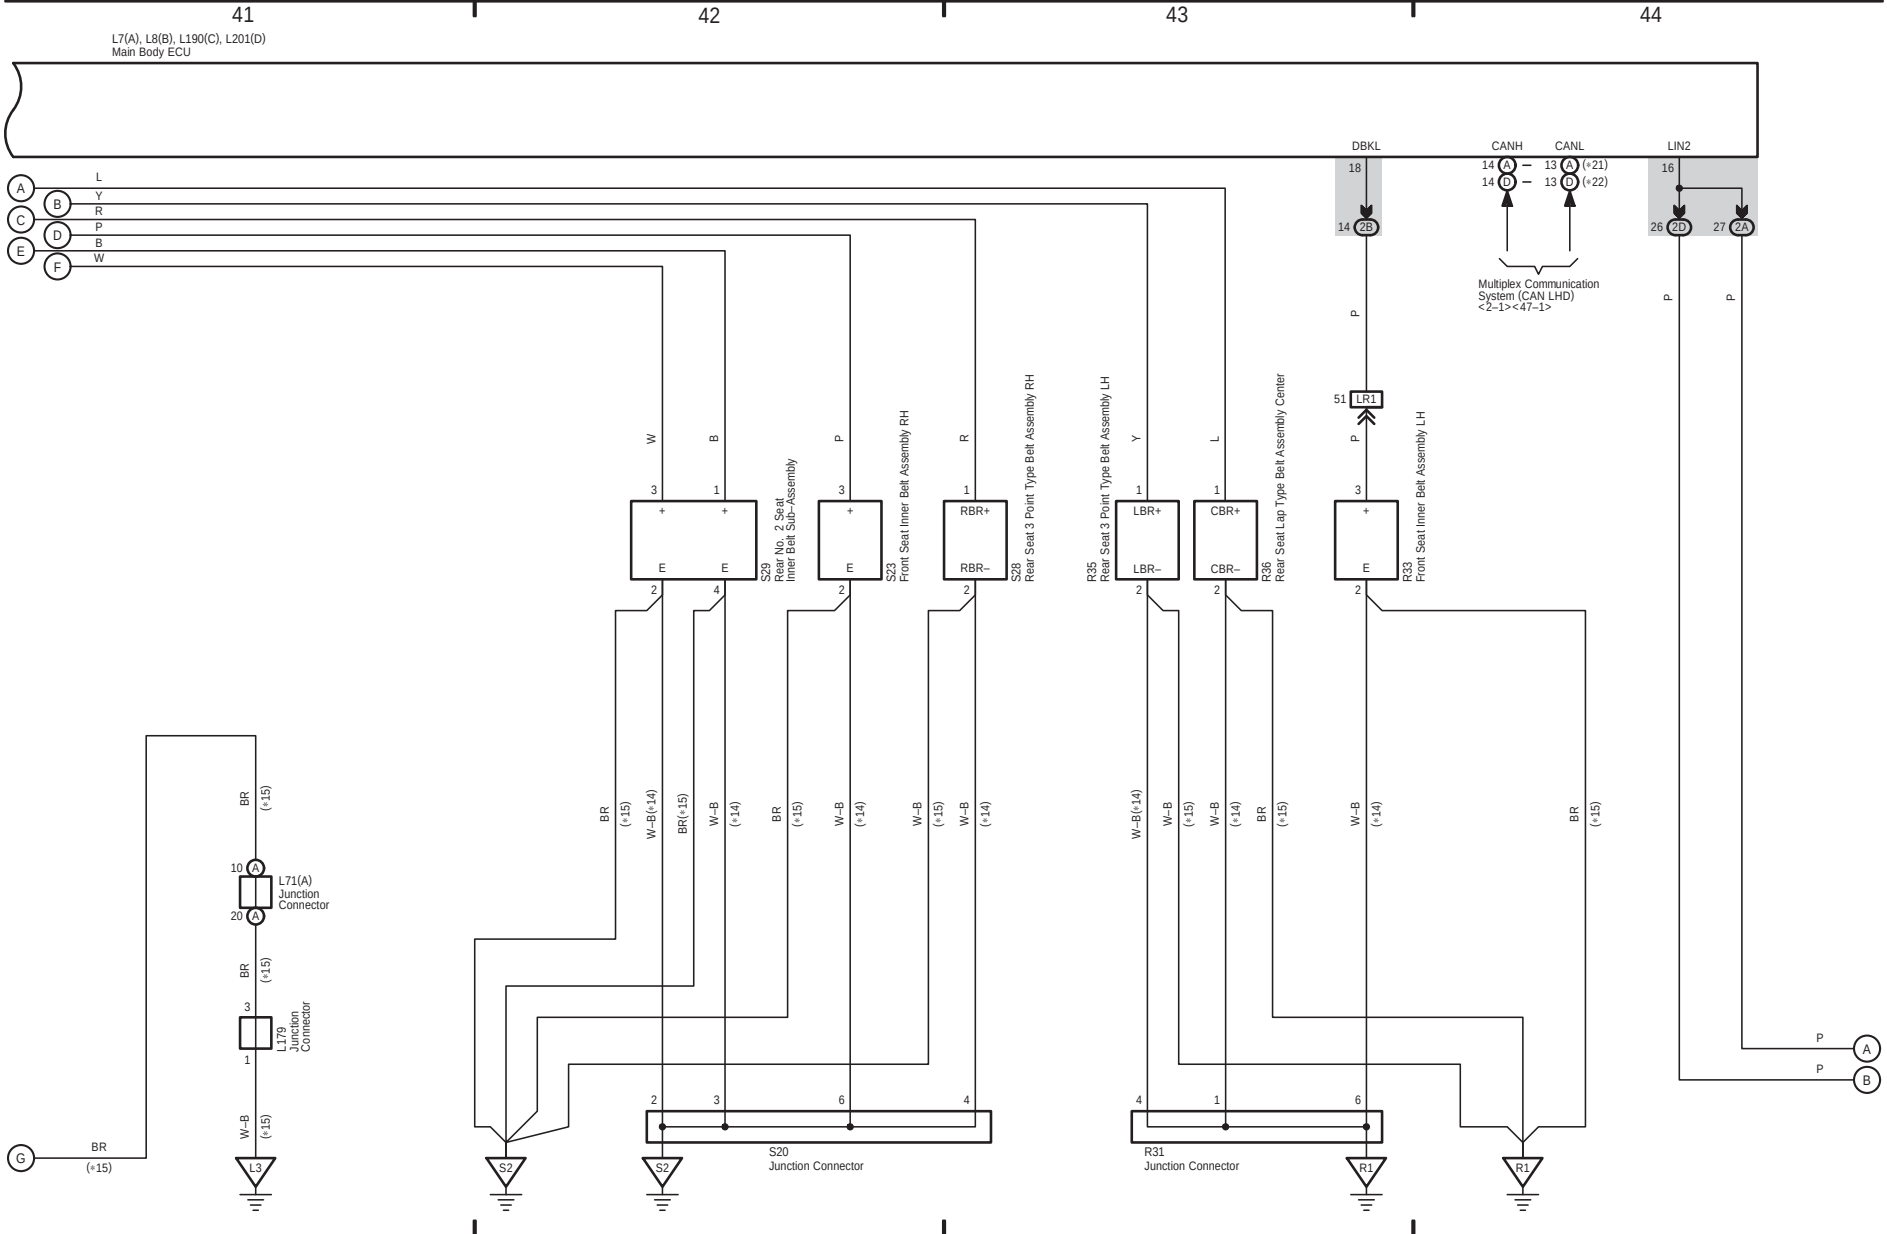

Power Window (LHD)

*20 : w/ Sliding Roof
 *27 : Before Dec. 2017 Production
 *28 : From Dec. 2017 Production

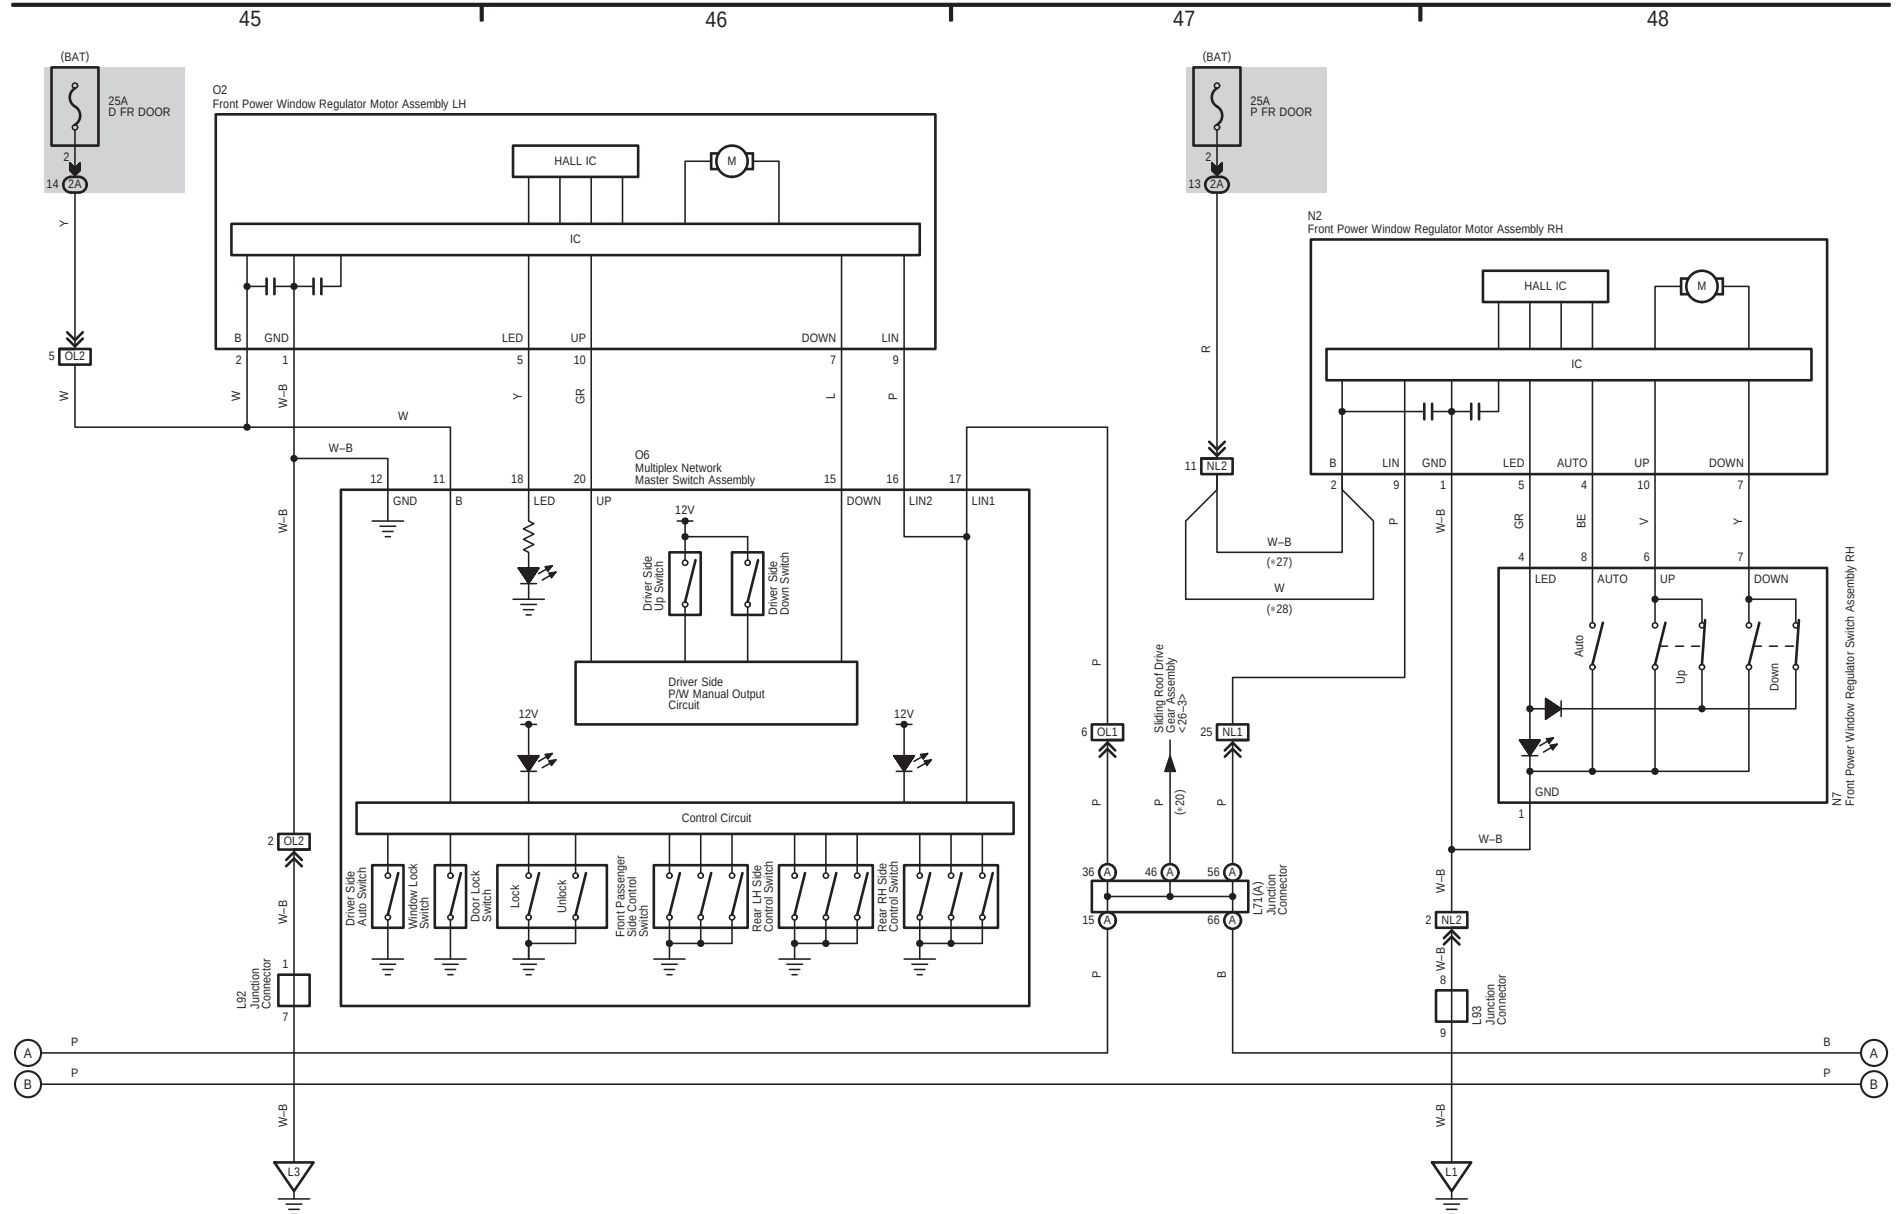

The diagrams show the electrical connections for the Rear Power Window Regulator Motor Assembly LH (Q4) and Rear Power Window Regulator Motor Assembly RH (P4). Both assemblies include a motor (M), a Hall IC, and a control IC. The LH assembly (Q4) has a 28-pin connector (LR1) and a 19-pin connector (QR1). The RH assembly (P4) has a 45-pin connector (LS1) and a 19-pin connector (PS1). The diagrams also show the connection to the battery (BAT) and the ground (GND).

Q4 Rear Power Window Regulator Motor Assembly LH

P4 Rear Power Window Regulator Motor Assembly RH

Q2 Rear Power Window Regulator Switch Assembly LH

P2 Rear Power Window Regulator Switch Assembly RH