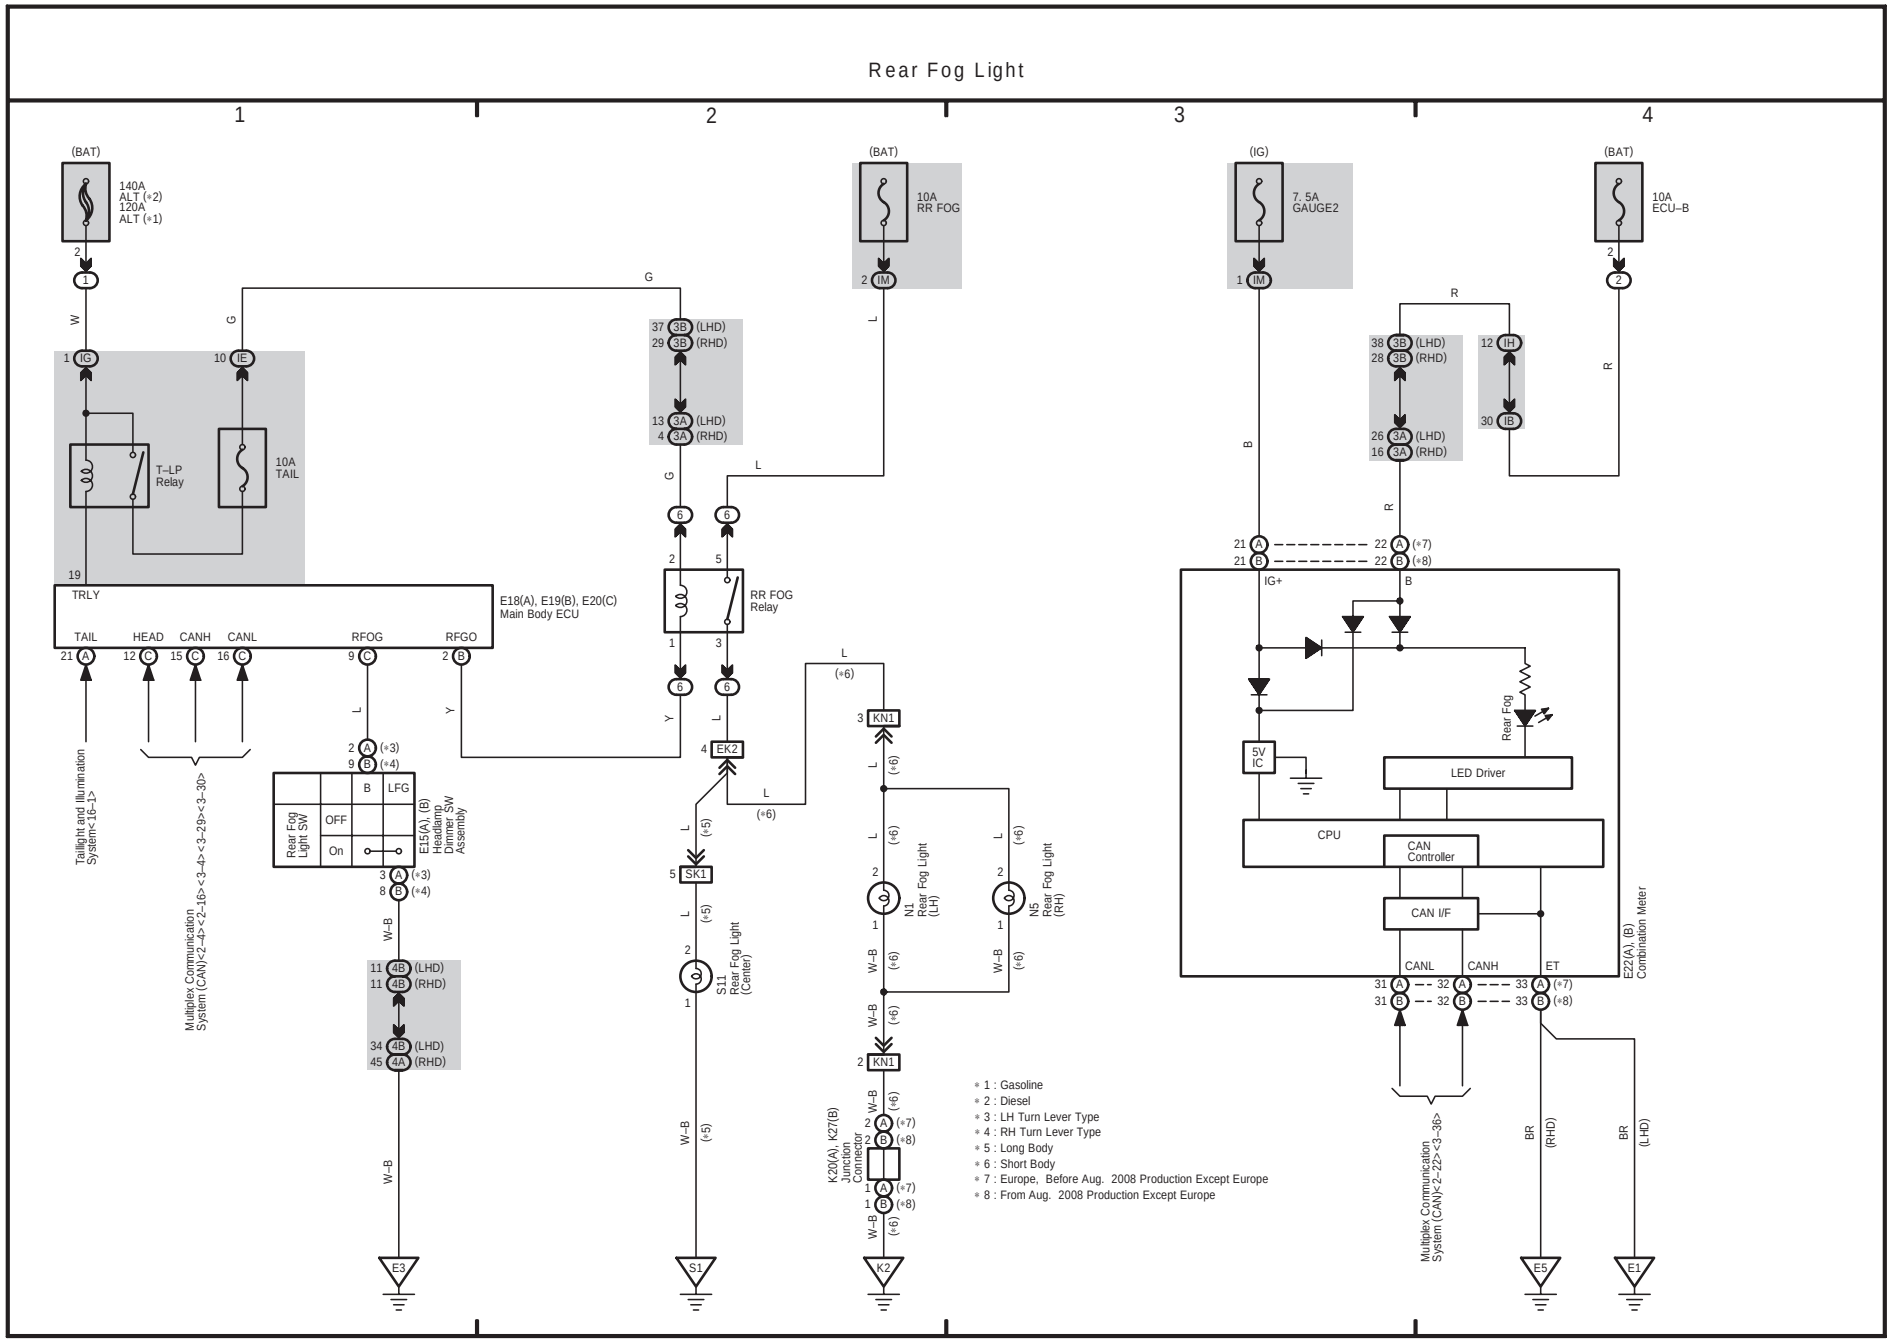

Rear Fog Light
1
2
3
4
(BAT)
140A
ALT (*2)
120A
ALT (*1)
10A
RR FOG
7. 5A
GAUGE2
10A
ECU–B
T–LP
Relay
10A
TAIL
RR FOG
Relay
E18(A), E19(B), E20(C)
Main Body ECU
TRLY
TAIL
HEAD
CANH
CANL
RFOG
RFOGO
Taillight and Illumination
System<16–1>
Multiplex Communication
System (CAN)<2–4><2–16><3–4><3–29><3–30>
Rear Fog
Light SW
OFF
On
E15(A), (B)
Headlamp
Dimmer SW
Assembly
S11
Rear Fog Light
(Center)
N1
Rear Fog Light
(LH)
N5
Rear Fog Light
(RH)
K20(A), K27(B)
Junction
Connector
5V
IC
LED Driver
CPU
CAN
Controller
CAN I/F
Rear Fog
CANL
CANH
ET
E22(A), (B)
Combination Meter
Multiplex Communication
System (CAN)<2–22><3–36>
E3
S1
K2
E5
E1
* 1 : Gasoline
* 2 : Diesel
* 3 : LH Turn Lever Type
* 4 : RH Turn Lever Type
* 5 : Long Body
* 6 : Short Body
* 7 : Europe, Before Aug. 2008 Production Except Europe
* 8 : From Aug. 2008 Production Except Europe

M