




∗ 1 : w/ Audio SW in Steering Wheel
∗ 2 : Australia
∗ 3 : RHD Except Australia
∗ 4 : RHD Short Body
∗ 5 : Except ∗4
∗ 6 : LHD From Aug. 2008 Production
∗ 7 : RHD, LHD Before Aug. 2008 Production
∗ 8 : Europe, Before Aug. 2008 Production Except Europe
∗ 9 : From Aug. 2008 Production Except Europe
(BAT)
(ACC)
20A RAD NO. 1
7. 5A ACC
J2 Speaker (Rear LH)
I2 Speaker (Rear RH)
E90(A), E91(B), E92(C) Radio Receiver Assembly
B
ACC
RL+
RL–
RR+
RR–
GND
FL+
FL–
FR+
FR–
SW1
SWG
SW2
ANT
TWL+
TWL–
TWR+
TWR–
H6 Tweeter (Front LH)
G7 Tweeter (Front RH)
H1 Speaker (Front Door LH)
G1 Speaker (Front Door RH)
E10 Spiral Cable
Seek+
Seek–
MODE
Vol+
Vol–
Steering Pad SW
E55 Antenna Amplifier
E5


E90(A), E91(B), E92(C)
Radio Receiver Assembly
SPD
3 C
V
53 3A (LHD)
43 3A (RHD)
29 3A (LHD)
20 3A (RHD)
V
V
38 A (*8)
38 B (*9)
SI
I/F
I/F
+S
39 A (*8)
39 B (*9)
E22(A), (B)
Combination Meter
V
V
4 AE6
Speed Sensors
V
LG
V
B
W
B
W
R
G
12 A
11 C
26 B
SP1
18 A
19 C
9 B
FL+
4 A
18 C
8 B
FL–
3 A
7 C
31 B
FR+
17 A
6 C
30 B
FR–
20 A
5 C
11 B
RL+
6 A
4 C
12 B
RL–
5 A
17 C
33 B
RR+
19 A (*8 w/ VSC)
16 C (*9 w/ VSC)
34 B (w/o VSC)
RR–
A26(A), A27(B), A67(C)
Skid Control ECU with Actuator


A 26
Black

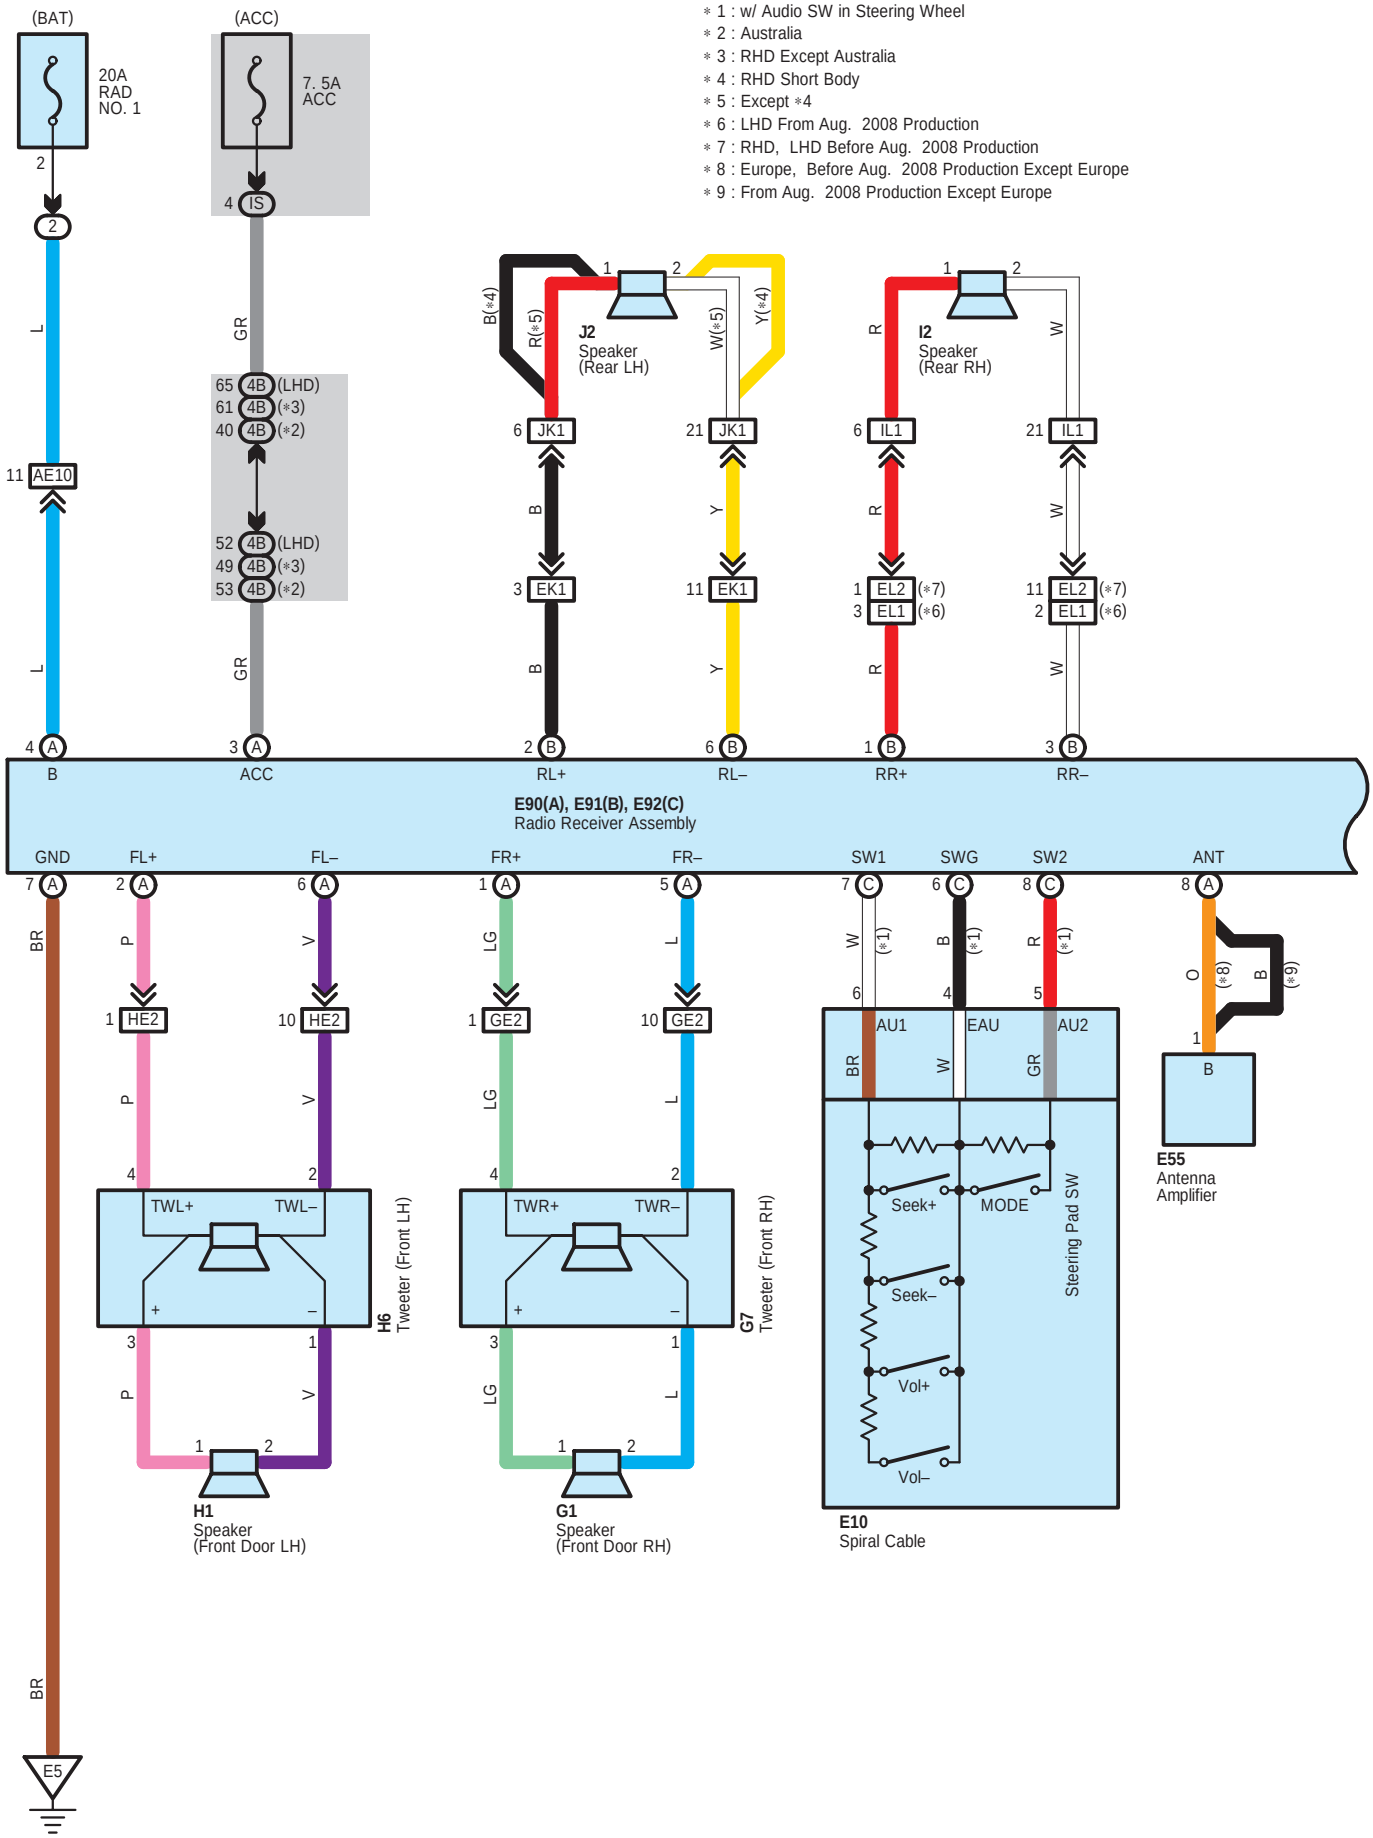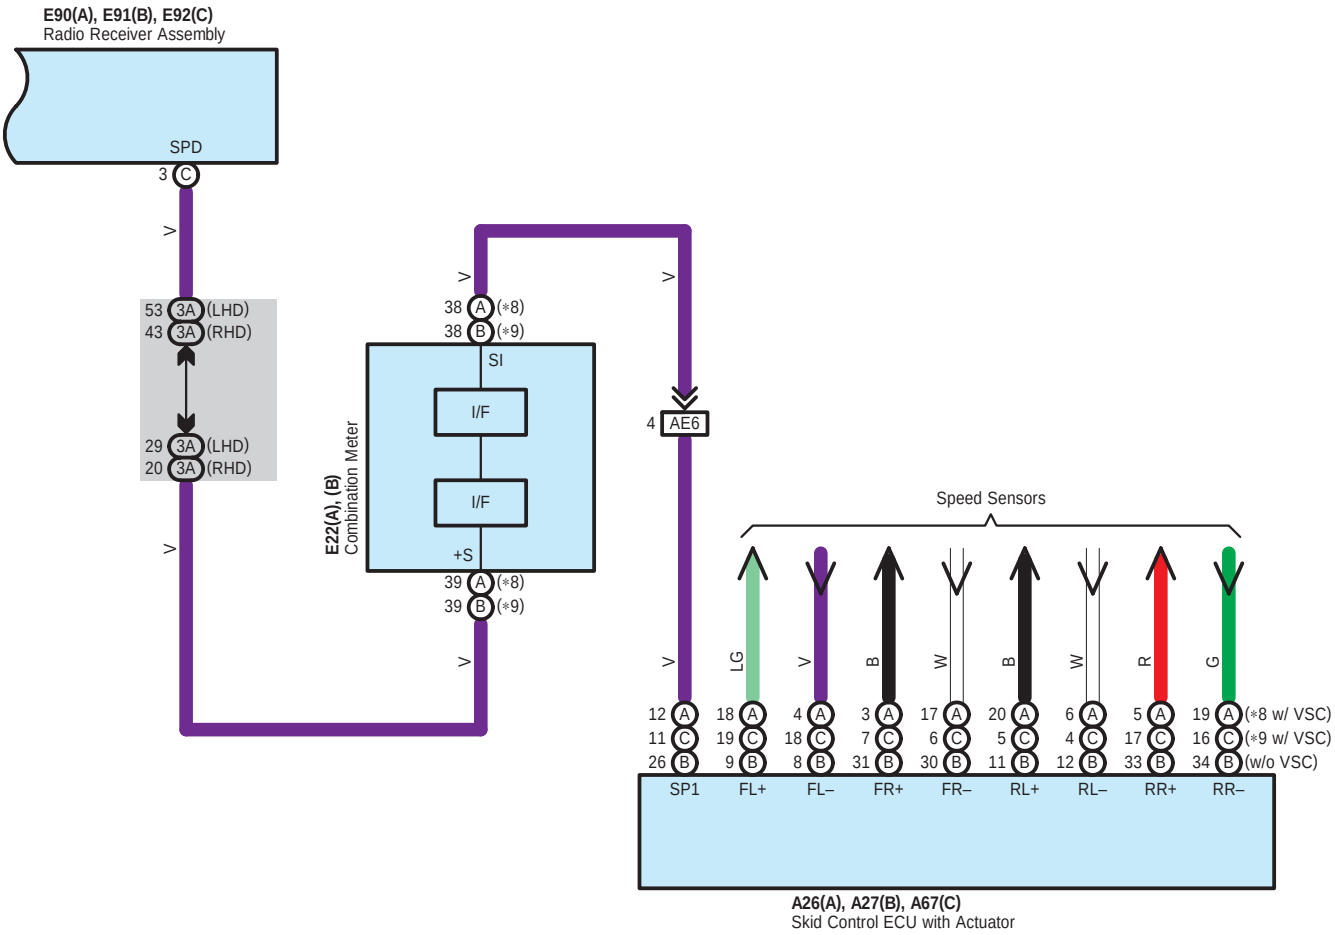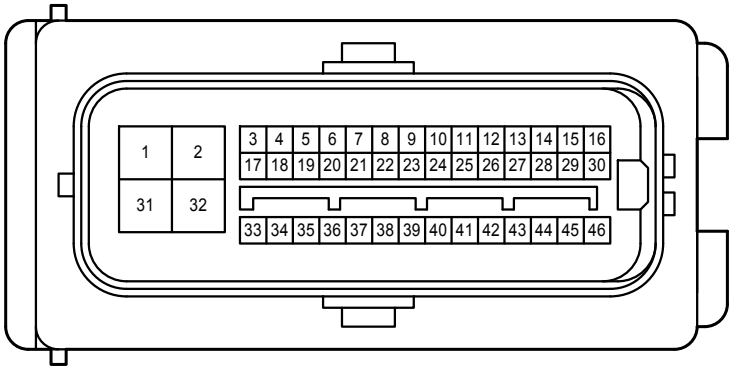

A 27
Black

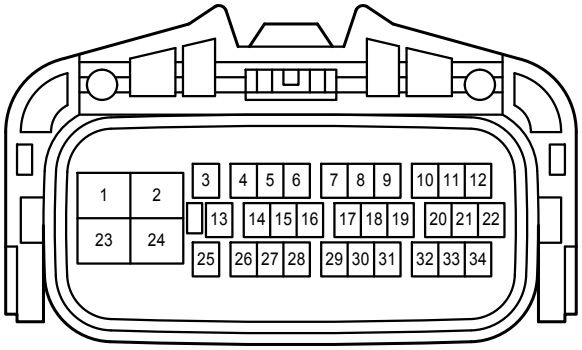


A 67
Black

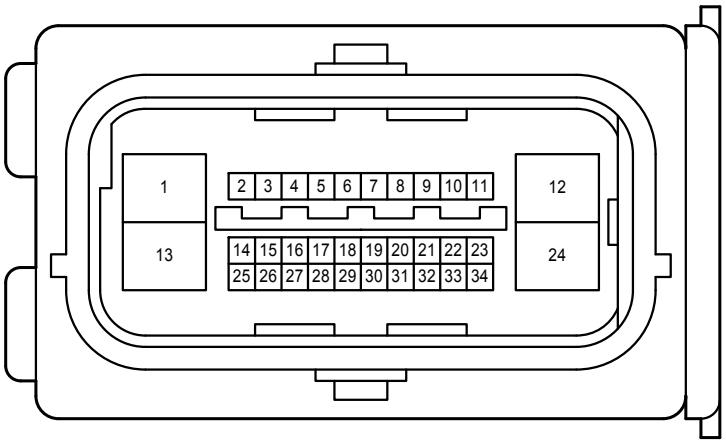

E 10
Black




E 22
White

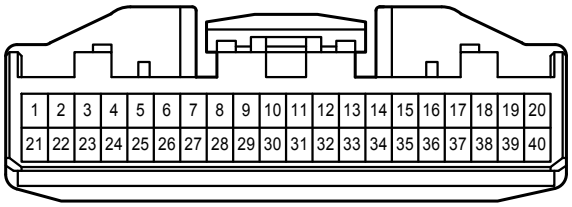

E 55
White




E 90
White

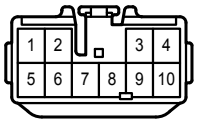

E 91
White




E 92
White

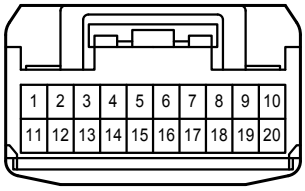

G 1
White




G 7
White



H 1
White



H 6
White




I 2
White




J 2
White




3A
White

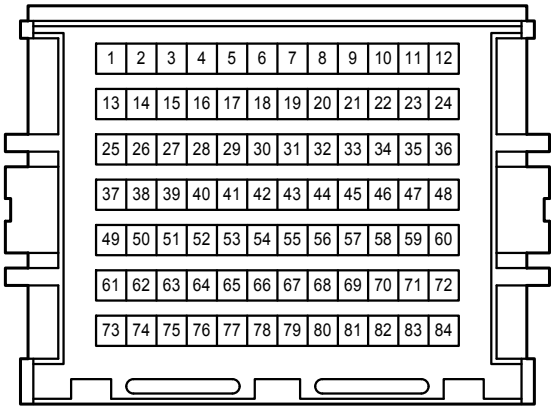


4B
White

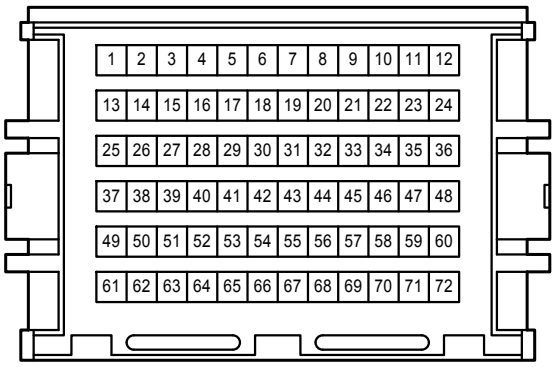


IS
White

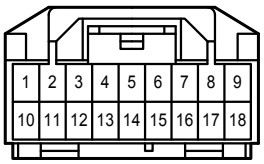


AE6
White

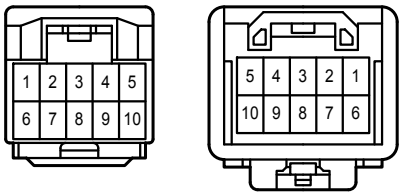


AE10
White

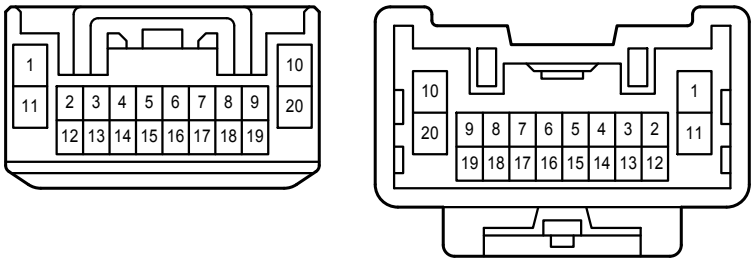


EK1
White

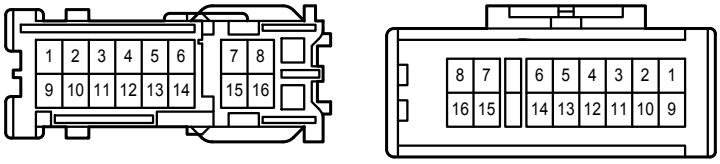


EL1
White

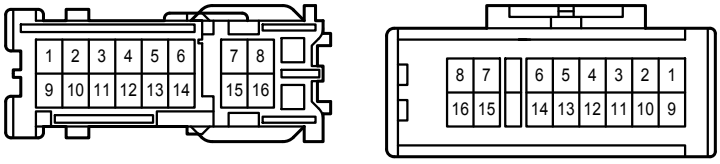


EL2
White

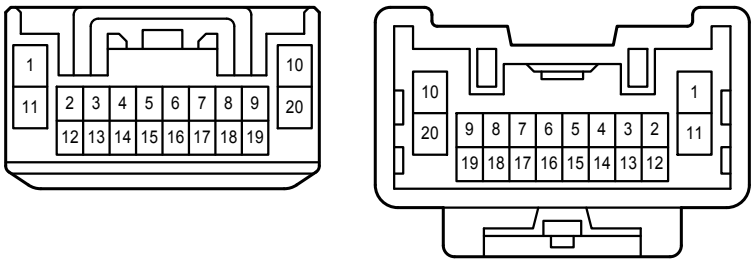


GE2
White

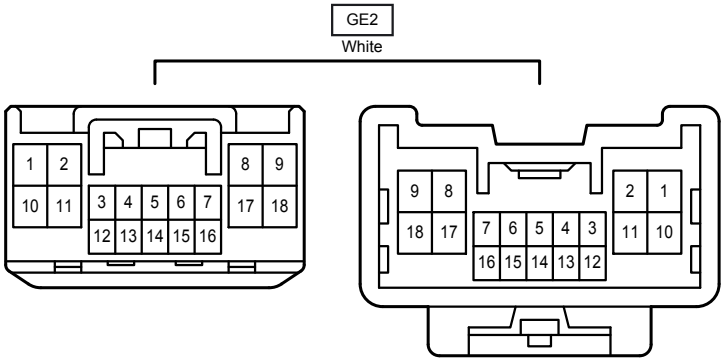

HE2
White

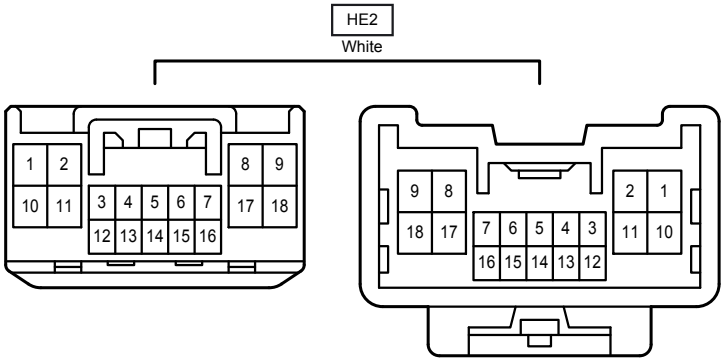

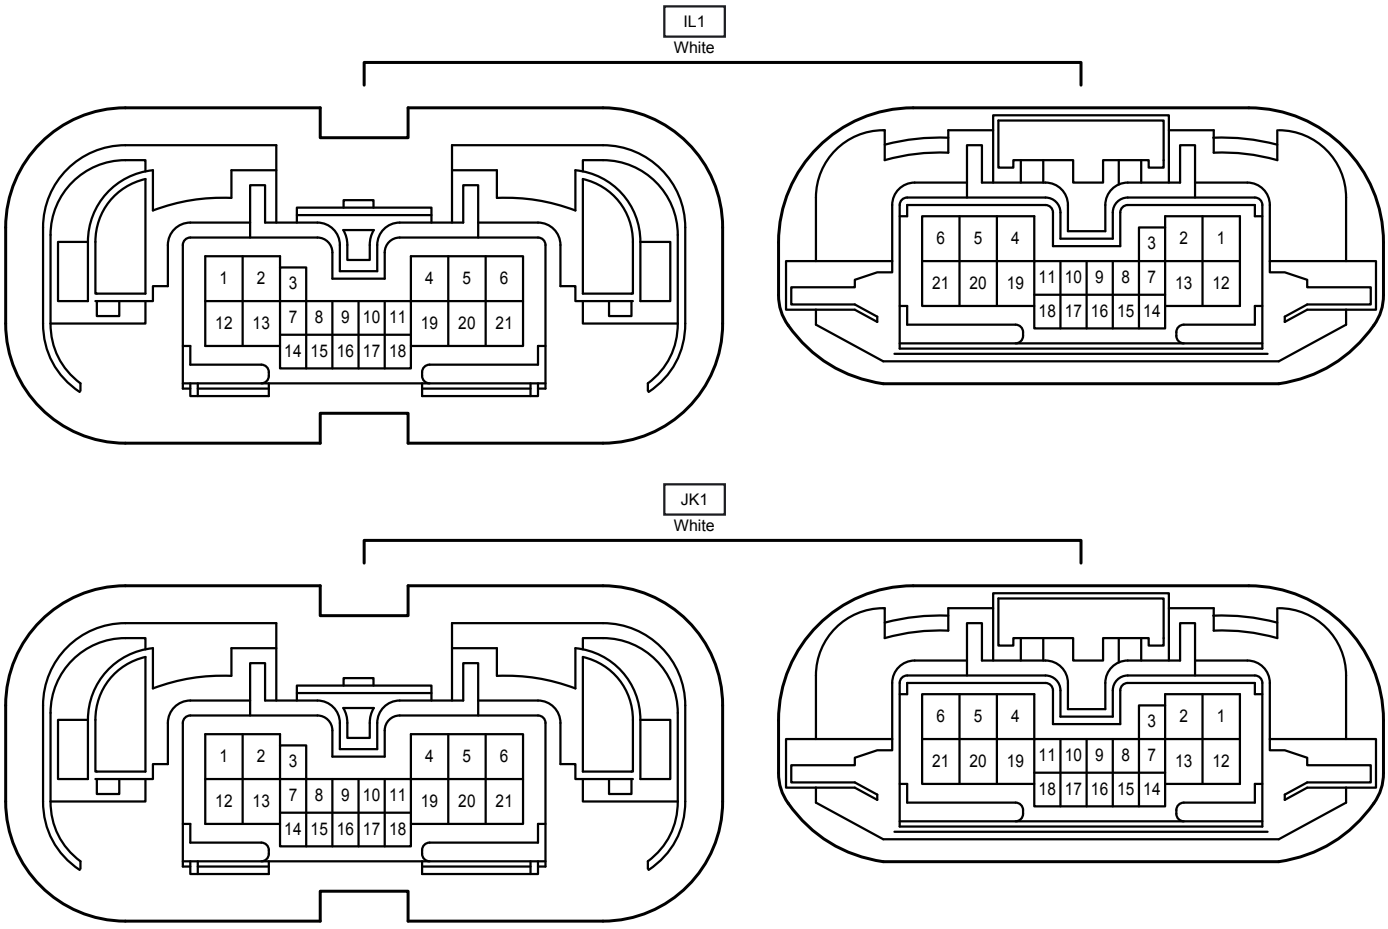
IL1
White
1 2 3 4 5 6
12 13 7 8 9 10 11 19 20 21
14 15 16 17 18
6 5 4 3 2 1
21 20 19 11 10 9 8 7 13 12
18 17 16 15 14
JK1
White
1 2 3 4 5 6
12 13 7 8 9 10 11 19 20 21
14 15 16 17 18
6 5 4 3 2 1
21 20 19 11 10 9 8 7 13 12
18 17 16 15 14