




(BAT)
30A
P/SEAT
2
13 IQ
BR
8 EK1
BR
BR
1 A
5 B
6 B
K22(A), P8(B)
Junction Connector
LG
LG
LG
1
P6
Power Seat SW (Driver' s Seat)
B
Rear
Reclining
Front
Down
Lifter
Up
Rear
Slide
Front
RCLR
RCLF
RDWN
RUP
SLDR
SLDF
2
3
8
7
6
9
BR
P
V
W
Y
L
1
2
1
2
2
1
BACK
FWD
M
DOWN
UP
M
BACK
FWD
M
P4
Power Seat Motor
(Driver' s Seat
Reclining Control)
P2
Power Seat Motor
(Driver' s Seat
Lifter Control)
P1
Power Seat Motor
(Driver' s Seat
Slide Control)


LG
P6
Power Seat SW (Driver' s Seat)
Down
Front
Vertical
Up
FDWN
FUP
E
5
10
4
B
G
W-B
2
1
DOWN
UP
M
P3
Power Seat Motor
(Driver' s Seat
Front Vertical Control)
LG
3
B
Hold
Release
E
E
H
R
P7
Power Seat SW (Lumbar Support)
2
5
4
1
W-B
W-B
Y
W
8 B
9 B
10 B
9 A
K22(A), P8(B)
Junction Connector
1
2
H
R
M
P5
Power Seat Motor
(Driver' s Seat Lumbar Support Control)
W-B
K1


K 22
White

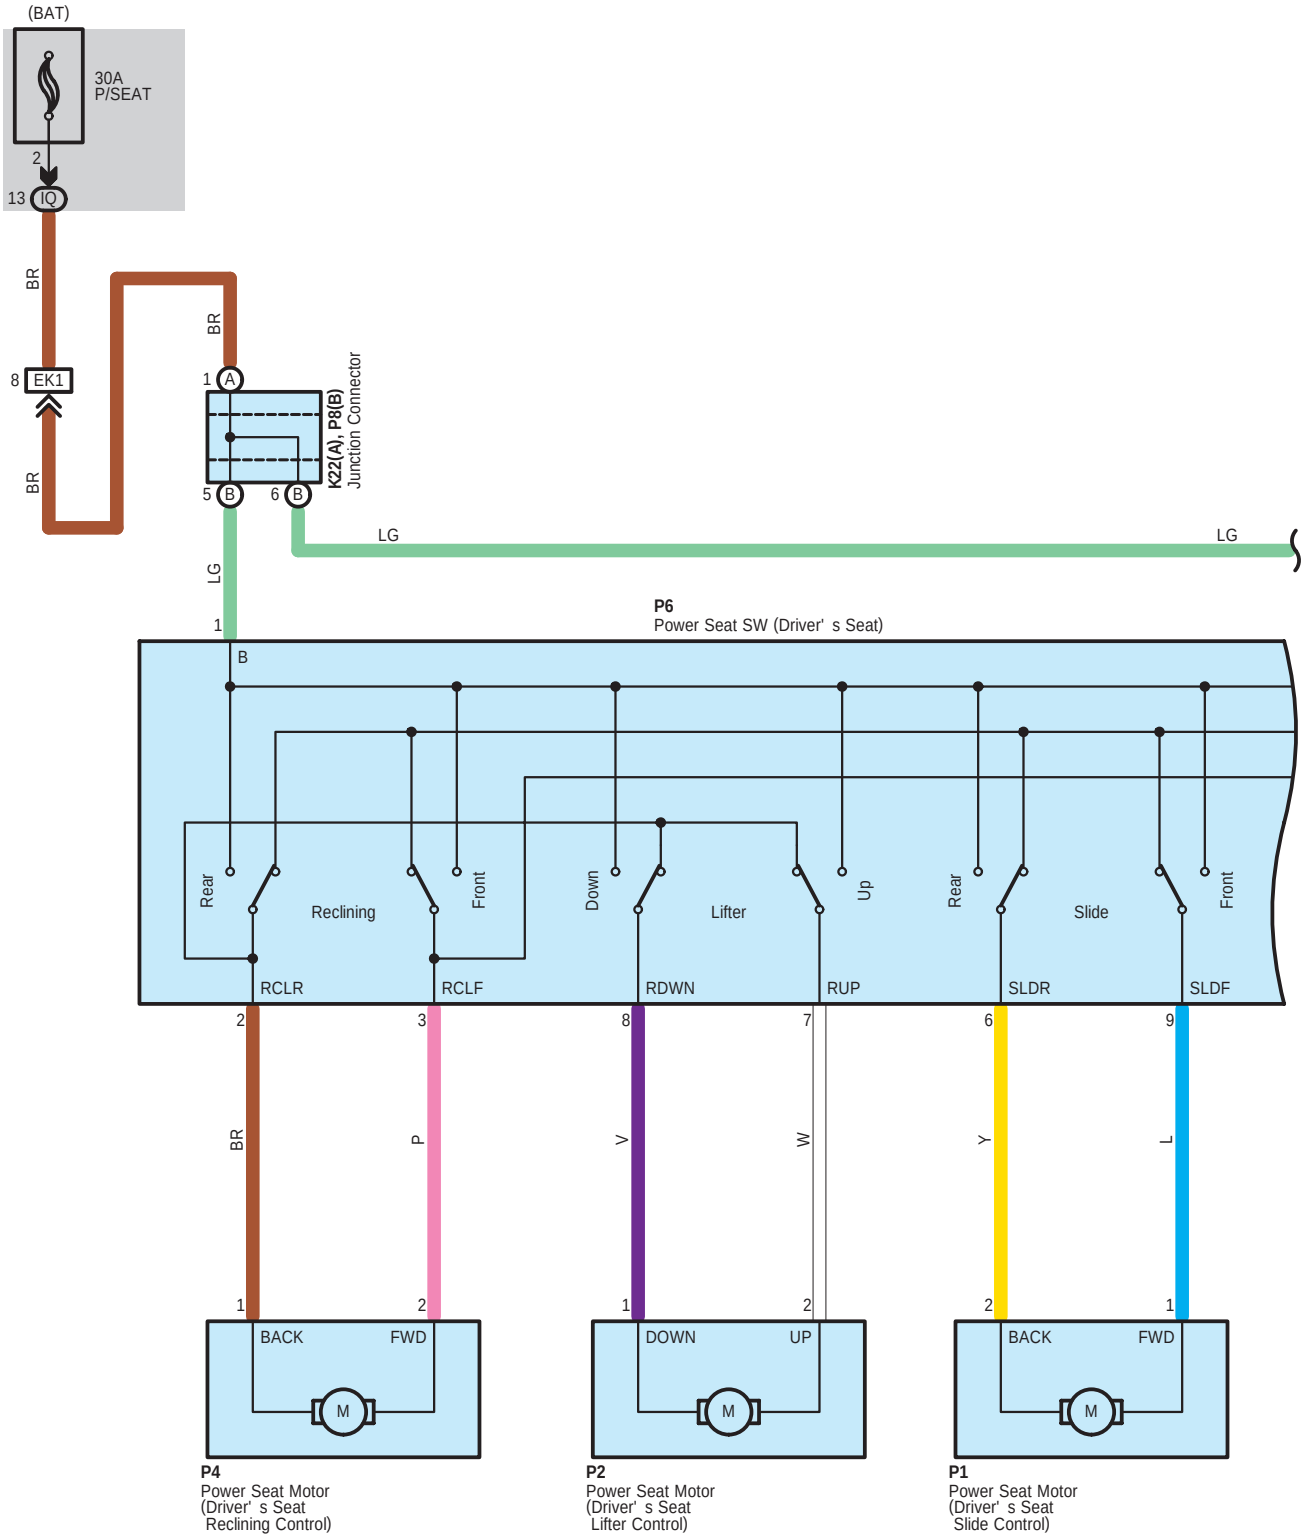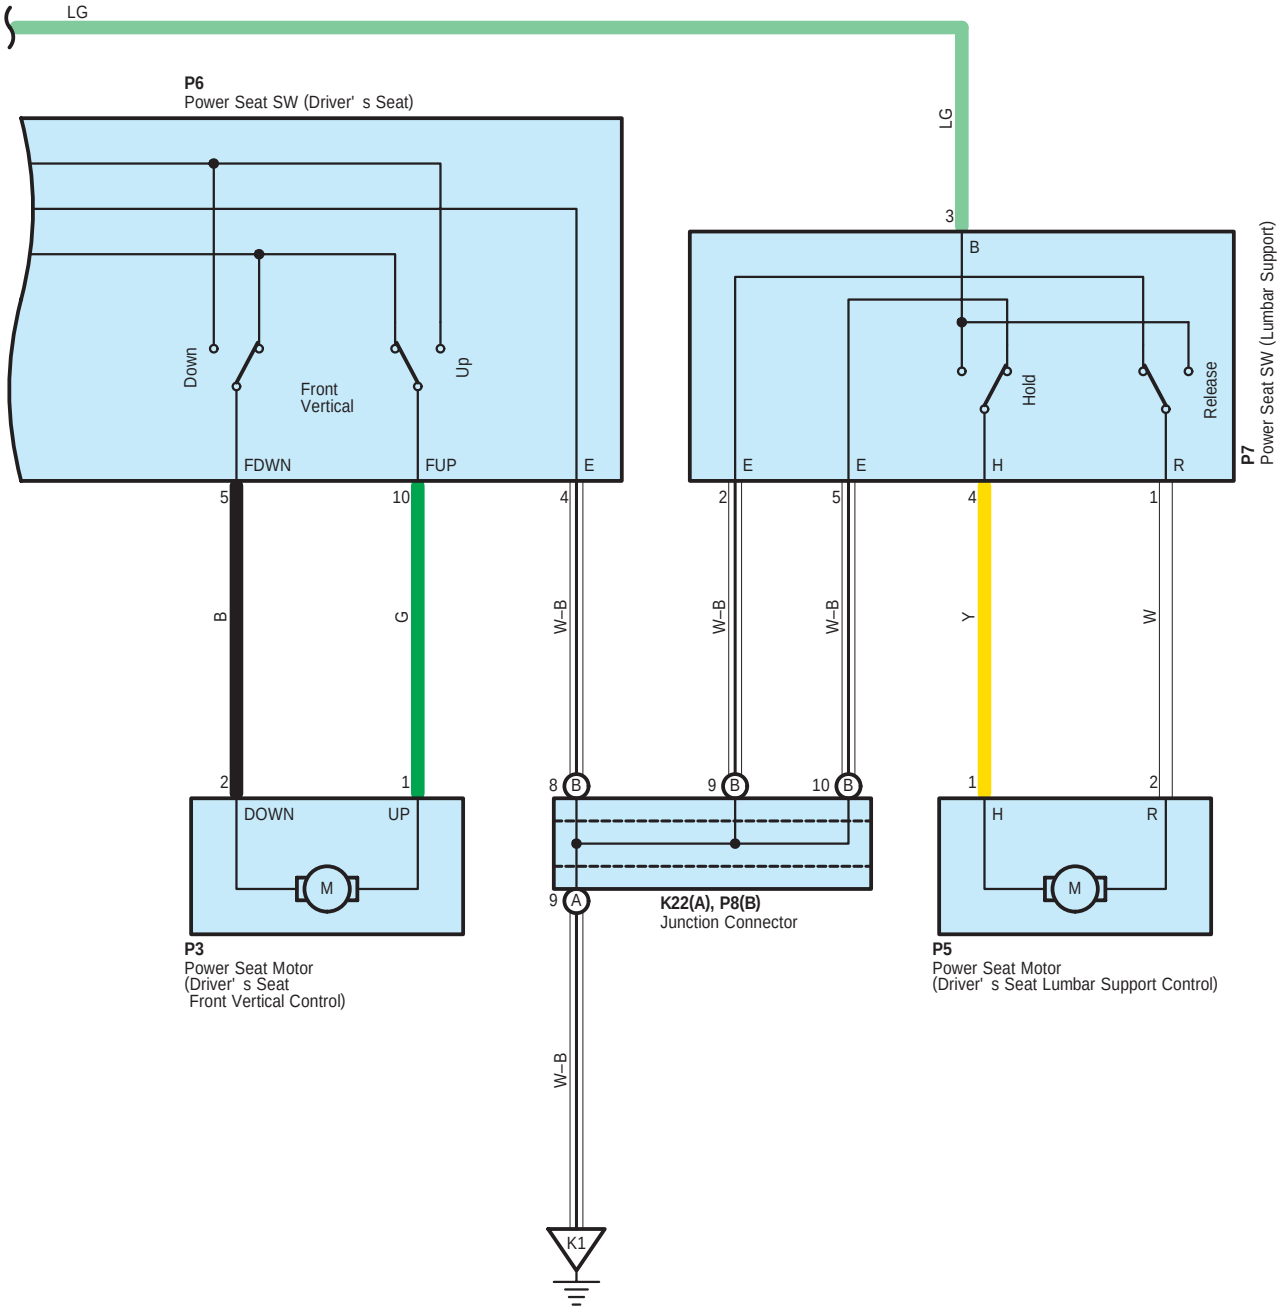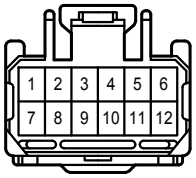


P 1
Black




P 2
Black




P 3
Black




P 4
Black




P 5
Black




P 6
Black

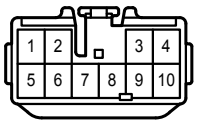


P 7
White

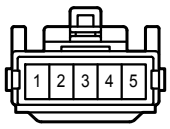

P 8
Gray

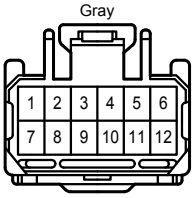

IQ
White

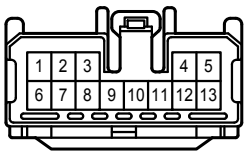

EK1
White

