




(BAT)
10A
STOP
18 IB
(IG)
10A
ECU–IG1
24 IB
W
(*4)
W
(*1, *4 *2)
W
(*3 *2)
W
(*4)
L
(*1)
9
A52
Junction
Connector
8
A53(A), A72(B)
Junction
Connector
4 A (*3)
1 B (*4)
6 B (*4)
5 A 12 A (*3)
2 B 7 B (*4)
W
(*1, *4 *2)
W
(*1)
2 A (*3)
2 B (*4)
A5(A), A66(B)
Stop Lamp SW
1 A (*3)
1 B (*4)
A26(A), A67(B)
Skid Control ECU
with Actuator
STP2
STPO
21 A 16 A (*3)
22 B 31 B (*4)
L
(*1)
W
(*1)
L
(*1)
W
(*1)
1
2
5
4
BRK Relay
1
3
3 A 10 A (*3)
17 B 22 B (*4)
A50(A), A71(B)
Junction
Connector
9 A (*3)
19 B (*4)
L
(*4 *1)
L(*4)
L
(*4)
L(*3 *1)
L(*3 *2)
L
(*4 *2)
L
(*3 *1)
12 IB
12 IA
9 IA
8 SK1
L
G
2
4
K15
Rear Combination
Lamp (LH)
Tail/
Stop
K13
Rear Combination
Lamp (RH)
7
6
1
K21
Junction
Connector
W
L
2
1
S1
Center Stop
Lamp
S4
Noise Filter
(Stop and Rear Window Defogger)
W–B
SL1
K1
K2
S1
L2


W
(*4)
* 1 : w/ VSC
* 2 : w/o VSC
* 3 : Europe, Before Aug. 2008 Production Except Europe
* 4 : From Aug. 2008 Production Except Europe
L
(*4 *1)
L
(*4 *2)
W
(*4)
8
6
OUT
+B
STP
GND
A70
Stop Light Control Relay
2
4
L
(*4)
W–B
(*4)
L
(*4 *1)
L
(*4)
L
(*4 *2)
W–B
(*4)
A3


A 5
Black

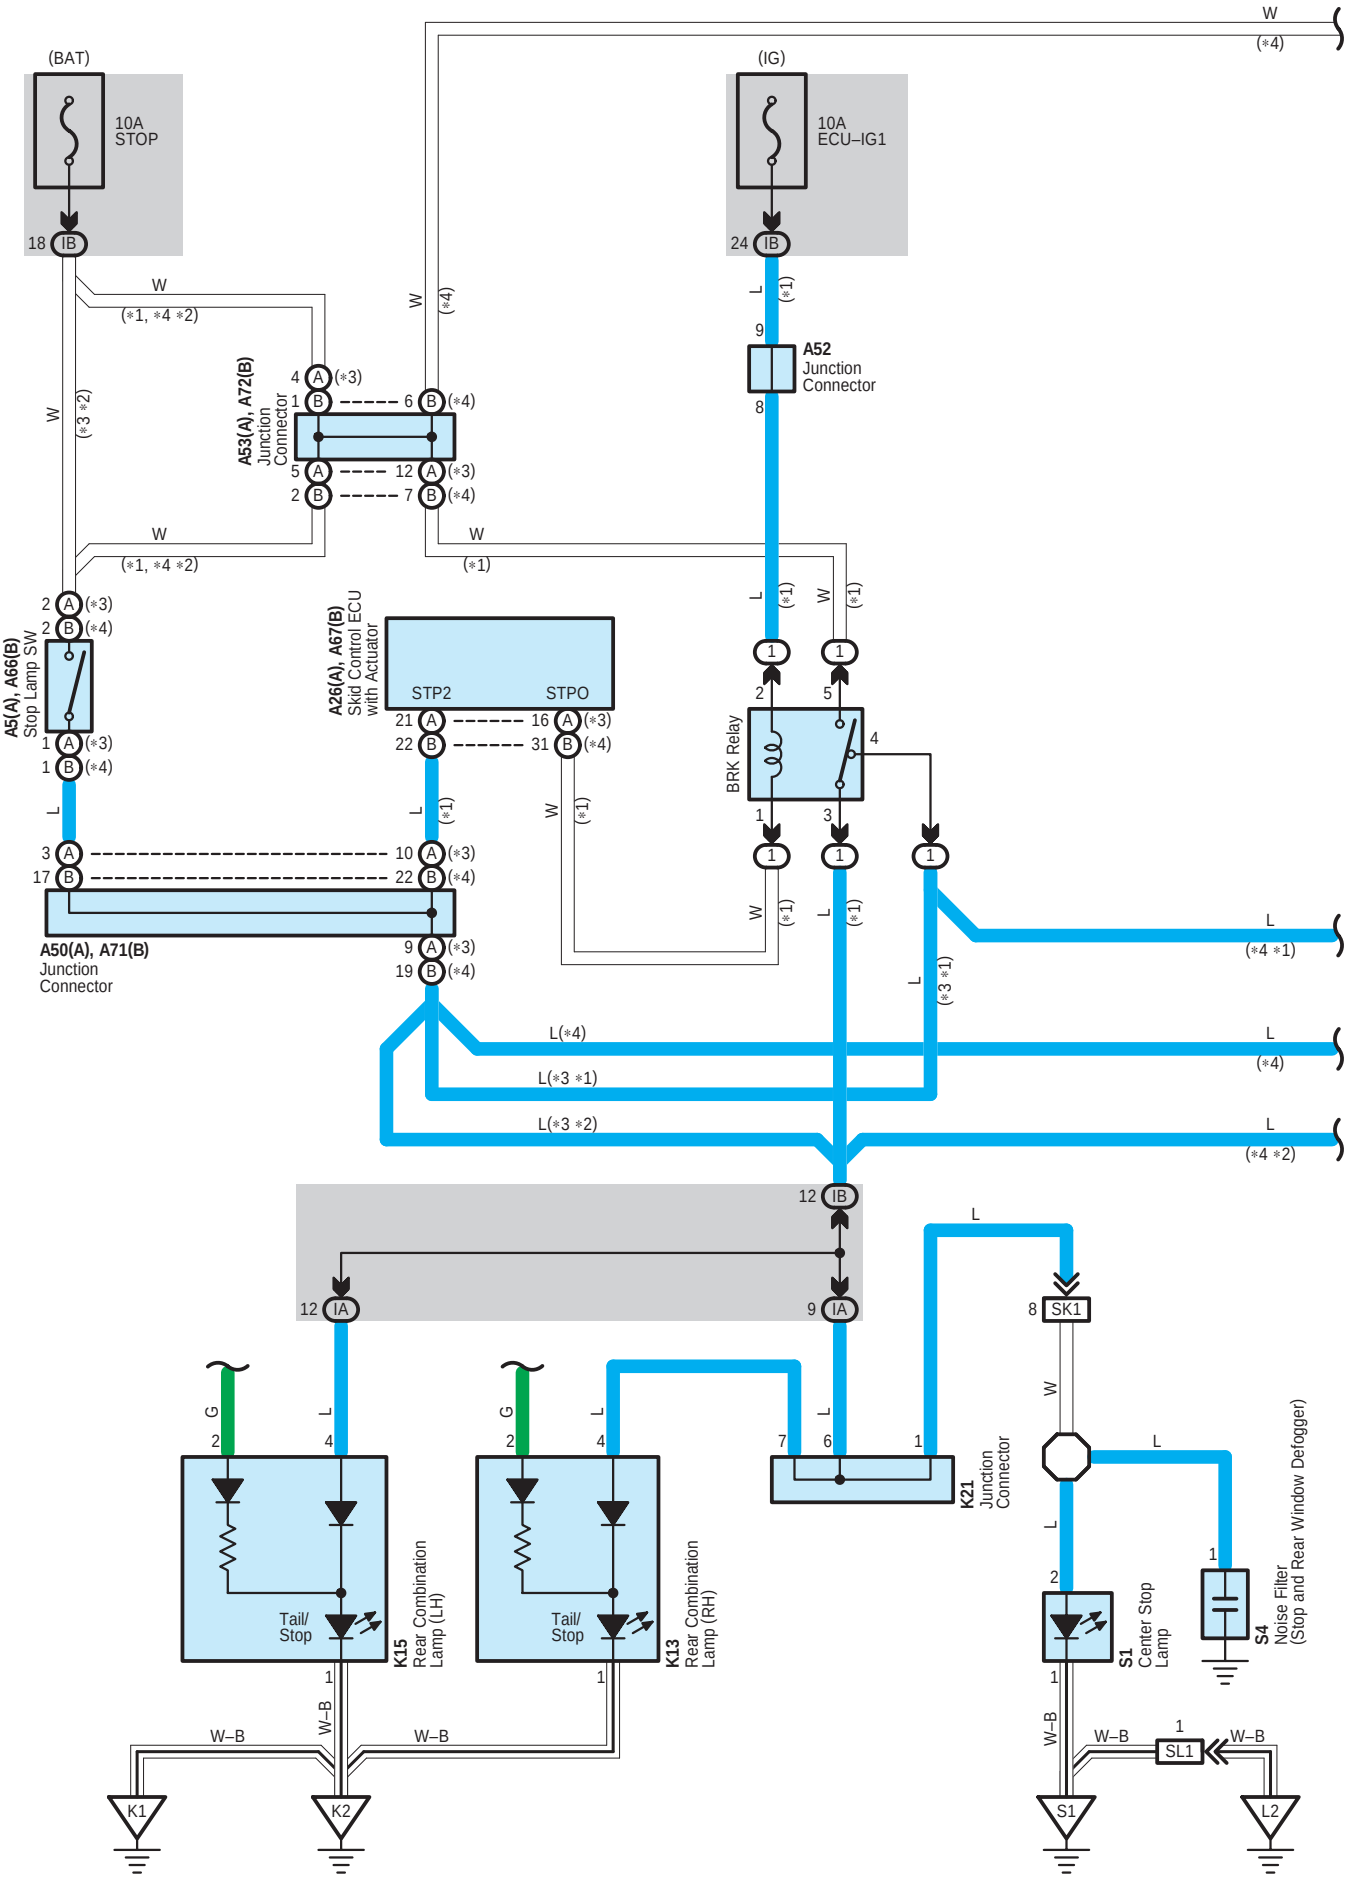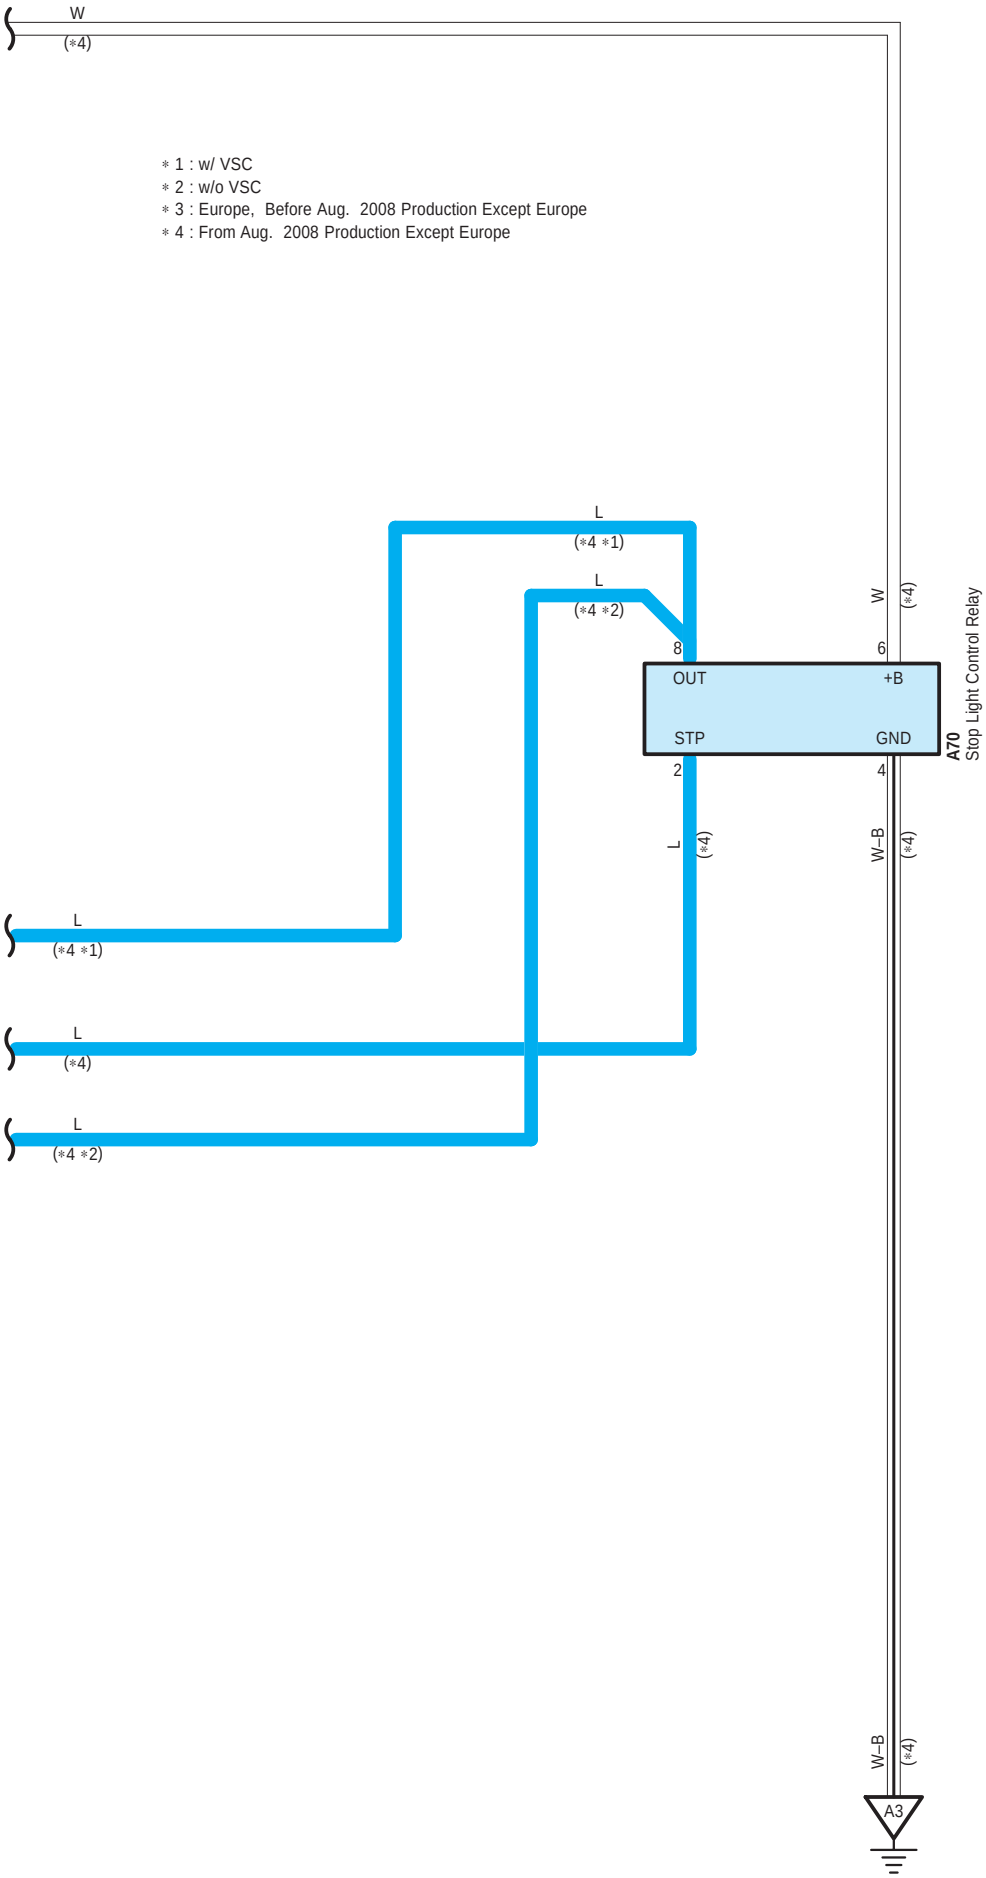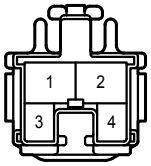


A 26
Black

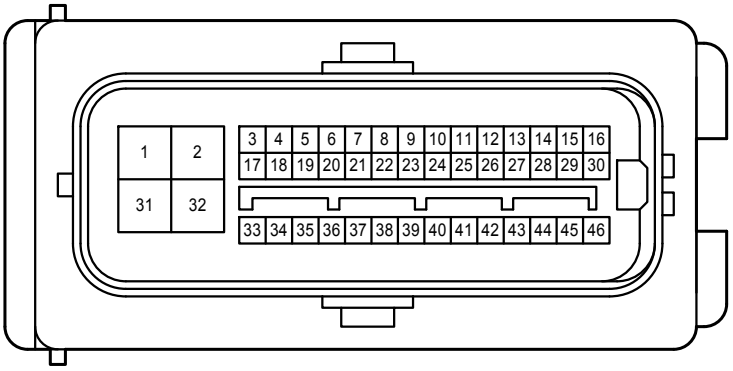


A 50
White

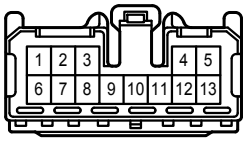


A 52
Gray

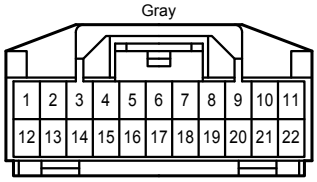


A 53
Black



A 66
White




A 67
Black

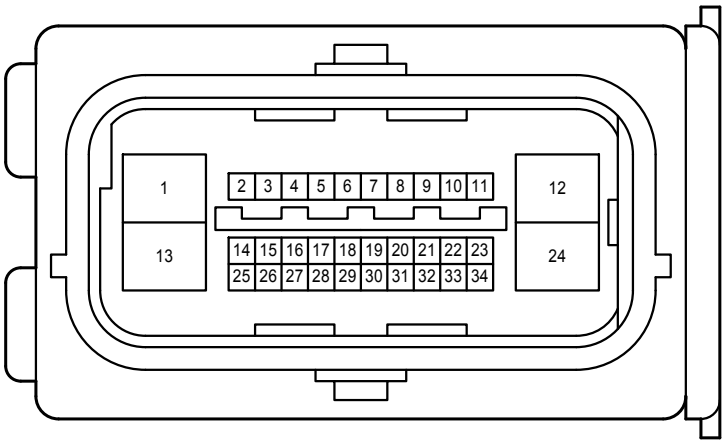


A 70
Black




A 71
White

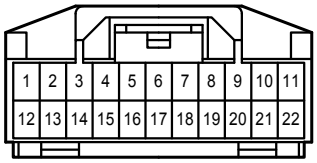


A 72
Gray




K 13
Gray

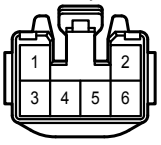


K 15
Gray

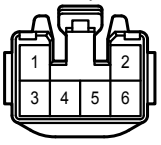


K 21
White

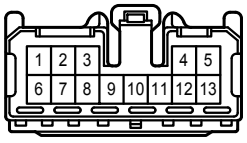


S 1
White

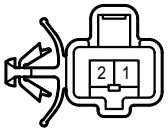

S 4
Gray



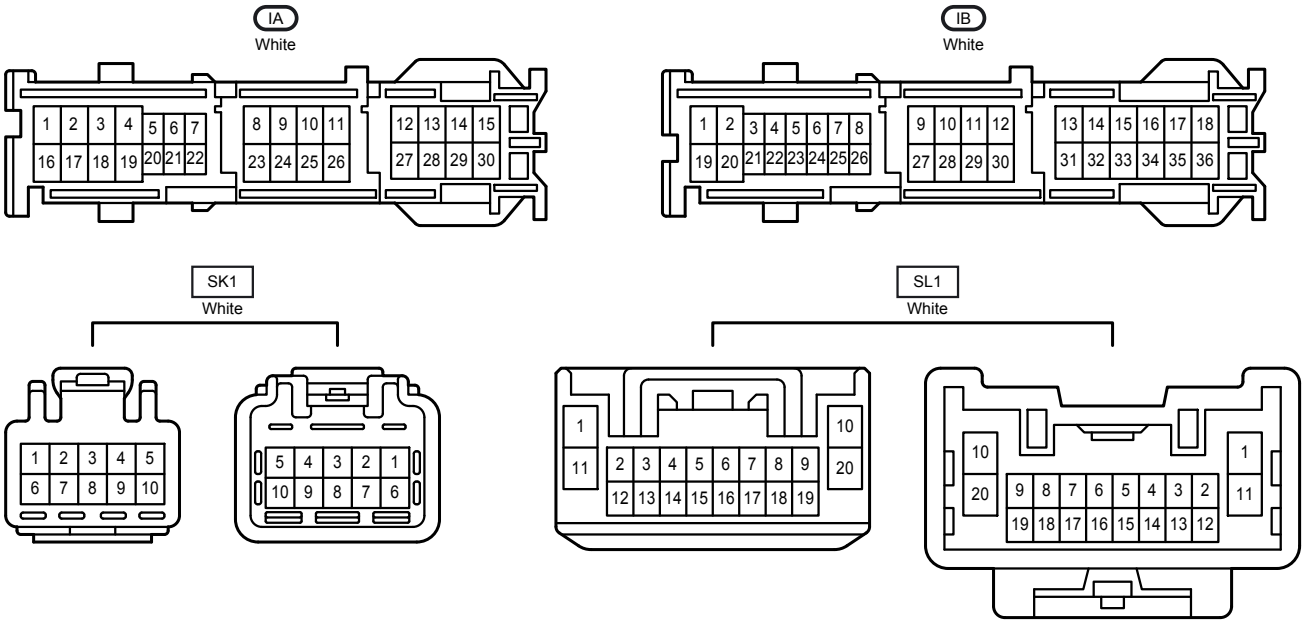
IA
White
1 2 3 4 5 6 7
16 17 18 19 20 21 22
8 9 10 11
23 24 25 26
12 13 14 15
27 28 29 30
IB
White
1 2 3 4 5 6 7 8
19 20 21 22 23 24 25 26
9 10 11 12
27 28 29 30
13 14 15 16 17 18
31 32 33 34 35 36
SK1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
SL1
White
1
11
10
20
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
1
11
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12