
■DAYTIME RUNNING LIGHT SYSTEM

- The daytime running light system is available as optional equipment on the LHD models for Europe.
- This system is designed to automatically activate the headlights (low beam), license plate lights and taillights during the daytime to keep the car highly visible to other vehicles.
- This system is controlled by the main body ECU.
- This system is enabled when the conditions given below are met:
  1) The power source mode is IG-ON.
  2) Alternator L terminal input is ON (engine running condition).
  3) Light control switch is OFF.

▶ System Diagram ◀

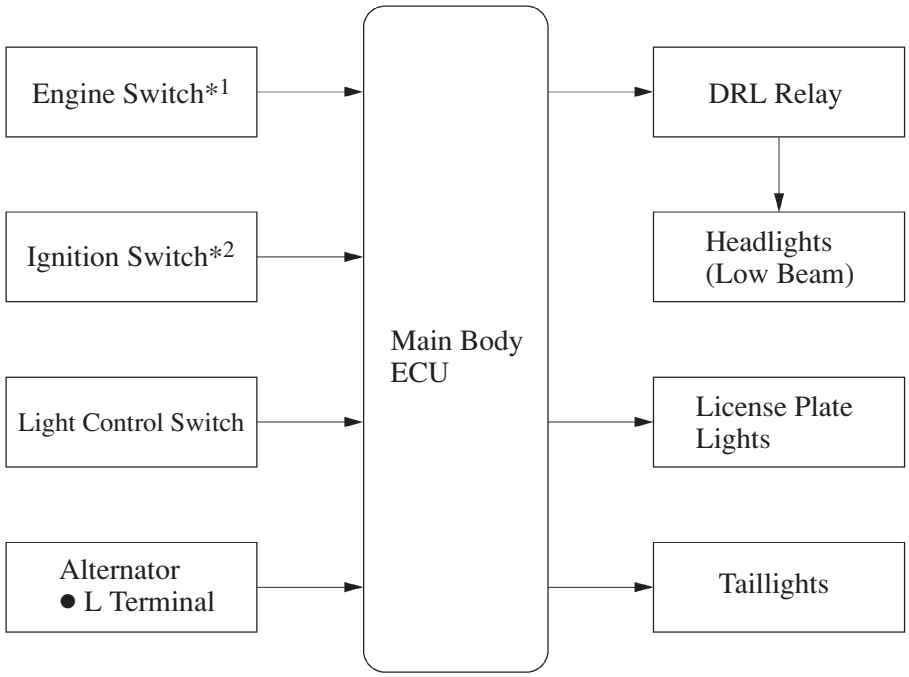

01NBE72Y

*1: Models with Smart Entry & Start System
*2: Models without Smart Entry & Start System

■LIGHT REMINDER SYSTEM

- The light reminder system is standard equipment on the models for Europe.
- When the power source mode is changed from the IG-ON to ACC or OFF while the driver's door is open with the headlight turned on, this system warns the driver that the lights remain on by sounding the multi buzzer. The multi buzzer is located inside the combination meter.