BODY LOWER BACK INNER PANEL (CUT)


F24710A

With the body lower back outer panel and quarter inner lower panel removed.


Symbol meaning

REMOVAL : Remove Weld Points

INSTALLATION : MIG Plug Weld : Spot Weld

F24710B

REMOVAL·INSTALLATION

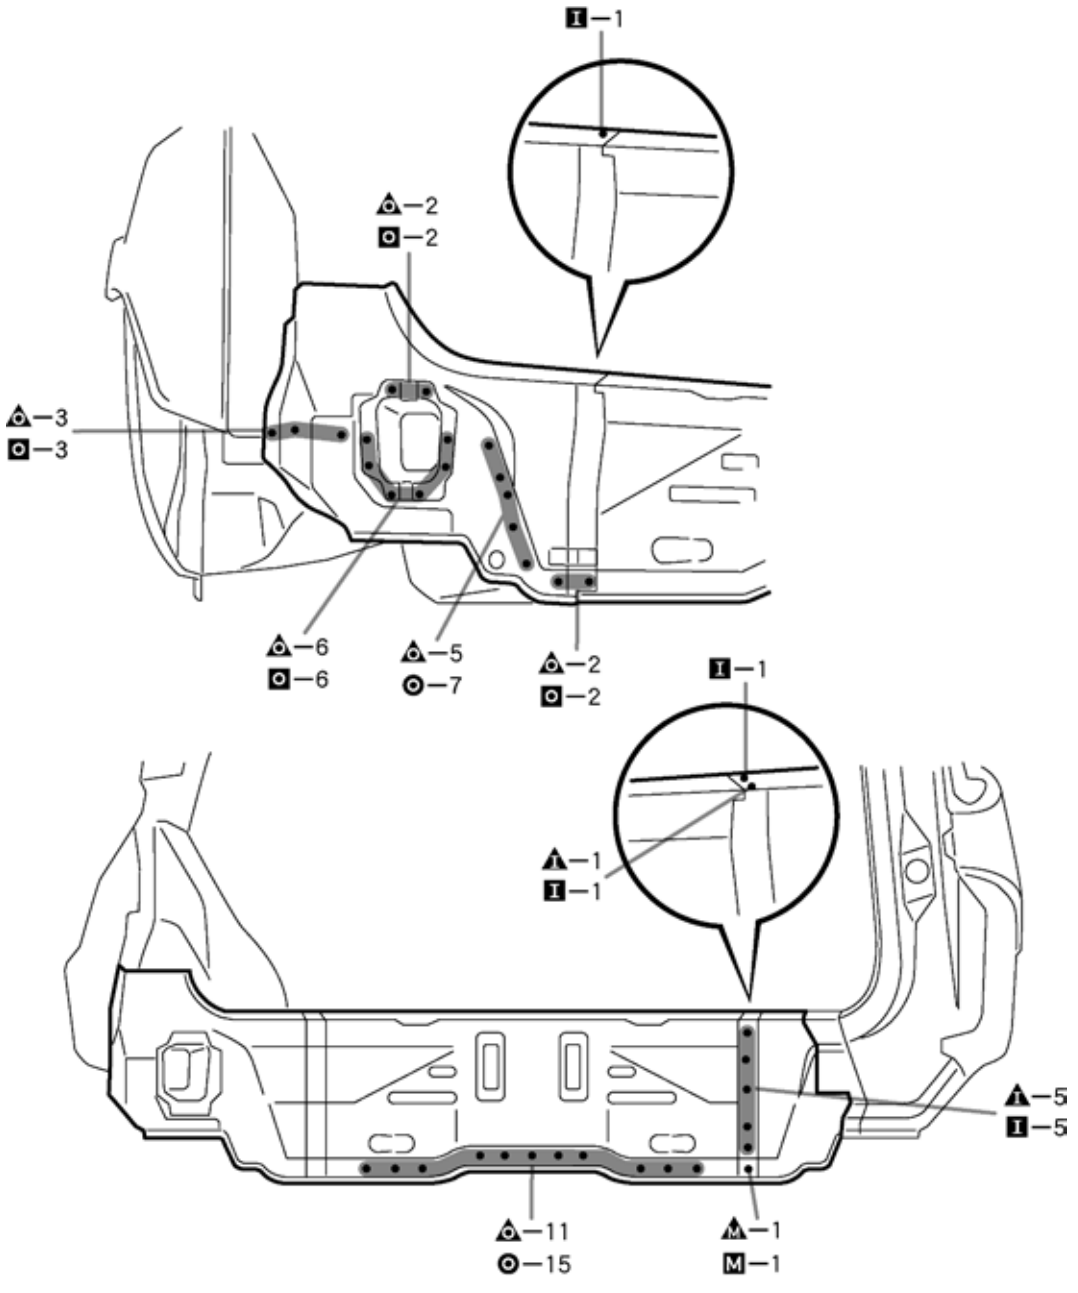

F24710

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.