


Rear Window Defogger and Mirror Heater

- * 1 : w/ Driving Position Memory
- * 2 : w/o Driving Position Memory
- * 3 : w/ Retractor
- * 4 : w/o Retractor

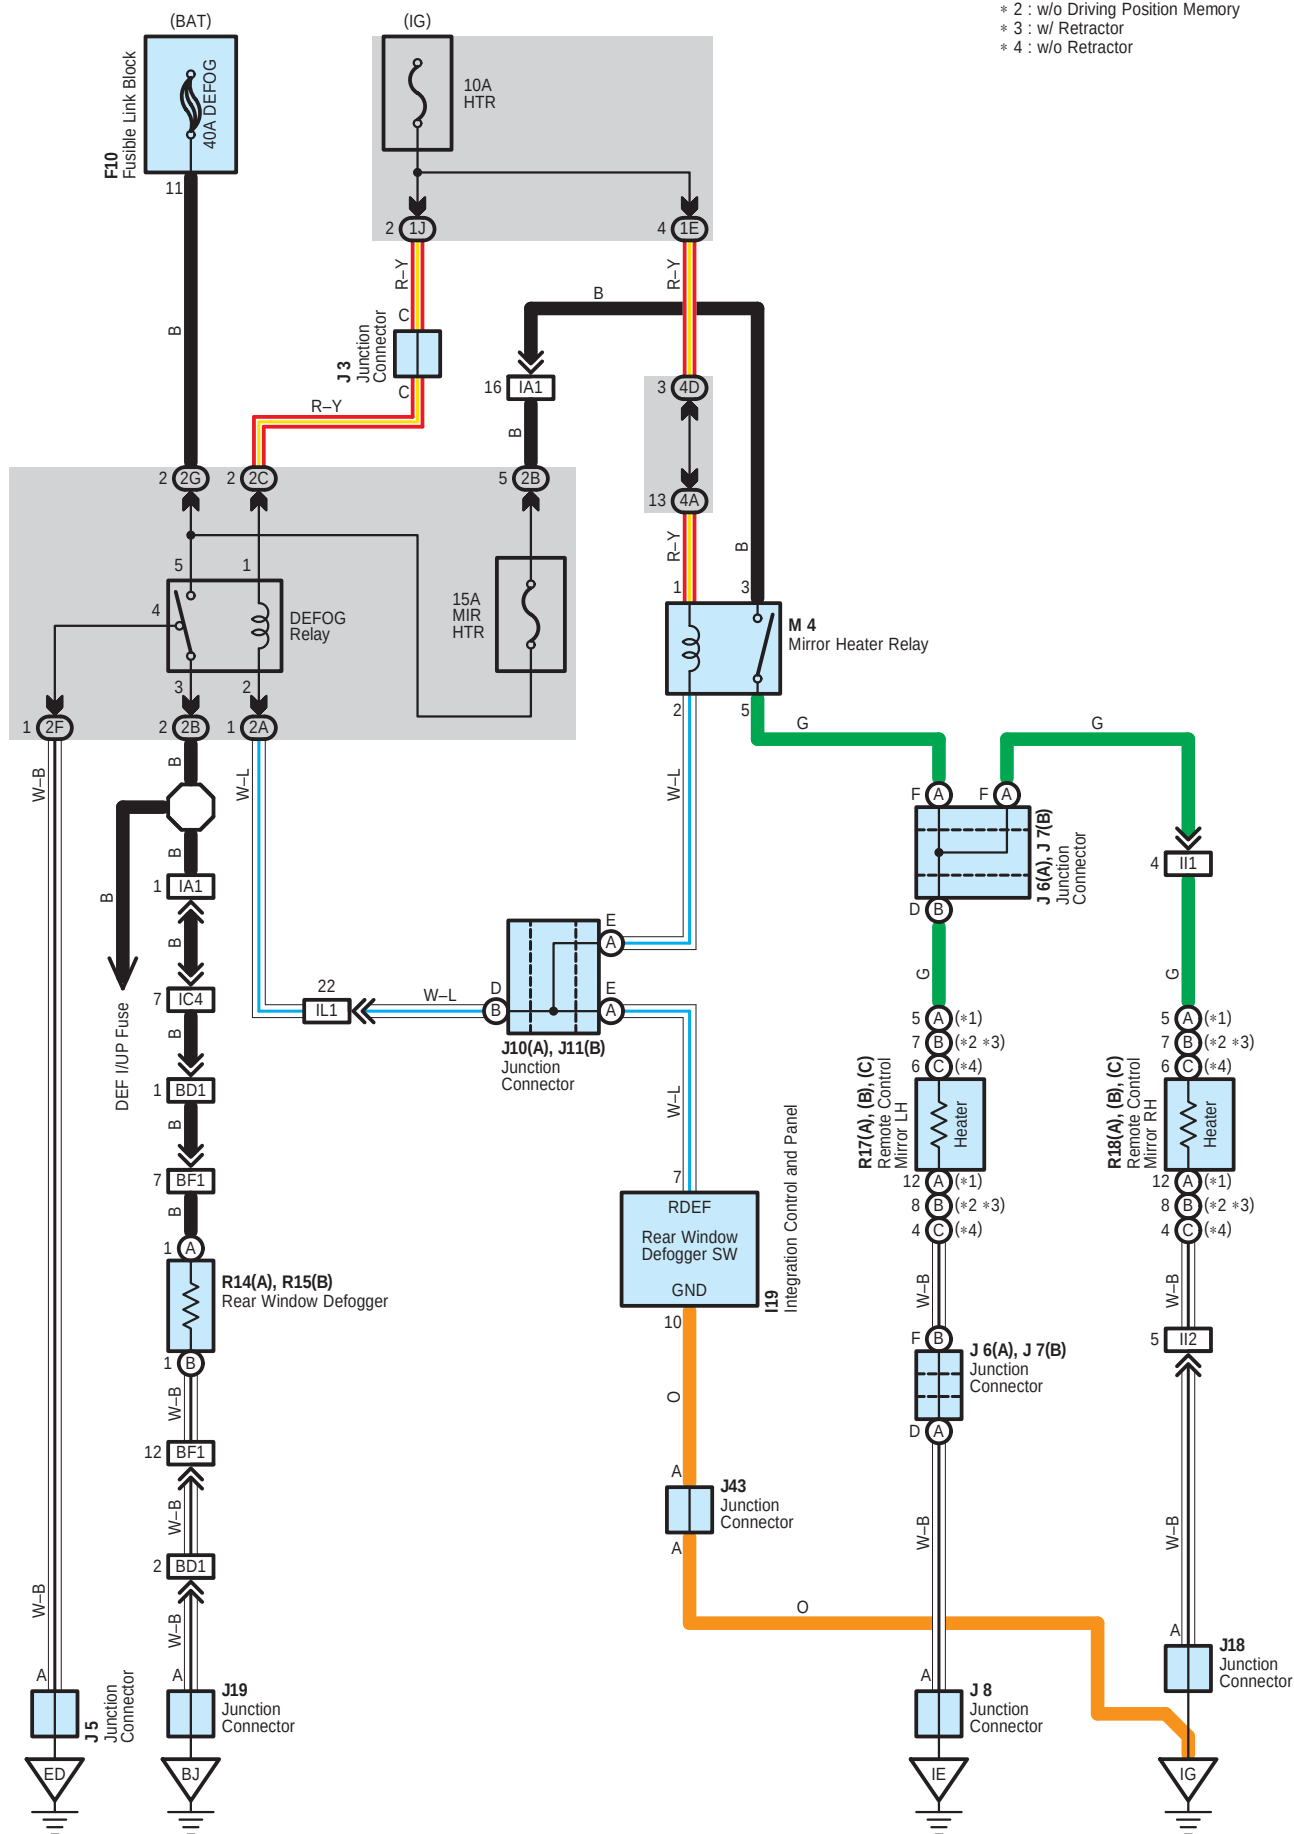

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
F10	22, 40	J10	A 44	R15	B 47
I19	43	J11	B 44	R17	A 47
J3	41	J18	44		B 47
J5	41	J19	46		C 47
J6	A 44	J43	44	R18	A 47
J7	B 44	M4	45		B 47
J8	44	R14	A 47		C 47

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	33	Cowl Wire and Instrument Panel J/B (Lower Finish Panel)
1J	33	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
2A	29	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B		
2C		
2F		
2G		
4A	38	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4D		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IC4	51	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
II1	51	Front Door RH Wire and Cowl Wire (Right Kick Panel)
II2		
IL1	51	Engine Room Main Wire and Cowl Wire (Cowl Side Panel RH)
BD1	52	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BF1	52	Back Door No.2 Wire and Back Door No.1 Wire (Left Side of Back Door)

 : Ground Points

Code	See Page	Ground Points Location
ED	50	Front Fender Apron LH
IE	51	Cowl Side Panel LH
IG	51	Cowl Side Panel RH
BJ	52	Quarter Panel LH