





(IG)
7. 5A
ECU–IG
No. 1
56 DD
P
SB
13 B
21 A
22 A
H77(A), H78(B)
Junction Connector
P
W
V
7 IG
SK 8
SONAR
Switch
J2
Drive Monitor
Switch
4 HJ1
W
SB
5 HJ1
O
10
IG
SB
18 A
16 A
H79(A)
Junction Connector
G
G
H43
Clearance Warning ECU Assembly
BOF
SOF
E1
BOR
SOR
E2
9
7
23
24
6
22
V
GR
G
Y
LG
P
C1
Front No. 1 Ultrasonic
Sensor LH
BI
SI
EI
1
3
5
V
W
G
3 CA1
1 CA1
2 CA1
V
W
G
6 AB1
5 AB1
3 AB1
V
W
G
2
4
6
BO
SO
EO
9 AH5
7 AH5
8 AH5
BE
L
P
1 AB1
2 AB1
4 AB1
R
L
B
1
3
5
BI
SI
EI
12 HO1
13 HO1
14 HO1
GR
LG
R
2 RO1
3 RO1
1 RO1
GR
LG
R
1
3
5
BI
SI
EI
R3
Rear No. 1 Ultrasonic
Sensor RH
BI
SI
EI
1
3
5
B
L
BR
B
L
BR
2
4
6
BO
SO
EO
B1
Front No. 1 Ultrasonic Sensor RH
R2
Rear No. 2 Ultrasonic Sensor RH


I22
Accessory Meter Assembly
Clearance Sonar Indicator and Buzzer
IG
BZ
OP
BK
RL
RR
FL
FR
23
11
6
5
7
3
8
4
G
L
P
O
GR
W
LG
Y
3 HI2
11 HI2
1 HI2
2 HI2
18 HI2
8 HI2
7 HI2
6 HI2
G
Y
R
O
GR
G
LG
V
12
20
19
17
15
18
16
BBZ
L6
L5
L3
L1
L4
L2
H43
Clearance Warning ECU Assembly
E
SPD
PL
RL
TL
21
3
1
13
11
W–B
V
P
LG
L
R3
Rear No. 1 Ultrasonic
Sensor RH
R1
Rear No. 2 Ultrasonic
Sensor LH
BO
SO
EO
BI
SI
EI
10 A
2 B
H79(A), H80(B)
Junction Connector
L
LG
P
LG
W–B
12
11
H83
Junction Connector
18 A
16 A
H77(A)
Junction Connector
H37
Combination Meter Assembly
+S
SI
35
36
V
GR
19 AH10
Y
W–B
H3
R4
Rear No. 1 Ultrasonic Sensor LH



(BAT)
(BAT)
(IG)
140A
ALT
150A
LH–J/B
7. 5A
LH–IG
(*4)
(*3)
RL
PL
RB
P
R
D21
Park/Neutral
Position Switch
Assembly
1F
DA
DA1
AH4
DD
TAIL Relay
7. 5A
PANEL
A61(A), D55(B)
Junction Connector
H77(A)
Junction
Connector
H80(B)
Junction Connector
H83
Junction Connector
4A
4B
3A
B
L
L–R
G–B
G
SB
GR
R
LG
P
Y
* 3 : Except 130A Type Generator Assembly
* 4 : 130A Type Generator Assembly


Speed Sensors
V
LG
BE
G
L
P
B
W
34
33
45
46
43
42
36
37
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
SP1
14
A19
ABS and Traction Actuator Assembly
Y


A 19
Black

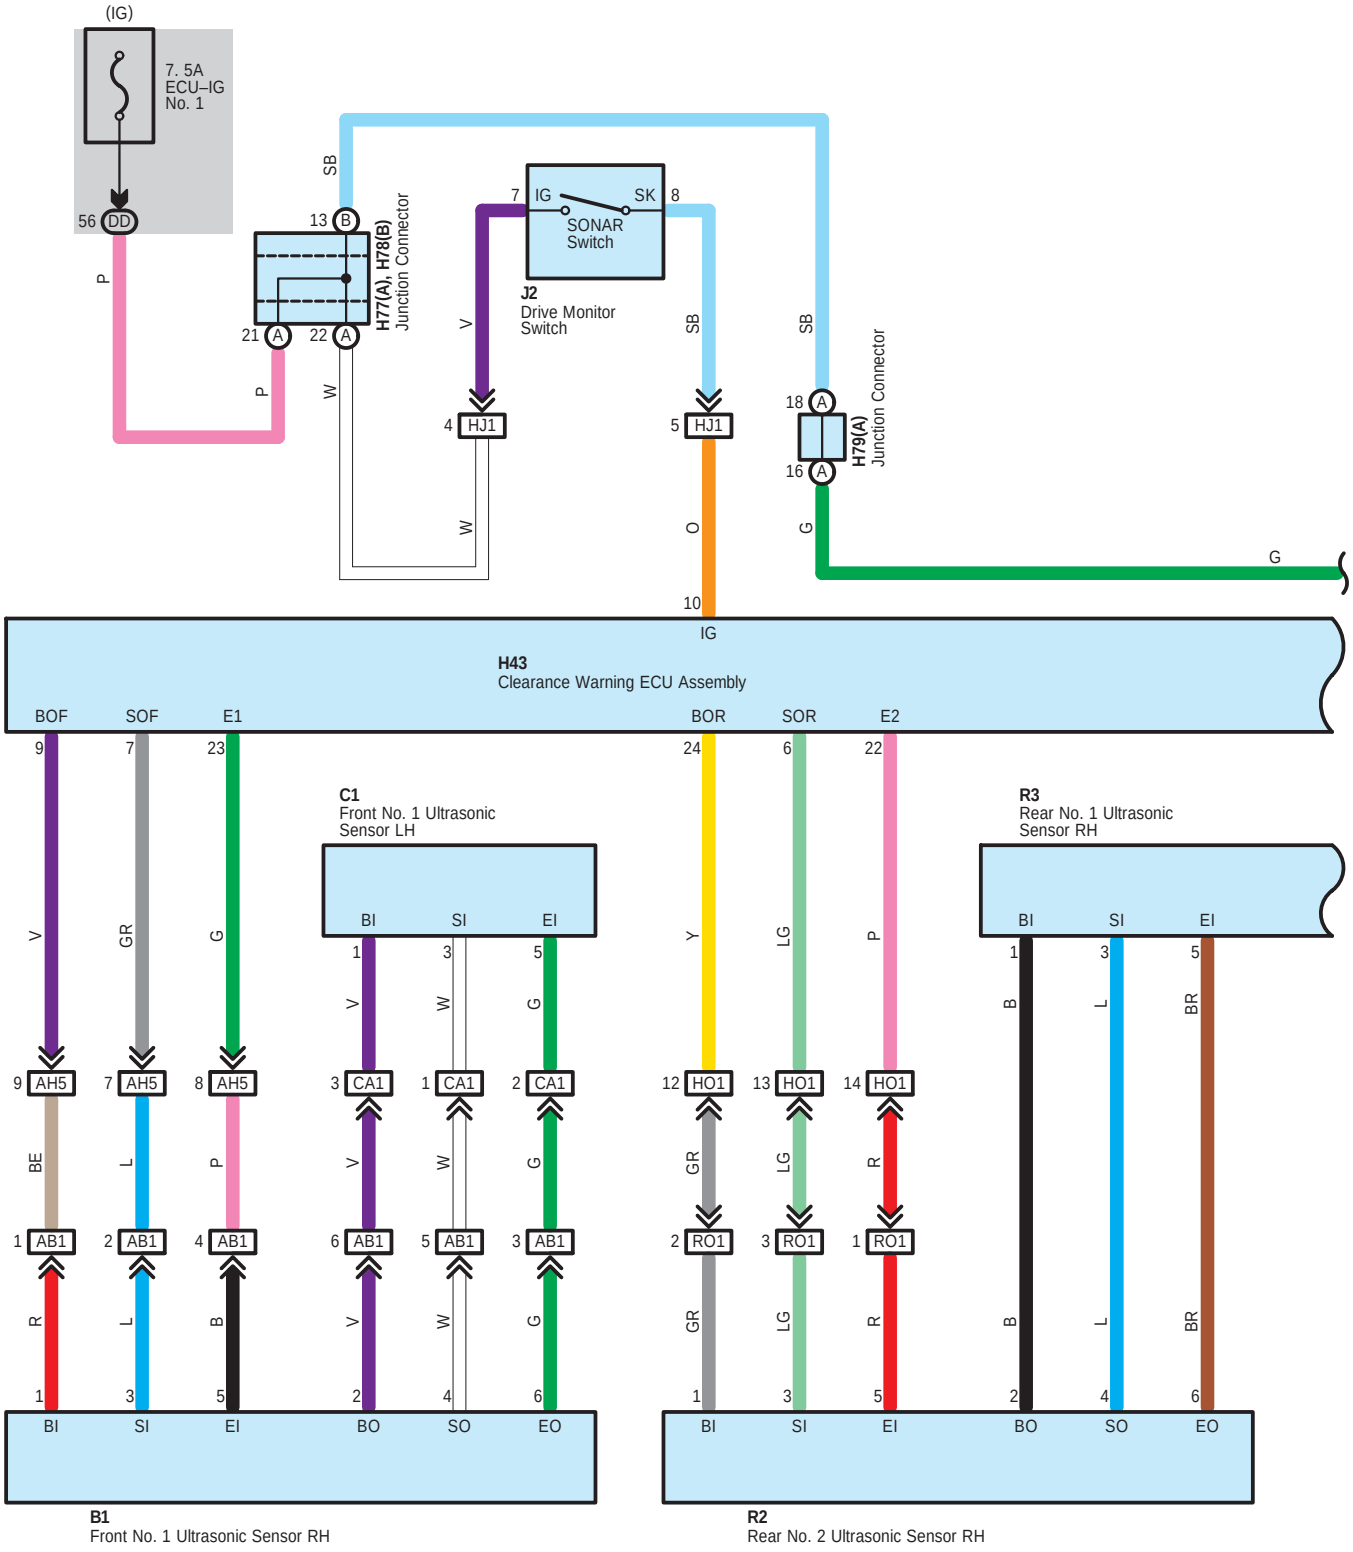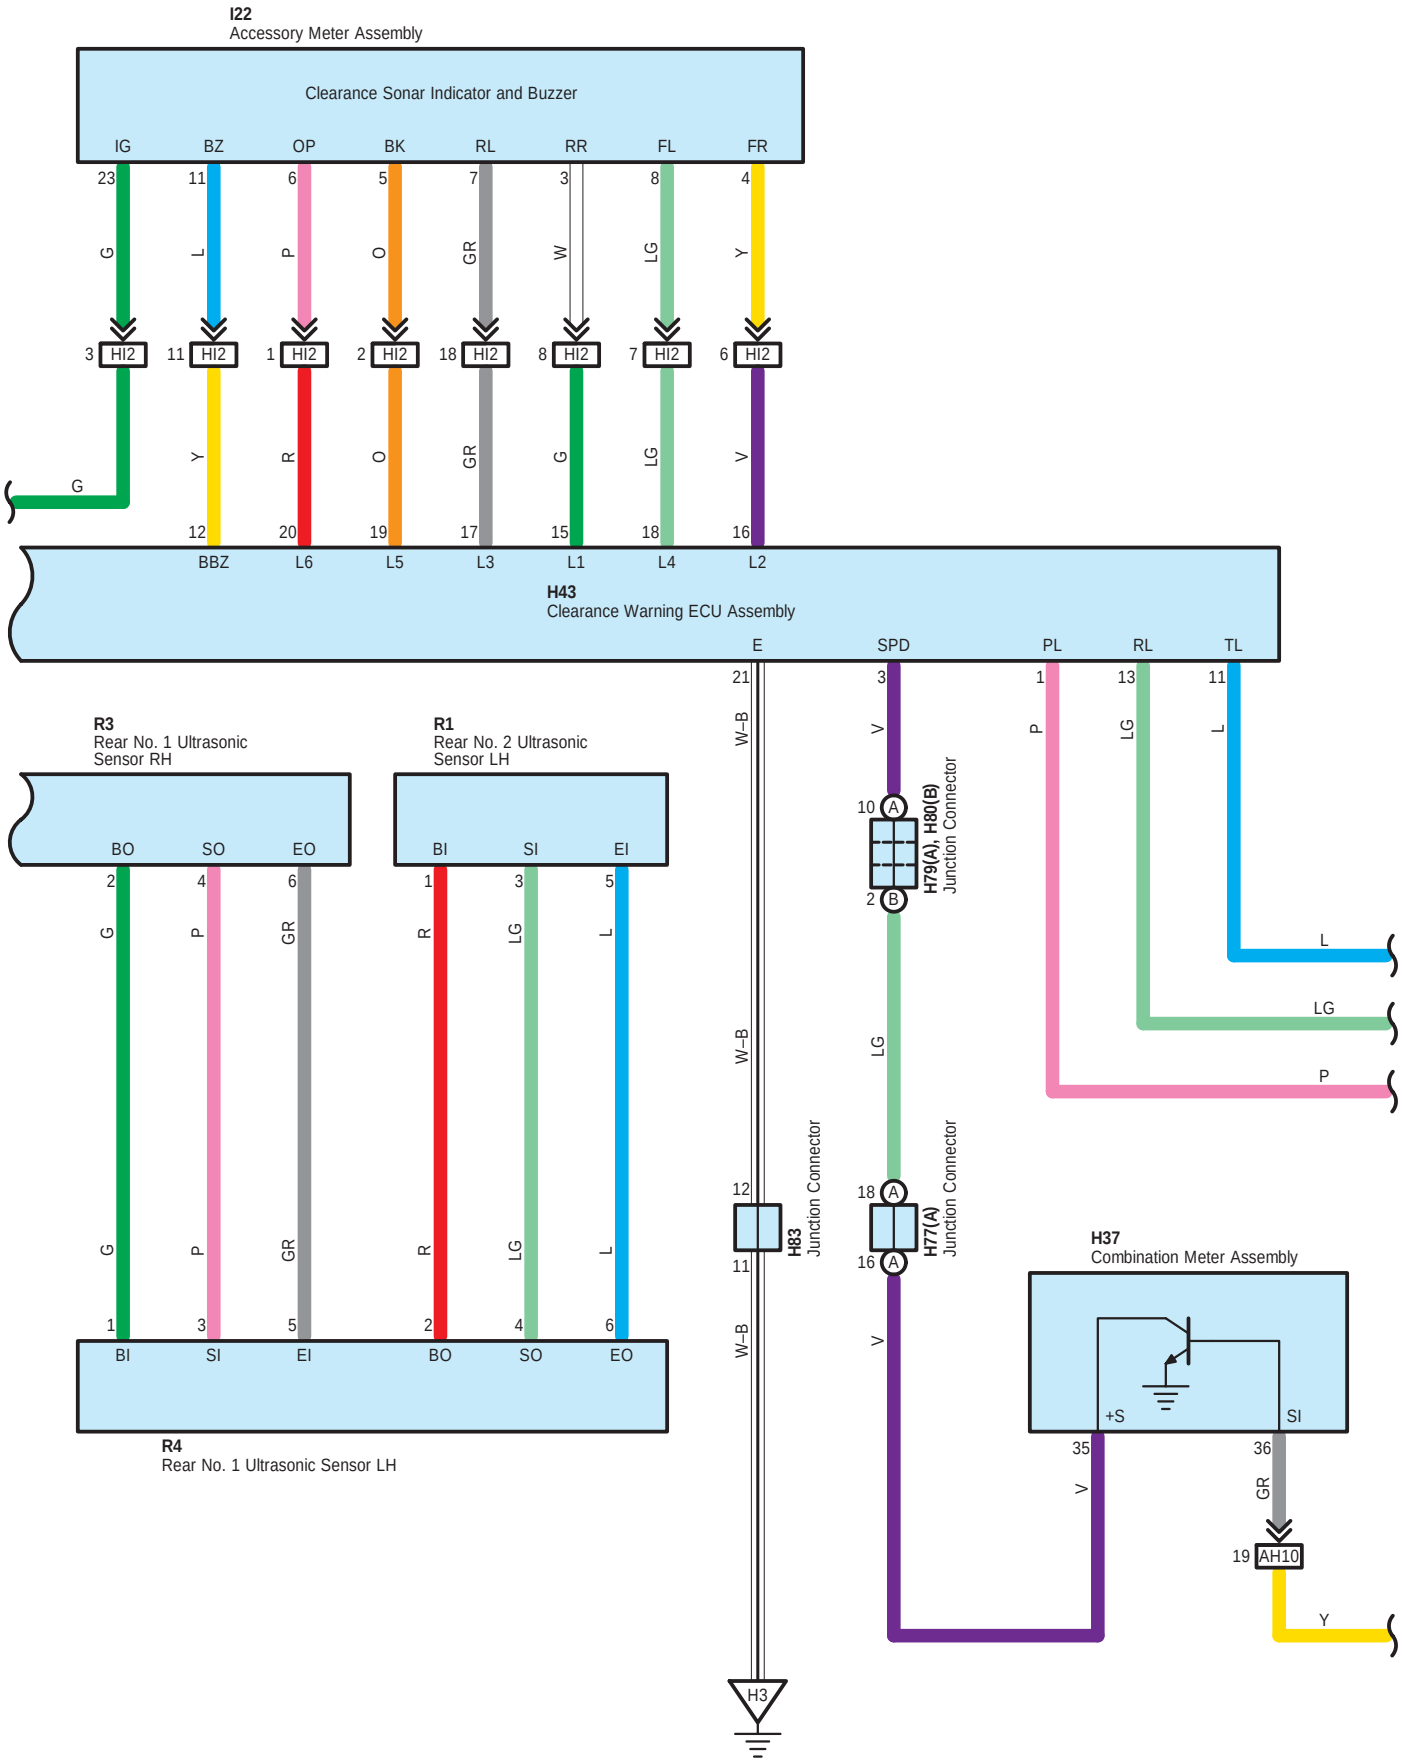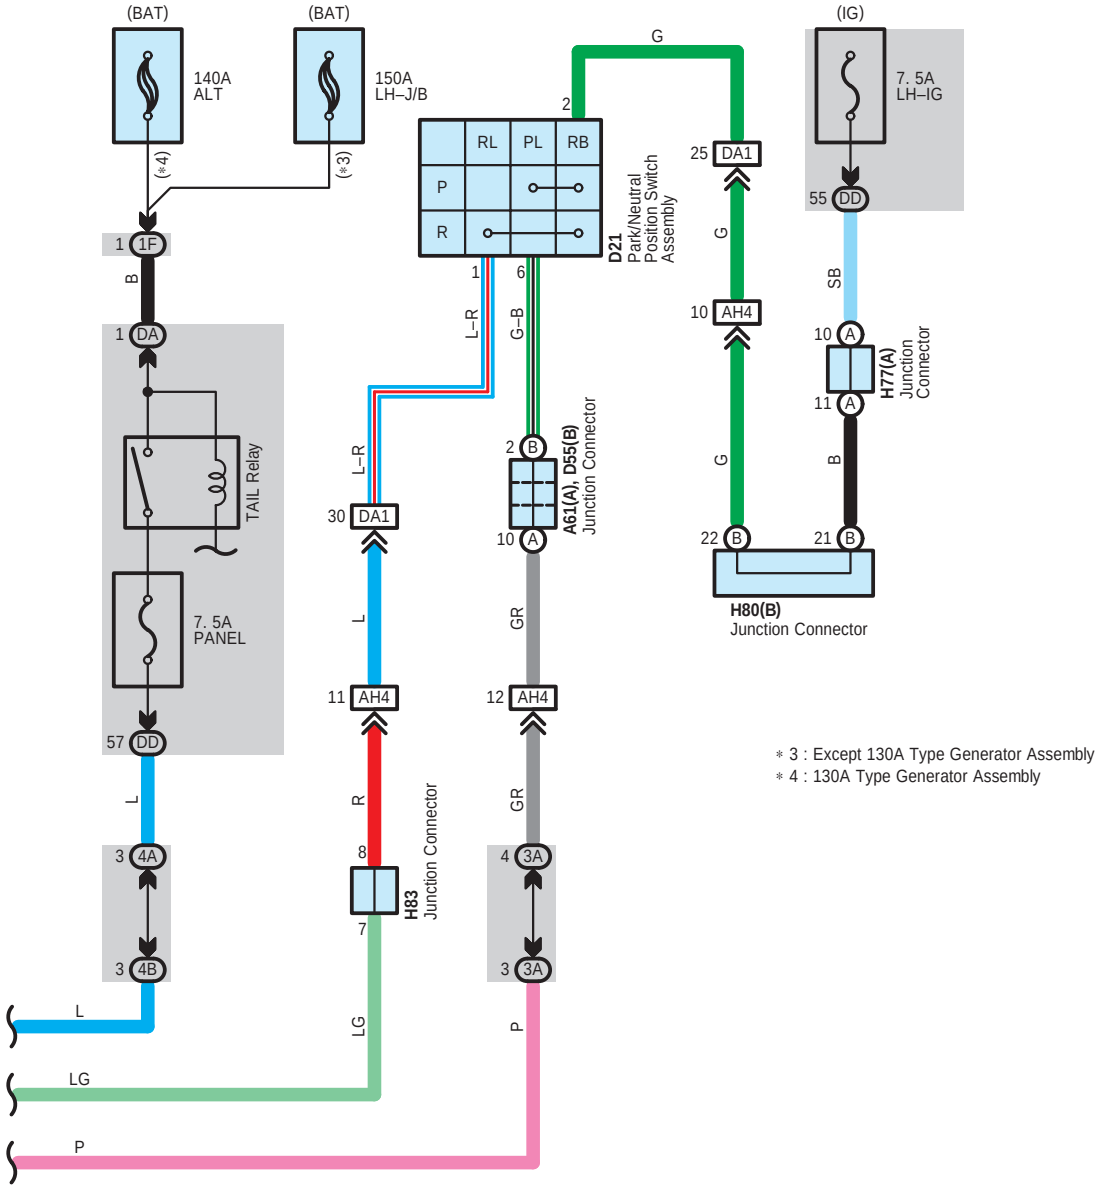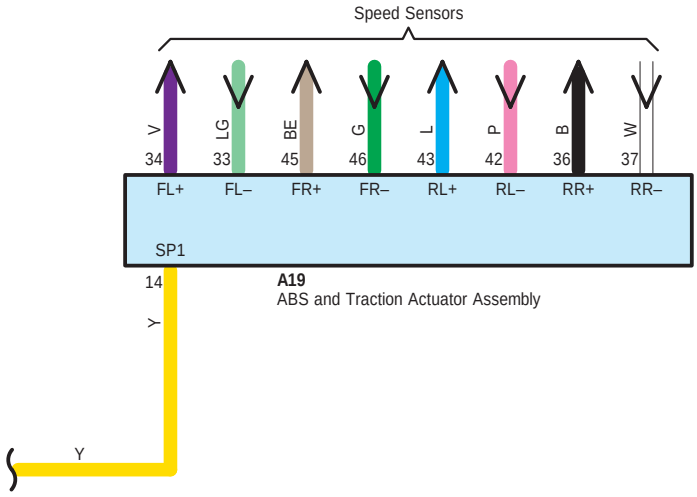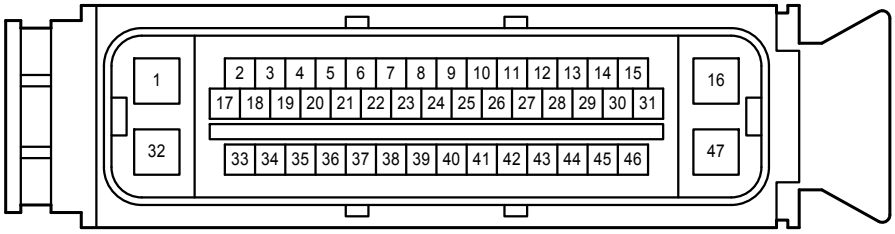


A 61
Blue

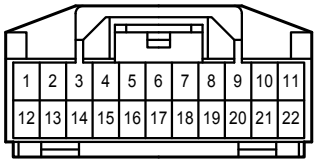


B 1
Black

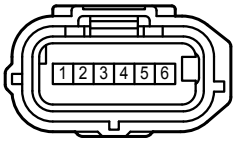


C 1
Black

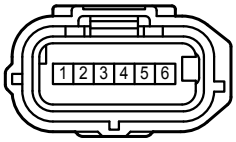


D 21
Gray

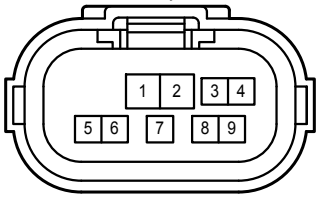


D 55
Blue

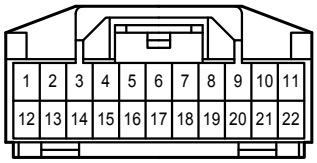


H 37
White

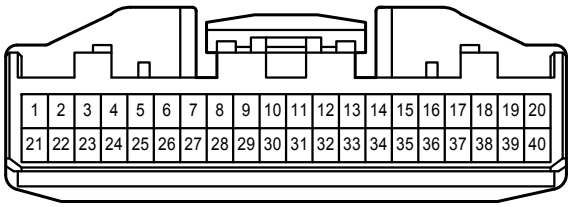


H 43
White

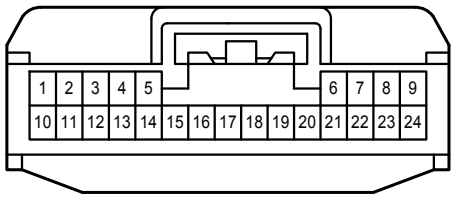


H 77
Black

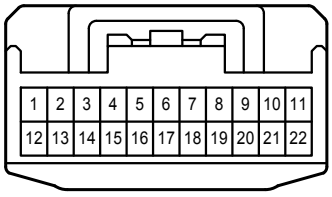


H 78
Black

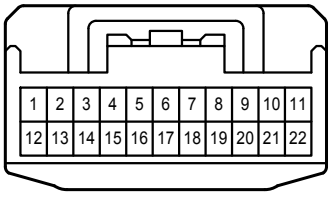


H 79
Black

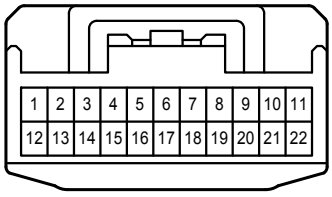


H 80
Black

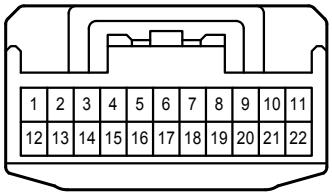


H 83
Gray

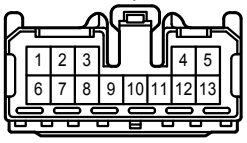


I 22
White

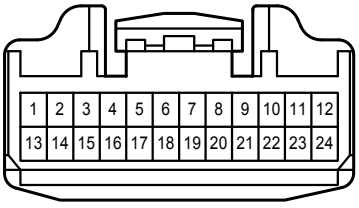


J 2
Black

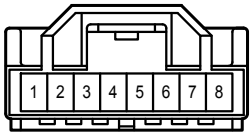


R 1
Black

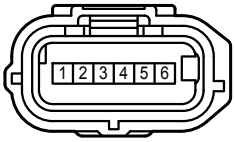


R 2
Black

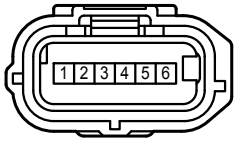


R 3
Black

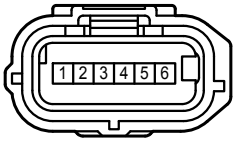


R 4
Black

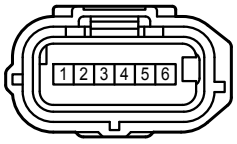


1F




3A
Black

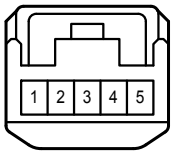


4A
Black

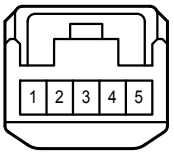


4B
White

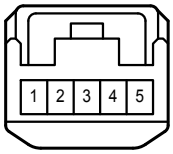


DA
White




DD
White

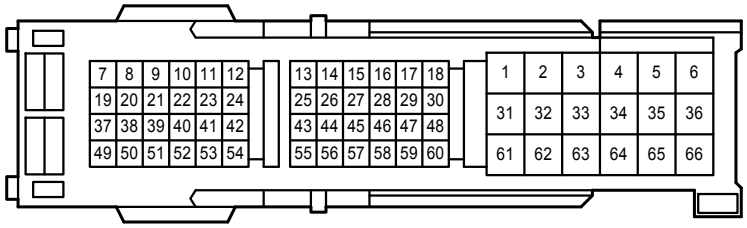


AB1
White

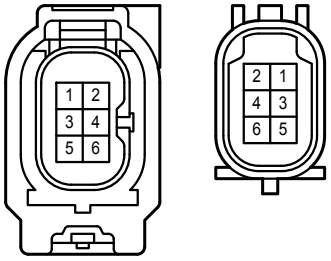


AH4
White

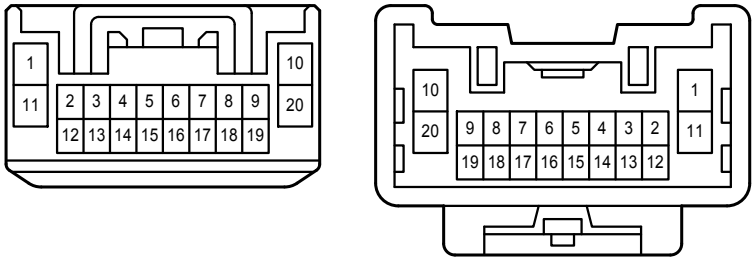


AH5
White

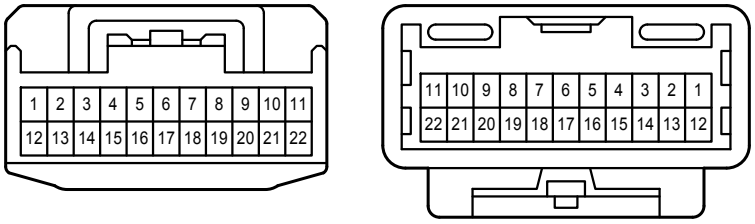


AH10
Gray

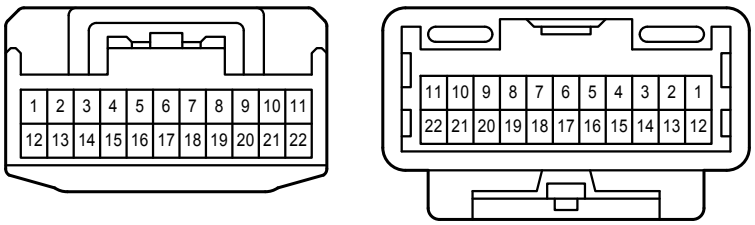


CA1
Black

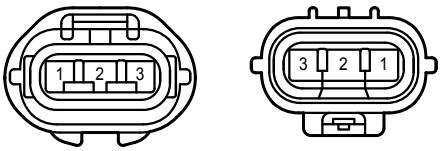


DA1
White

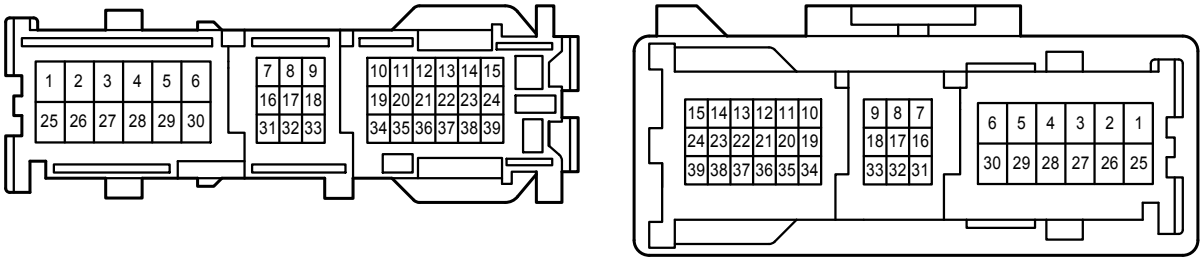


HI2
White

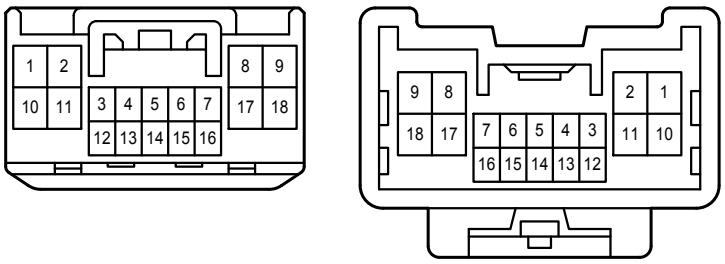

HJ1
White

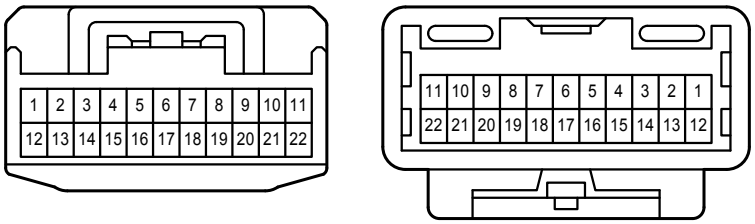

HO1
White

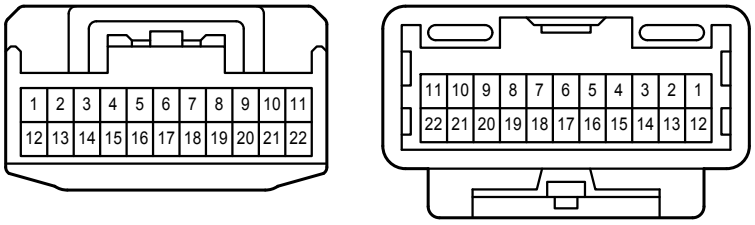

RO1
Black

