
BACK DOOR OPENING REINFORCEMENT(CUT)

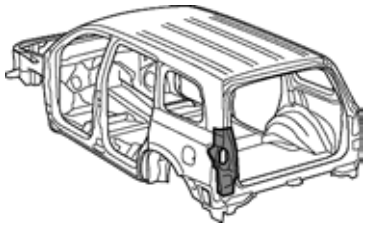

F29833A


With the back door opening side reinforcement removed.

Symbol meaning

REMOVAL	A A : Remove Weld Points	: Cut and Join Location
INSTALLATION	O I : Plug Weld	: Butt Weld

F29833B

REMOVAL·INSTALLATION

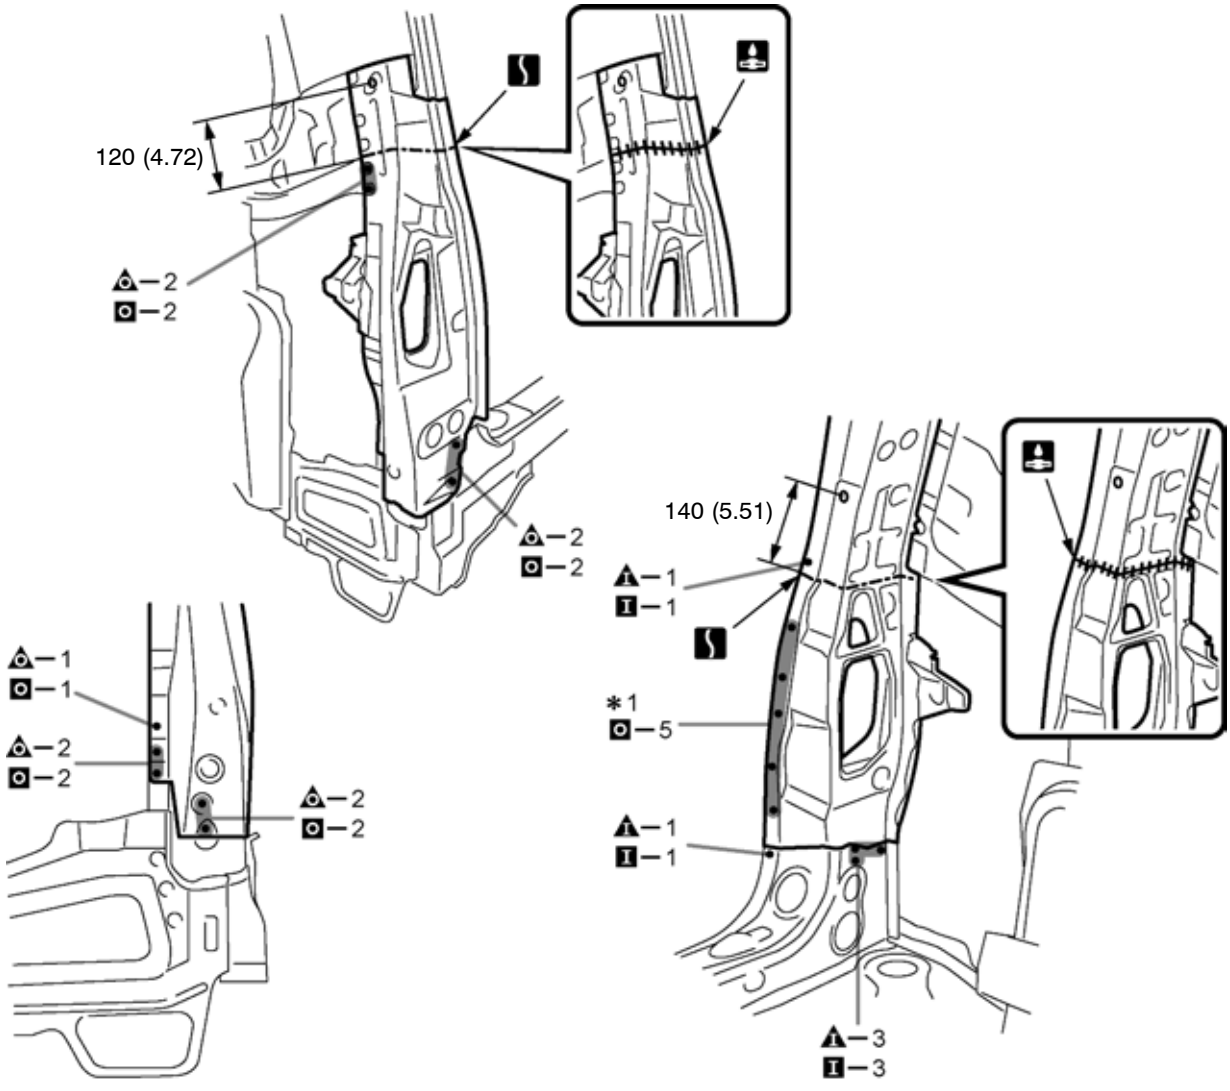

mm (in.)

F29833

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 *1 is only for installation.
3 After welding, apply foamed sealing material to the corresponding parts. (See the paint·coating)
4 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.