





(BAT)
50A
HTR
(BAT)
25A
CDS FAN
(IG)
10A
A/C IG
(BAT)
7. 5A
A/C
1 1I
2
9 DB
58 DD
SB
W
W
W
L
R
CDS FAN Relay
MG CLT Relay
5
1
3
2
2 AH6
L
1
H41
Front Blower with
Fan Motor
Sub–Assembly
+B
GND
SI
3
2
W–B
LG
GR
V
BE
R
21 A
B
H24(A), H67(B), z13(C)
A/C Amplifier Assembly
CFN+
LOCK
SG–2
39 A
8 A
13 A
5 AH9
15 AH3
4 AH9
A47
Junction
Connector
7
6
2
5
Y
G
P
R
SB
L
G
V
2
M
A34
Cooling
Fan Motor
1
4 DA3
9 DA3
1 DA3
R–L
L–W
G
3
1
2
MG+
SSR+
SSR–
Magnetic Clutch
Lock Sensor
D39
Cooler Compressor Assembly
R
P
BE
LG
H3
A3


H24(A), H67(B), z13(C)
A/C Amplifier Assembly
TAM
S5–3
PRE
MGC
BLW
GND
TR
SG–6
5 A
10 A
9 A
20 A
23 A
14 A
17 B
7 B
V
R
Y
P
LG
W–B
L
BR
11 AH3
13 AH3
12 AH3
14 AH3
19 OH2
9 OH2
1
2
3
+
PR
–
A18
Ambient Temperature Sensor
(No. 1 Cooler Thermistor)
A22
A/C Pressure Sensor
O15
Rear Room Temperature
Sensor
(Cooler Thermistor)
10
11
H83
Junction
Connector
H3
BE



H24(A), H67(B), z13(C)
A/C Amplifier Assembly
TR
SG–1
TEA
SGA
B BUS
BUS
BUS G
29 A
34 A
6 C
5 C
4 C
3 C
2 C
G
B
1
2
H16
Front Room Temperature Sensor
(Cooler Thermistor)
A/C Evaporator
Temperature Sensor
Connector
Housing Color (Black)
Connector
Housing Color (Natural)
M
M
Damper Servo Motor
(Air Inlet)
Damper Servo Motor
(Cool Air Bypass)
z13(C)
Front A/C Blower Assembly

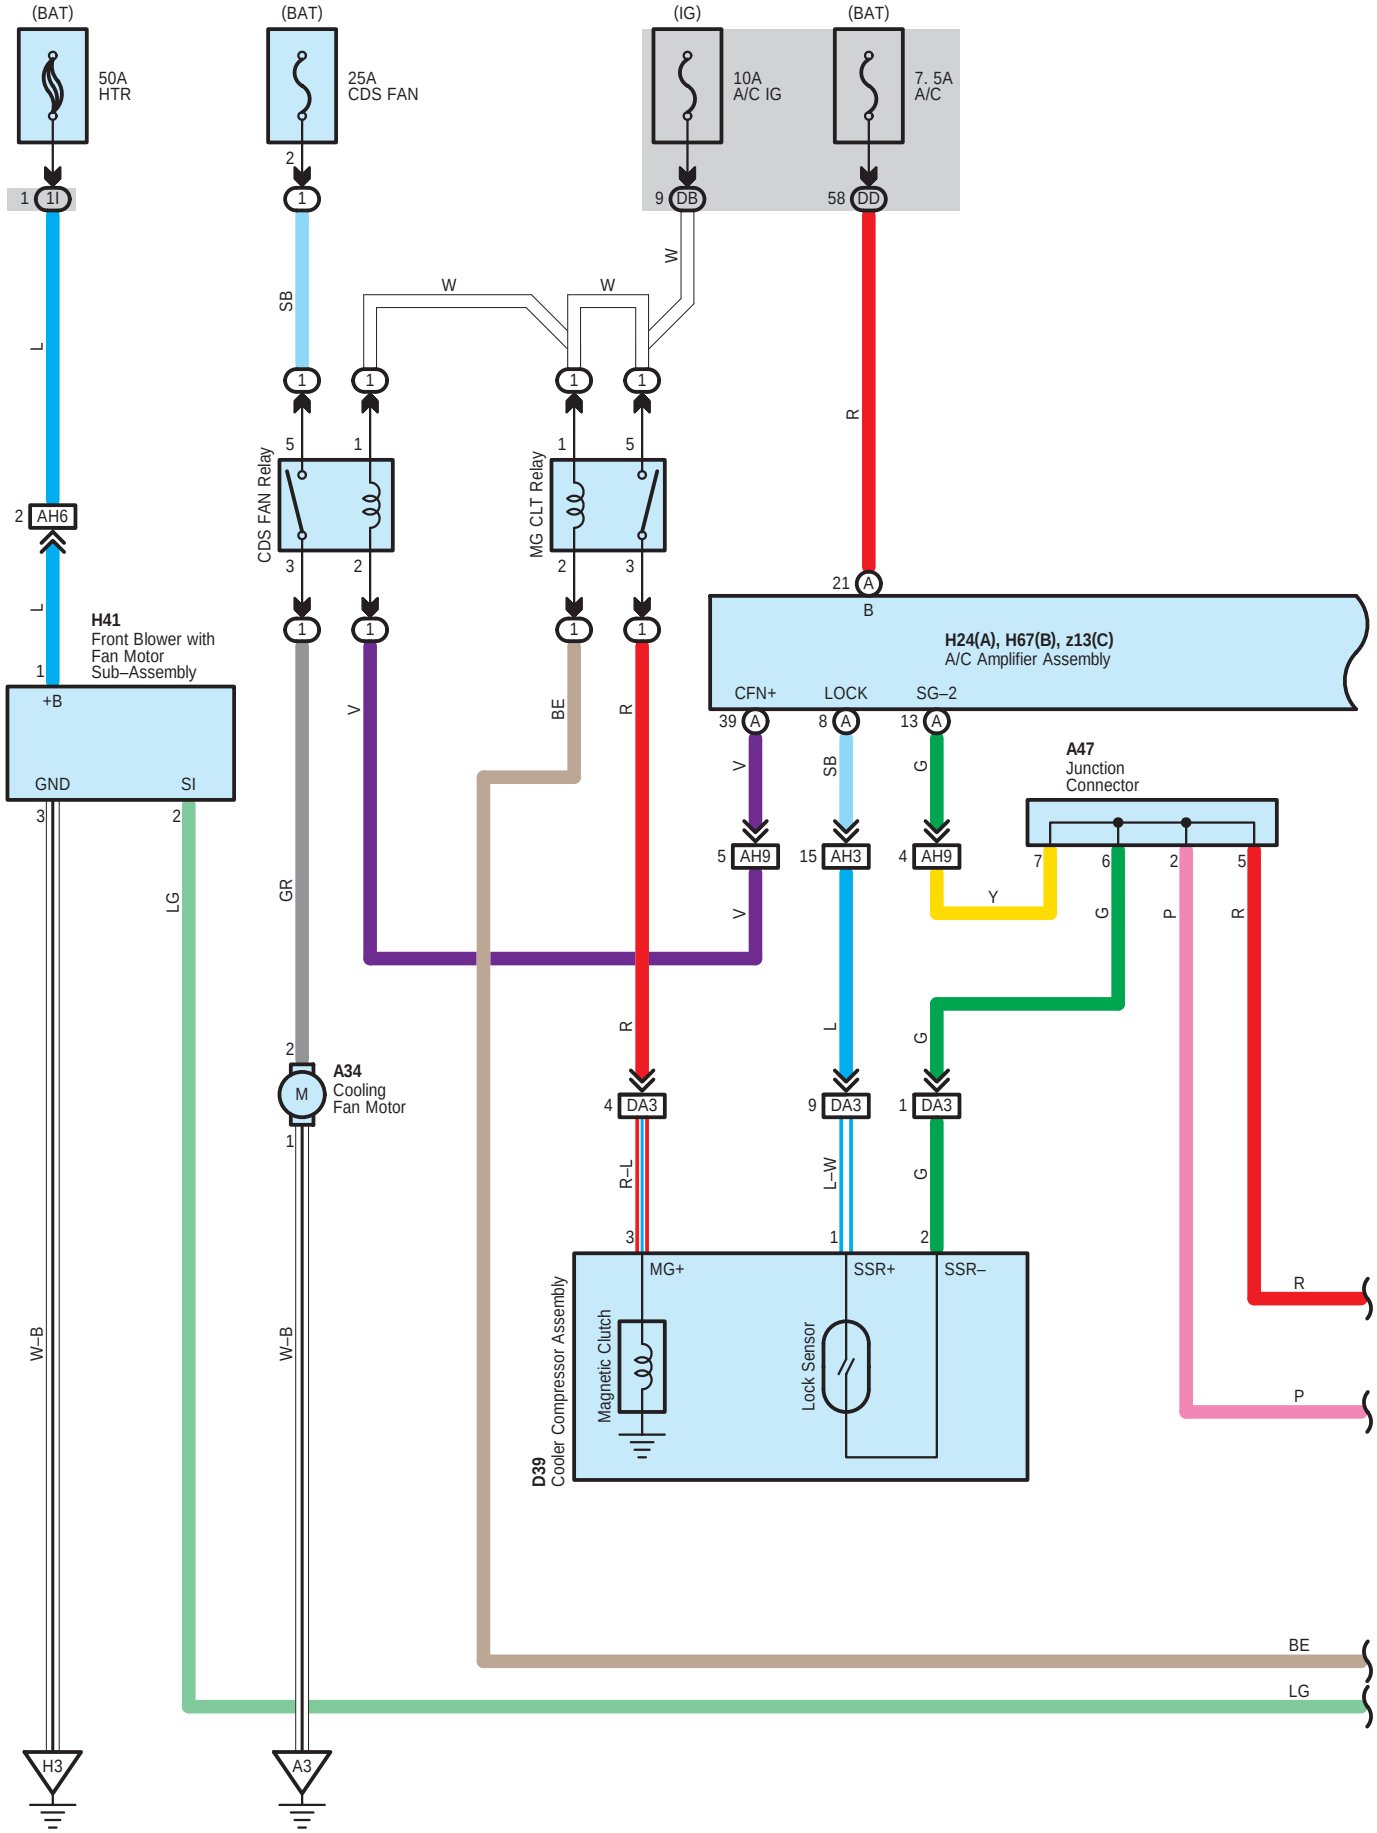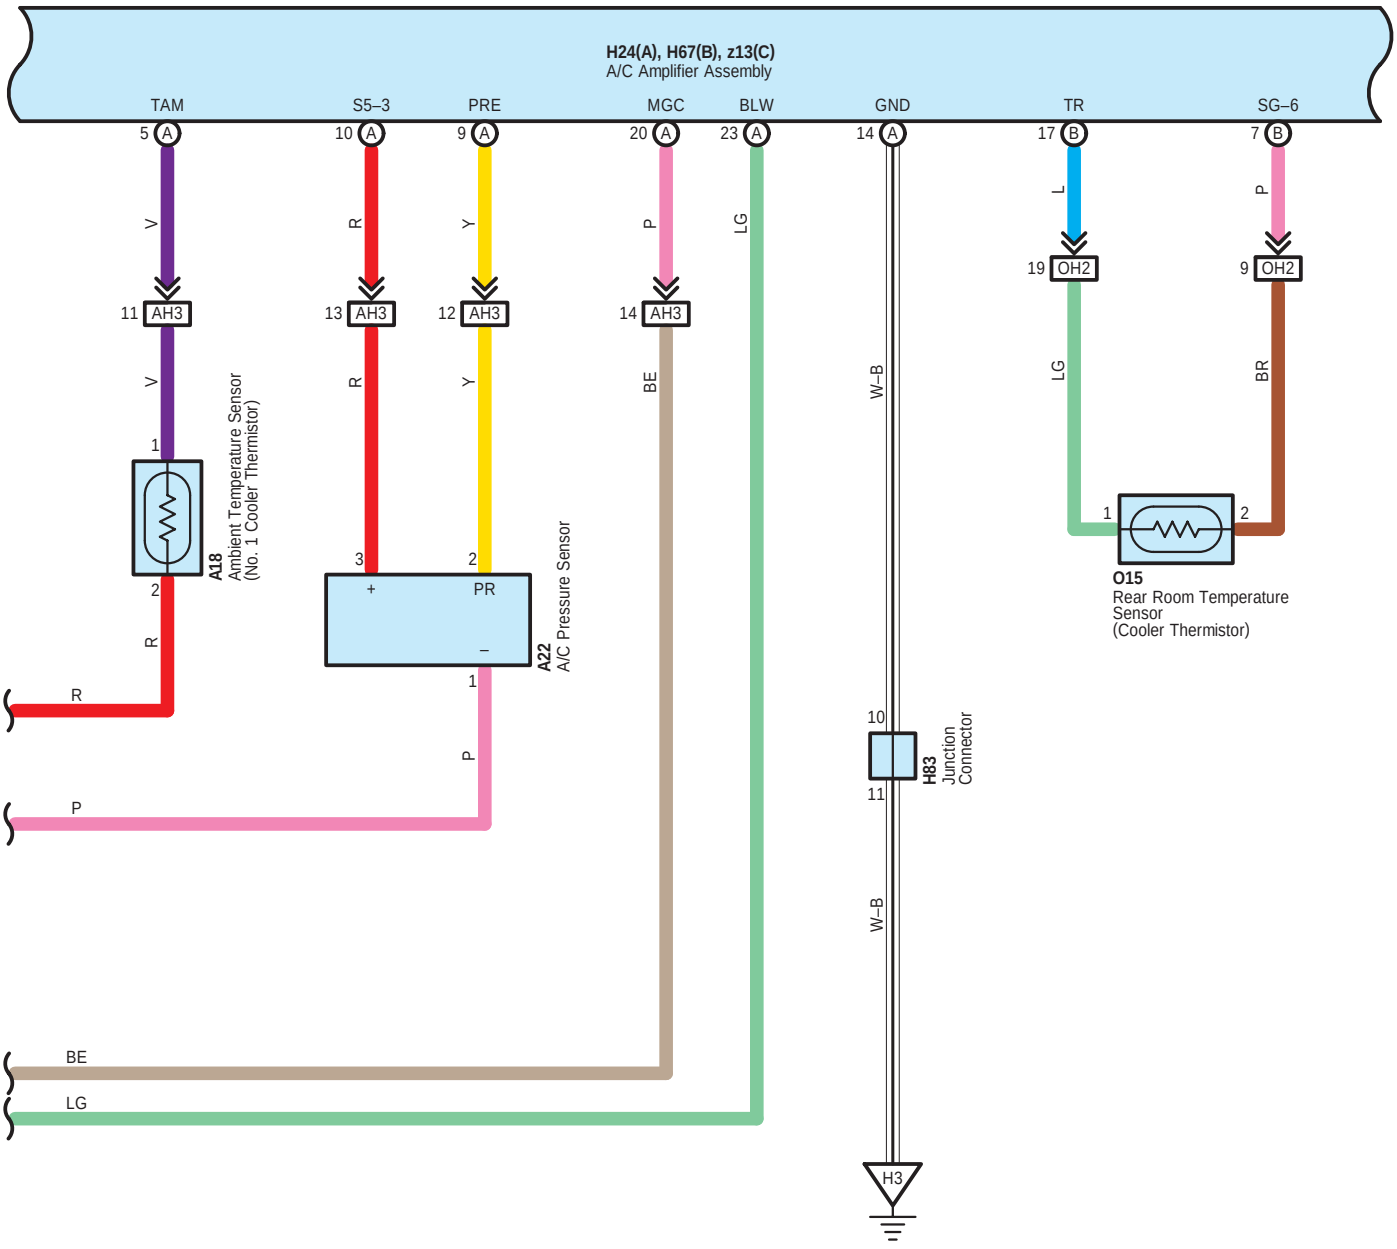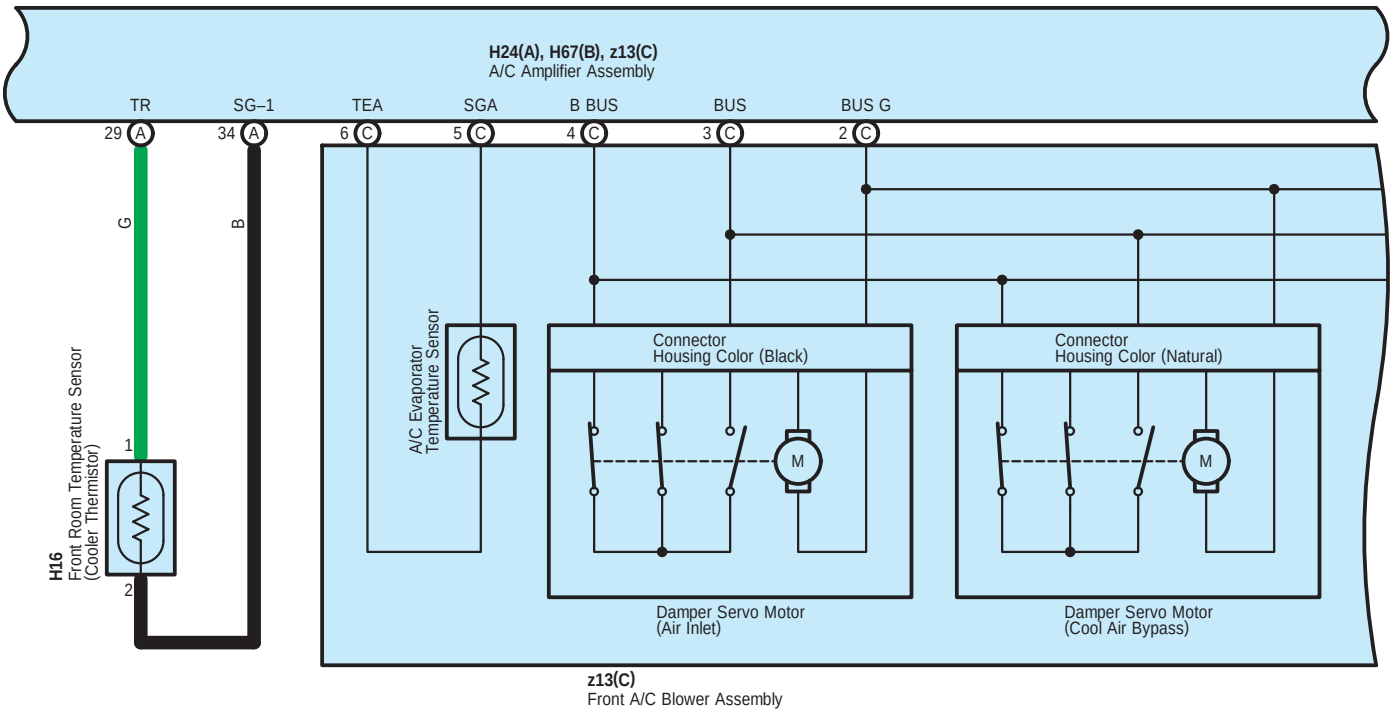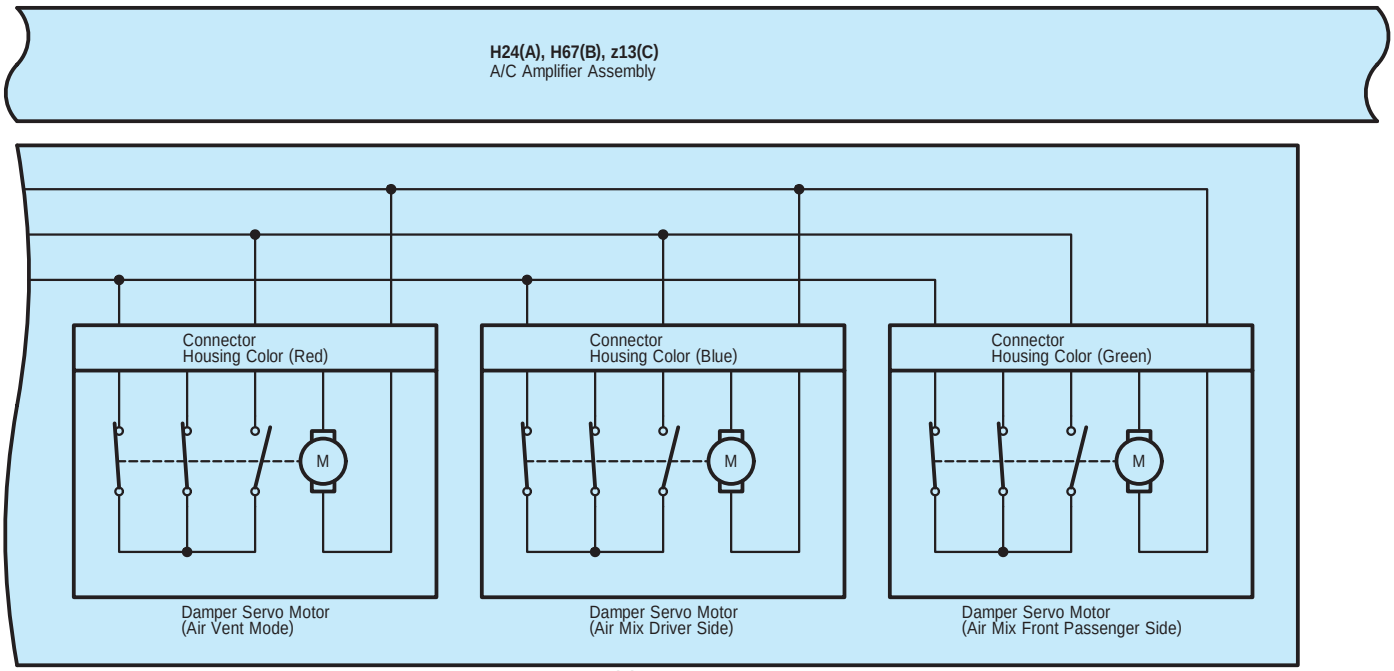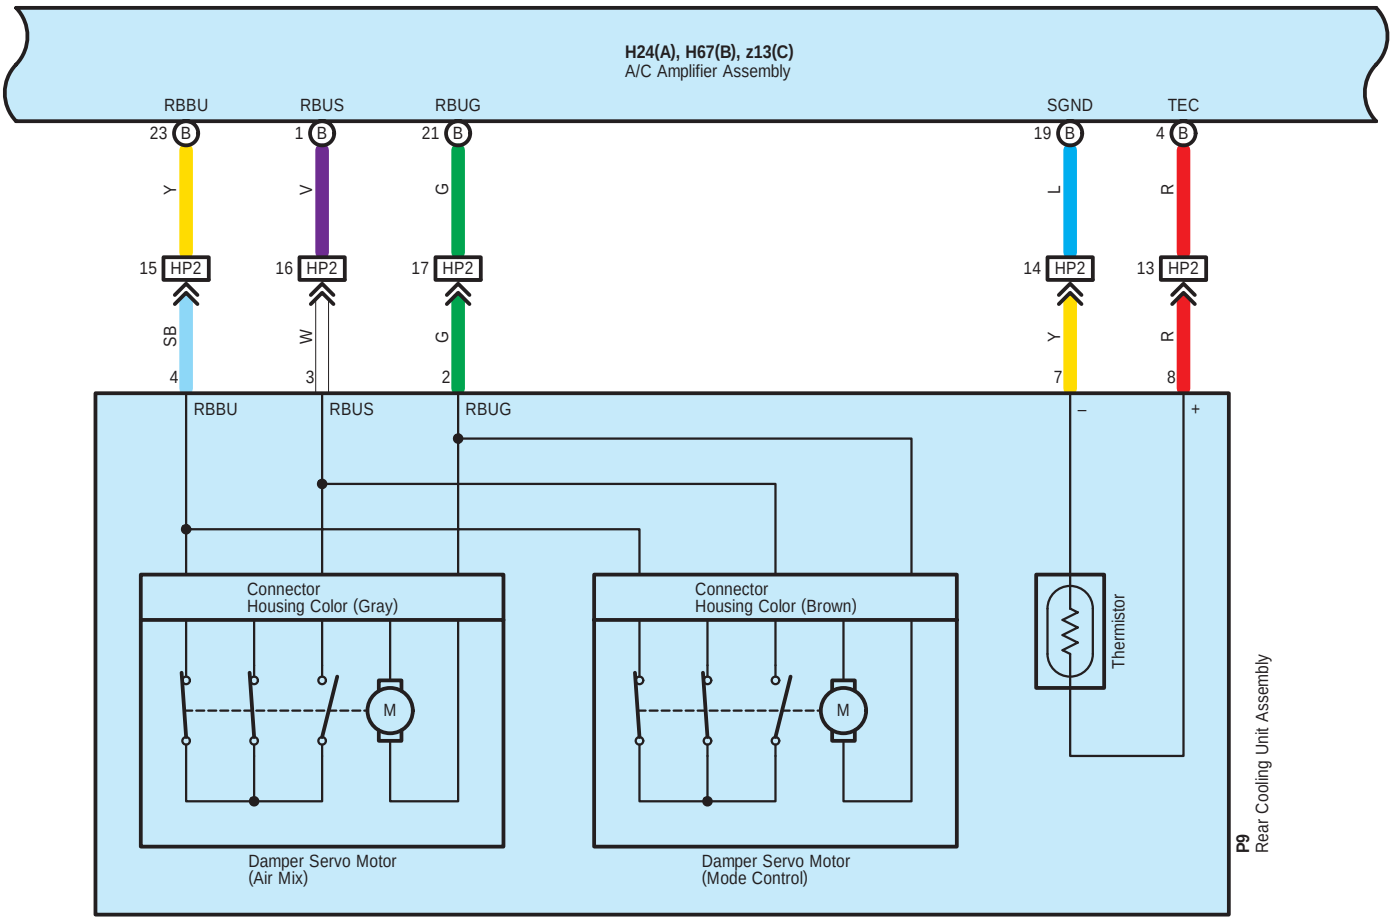


z13(C)
Front A/C Blower Assembly



H24(A), H67(B), z13(C)
A/C Amplifier Assembly
RBBU
RBUS
RBUG
SGND
TEC
23 B
1 B
21 B
19 B
4 B
Y
V
G
L
R
15 HP2
16 HP2
17 HP2
14 HP2
13 HP2
SB
W
G
Y
R
4
3
2
7
8
RBBU
RBUS
RBUG
–
+
Connector
Housing Color (Gray)
Connector
Housing Color (Brown)
M
M
Thermistor
Damper Servo Motor
(Air Mix)
Damper Servo Motor
(Mode Control)
P9
Rear Cooling Unit Assembly


* 8 : w/ Electronic Modulated Air Suspension
* 9 : w/o Electronic Modulated Air Suspension

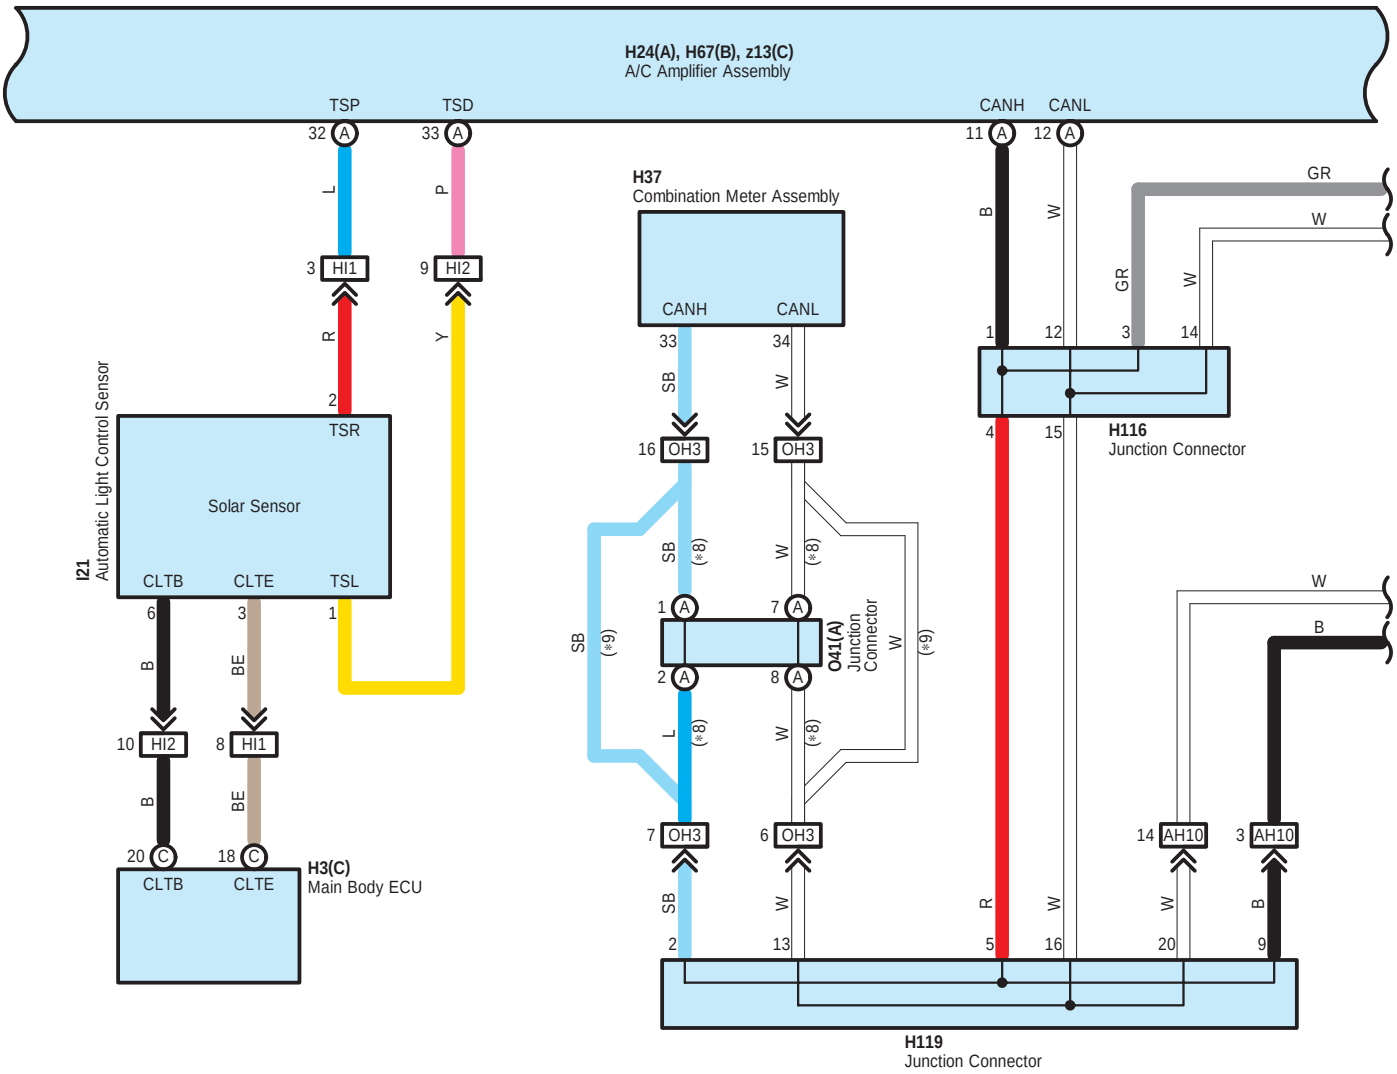

∗ 1 : 3UR–FE, 3UR–FBE
∗ 2 : 1UR–FE
∗ 3 : Outer Rear View Mirror w/o Turn Signal Light
∗ 4 : Outer Rear View Mirror w/ Turn Signal Light

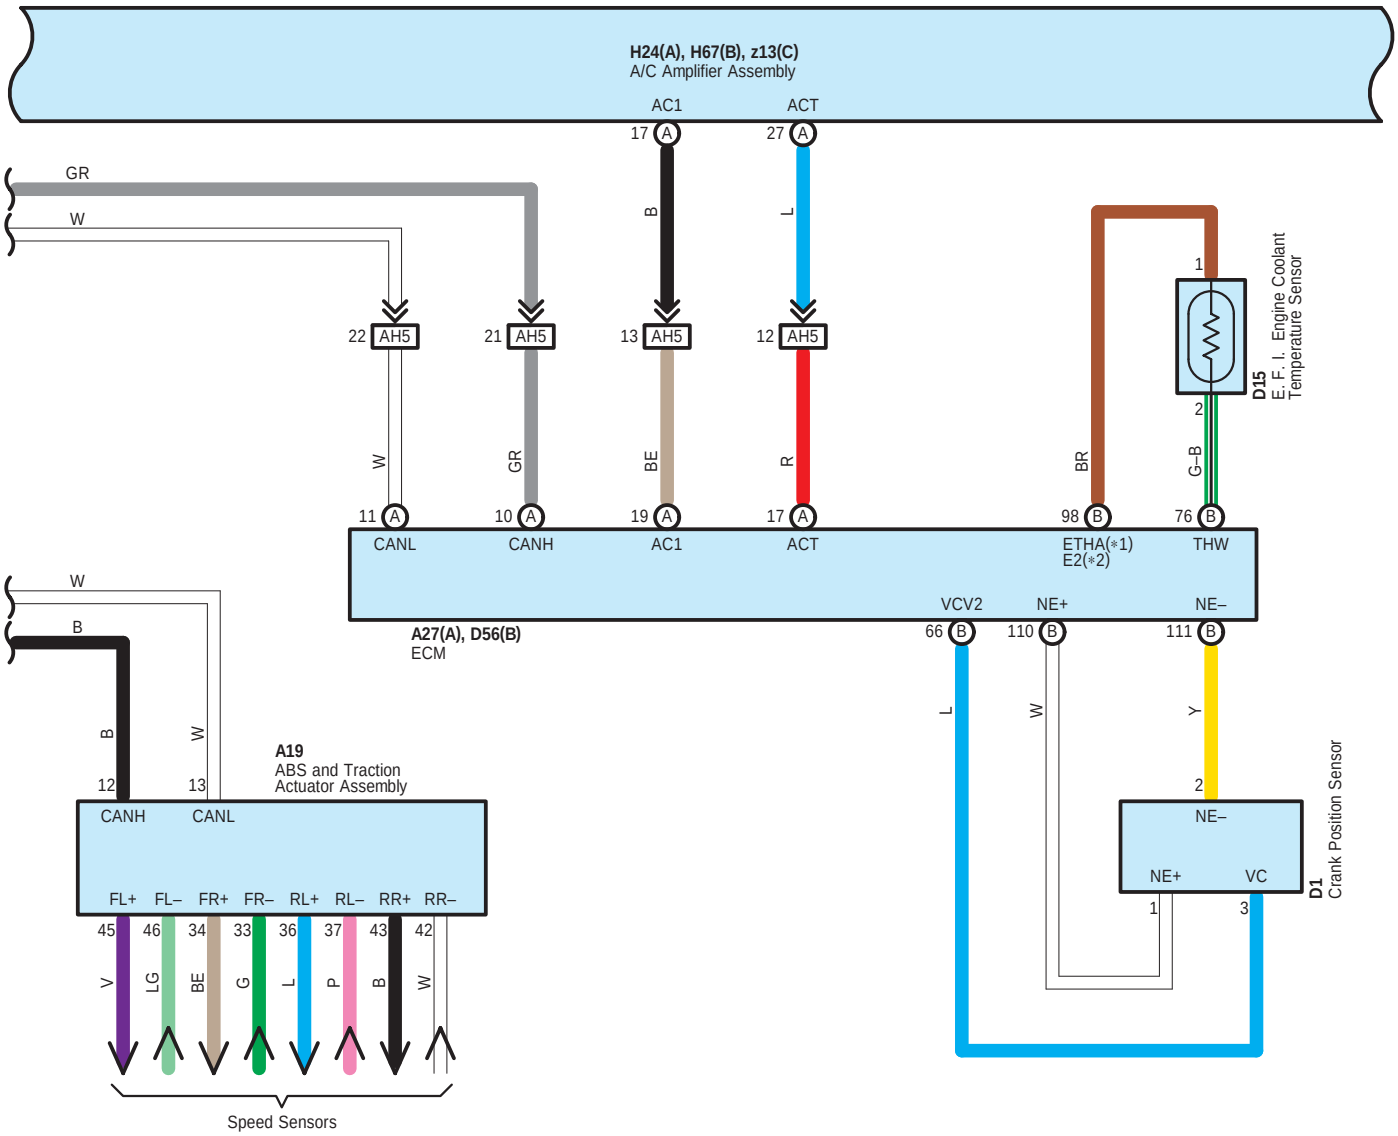

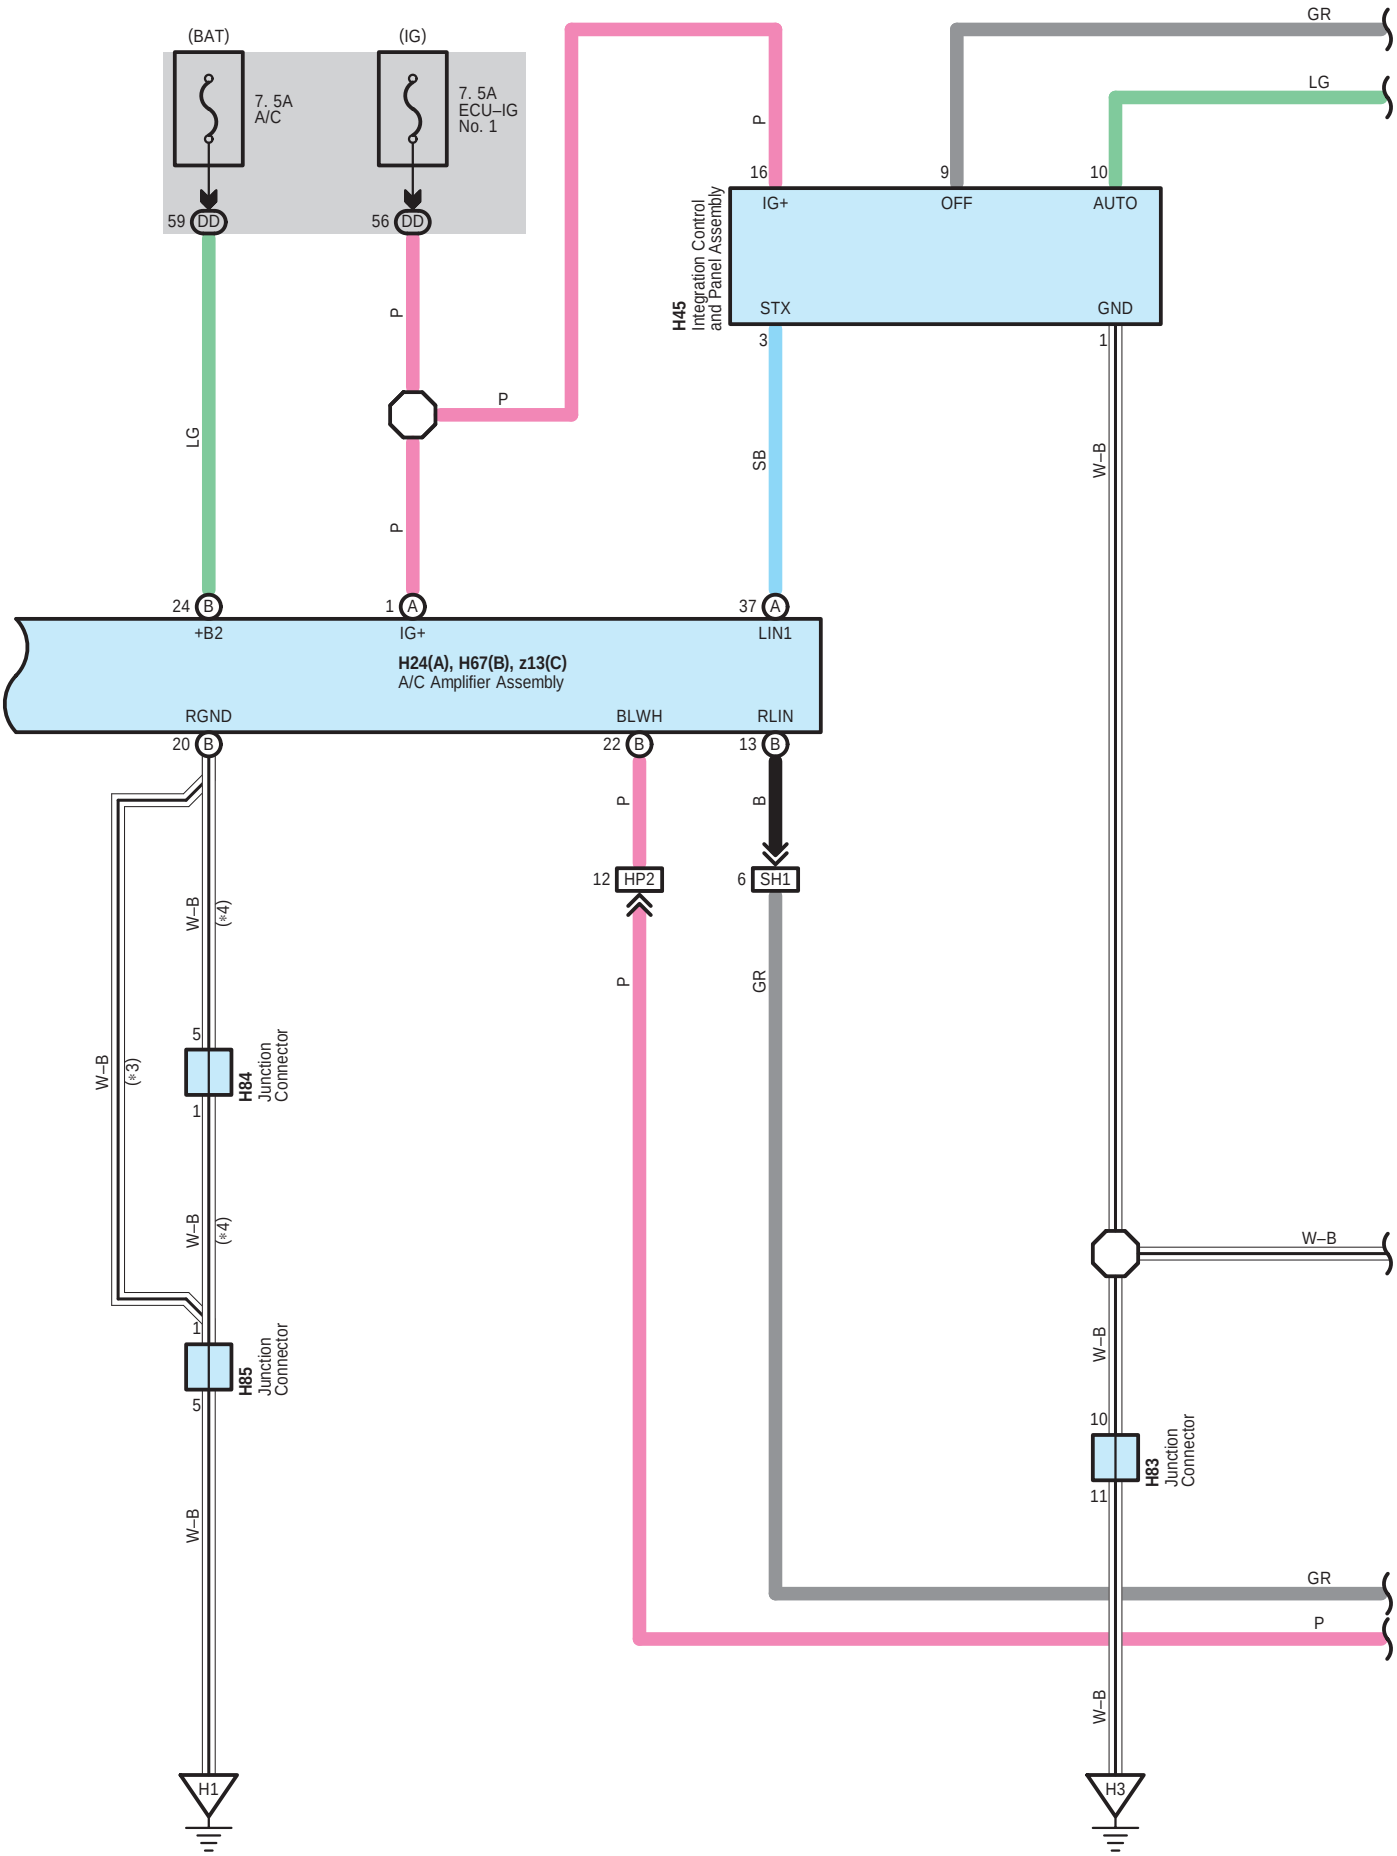

(BAT)
(IG)
7. 5A
A/C
7. 5A
ECU–IG
No. 1
59 DD
56 DD
LG
P
P
P
24 B
+B2
1 A
IG+
37 A
LIN1
H24(A), H67(B), z13(C)
A/C Amplifier Assembly
RGND
BLWH
RLIN
20 B
22 B
13 B
B
12 HP2
6 SH1
GR
W–B
(*4)
5
H84
Junction
Connector
1
W–B
(*3)
W–B
(*4)
1
H85
Junction
Connector
5
W–B
H1
H45
Integration Control
and Panel Assembly
16
IG+
9
OFF
10
AUTO
STX
3
SB
GND
1
W–B
GR
LG
W–B
W–B
10
H83
Junction
Connector
11
GR
P
W–B
H3

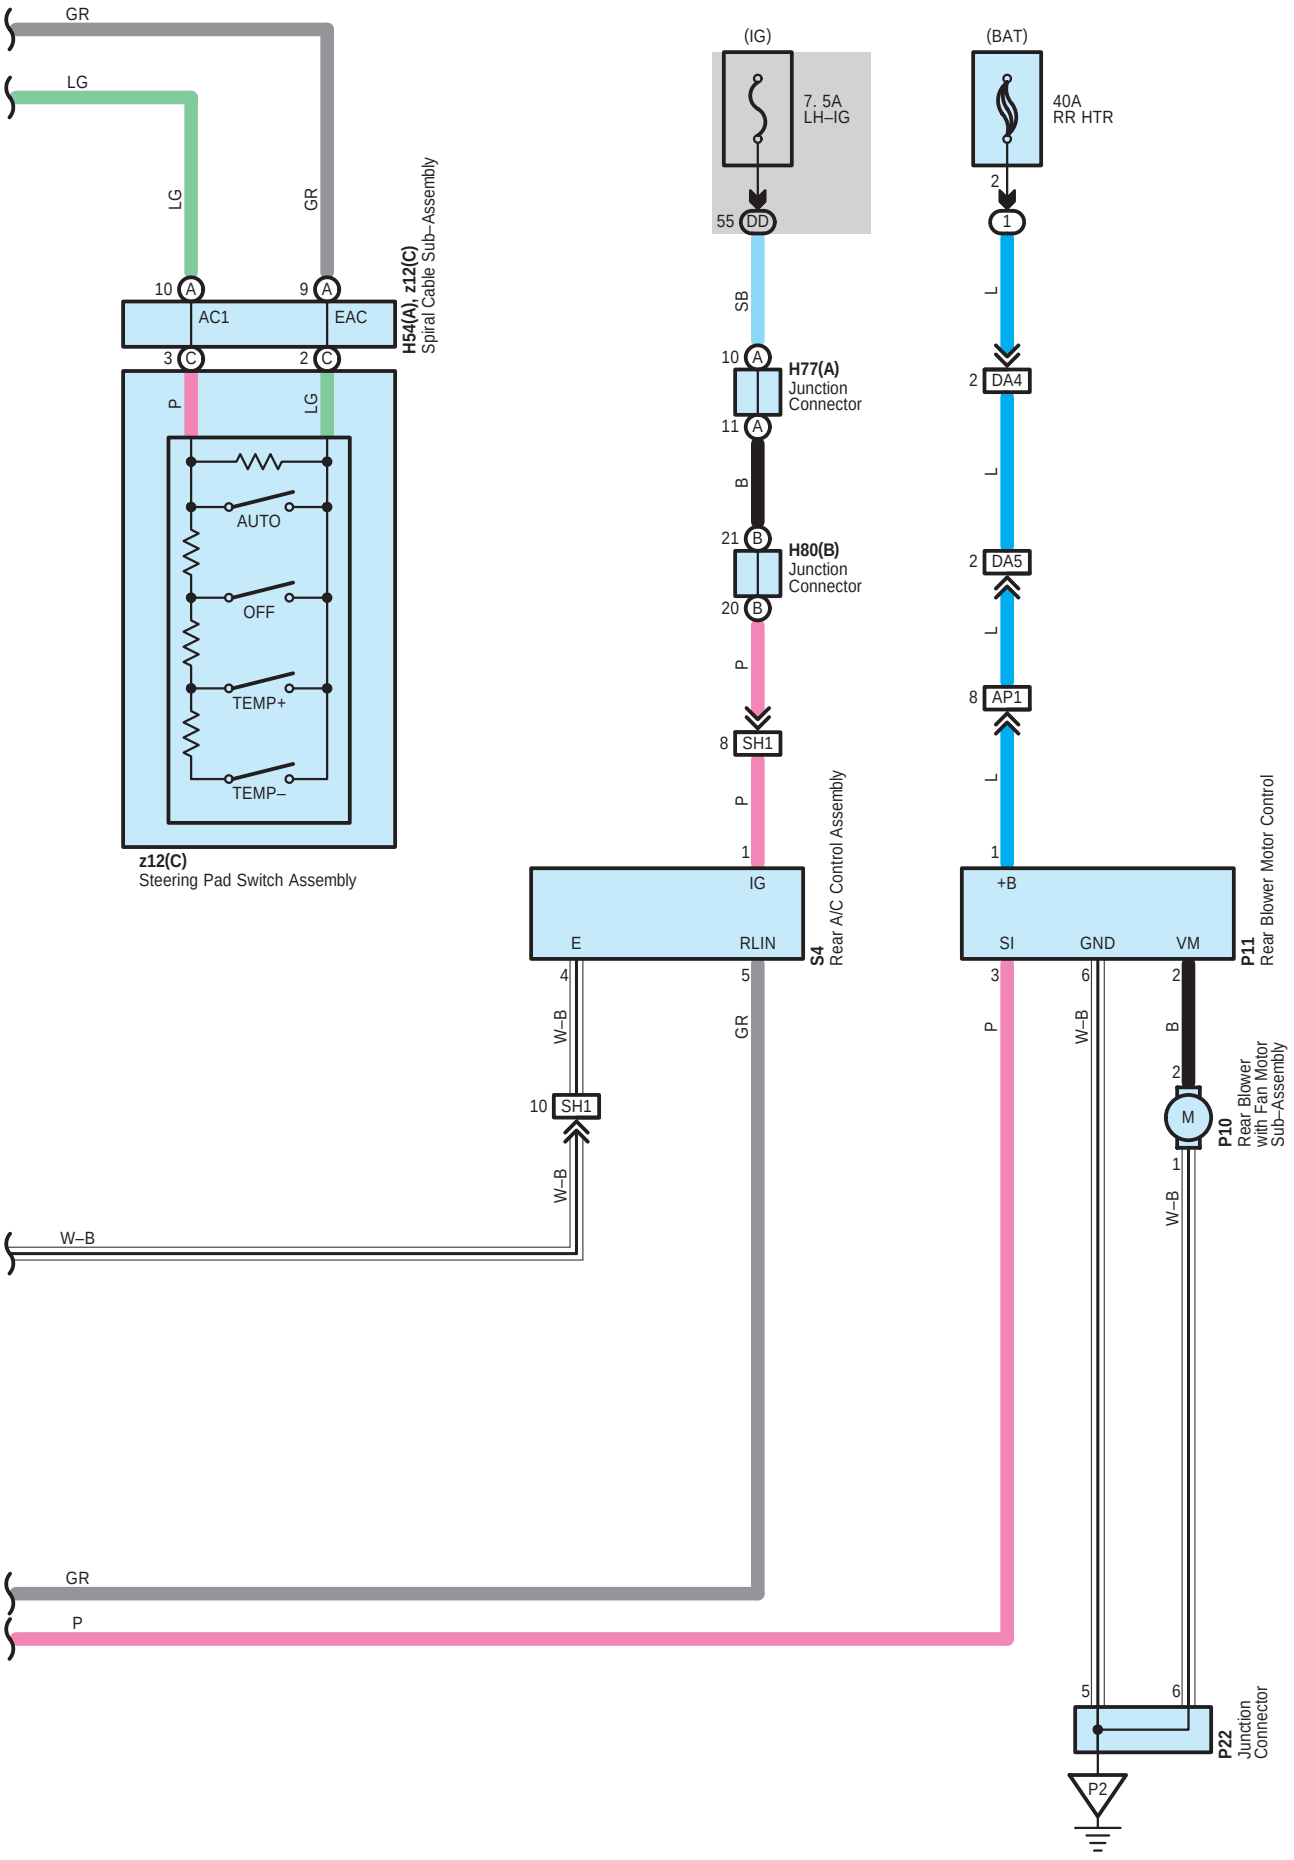
GR
LG
LG
GR
10 A
9 A
AC1
EAC
H54(A), z12(C)
Spiral Cable Sub–Assembly
3 C
2 C
P
LG
AUTO
OFF
TEMP+
TEMP–
z12(C)
Steering Pad Switch Assembly
(IG)
7. 5A
LH–IG
55 DD
SB
10 A
H77(A)
Junction
Connector
11 A
B
21 B
H80(B)
Junction
Connector
20 B
P
8 SH1
P
1
IG
E
RLIN
S4
Rear A/C Control Assembly
4
5
W–B
GR
10 SH1
W–B
W–B
(BAT)
40A
RR HTR
2
1
L
2 DA4
L
2 DA5
L
8 AP1
L
1
+B
SI
GND
VM
P11
Rear Blower Motor Control
3
6
2
P
W–B
B
2
M
P10
Rear Blower
with Fan Motor
Sub–Assembly
1
W–B
GR
P
5
6
P22
Junction
Connector
P2


A 18
Black




A 19
Black

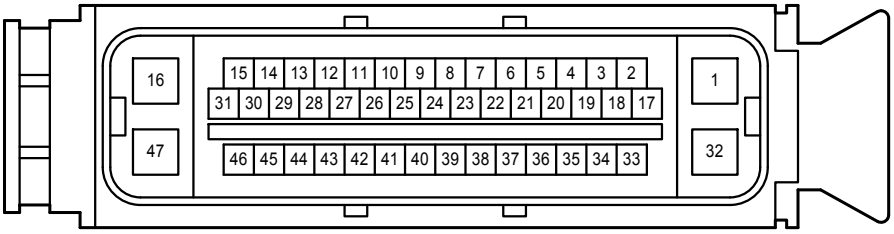

A 22
Black

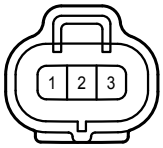


A 27
Black

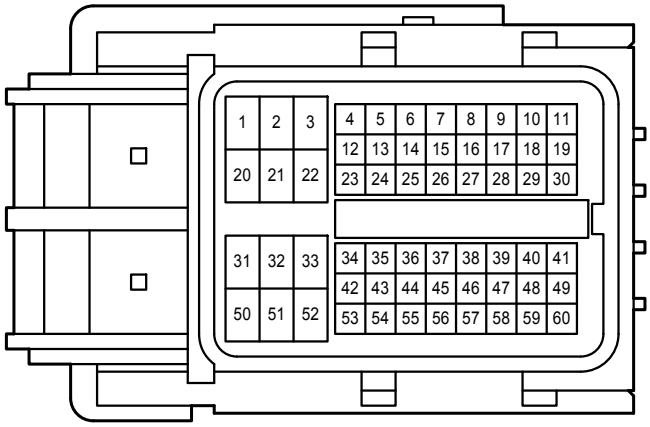


A 34
Black



A 47
White

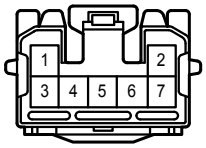

D 1
Black

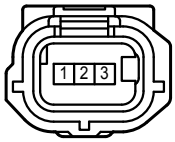


D 15
Dark Gray




D 39
Gray




D 56
Black

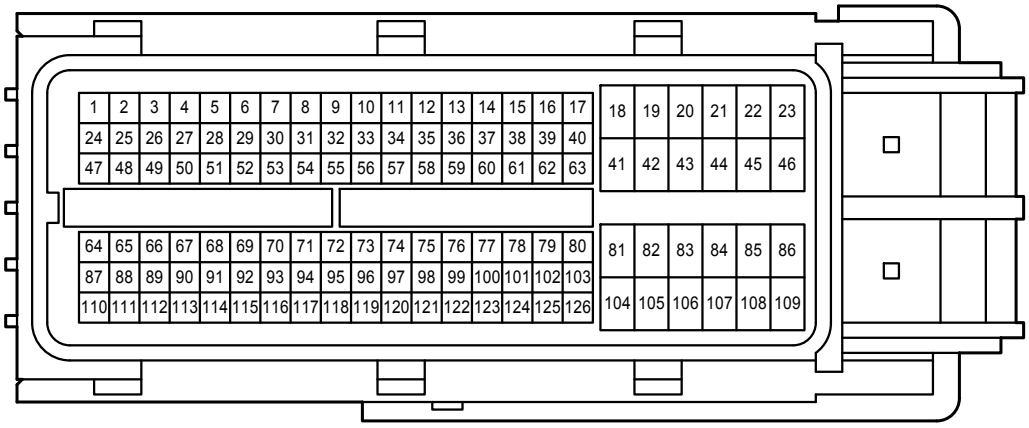


H 3
White

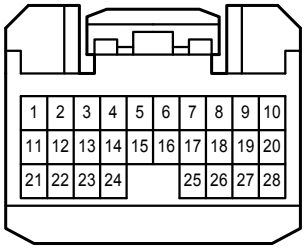


H 16
Black




H 24
White

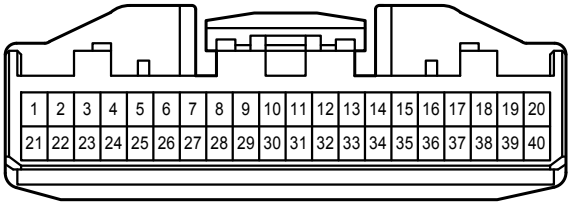


H 37
White

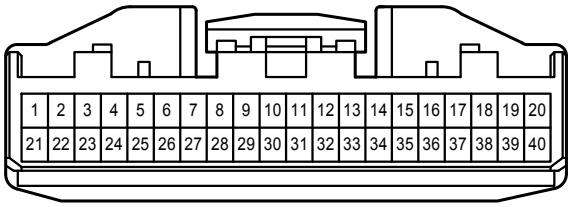

H 41
Black

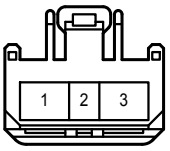


H 45
White

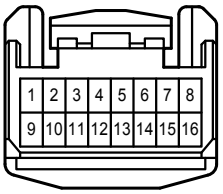


H 54
Black




H 67
White

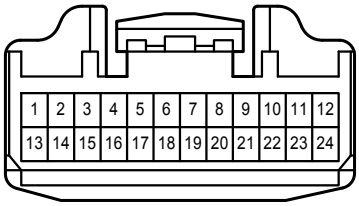


H 77
Black

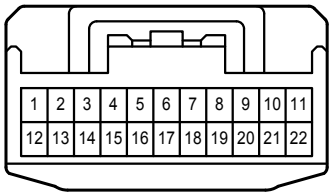


H 80
Black

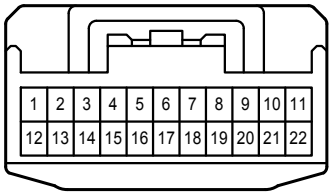


H 83
Gray

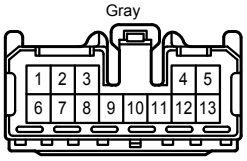


H 84
White

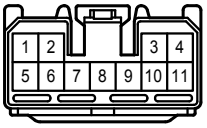


H 85
White

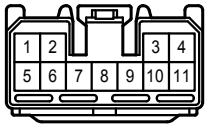


H116
Gray

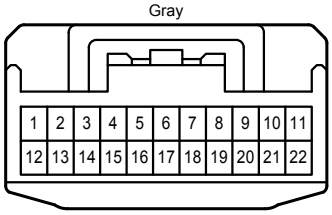

H119
White

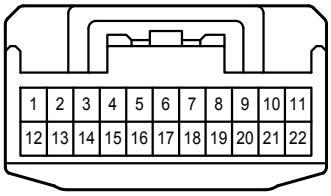


I 21
Black

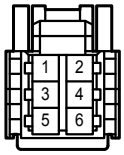


O 15
Black




O 41
White

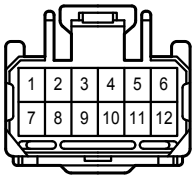


P 9
White

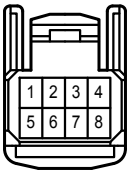


P 10
Black

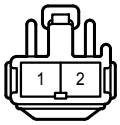


P 11
Black

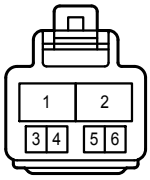


P 22
White

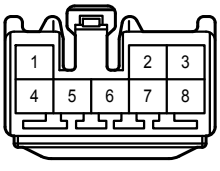


S 4
White

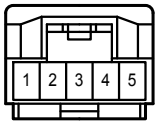


z 12
White

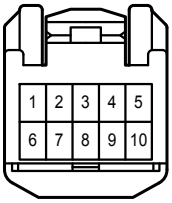


z 13
White

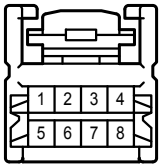


1I
White

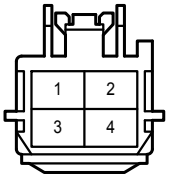


DB
White

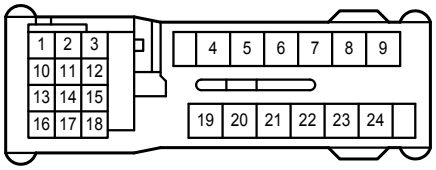


DD
White

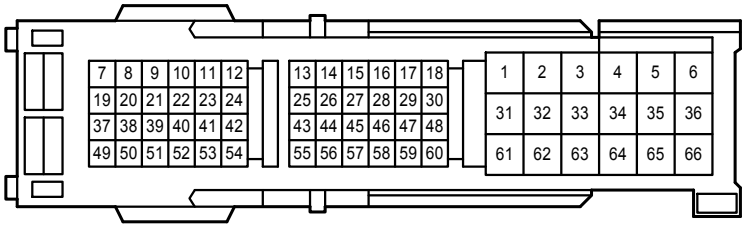


AH3
White

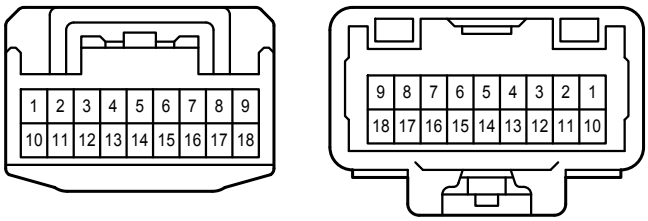


AH5
White

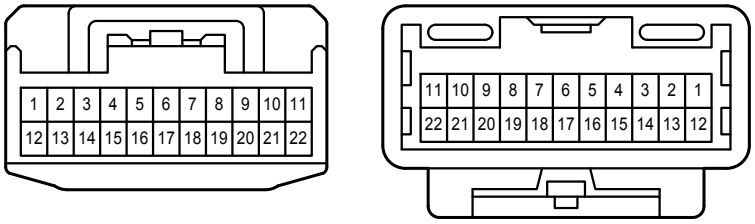


AH6
Gray

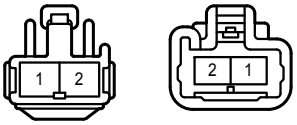


AH9
Gray

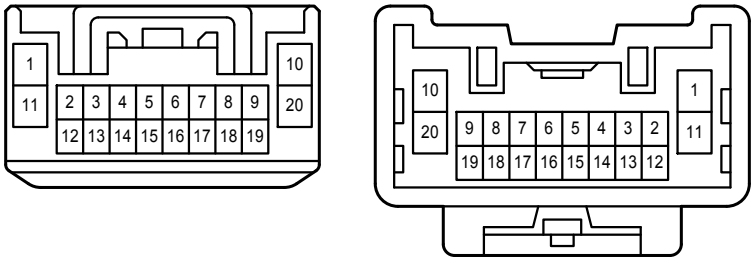


AH10
Gray

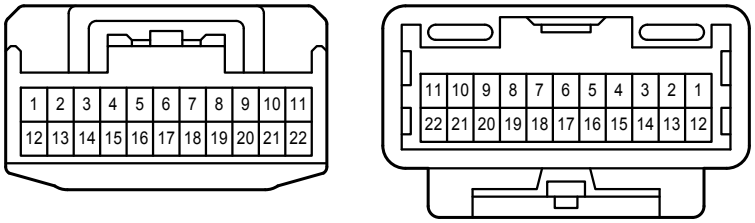


AP1
White

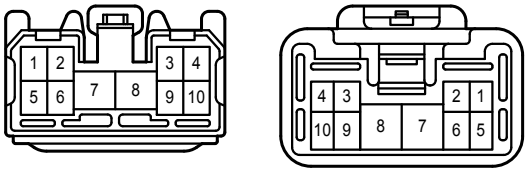


DA3
White

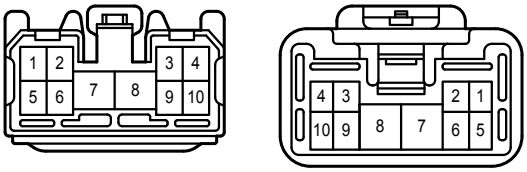


DA4
White

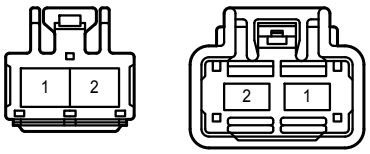


DA5
White

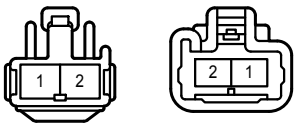


HI1
White

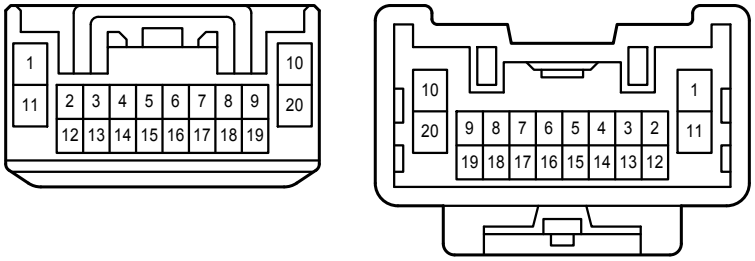


HI2
White

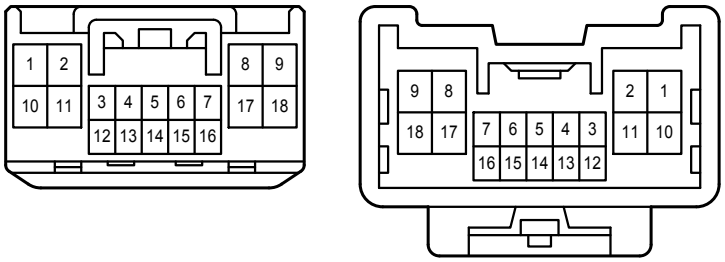


HP2
Gray

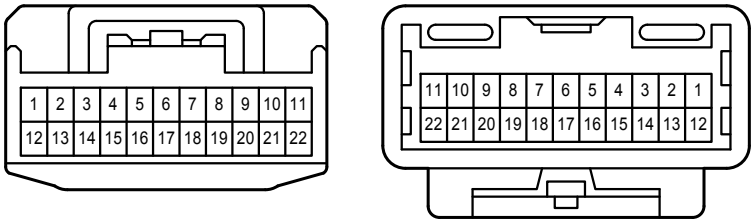

OH2
Black

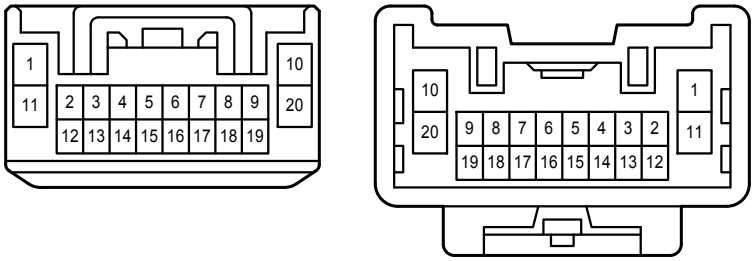

OH3
White

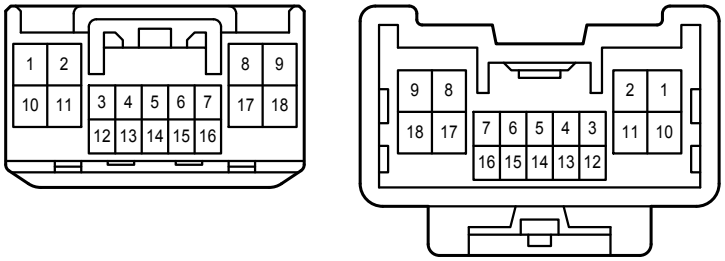

SH1
White

