
■WARNING METHOD

The timing chart of the buzzer and details of the warning method are shown below.

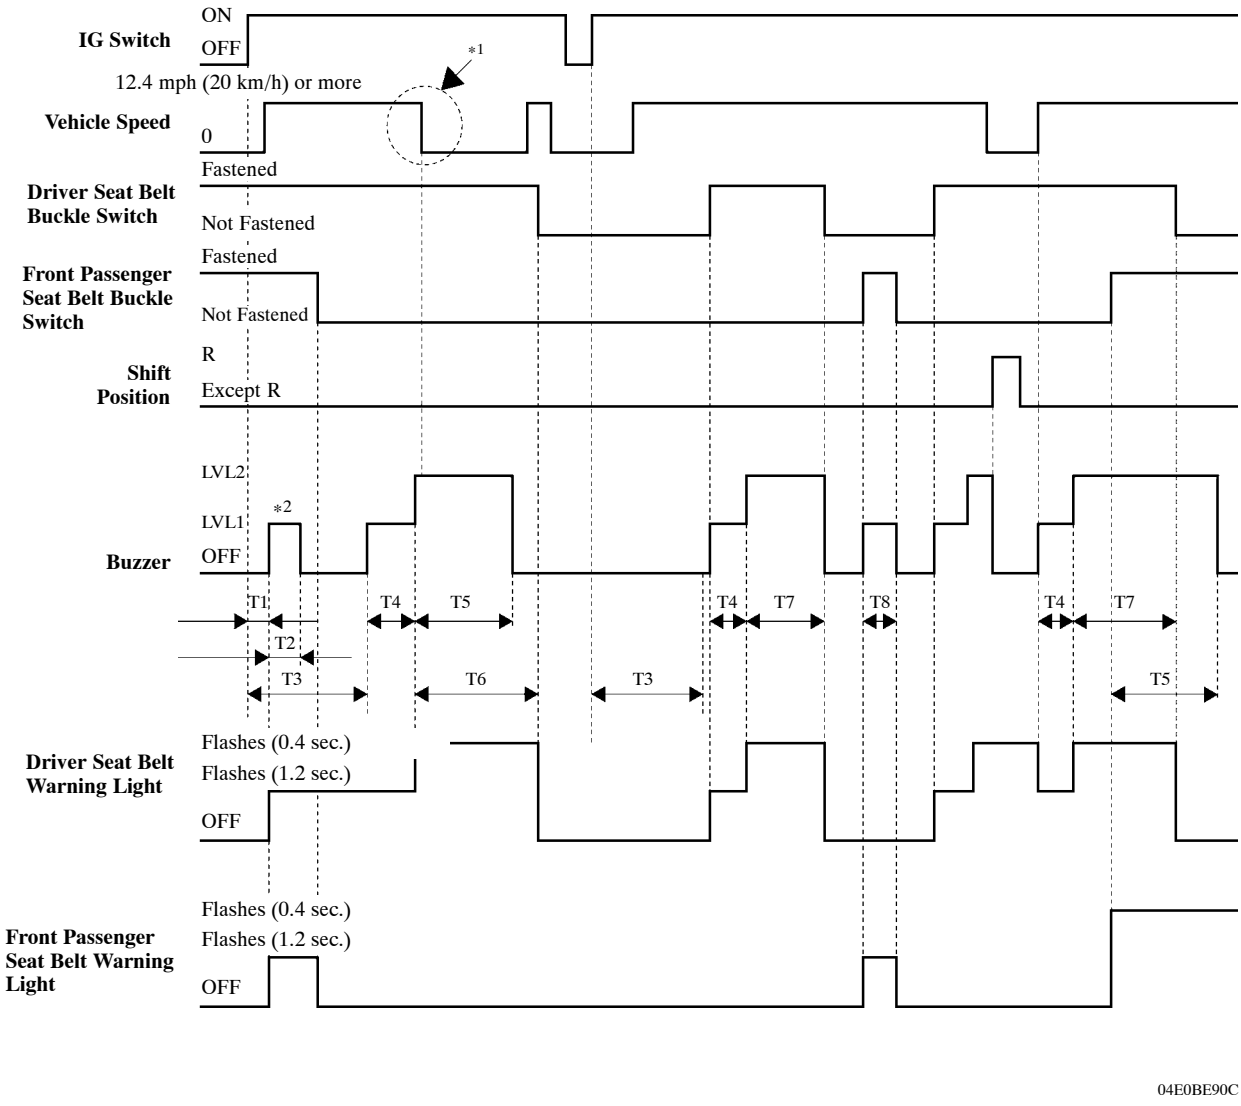

04E0BE90C

*1: If the vehicle speed drops below the setting level for seat belt warning after a buzzer starts to sound, the buzzer will continue to sound. After the vehicle speed exceeds 12.4 mph (20 km/h) again, the buzzer will stop.

*2: Legally Mandated Buzzer

T1: About 1.8 sec. T5: About 20 sec.
T2: About 1.2 sec. T6: About 20 sec. or more
T3: About 13.8 sec. T7: About 20 sec. or less
T4: About 9.6 sec. T8: About 9.6 sec. or less