SEAT BELT WARNING SYSTEM

■ DESCRIPTION

If a seat belt is not fastened, this system flashes the seat belt warning light and sounds the buzzer in the combination meter as a reminder.


- The seat belt warning buzzer for the front passenger can be cancelled. However, the legally mandated minimum operation of the buzzer cannot be cancelled. For details, see page BE-135.
- When the ignition switch is turned to ON, this system detects the condition of the seat belts based on the signals indicated below:

Seat	Signal	Warning Method
Driver	Seat Belt Buckle Switch LH (Contact Type)	● Buzzer Sounds ● Warning Light Flashes
Front Passenger	● Seat Belt Buckle Switch RH (Non-contact Type) ● 4 Occupant Classification Sensors (Though the Occupant Classification ECU)	● Buzzer Sounds ● Warning Light Flashes

Service Tip

Buzzer Warning Cancel Mode Setting
Buzzer warning cancel mode can be set using the Intelligent Tester II. For details, refer to the SEQUOIA Repair Manual (Pub. No. RM11Y0E).

■ SYSTEM DIAGRAM

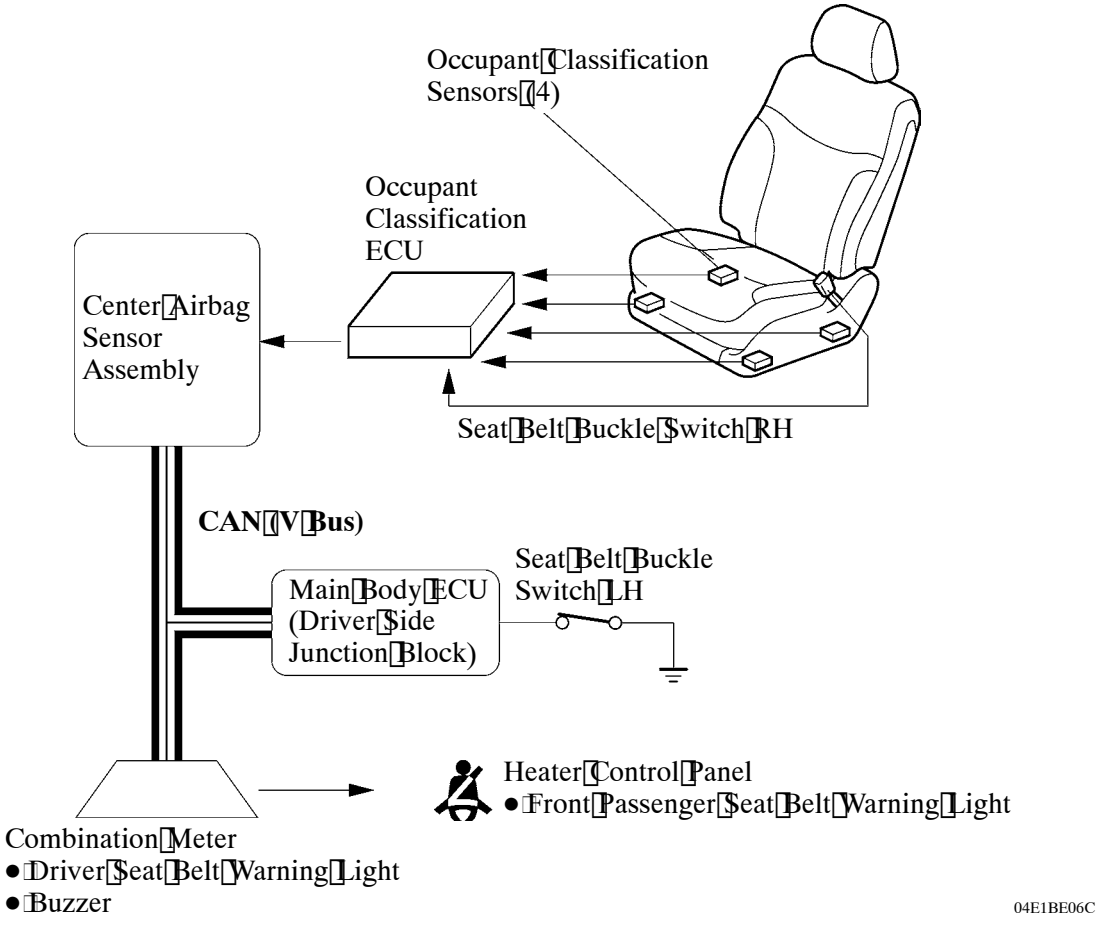

BE