
■ WARNING METHOD

The timing chart of the buzzer and details of the warning method are shown below:

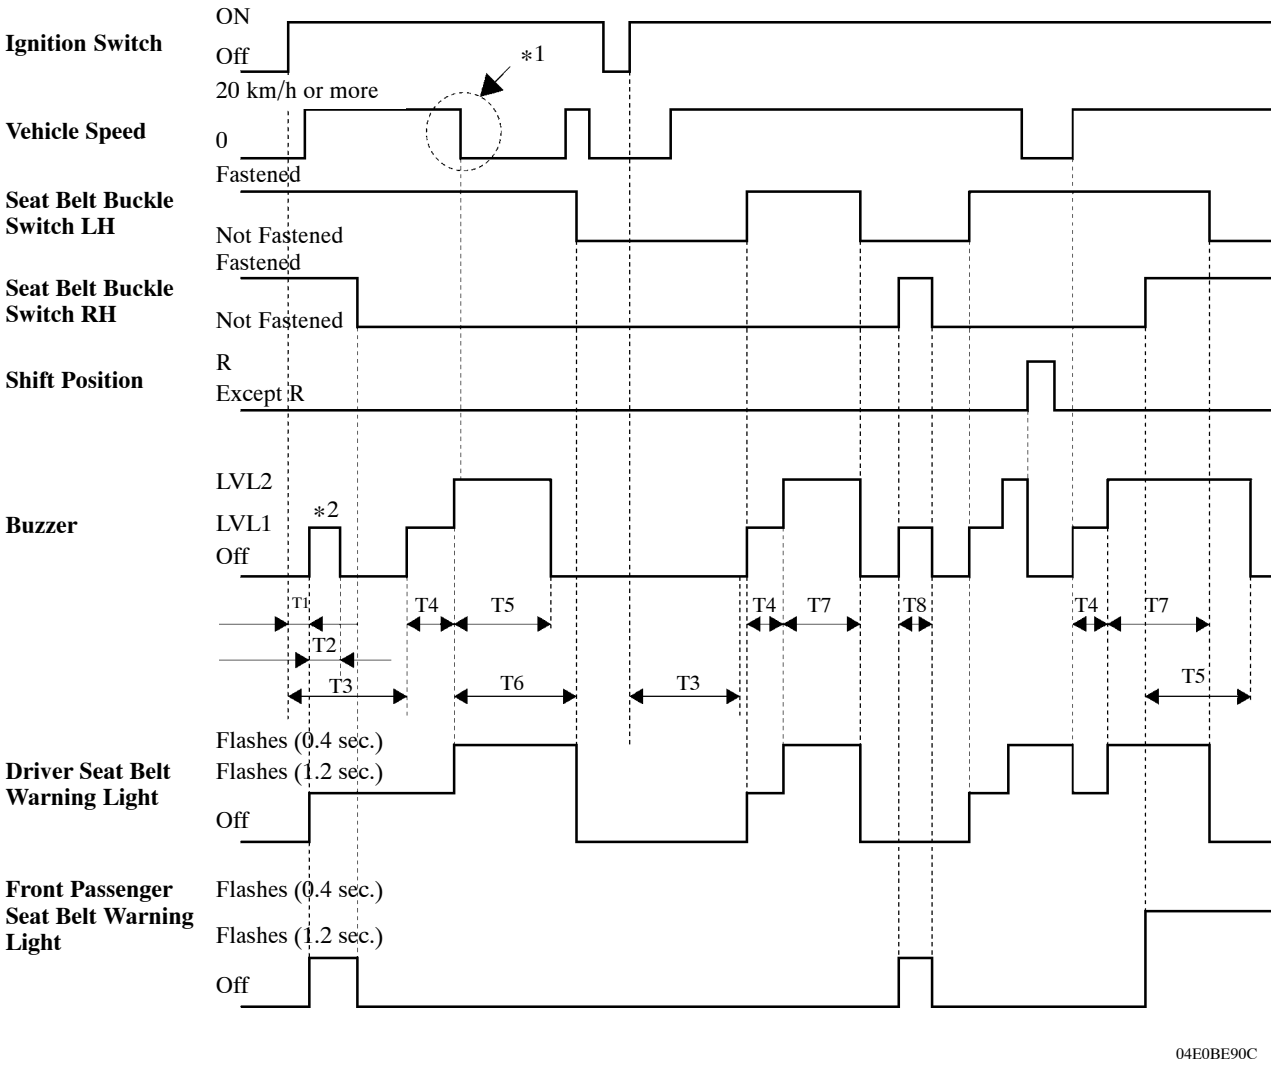

*1: If the vehicle speed drops below the setting level for seat belt warning after a buzzer starts to sound, the buzzer will continue to sound. After the vehicle speed exceeds 20 km/h again, the buzzer will stop.

*2: Legally mandated buzzer

T1: Approx. 1.8 sec.
T2: Approx. 1.2 sec.
T3: Approx. 13.8 sec.
T4: Approx. 9.6 sec.
T5: Approx. 20 sec.
T6: Approx. 20 sec. or more
T7: Approx. 20 sec. or less
T8: Approx. 9.6 sec. or less