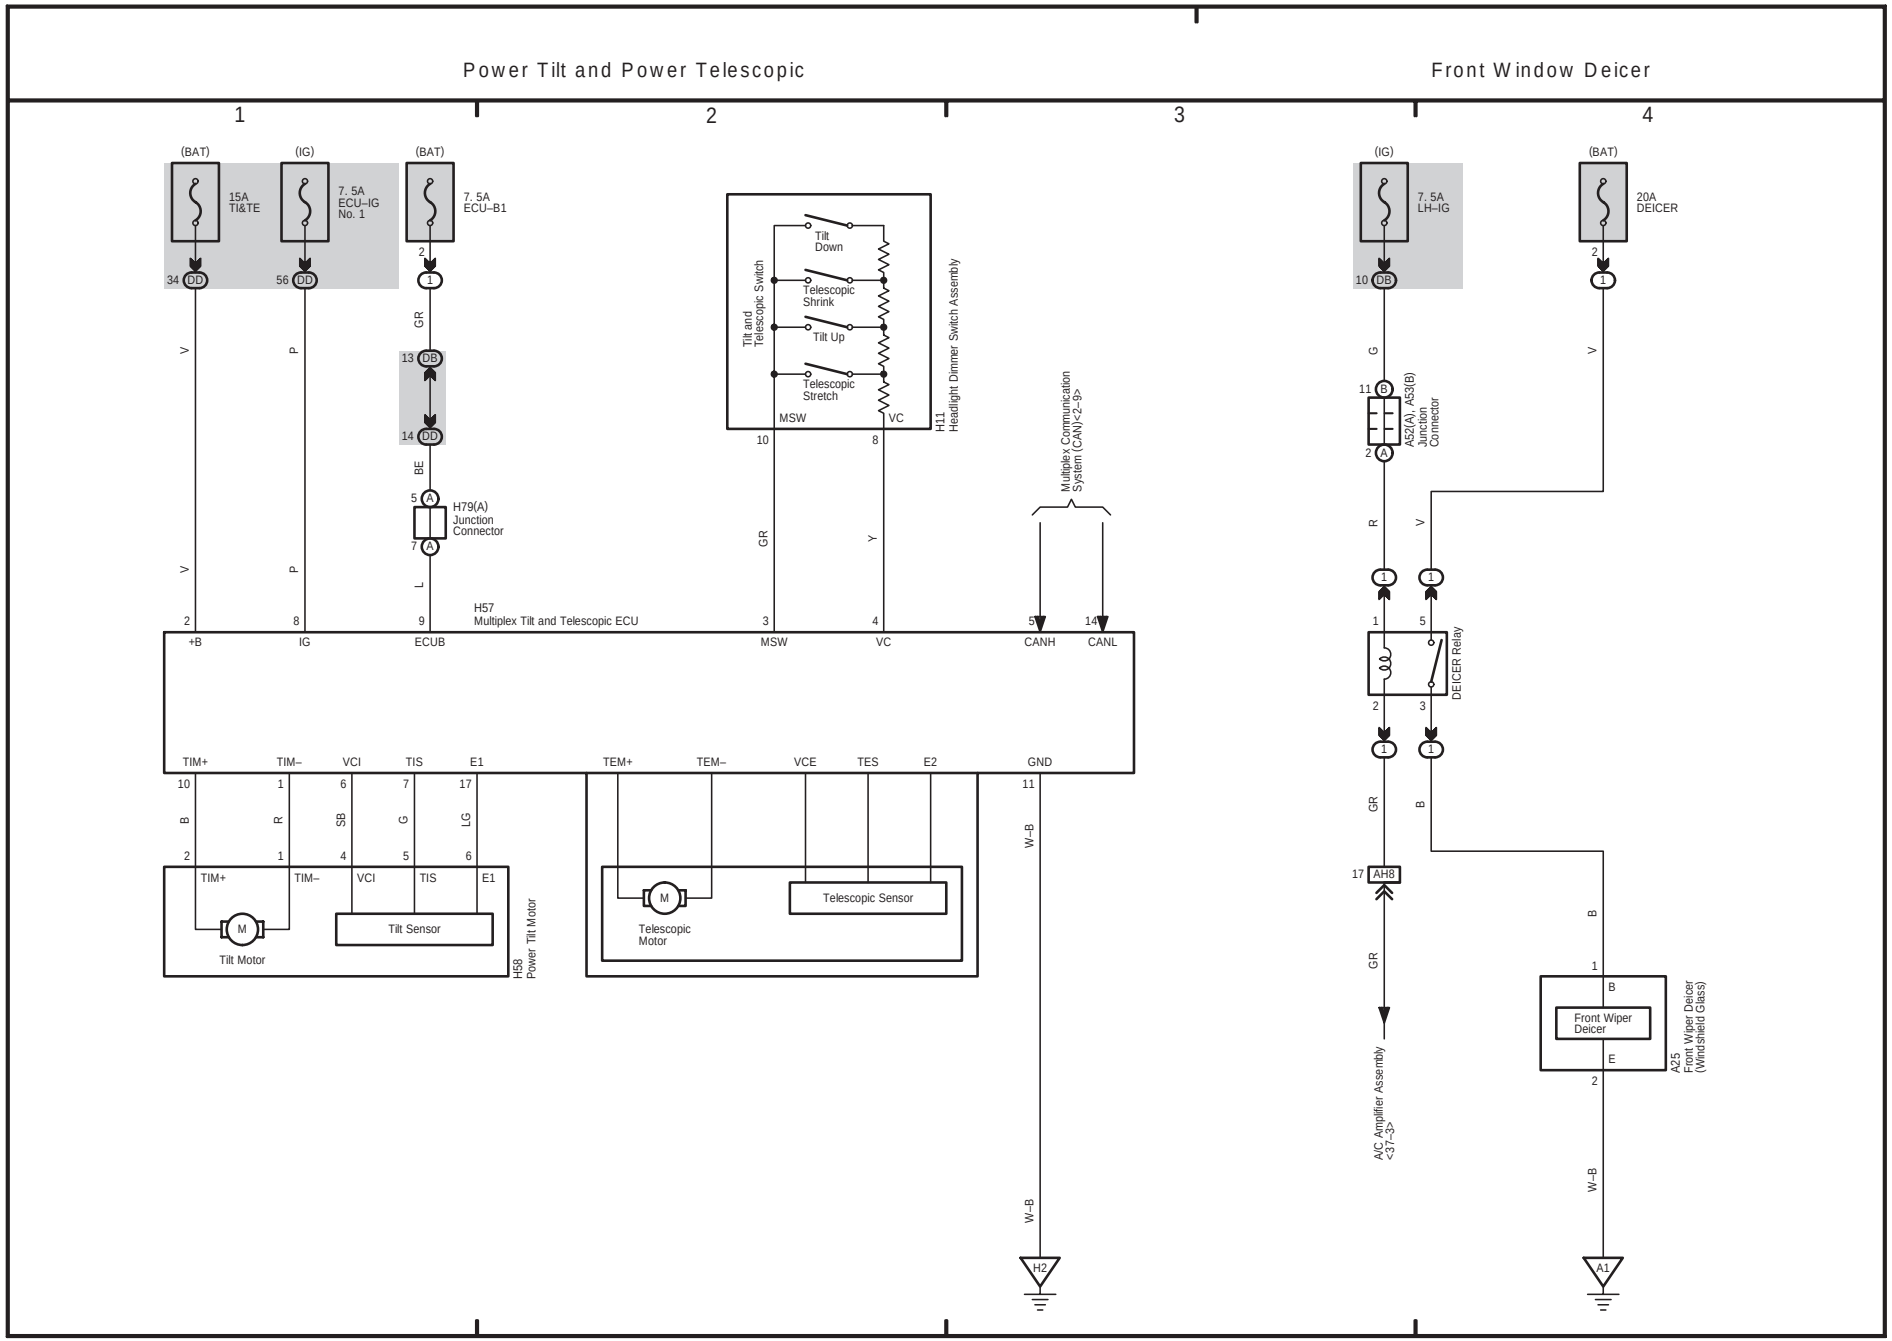

Power Tilt and Power Telescopic
Front Window Deicer
1
2
3
4
(BAT)
(IG)
(BAT)
15A TI&TE
7. 5A ECU–IG No. 1
7. 5A ECU–B1
34 DD
56 DD
2
1
GR
13 DB
14 DD
BE
5 A
H79(A) Junction Connector
7 A
L
V
P
V
P
2
8
9
H57 Multiplex Tilt and Telescopic ECU
+B
IG
ECUB
Tilt and Telescopic Switch
Tilt Down
Telescopic Shrink
Tilt Up
Telescopic Stretch
MSW
VC
H11 Headlight Dimmer Switch Assembly
10
8
GR
Y
3
4
MSW
VC
Multiplex Communication System (CAN)<2–9>
5
14
CANH
CANL
TIM+
TIM–
VCI
TIS
E1
10
1
6
7
17
B
R
SB
G
LG
2
1
4
5
6
TIM+
TIM–
VCI
TIS
E1
M
Tilt Motor
Tilt Sensor
H58 Power Tilt Motor
TEM+
TEM–
VCE
TES
E2
M
Telescopic Motor
Telescopic Sensor
GND
11
W–B
W–B
H2
(IG)
(BAT)
7. 5A LH–IG
20A DEICER
10 DB
2
1
G
V
11 B
A52(A), A53(B) Junction Connector
2 A
R
V
1
1
1
5
DEICER Relay
2
3
1
1
GR
B
17 AH8
GR
B
A/C Amplifier Assembly <37–3>
1
B
Front Wiper Deicer
E
2
A25 Front Wiper Deicer (Windshield Glass)
W–B
A1