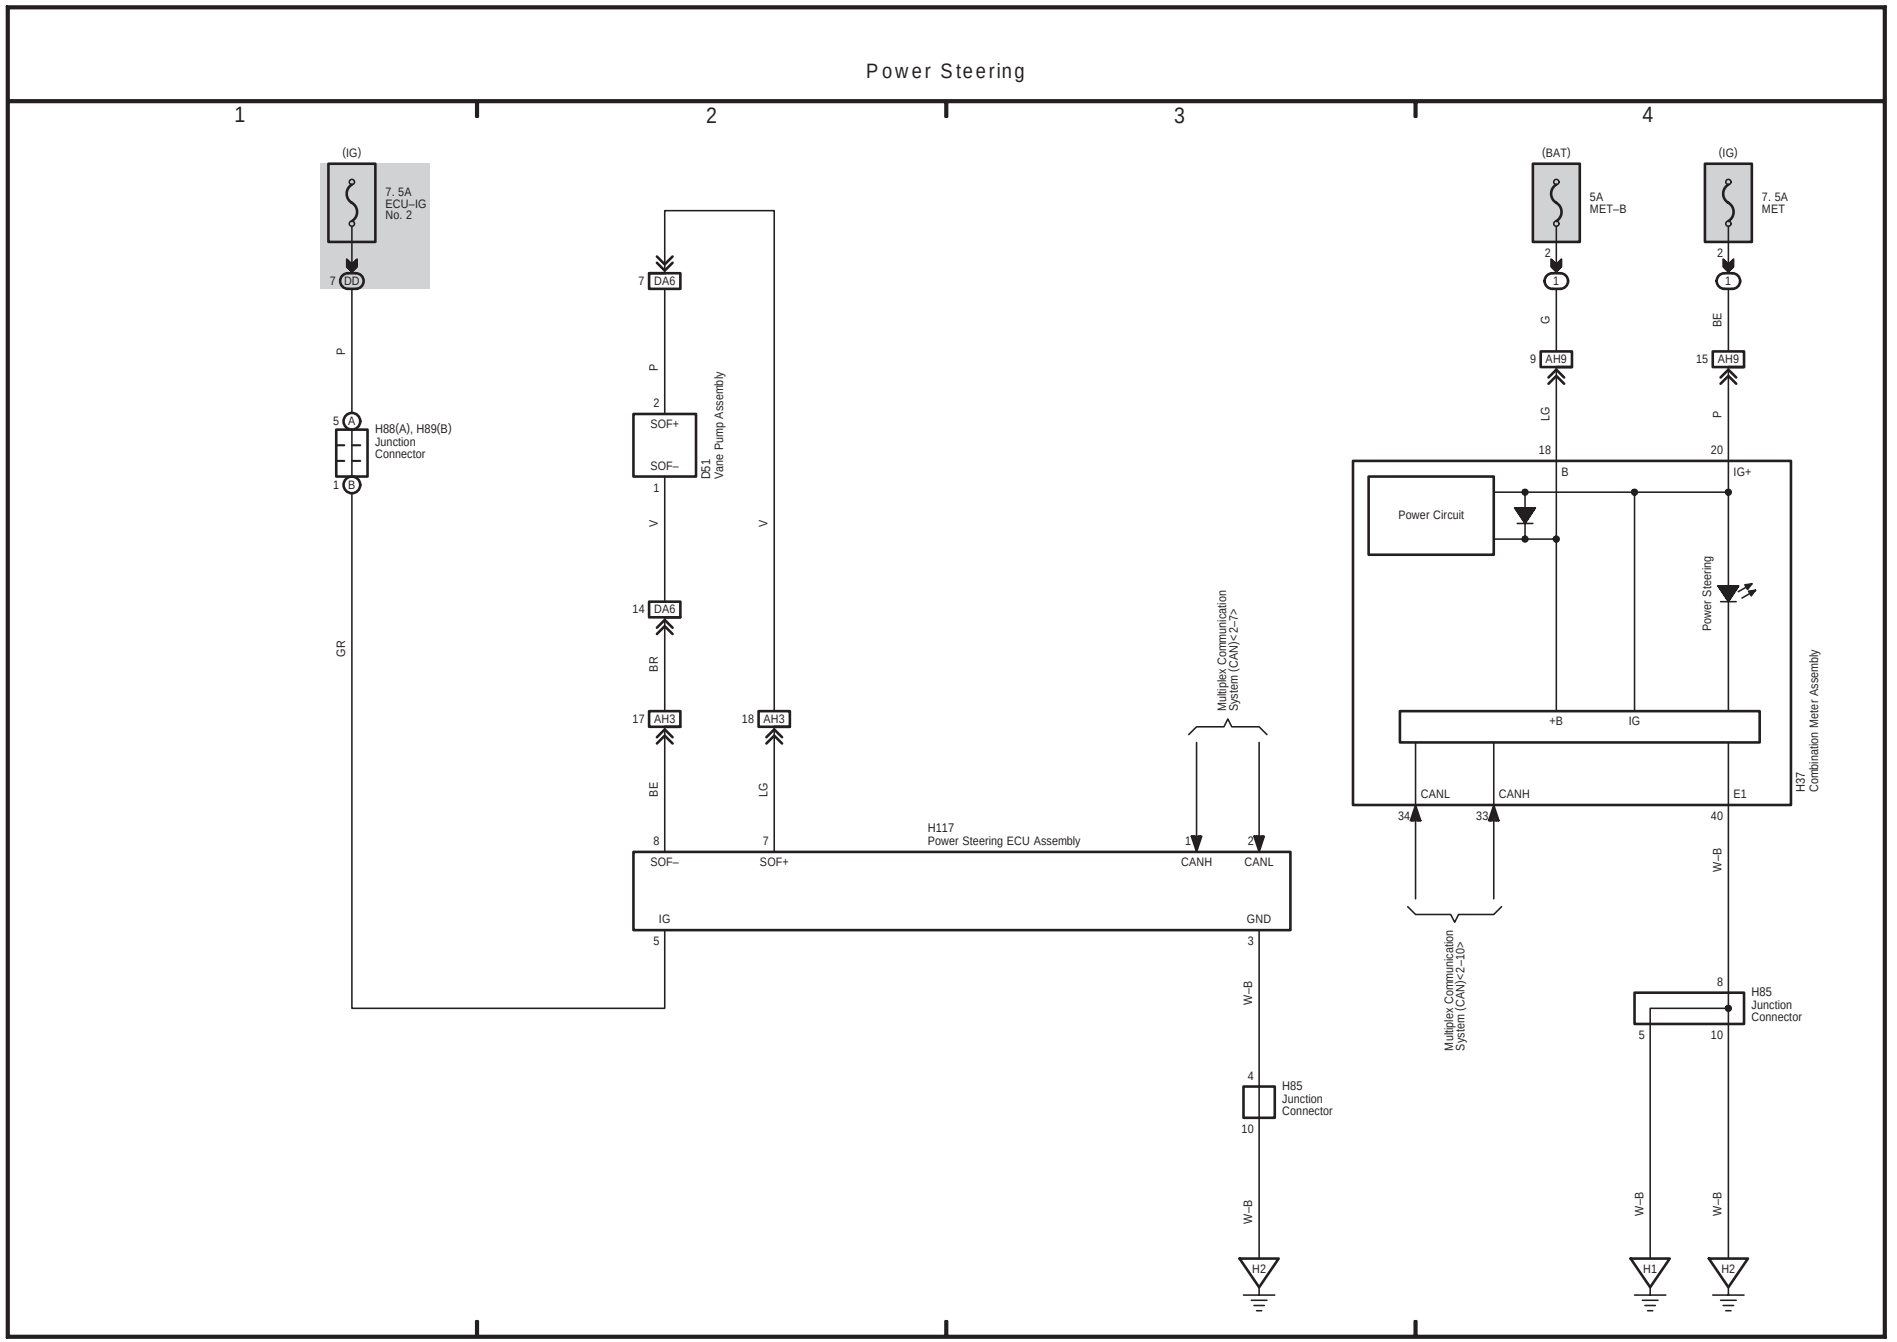

Power Steering
1
2
3
4
(IG)
7. 5A
ECU–IG
No. 2
7 DD
P
5 A
H88(A), H89(B)
Junction
Connector
1 B
GR
7 DA6
P
2
SOF+
SOF–
D51
Vane Pump Assembly
1
V
V
14 DA6
BR
17 AH3
18 AH3
BE
LG
8
7
SOF–
SOF+
IG
5
H117
Power Steering ECU Assembly
Multiplex Communication
System (CAN)<2–7>
1
2
CANH
CANL
GND
3
W–B
4
H85
Junction
Connector
10
W–B
H2
(BAT)
5A
MET–B
2
1
G
9 AH9
LG
18
(IG)
7. 5A
MET
2
1
BE
15 AH9
P
20
B
IG+
Power Circuit
Power Steering
+B
IG
CANL
CANH
E1
34
33
40
H37
Combination Meter Assembly
Multiplex Communication
System (CAN)<2–10>
W–B
8
H85
Junction
Connector
5
10
W–B
W–B
H1
H2