
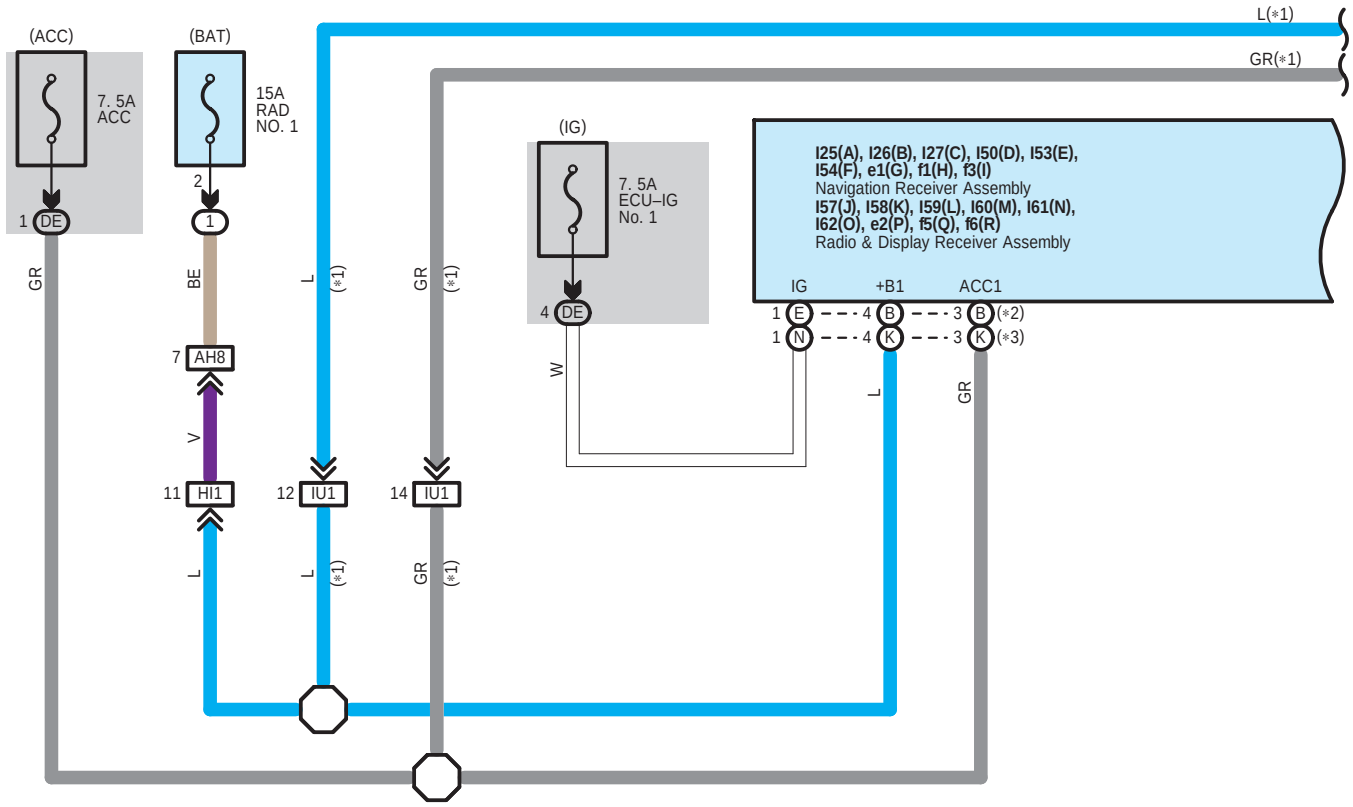
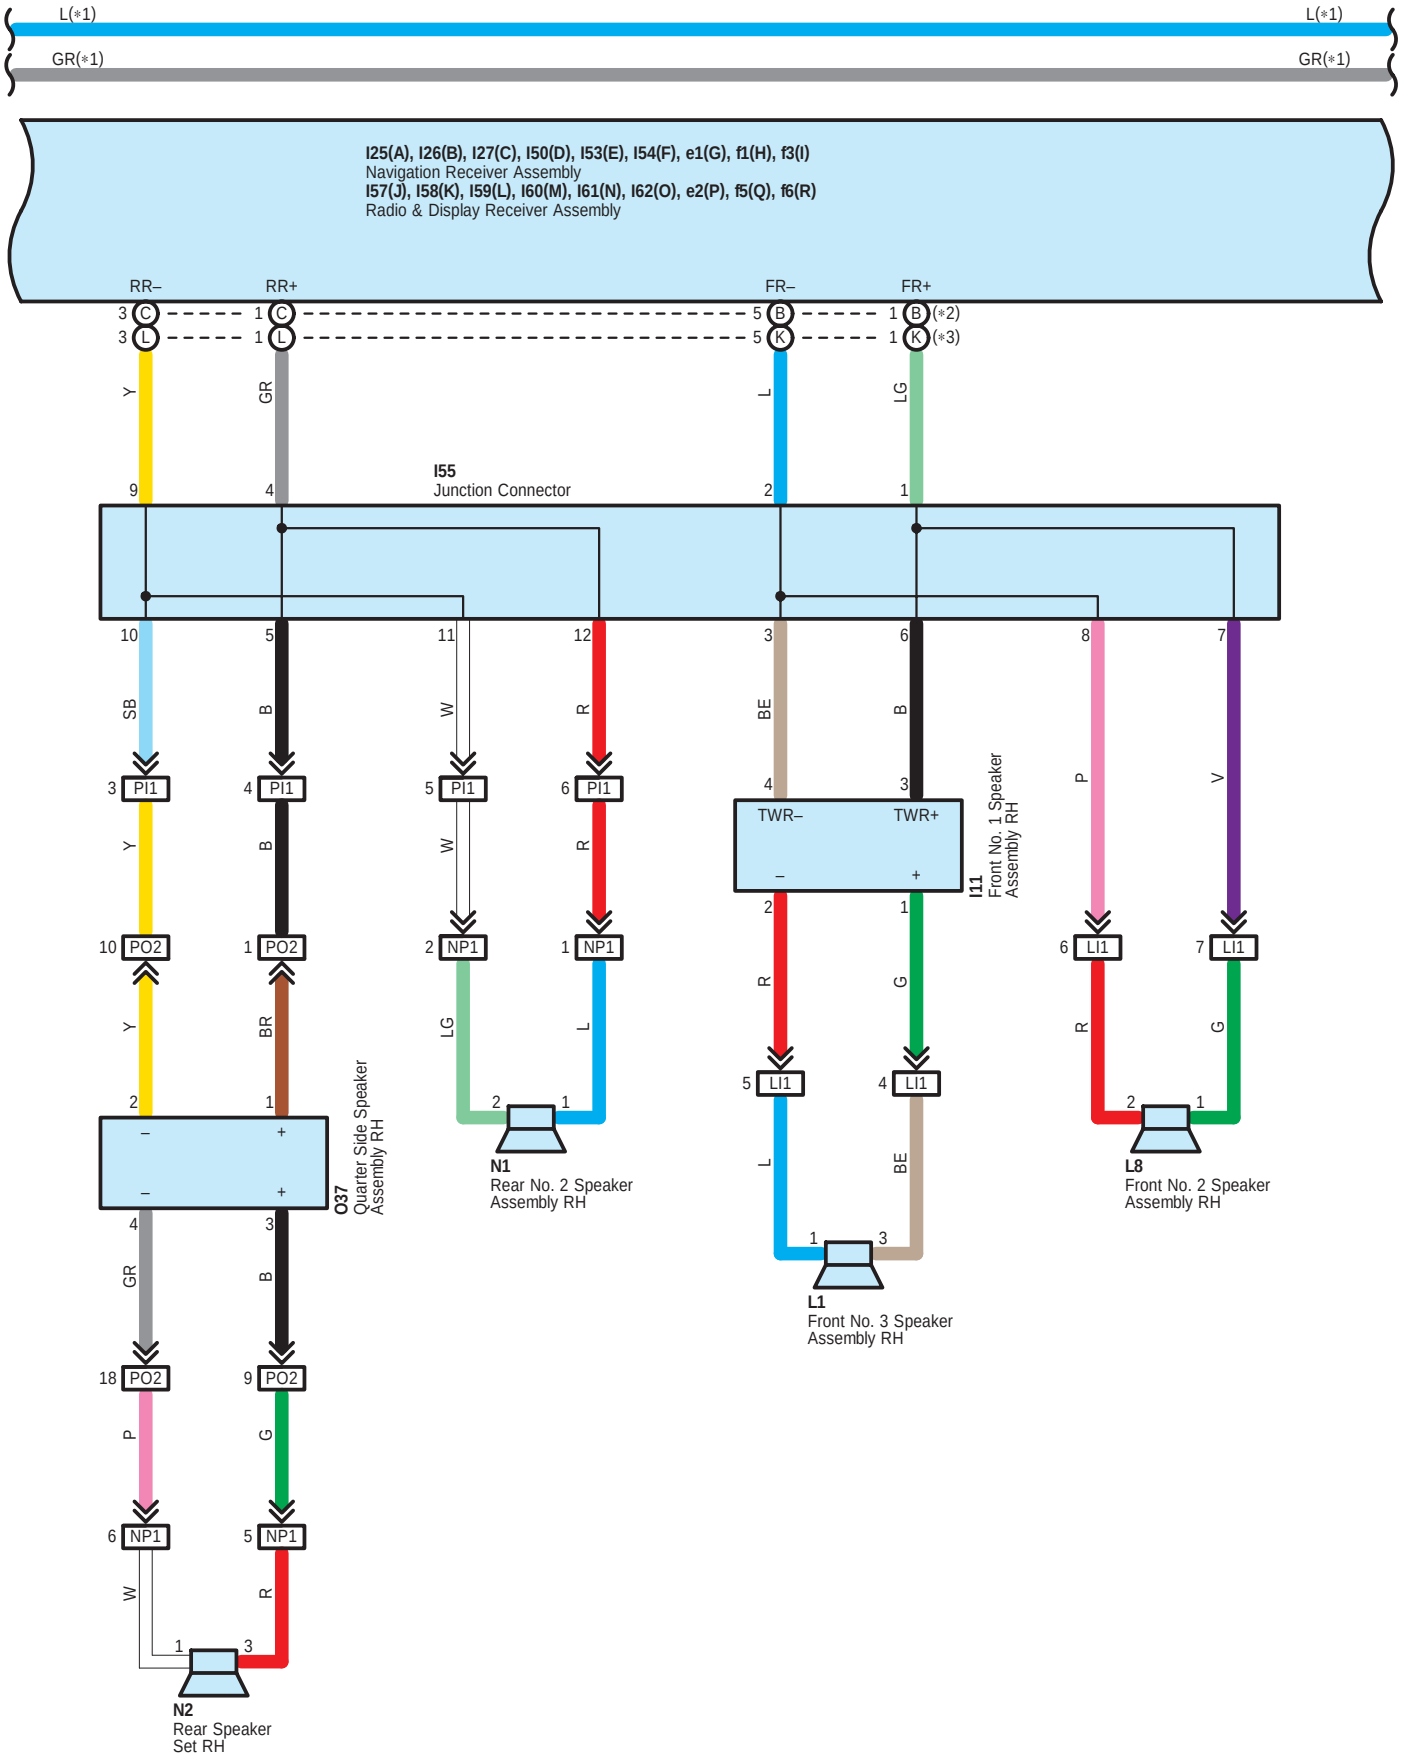
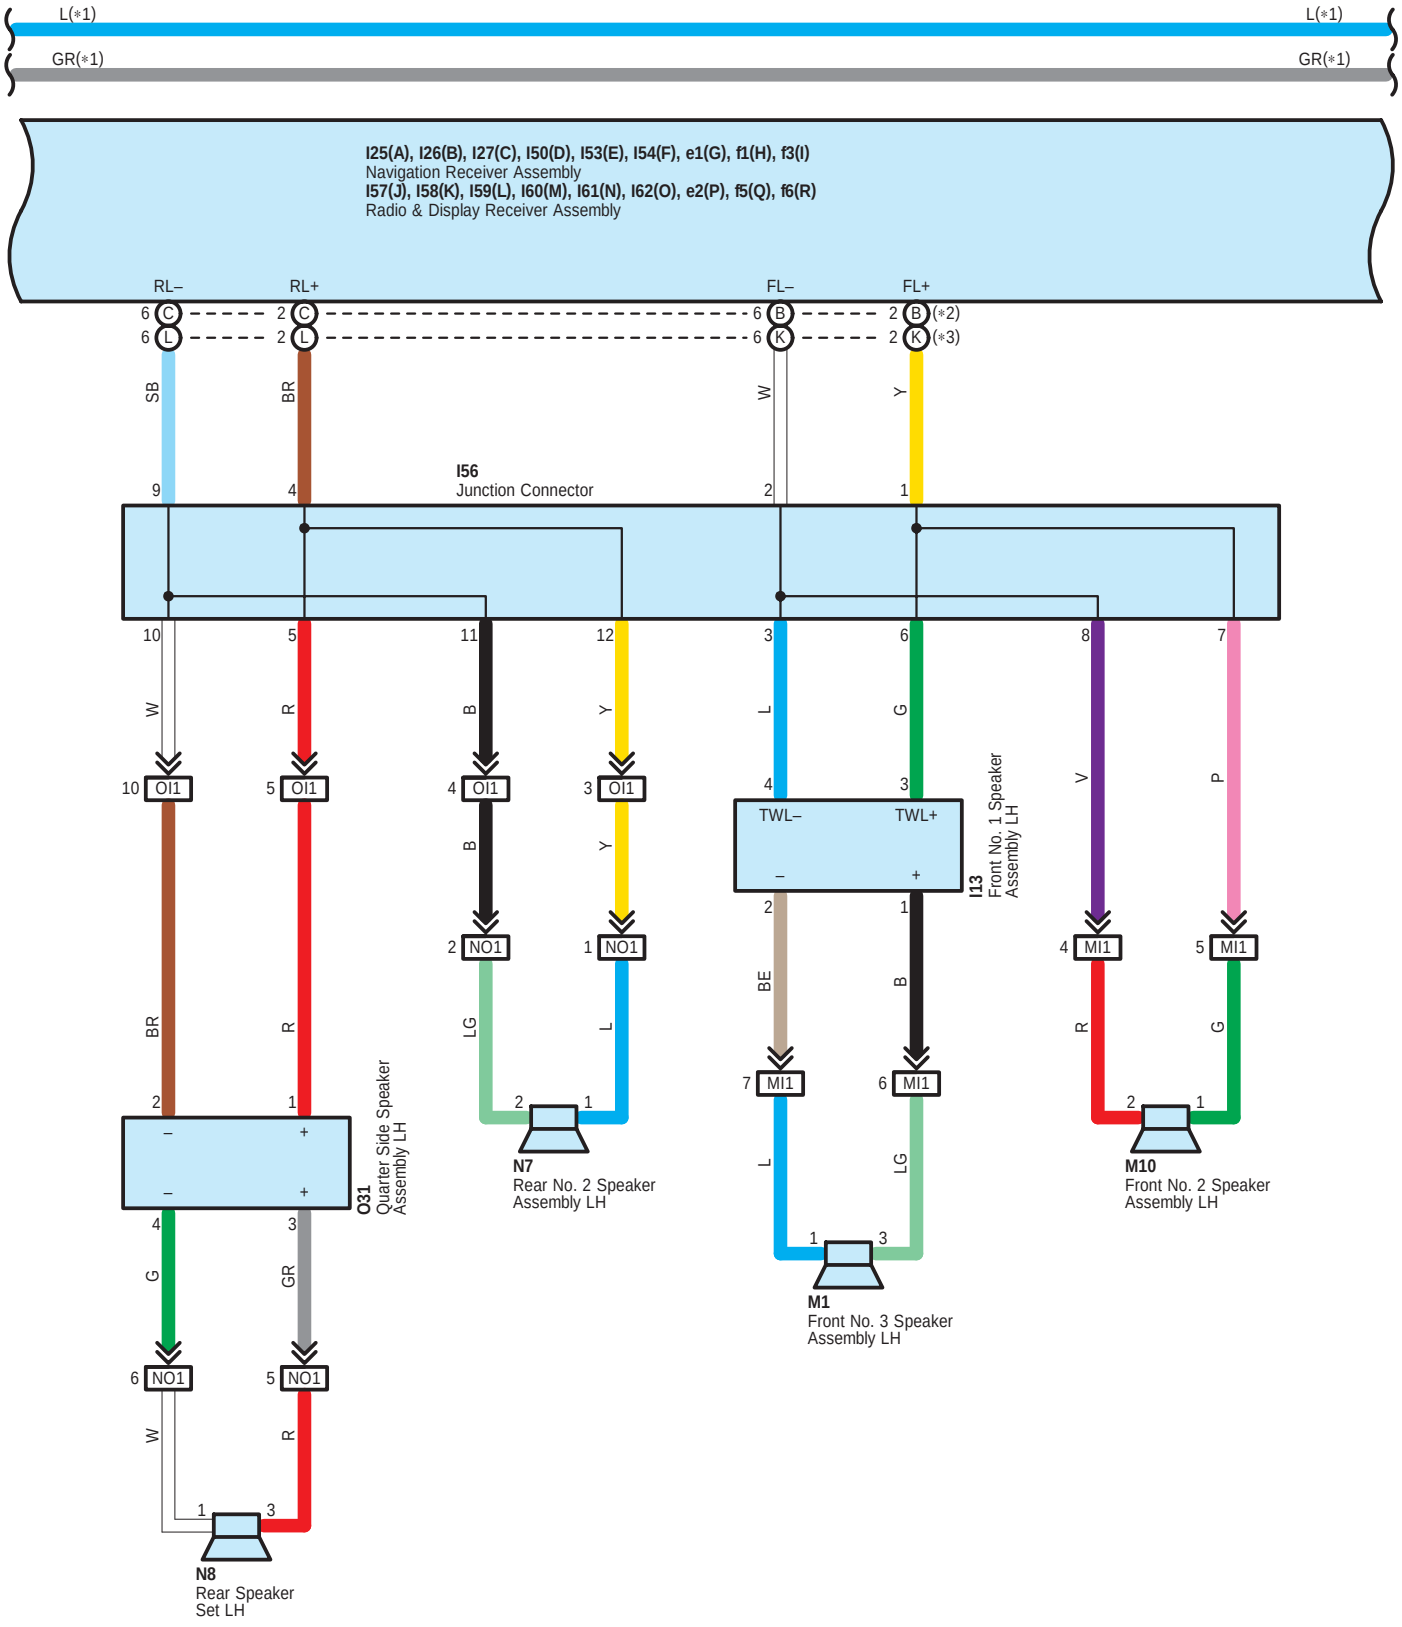



∗ 1 : w/ Rear Seat Entertainment System
∗ 2 : w/ Navigation System
∗ 3 : w/o Navigation System


L(*1)
GR(*1)
L(*1)
GR(*1)
I25(A), I26(B), I27(C), I50(D), I53(E), I54(F), e1(G), f1(H), f3(I)
Navigation Receiver Assembly
I57(J), I58(K), I59(L), I60(M), I61(N), I62(O), e2(P), f5(Q), f6(R)
Radio & Display Receiver Assembly
RR–
RR+
FR–
FR+
(*2)
(*3)
I55
Junction Connector
TWR–
TWR+
I11
Front No. 1 Speaker Assembly RH
O37
Quarter Side Speaker Assembly RH
N1
Rear No. 2 Speaker Assembly RH
L1
Front No. 3 Speaker Assembly RH
L8
Front No. 2 Speaker Assembly RH
N2
Rear Speaker Set RH



L(*1)
GR(*1)
L(*1)
GR(*1)
I25(A), I26(B), I27(C), I50(D), I53(E), I54(F), e1(G), f1(H), f3(I)
Navigation Receiver Assembly
I57(J), I58(K), I59(L), I60(M), I61(N), I62(O), e2(P), f5(Q), f6(R)
Radio & Display Receiver Assembly
RL–
RL+
FL–
FL+
I56
Junction Connector
(*2)
(*3)
SB
BR
W
Y
W
R
B
Y
L
G
V
P
BR
R
G
GR
W
R
BE
B
LG
L
LG
R
G
OI1
NO1
MI1
TWL–
TWL+
I13
Front No. 1 Speaker
Assembly LH
O31
Quarter Side Speaker
Assembly LH
N7
Rear No. 2 Speaker
Assembly LH
M1
Front No. 3 Speaker
Assembly LH
M10
Front No. 2 Speaker
Assembly LH
N8
Rear Speaker
Set LH

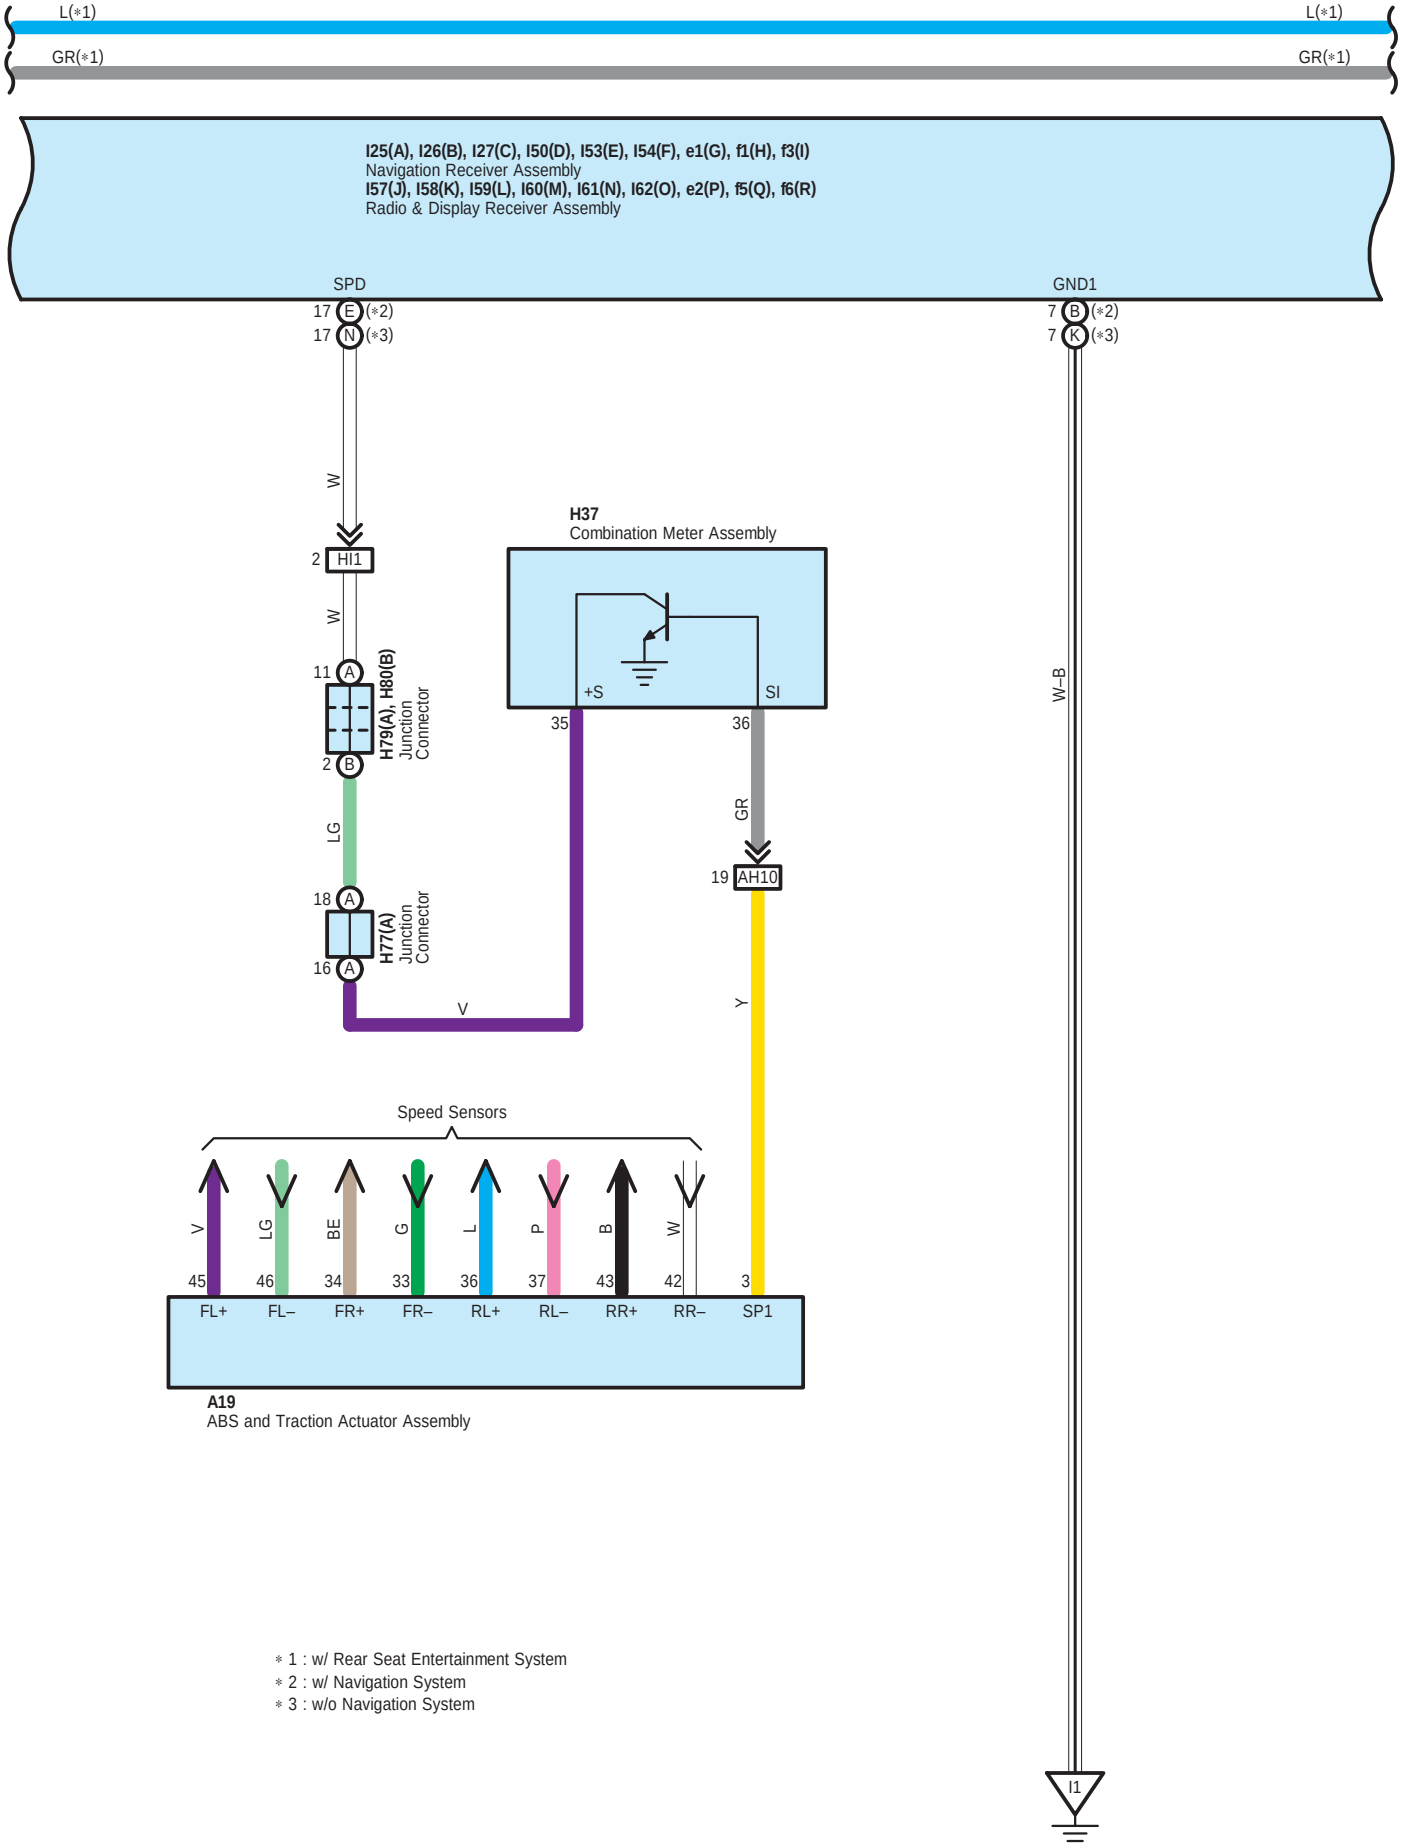

* 1 : w/ Rear Seat Entertainment System
* 2 : w/ Navigation System
* 3 : w/o Navigation System

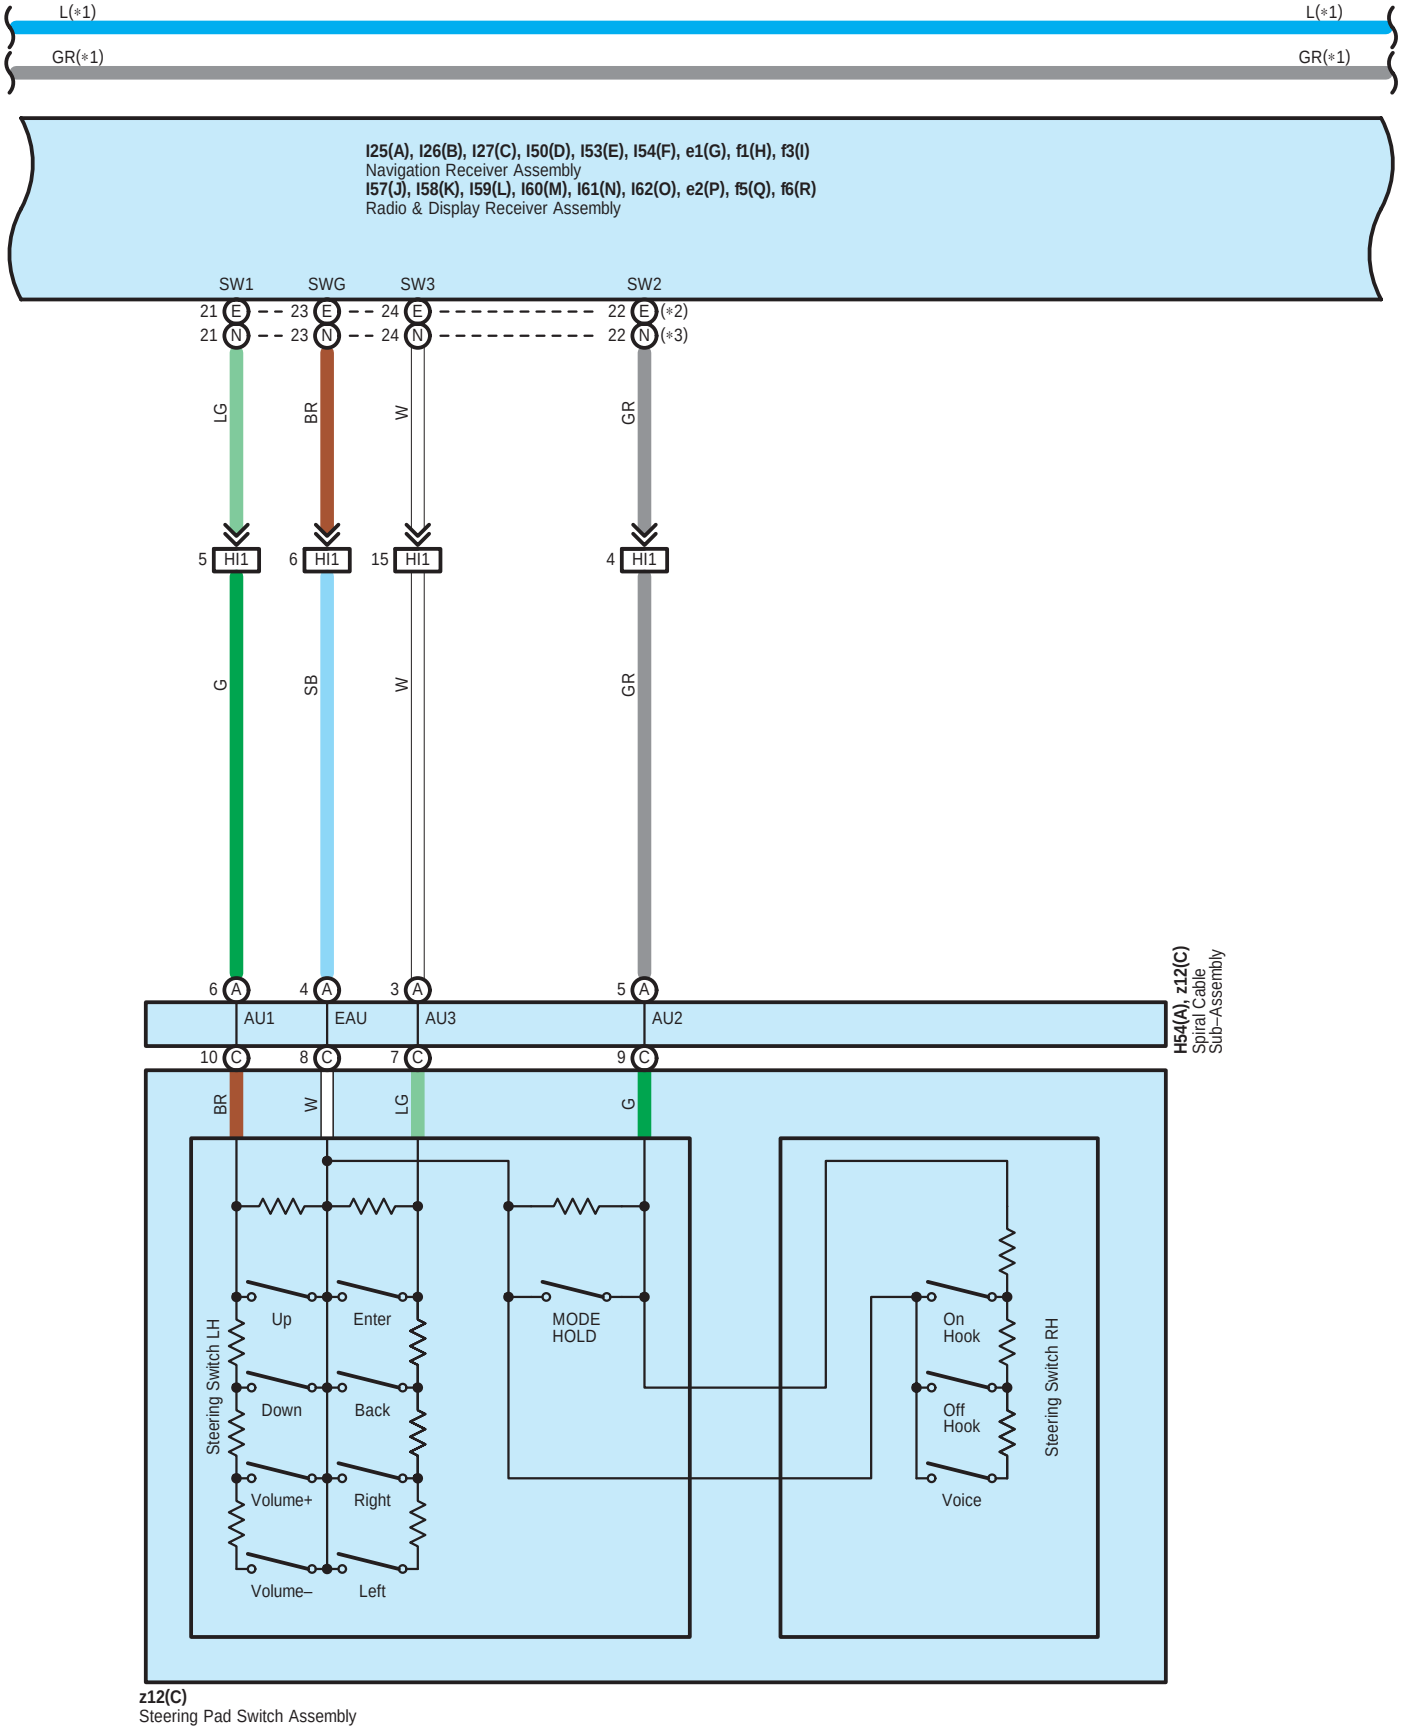


z12(C)
Steering Pad Switch Assembly

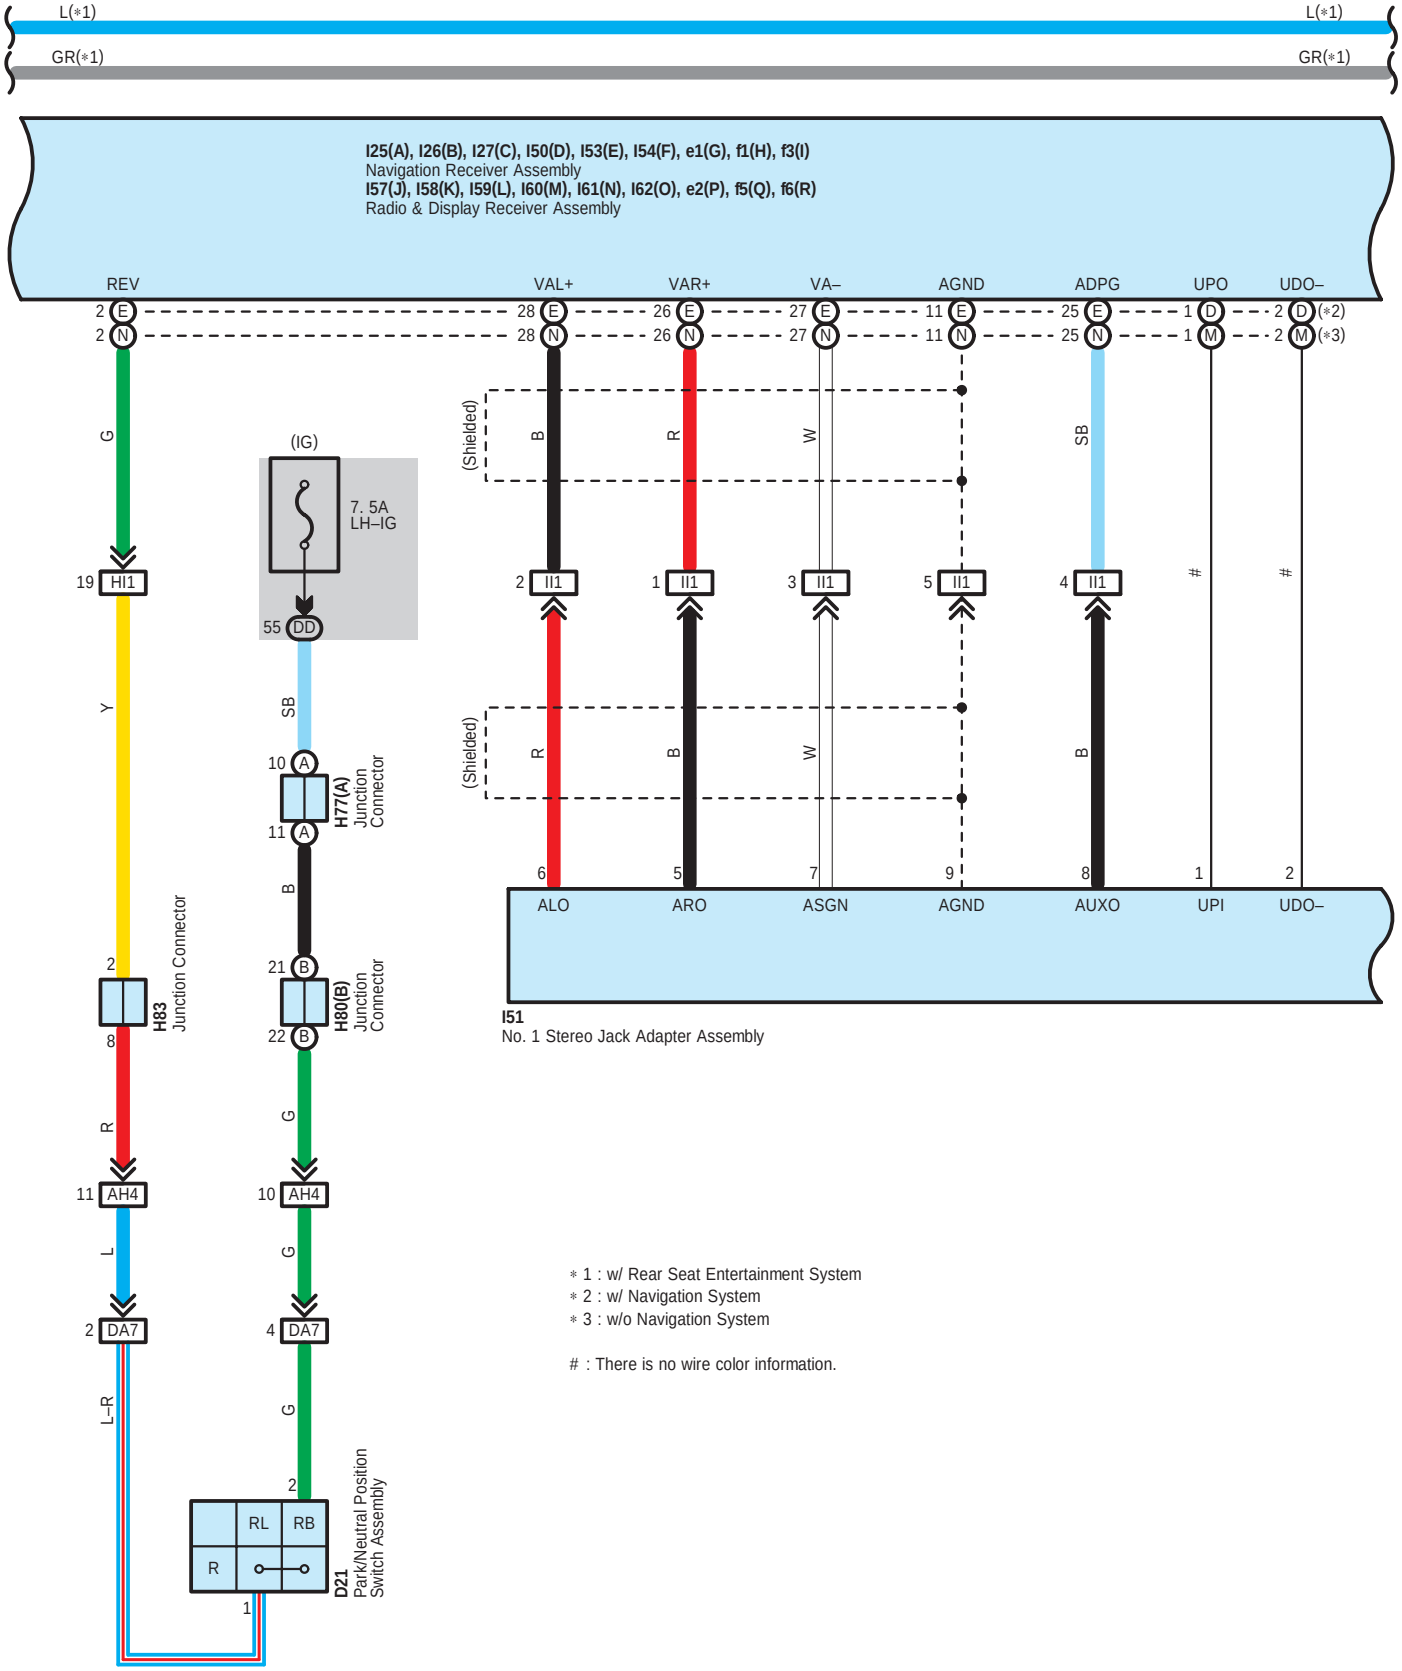


* 1 : w/ Rear Seat Entertainment System
* 2 : w/ Navigation System
* 3 : w/o Navigation System


: There is no wire color information.

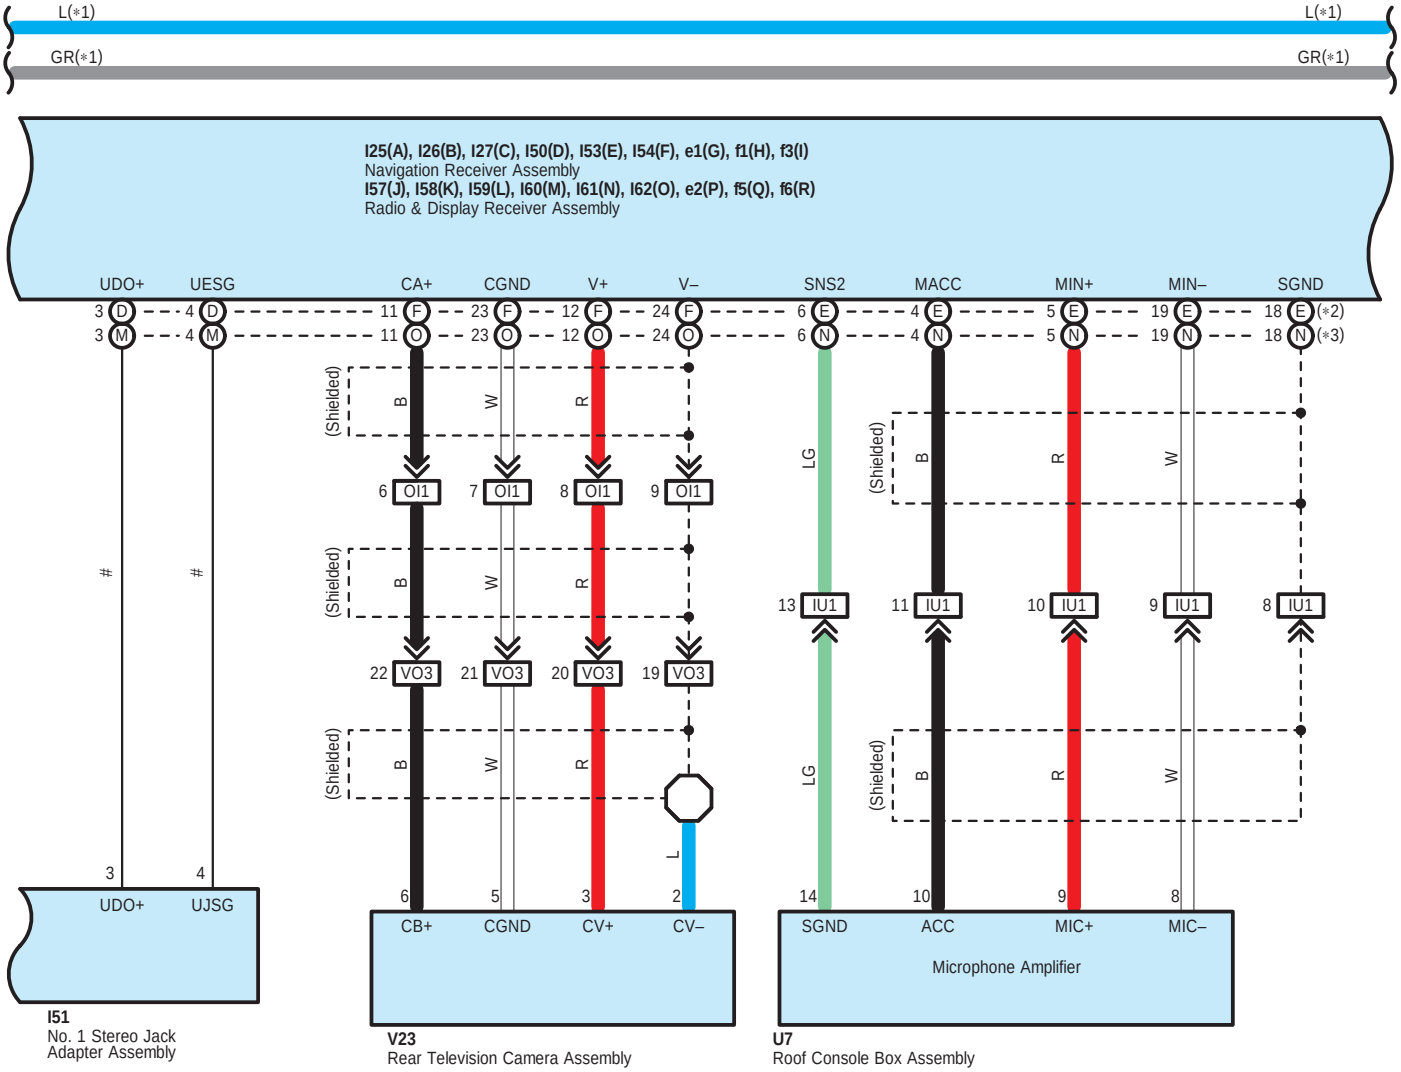


* 1 : w/ Rear Seat Entertainment System
* 2 : w/ Navigation System
* 3 : w/o Navigation System
* 5 : w/ SDARS


: There is no wire color information.

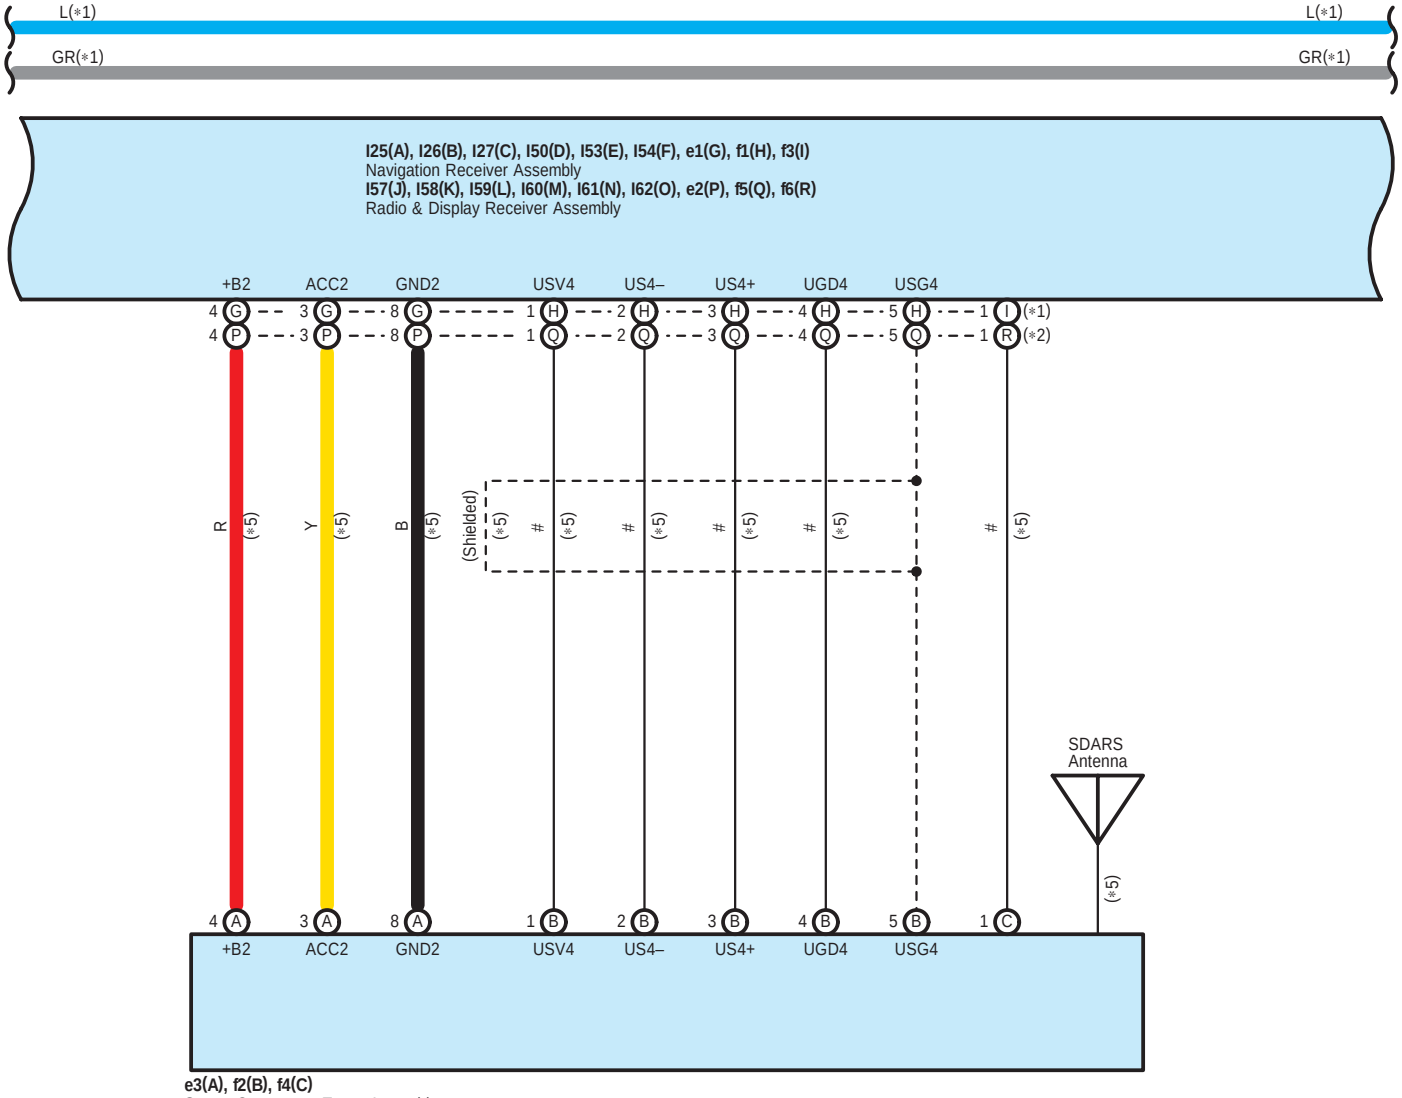
L(*1)
GR(*1)
L(*1)
GR(*1)
I25(A), I26(B), I27(C), I50(D), I53(E), I54(F), e1(G), f1(H), f3(I)
Navigation Receiver Assembly
I57(J), I58(K), I59(L), I60(M), I61(N), I62(O), e2(P), f5(Q), f6(R)
Radio & Display Receiver Assembly
+B2
ACC2
GND2
USV4
US4–
US4+
UGD4
USG4
(*1)
(*2)
R
Y
B
(Shielded)
#
(*5)
SDARS Antenna
e3(A), f2(B), f4(C)
Stereo Component Tuner Assembly

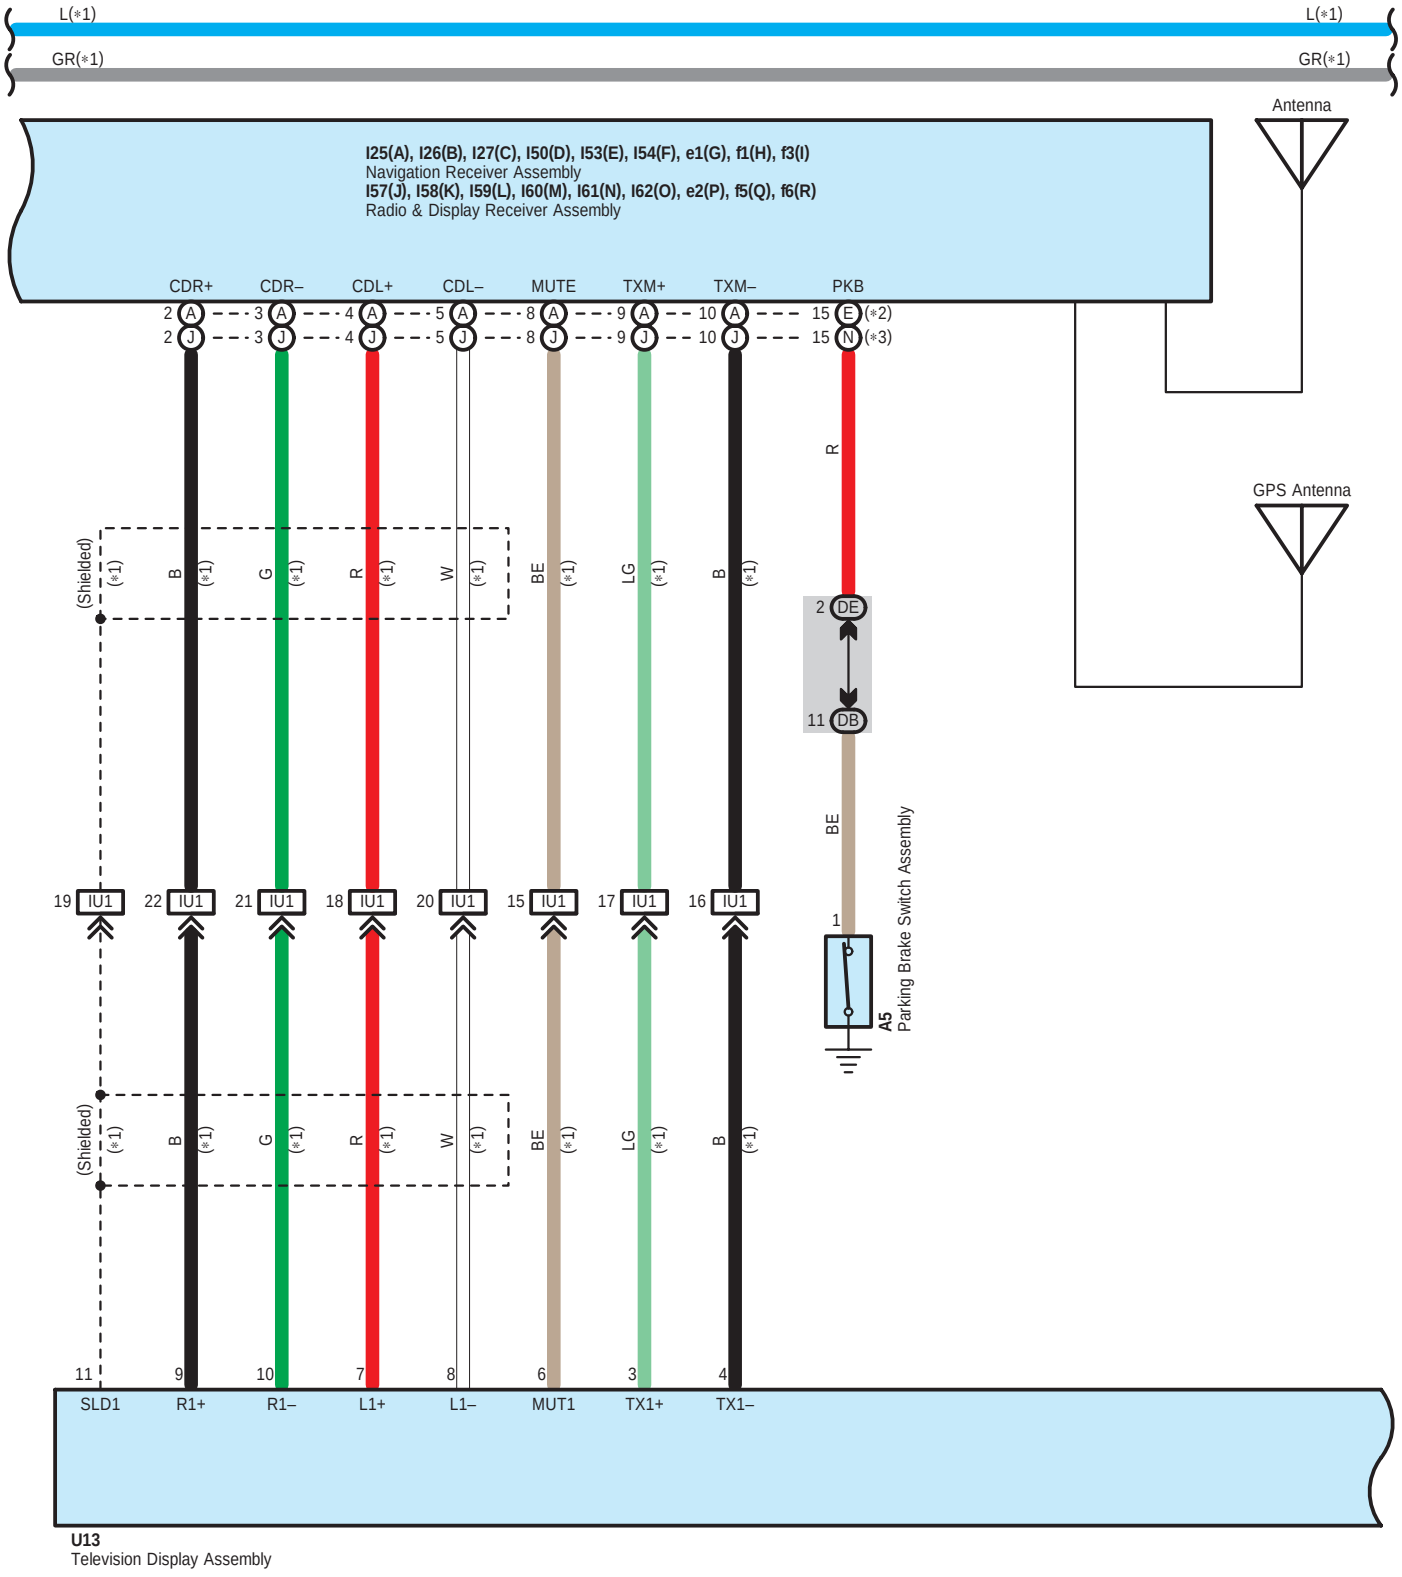
L(*1)
GR(*1)
L(*1)
GR(*1)
Antenna
I25(A), I26(B), I27(C), I50(D), I53(E), I54(F), e1(G), f1(H), f3(I)
Navigation Receiver Assembly
I57(J), I58(K), I59(L), I60(M), I61(N), I62(O), e2(P), f5(Q), f6(R)
Radio & Display Receiver Assembly
CDR+
CDR–
CDL+
CDL–
MUTE
TXM+
TXM–
PKB
GPS Antenna
(Shielded)
B
G
R
W
BE
LG
B
IU1
A5
Parking Brake Switch Assembly
SLD1
R1+
R1–
L1+
L1–
MUT1
TX1+
TX1–
U13
Television Display Assembly

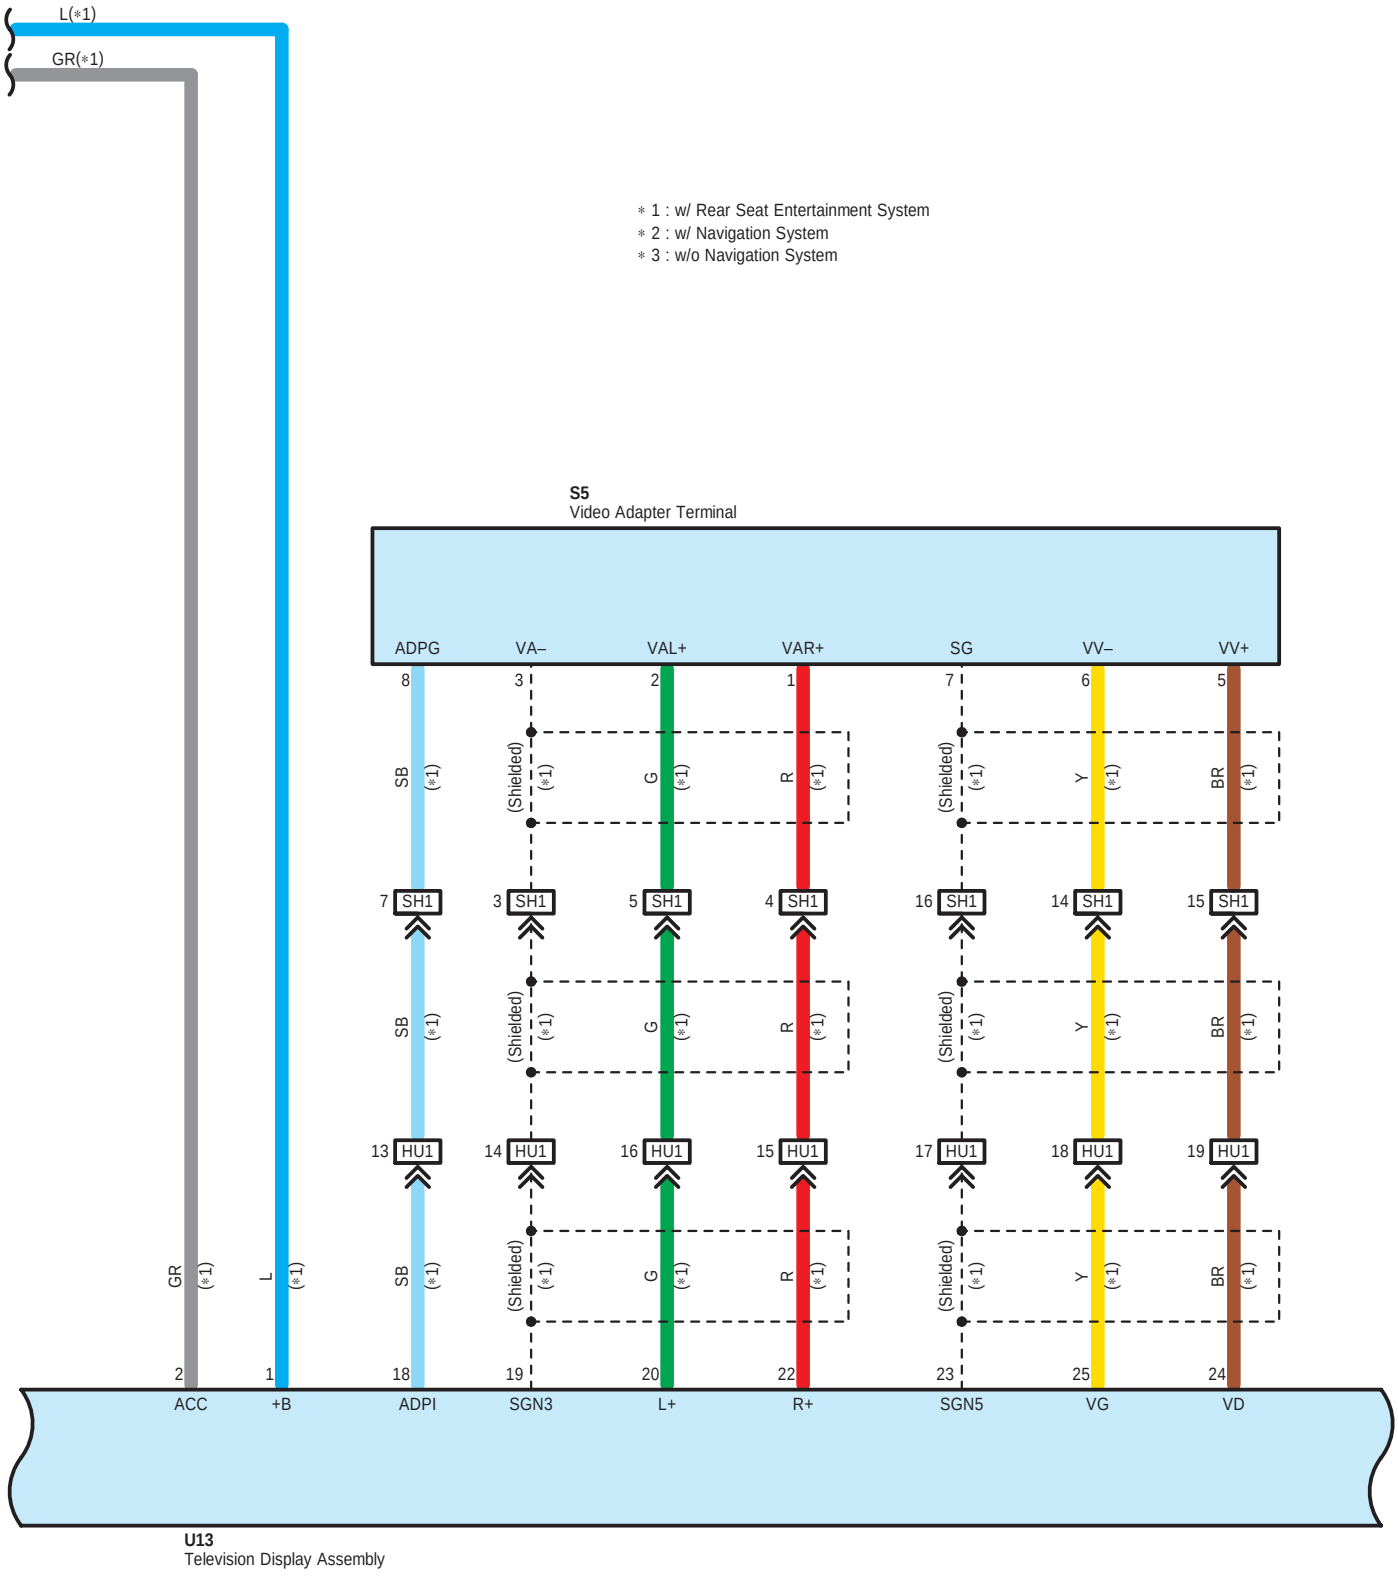
L(*1)
GR(*1)
* 1 : w/ Rear Seat Entertainment System
* 2 : w/ Navigation System
* 3 : w/o Navigation System
S5
Video Adapter Terminal
ADPG
VA–
VAL+
VAR+
SG
VV–
VV+
8
3
2
1
7
6
5
SB (*1)
(Shielded) (*1)
G (*1)
R (*1)
(Shielded) (*1)
Y (*1)
BR (*1)
7 SH1
3 SH1
5 SH1
4 SH1
16 SH1
14 SH1
15 SH1
13 HU1
14 HU1
16 HU1
15 HU1
17 HU1
18 HU1
19 HU1
GR (*1)
L (*1)
2
1
18
19
20
22
23
25
24
ACC
+B
ADPI
SGN3
L+
R+
SGN5
VG
VD
U13
Television Display Assembly


∗ 1 : w/ Rear Seat Entertainment System

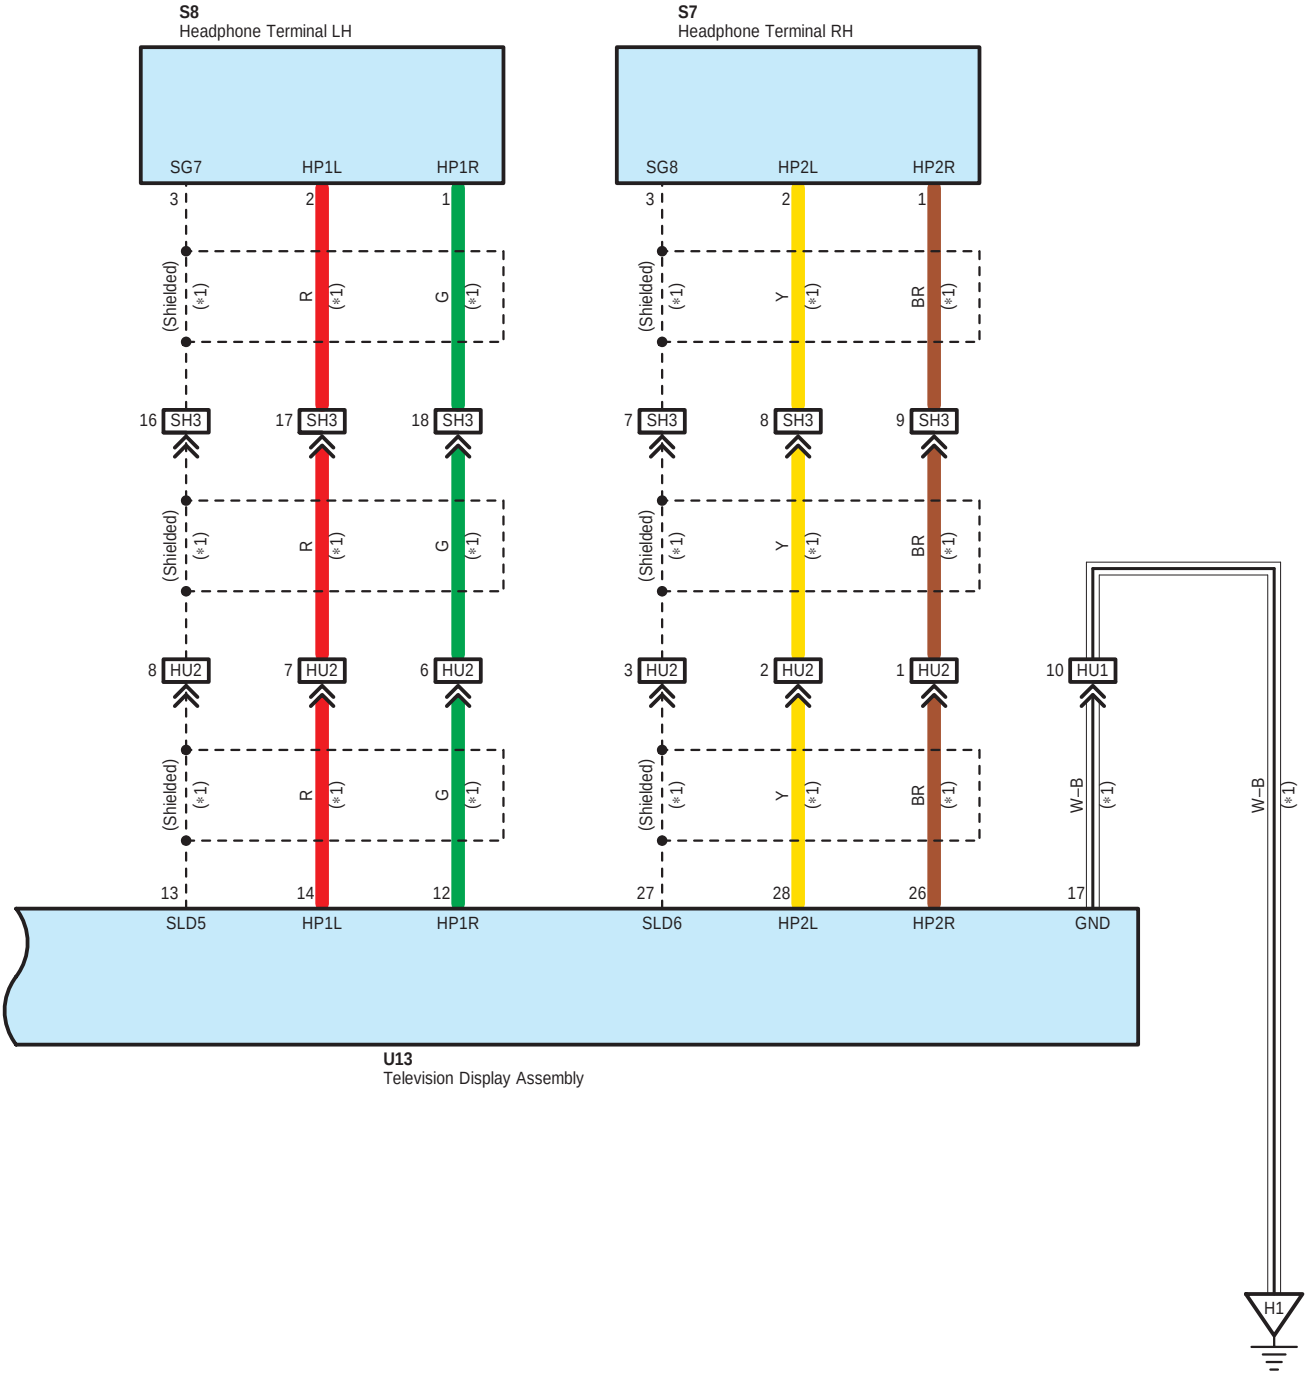


A 5
White




A 19
Black

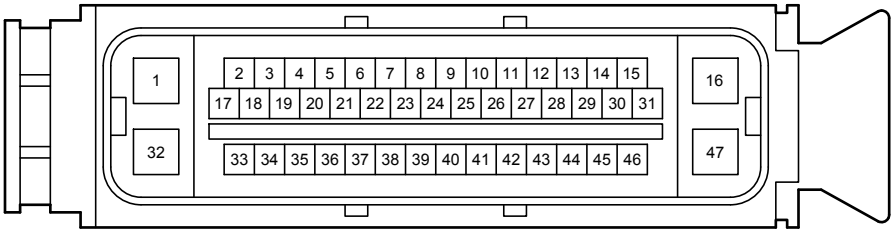

D 21
Gray

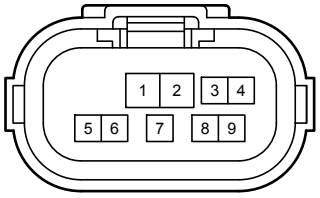


H 37
White

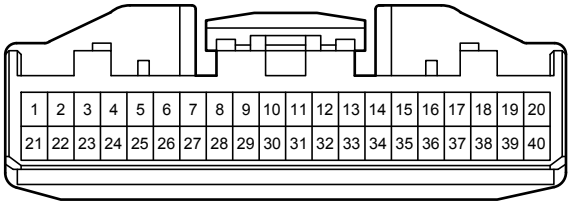


H 54
Black




H 77
Black

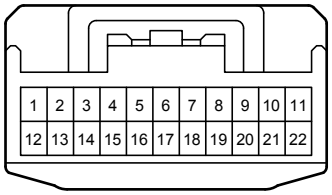


H 79
Black

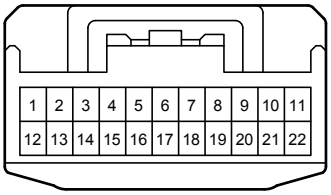


H 80
Black

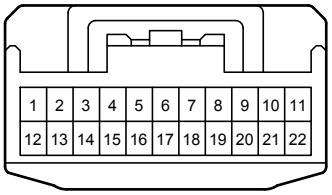


H 83
Gray

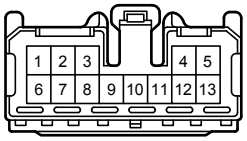


I 11
White

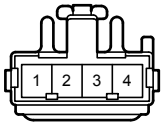


I 13
White

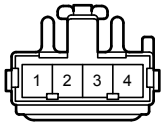


I 25
White

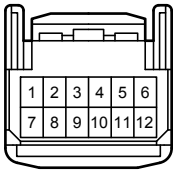


I 26
White

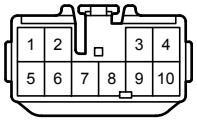


I 27
White

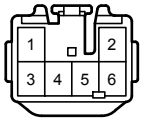


I 50
Gray

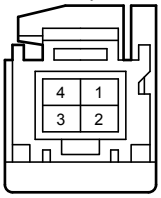


I 51
Black

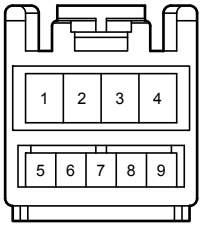


I 53
White

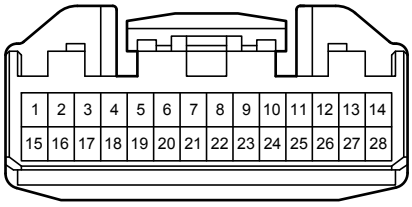


I 54
White

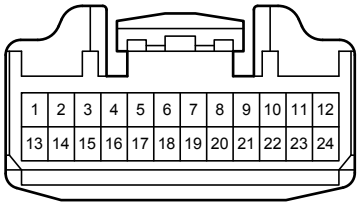

I 55
White

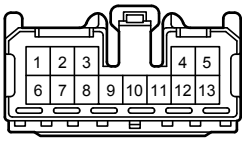


I 56
White

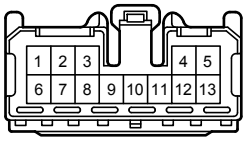


I 57
White




I 58
White

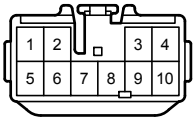


I 59
White

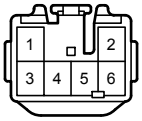


I 60
Gray

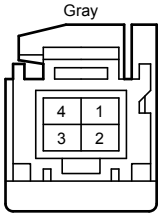


I 61
White

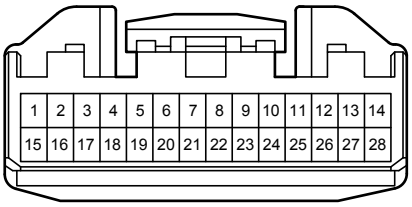

I 62
White

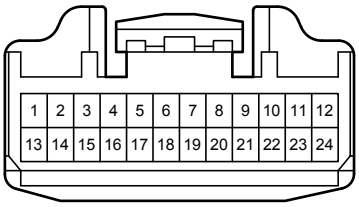


L 1
White



L 8
White




M 1
White




M 10
White




N 1
Gray




N 2
White




N 7
Gray




N 8
White




O 31
White

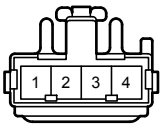


O 37
White

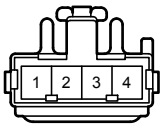


S 5
White

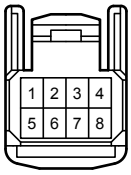


S 7
White




S 8
White




U 7
White

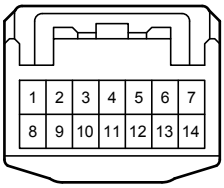


U 13
White

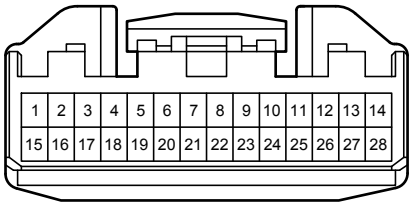


V 23
Gray

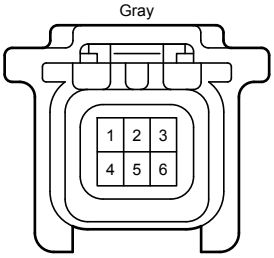


e 1
White

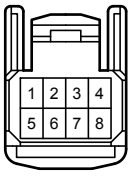


e 2
White

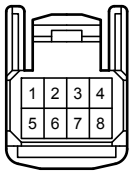


e 3
White

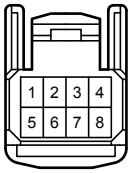


f 1
Brown

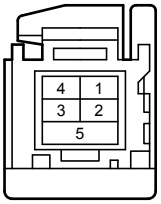


f 2
Brown

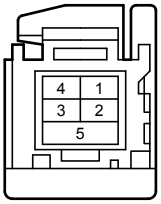


f 3
White




f 4
White




f 5
Brown

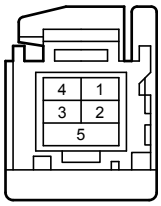


f 6
White




z 12
White

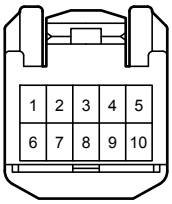


DB
White

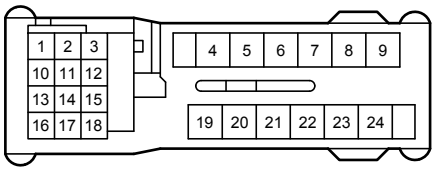


DD
White

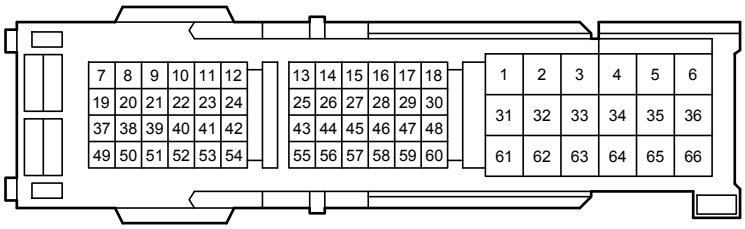


DE
White

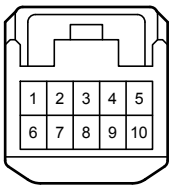


AH4
White

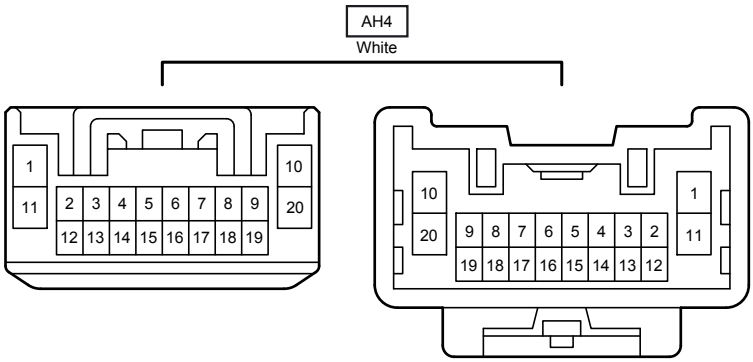


AH8
Gray

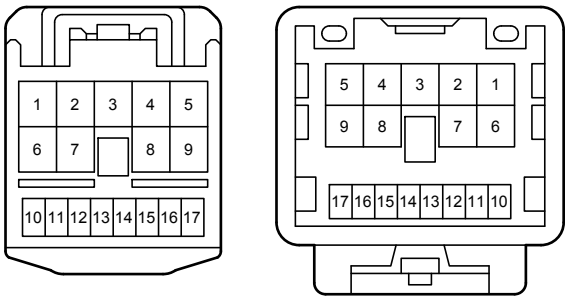


AH10
Gray

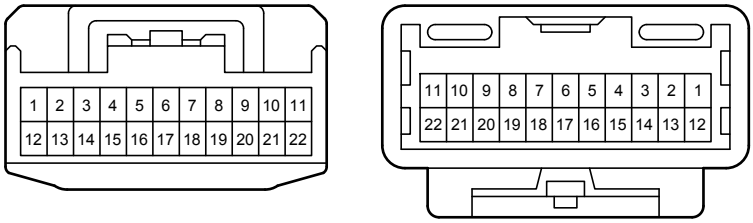


DA7
Gray

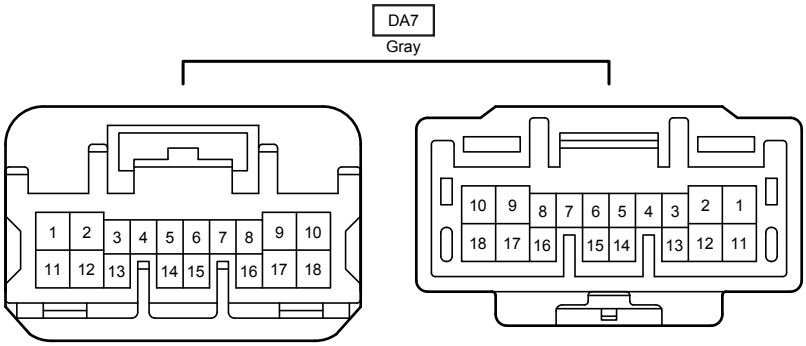


HI1
White

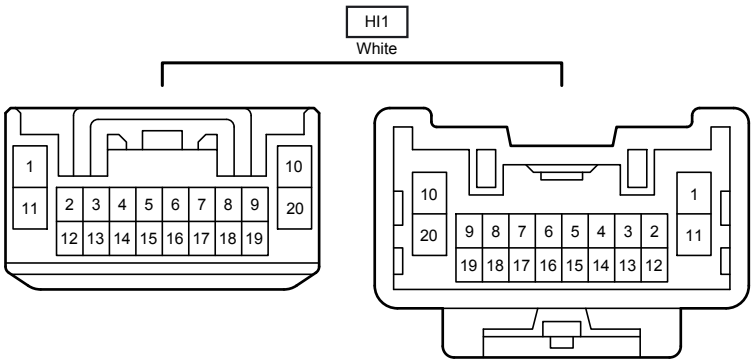


HU1
White

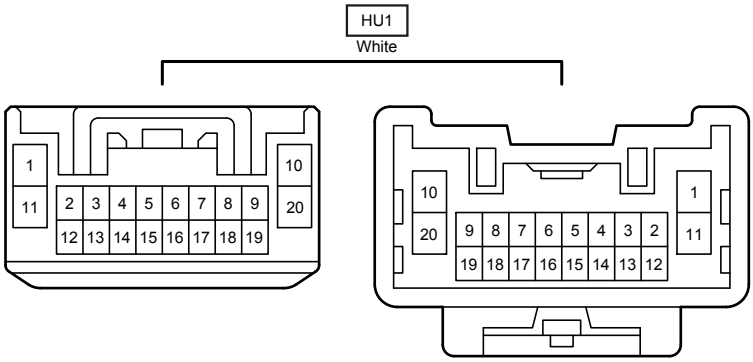


HU2
White

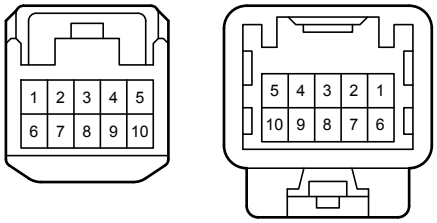


II1
White

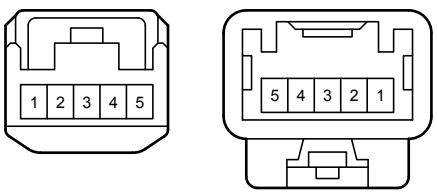


IU1
White

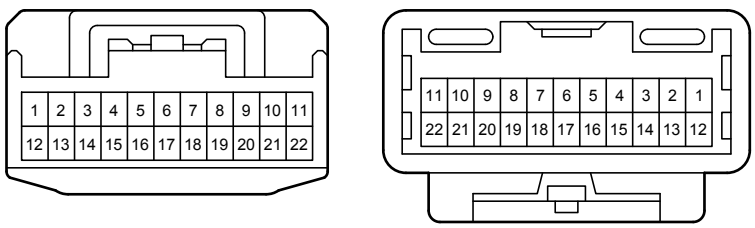


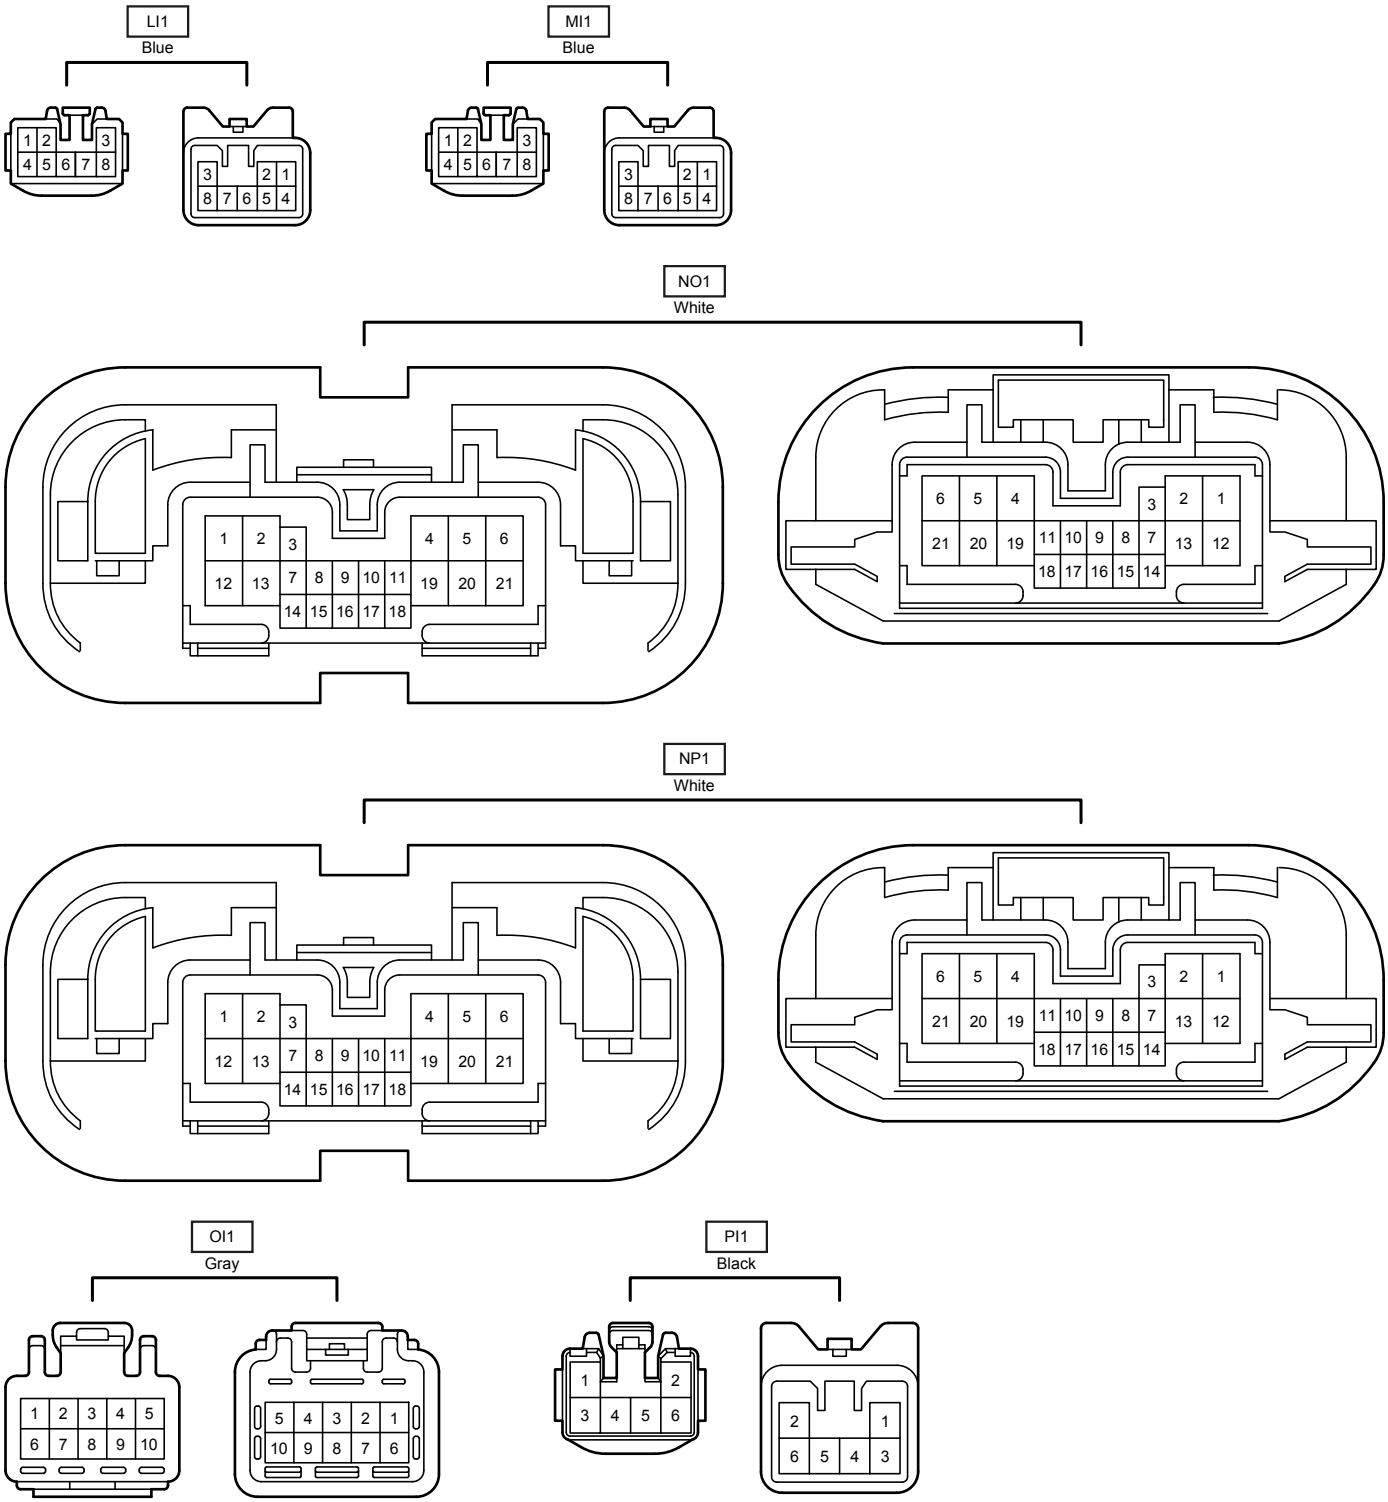
LI1
Blue
MI1
Blue
NO1
White
NP1
White
OI1
Gray
PI1
Black


PO2
White

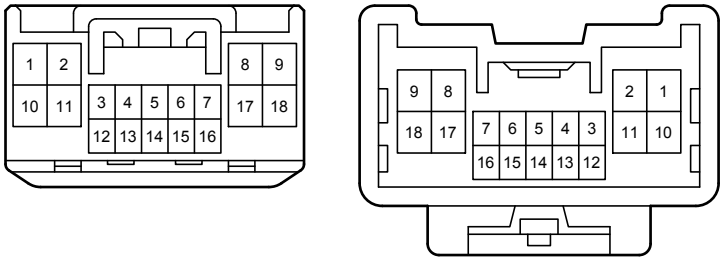

SH1
White

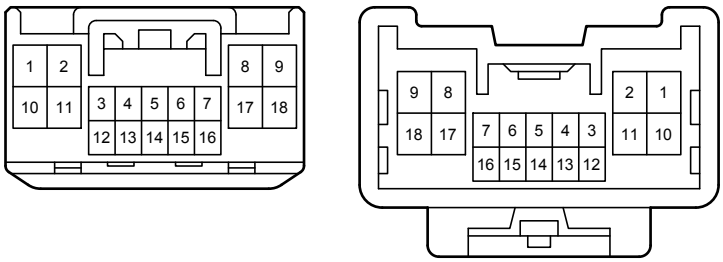

SH3
White

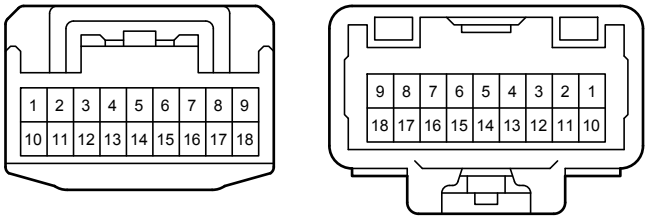

VO3
White

