
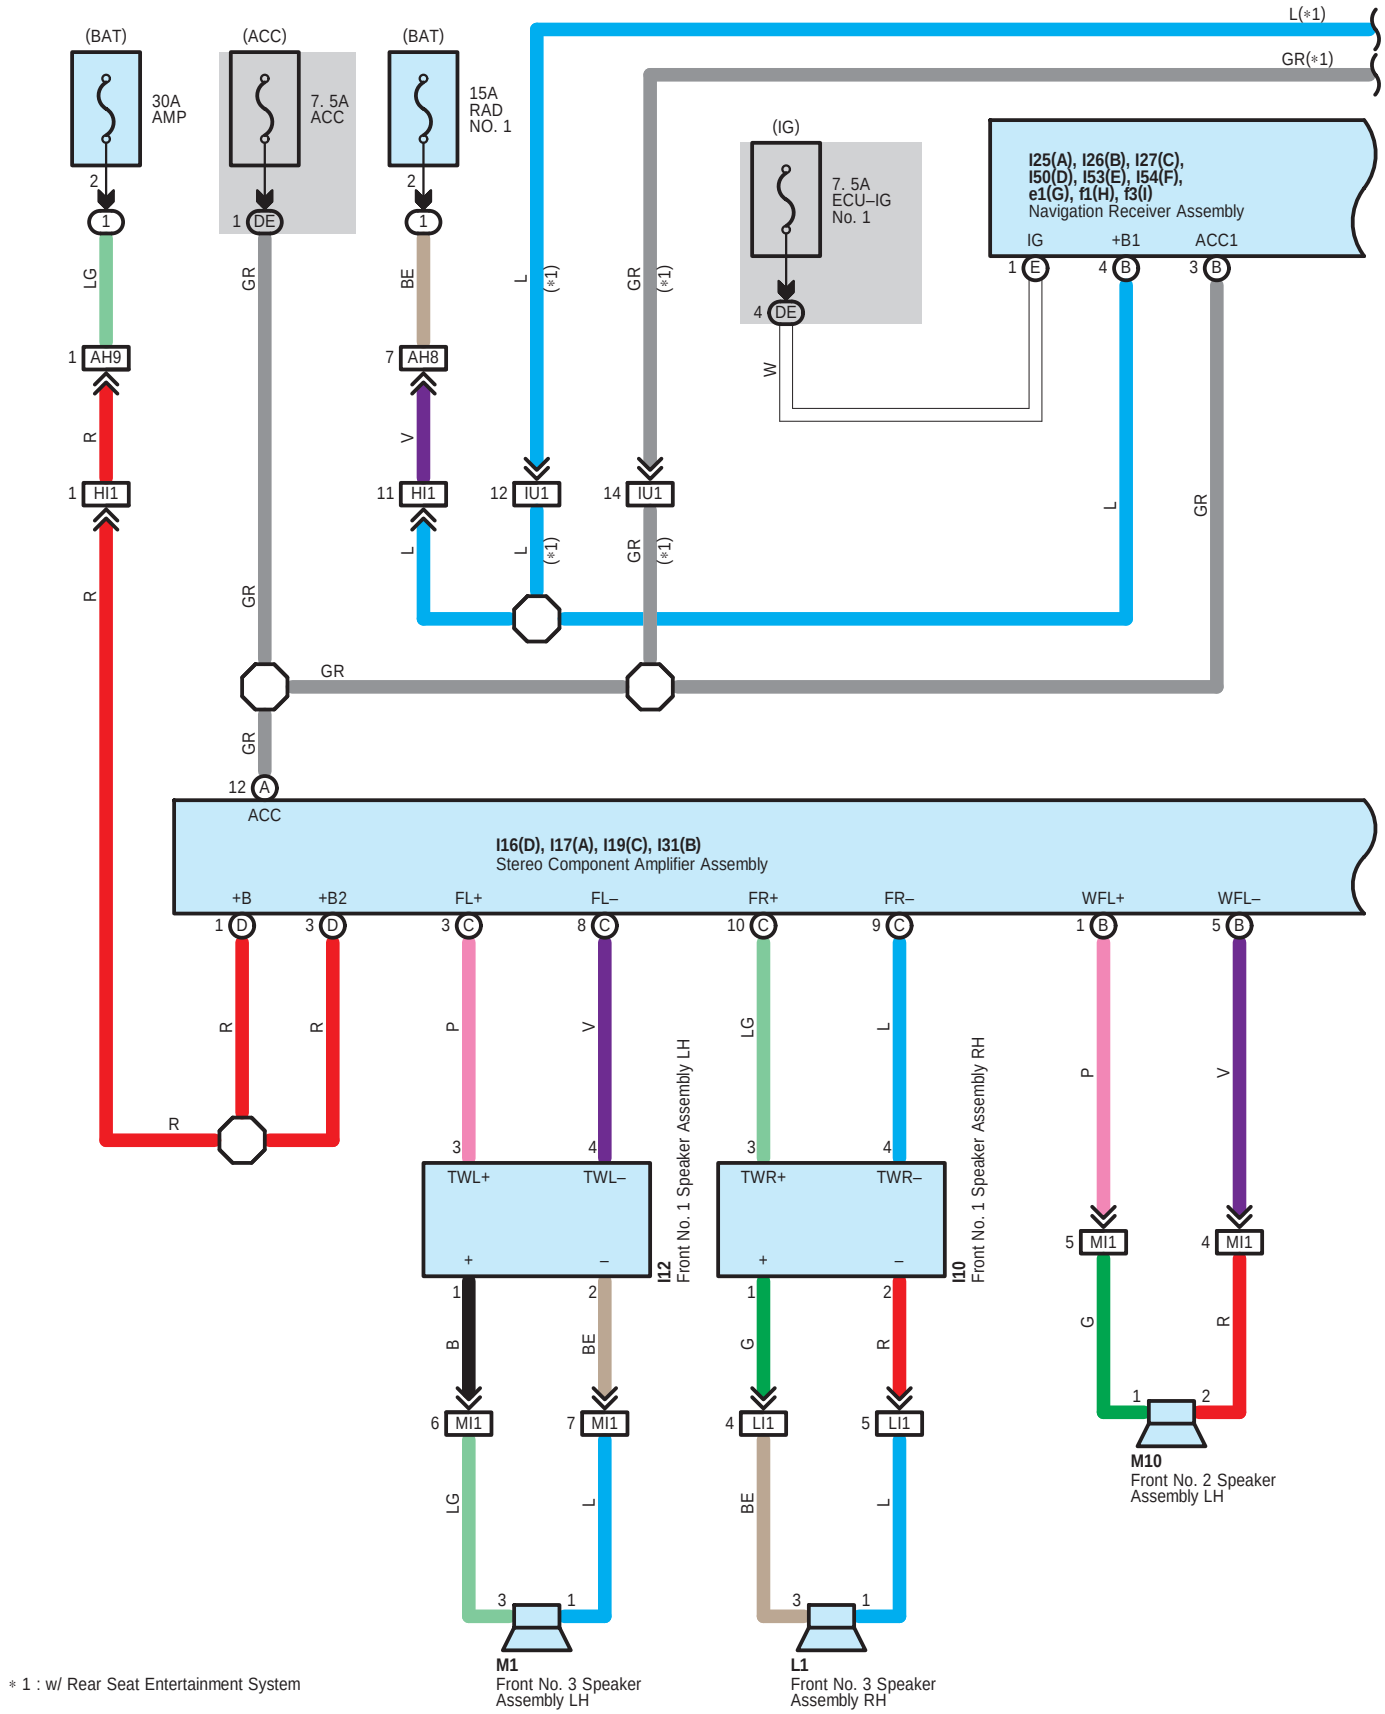
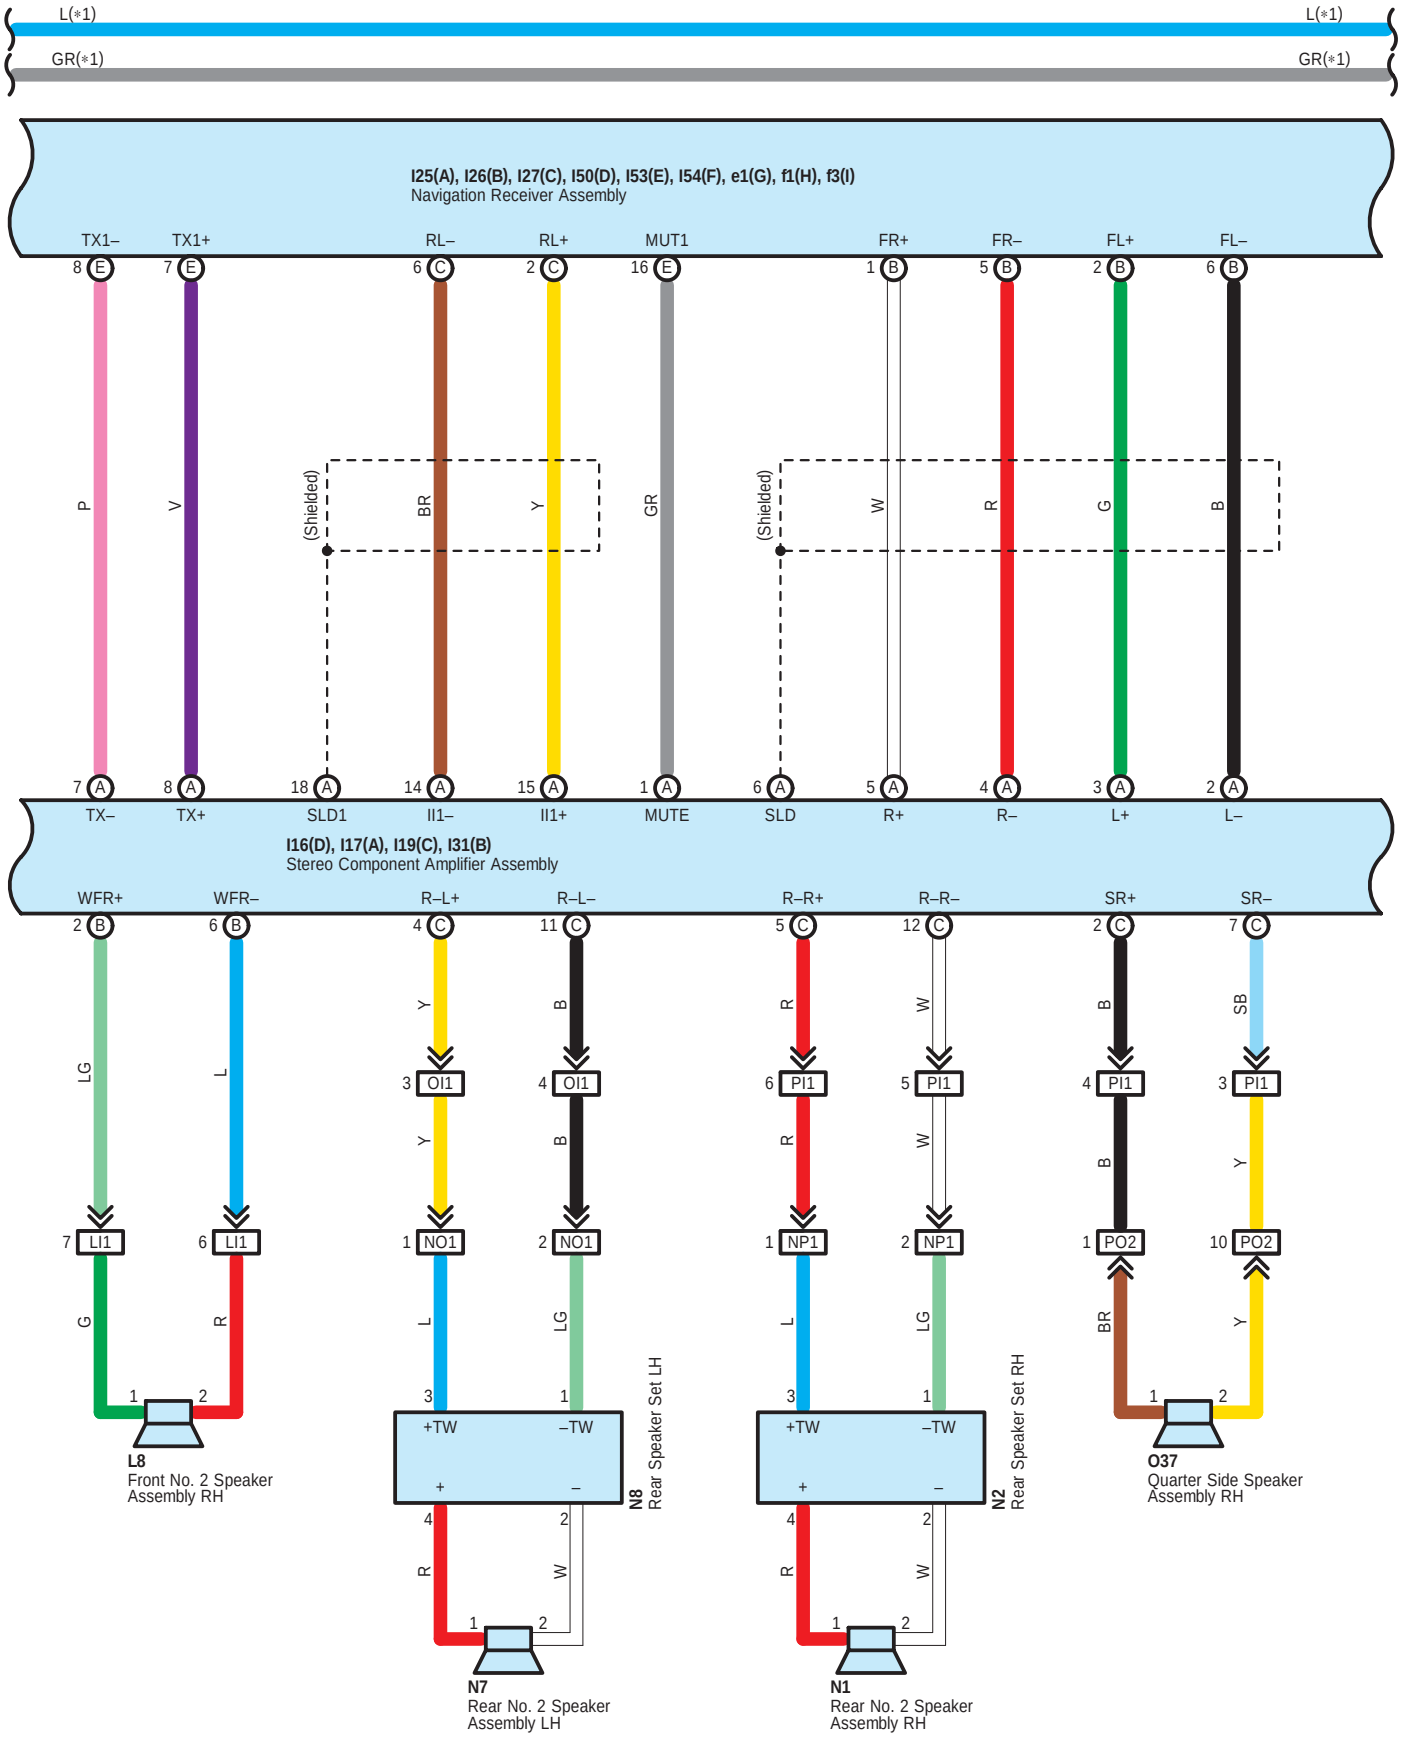



* 1 : w/ Rear Seat Entertainment System



L(*1)
GR(*1)
I25(A), I26(B), I27(C), I50(D), I53(E), I54(F), e1(G), f1(H), f3(I)
Navigation Receiver Assembly
TX1–
TX1+
RL–
RL+
MUT1
FR+
FR–
FL+
FL–
TX–
TX+
SLD1
II1–
II1+
MUTE
SLD
R+
R–
L+
L–
(Shielded)
I16(D), I17(A), I19(C), I31(B)
Stereo Component Amplifier Assembly
WFR+
WFR–
R–L+
R–L–
R–R+
R–R–
SR+
SR–
L8
Front No. 2 Speaker Assembly RH
N8
Rear Speaker Set LH
N2
Rear Speaker Set RH
O37
Quarter Side Speaker Assembly RH
N7
Rear No. 2 Speaker Assembly LH
N1
Rear No. 2 Speaker Assembly RH
+TW
–TW

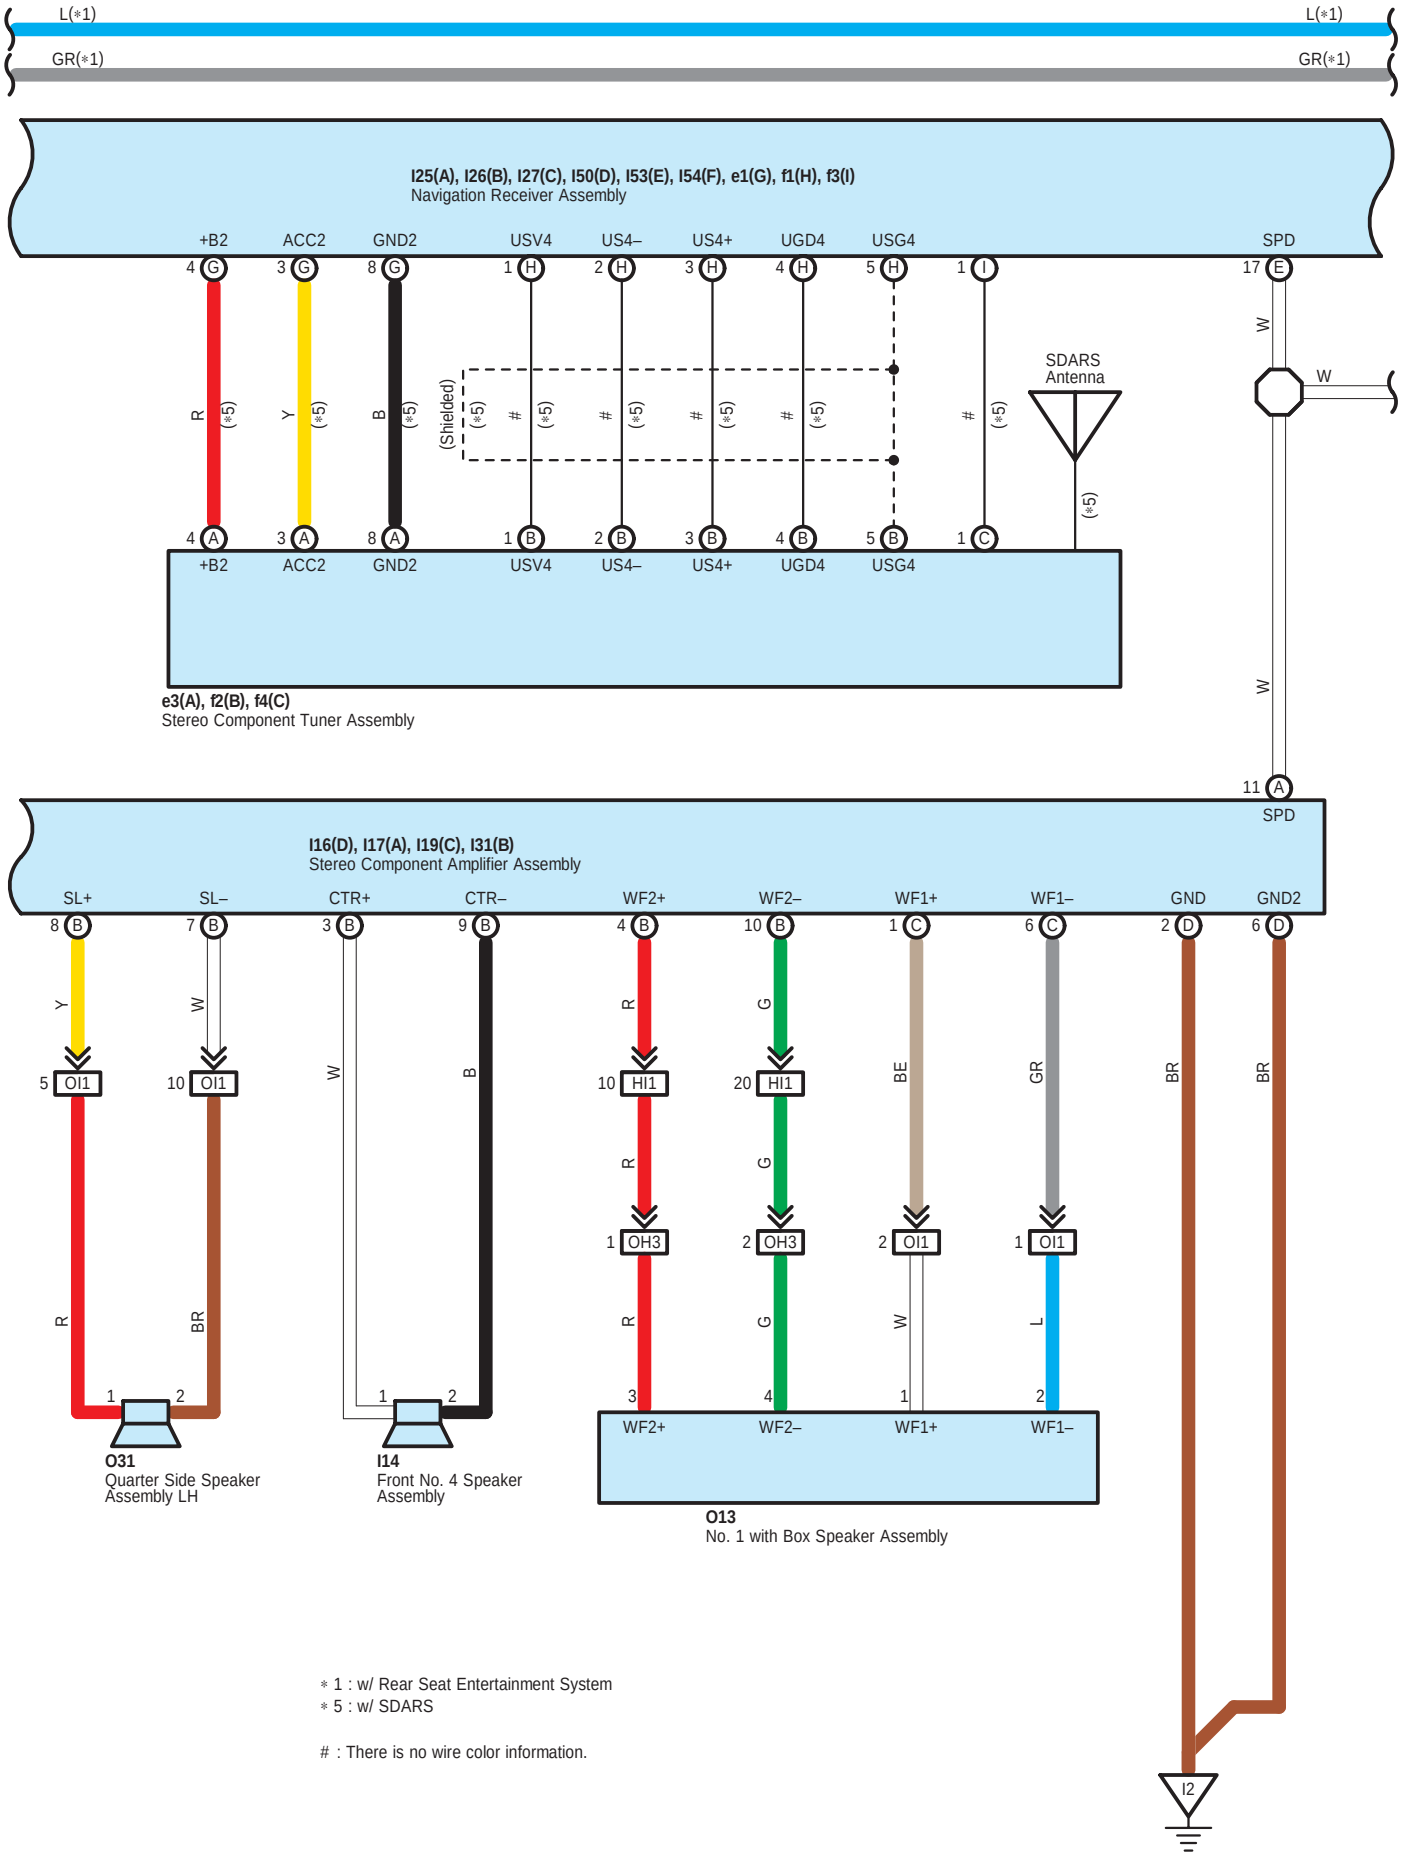


* 1 : w/ Rear Seat Entertainment System
* 5 : w/ SDARS


: There is no wire color information.

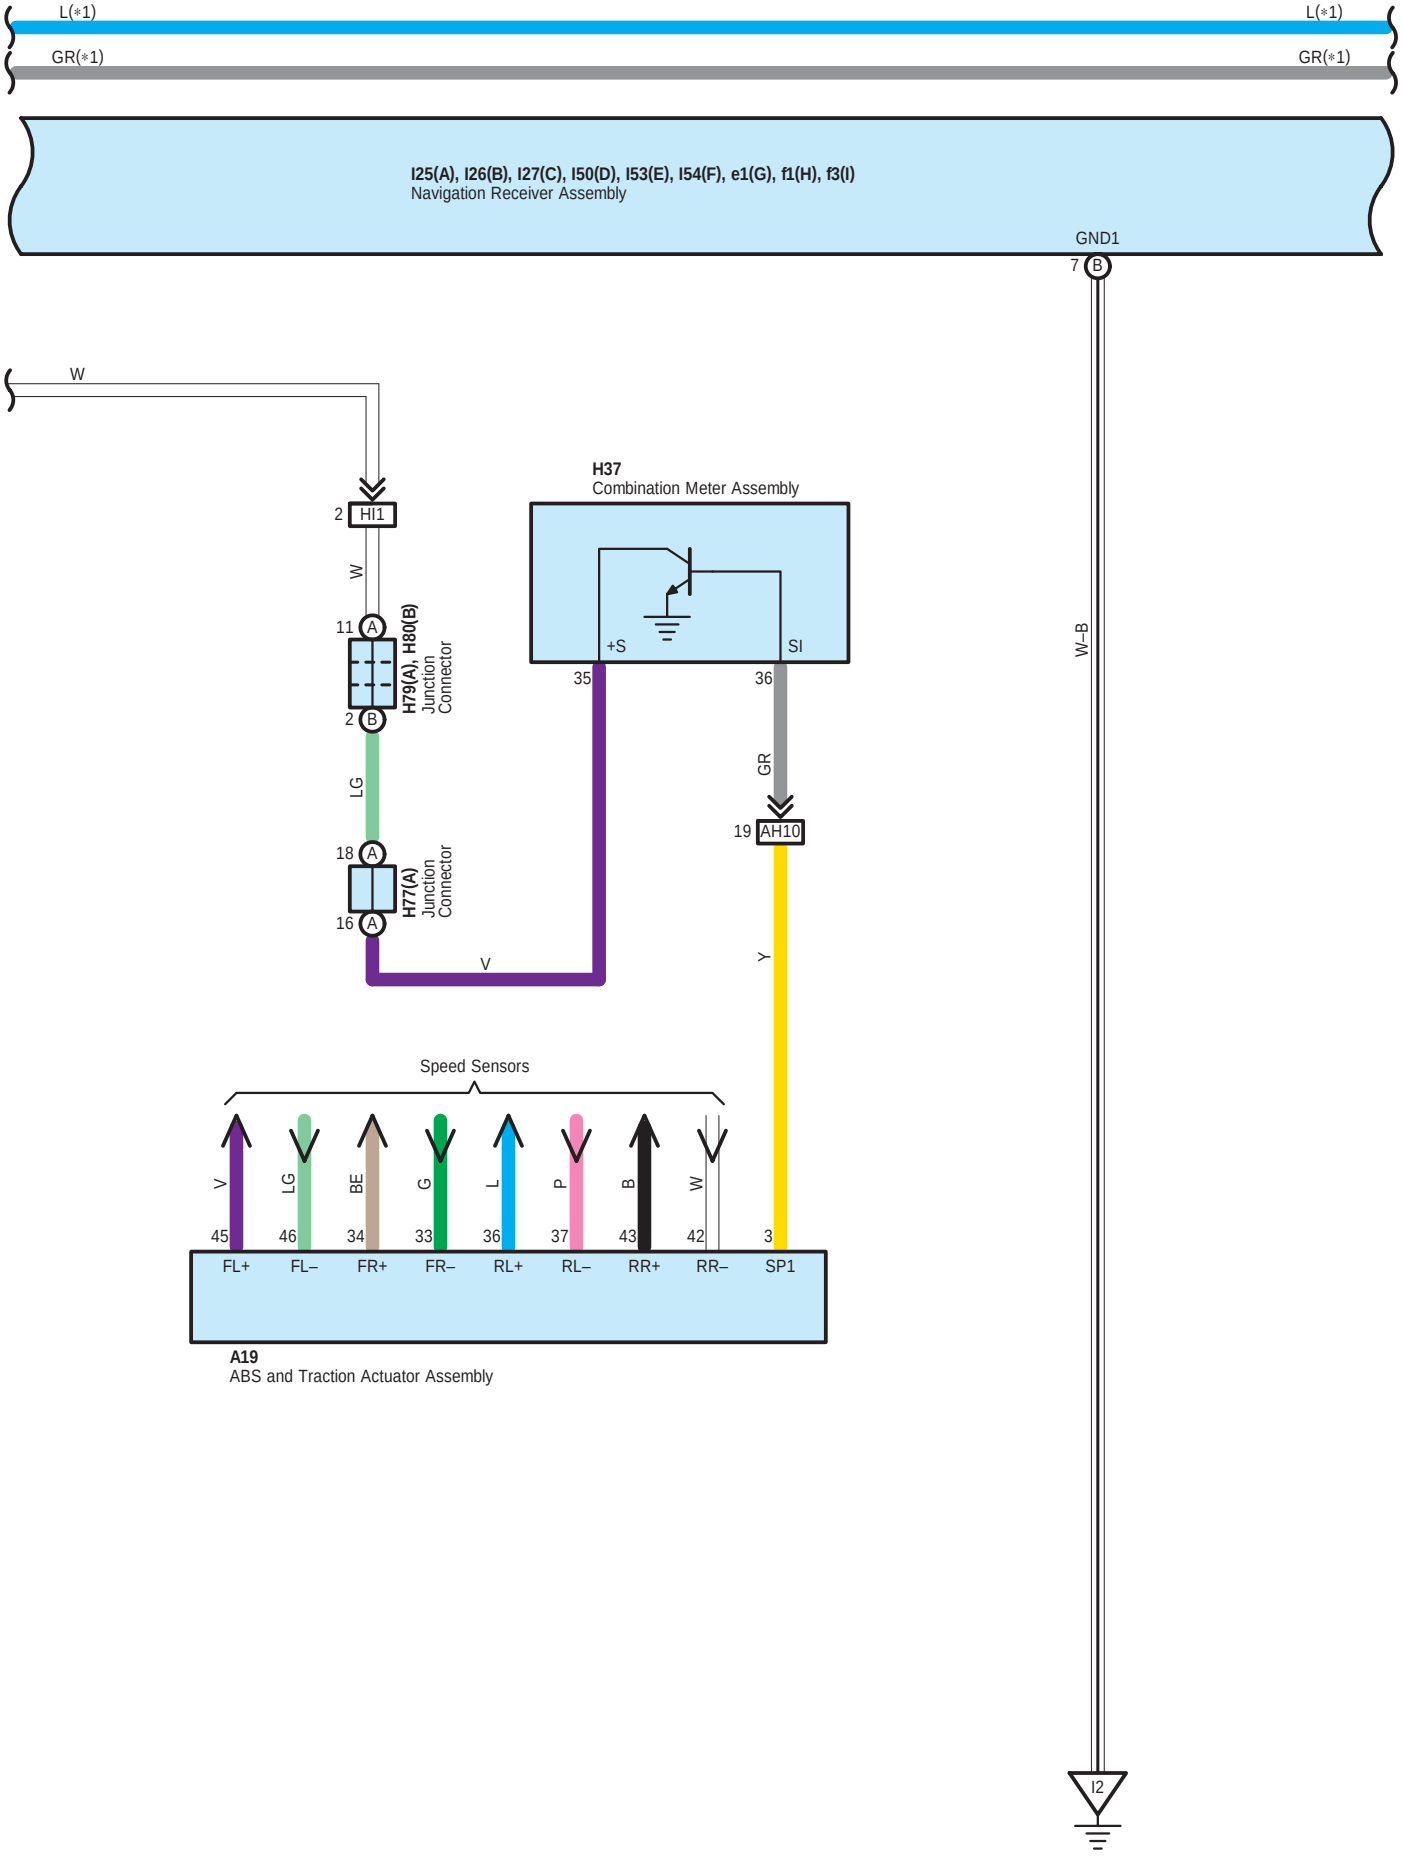
L(*1)
L(*1)
GR(*1)
GR(*1)
I25(A), I26(B), I27(C), I50(D), I53(E), I54(F), e1(G), f1(H), f3(I)
Navigation Receiver Assembly
GND1
7 B
W–B
I2
W
2 HI1
W
11 A
H79(A), H80(B)
Junction Connector
2 B
LG
18 A
H77(A)
Junction Connector
16 A
V
H37
Combination Meter Assembly
+S
SI
35
36
GR
19 AH10
Y
Speed Sensors
V
LG
BE
G
L
P
B
W
45
46
34
33
36
37
43
42
3
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
SP1
A19
ABS and Traction Actuator Assembly

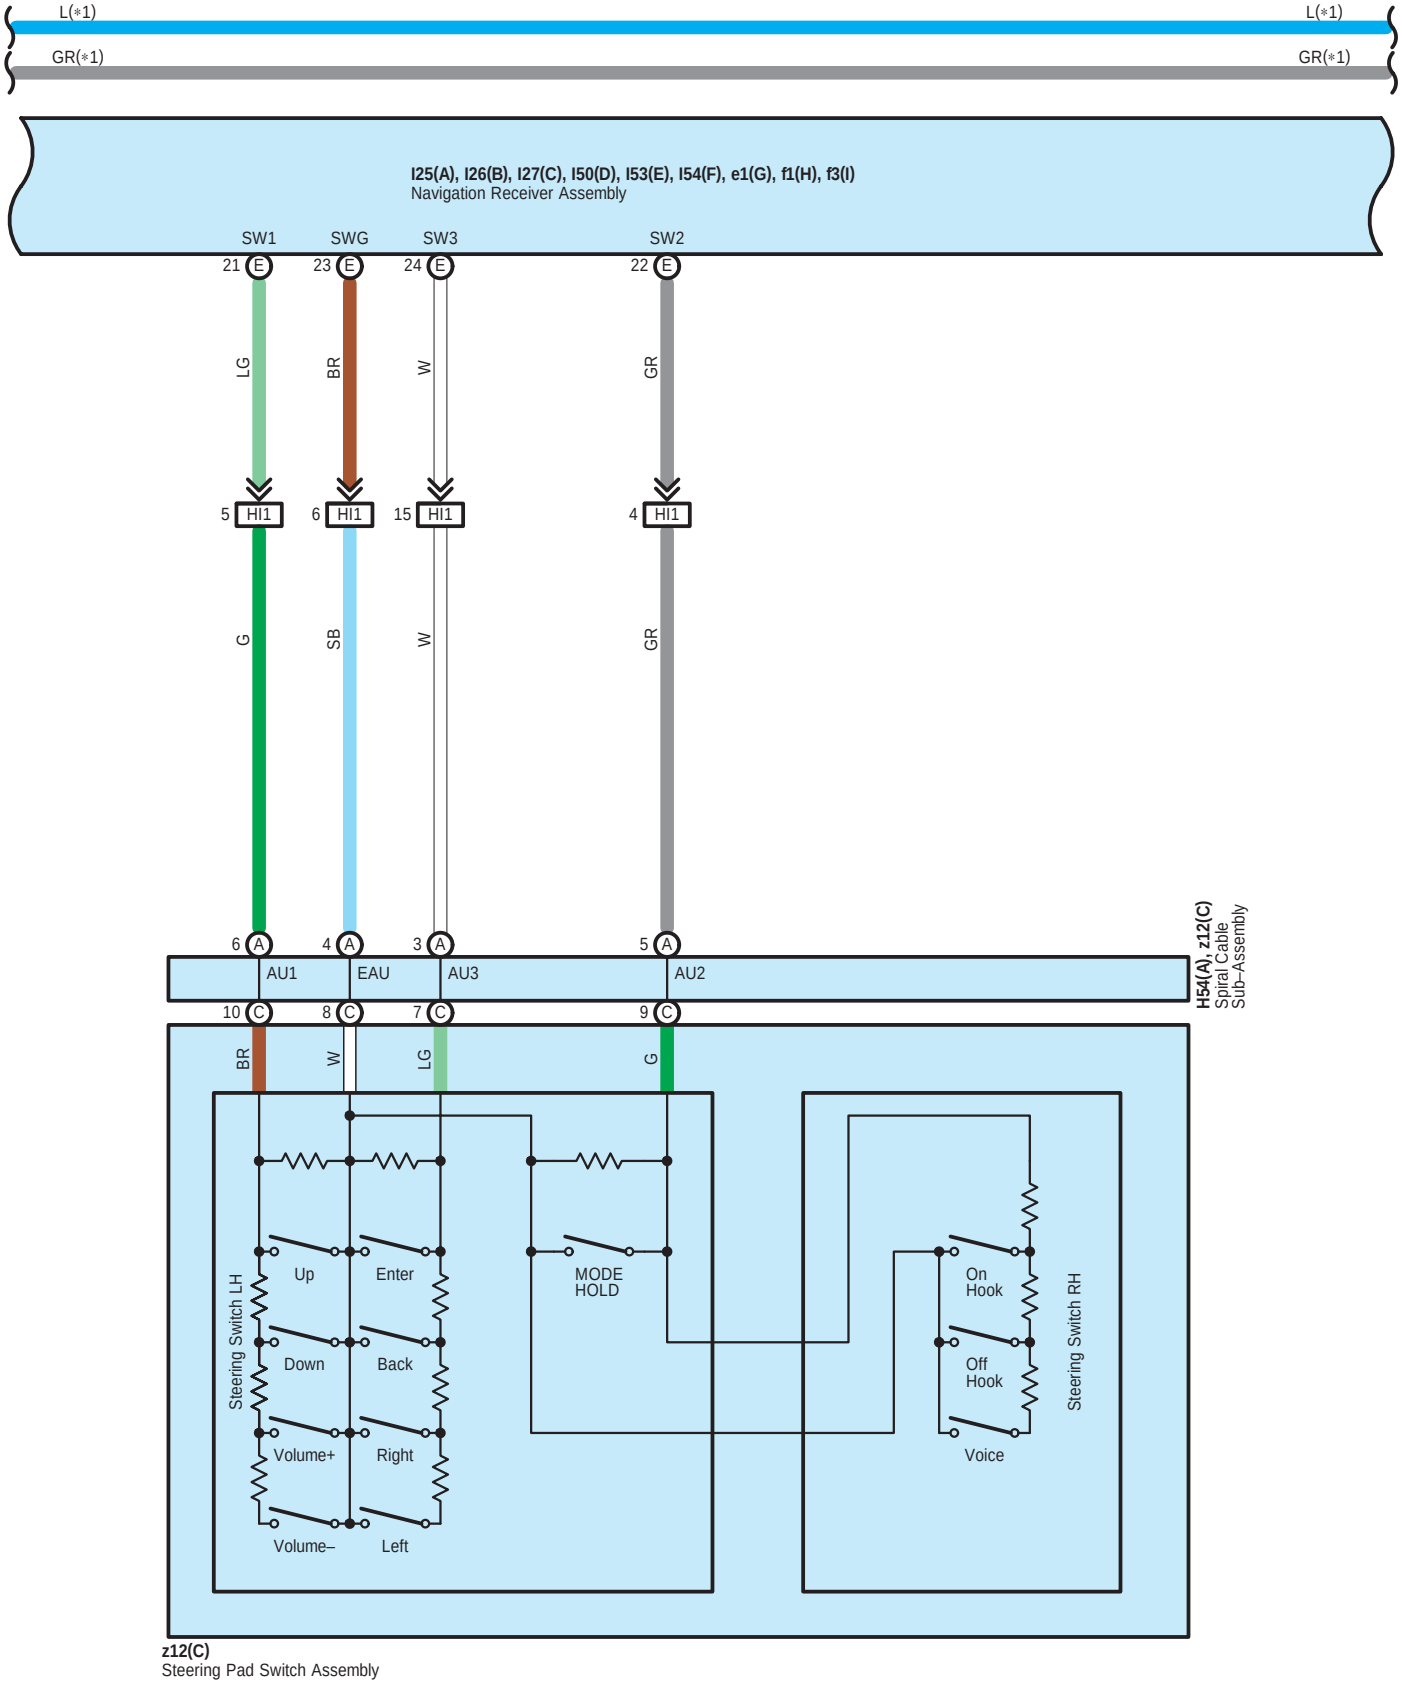


* 1 : w/ Rear Seat Entertainment System

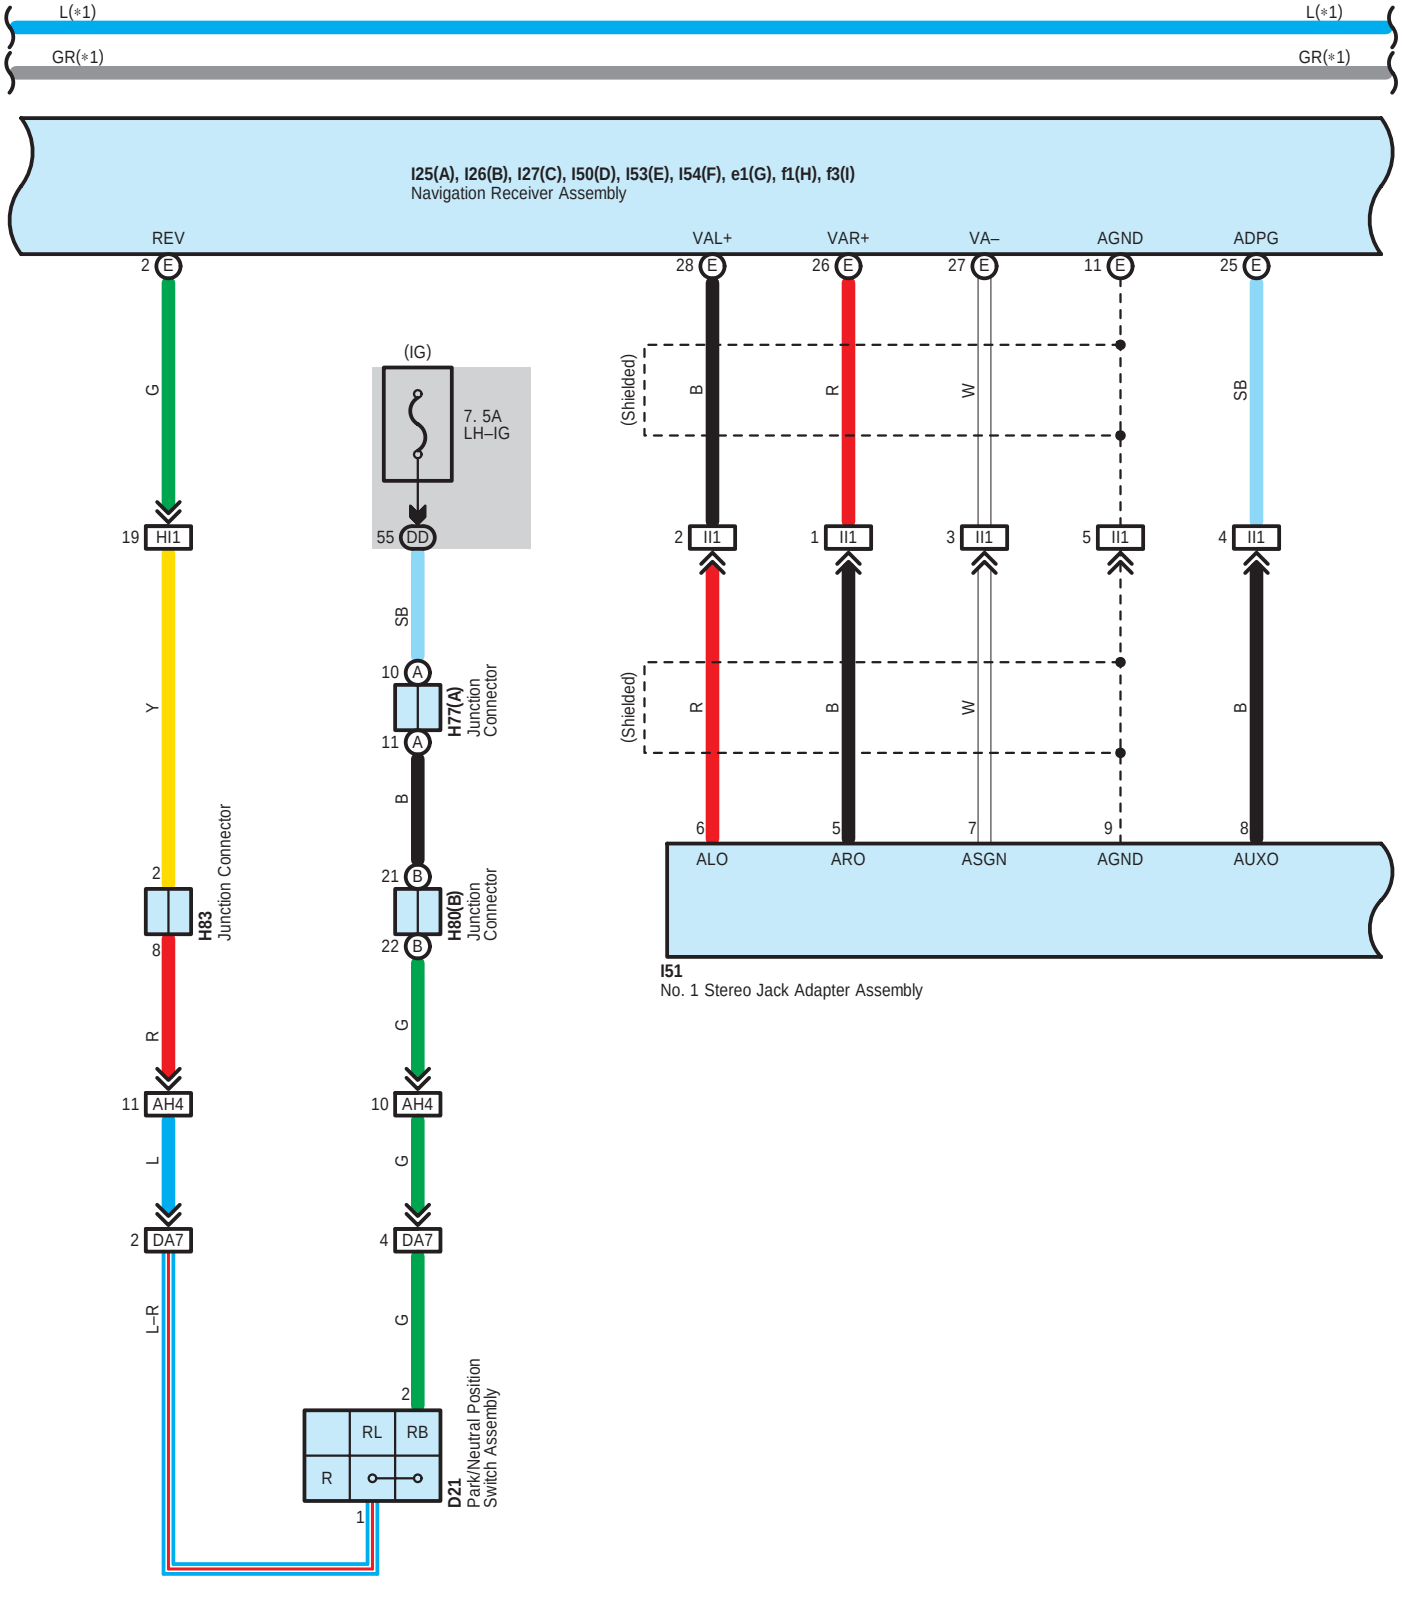

L(*1)
GR(*1)
L(*1)
GR(*1)
I25(A), I26(B), I27(C), I50(D), I53(E), I54(F), e1(G), f1(H), f3(I)
Navigation Receiver Assembly
REV
VAL+
VAR+
VA–
AGND
ADPG
2 E
28 E
26 E
27 E
11 E
25 E
(IG)
7. 5A
LH–IG
55 DD
19 HI1
(Shielded)
2 II1
1 II1
3 II1
5 II1
4 II1
G
SB
B
R
W
SB
Y
10 A
11 A
H77(A)
Junction
Connector
B
21 B
22 B
H80(B)
Junction
Connector
2
8
H83
Junction Connector
R
G
11 AH4
10 AH4
L
G
2 DA7
4 DA7
L–R
G
2
RL
RB
R
1
D21
Park/Neutral Position
Switch Assembly
(Shielded)
R
B
W
B
6
5
7
9
8
ALO
ARO
ASGN
AGND
AUXO
I51
No. 1 Stereo Jack Adapter Assembly

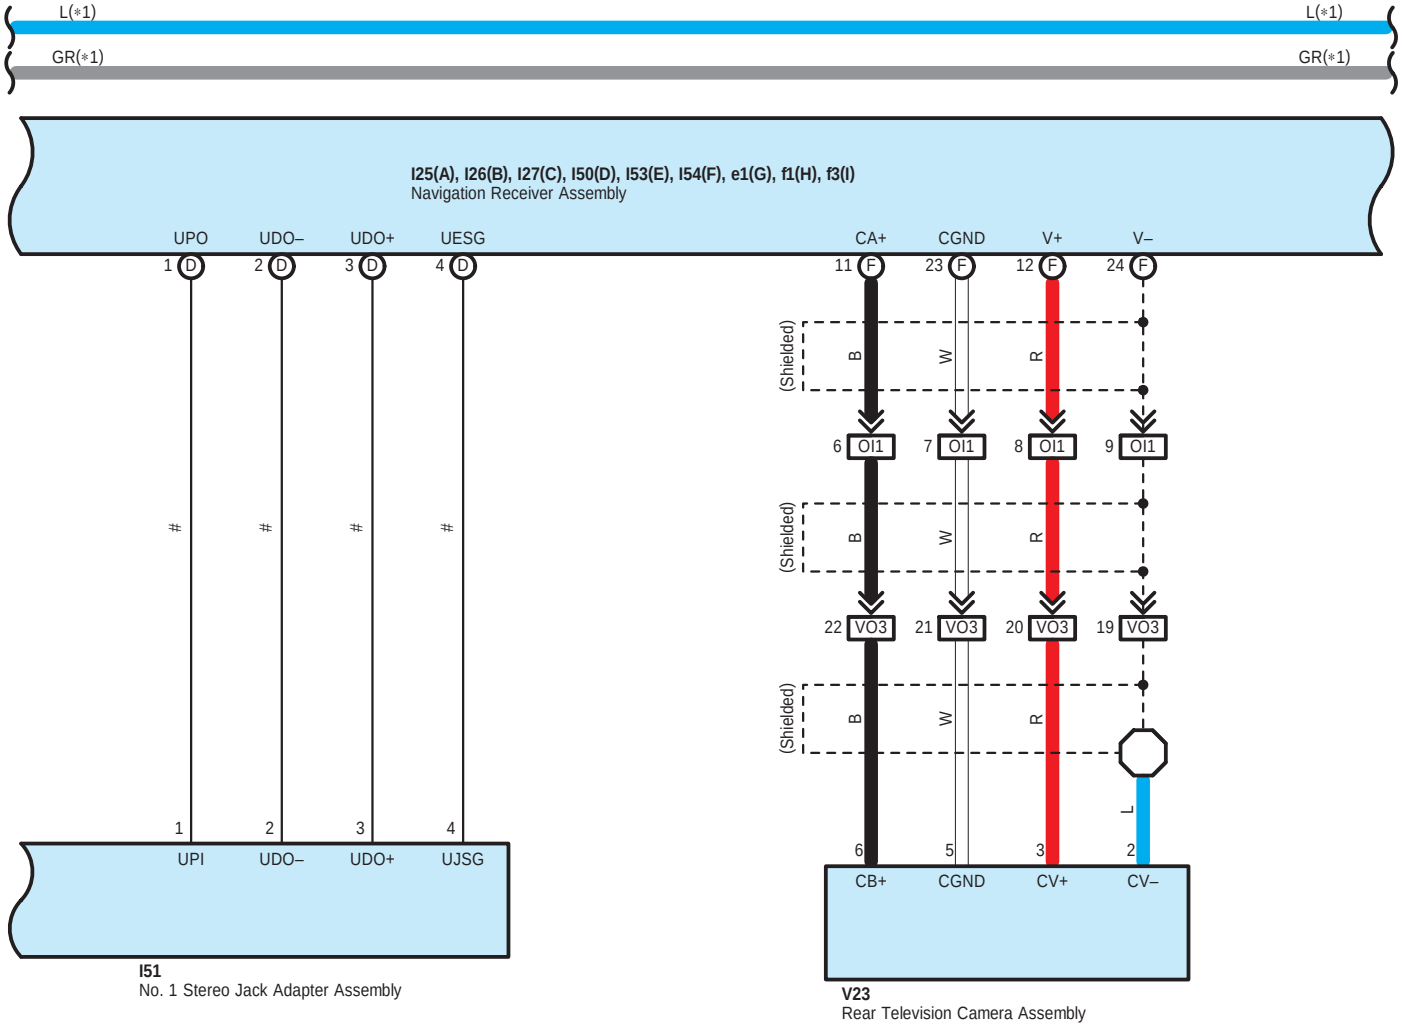


* 1 : w/ Rear Seat Entertainment System

: There is no wire color information.

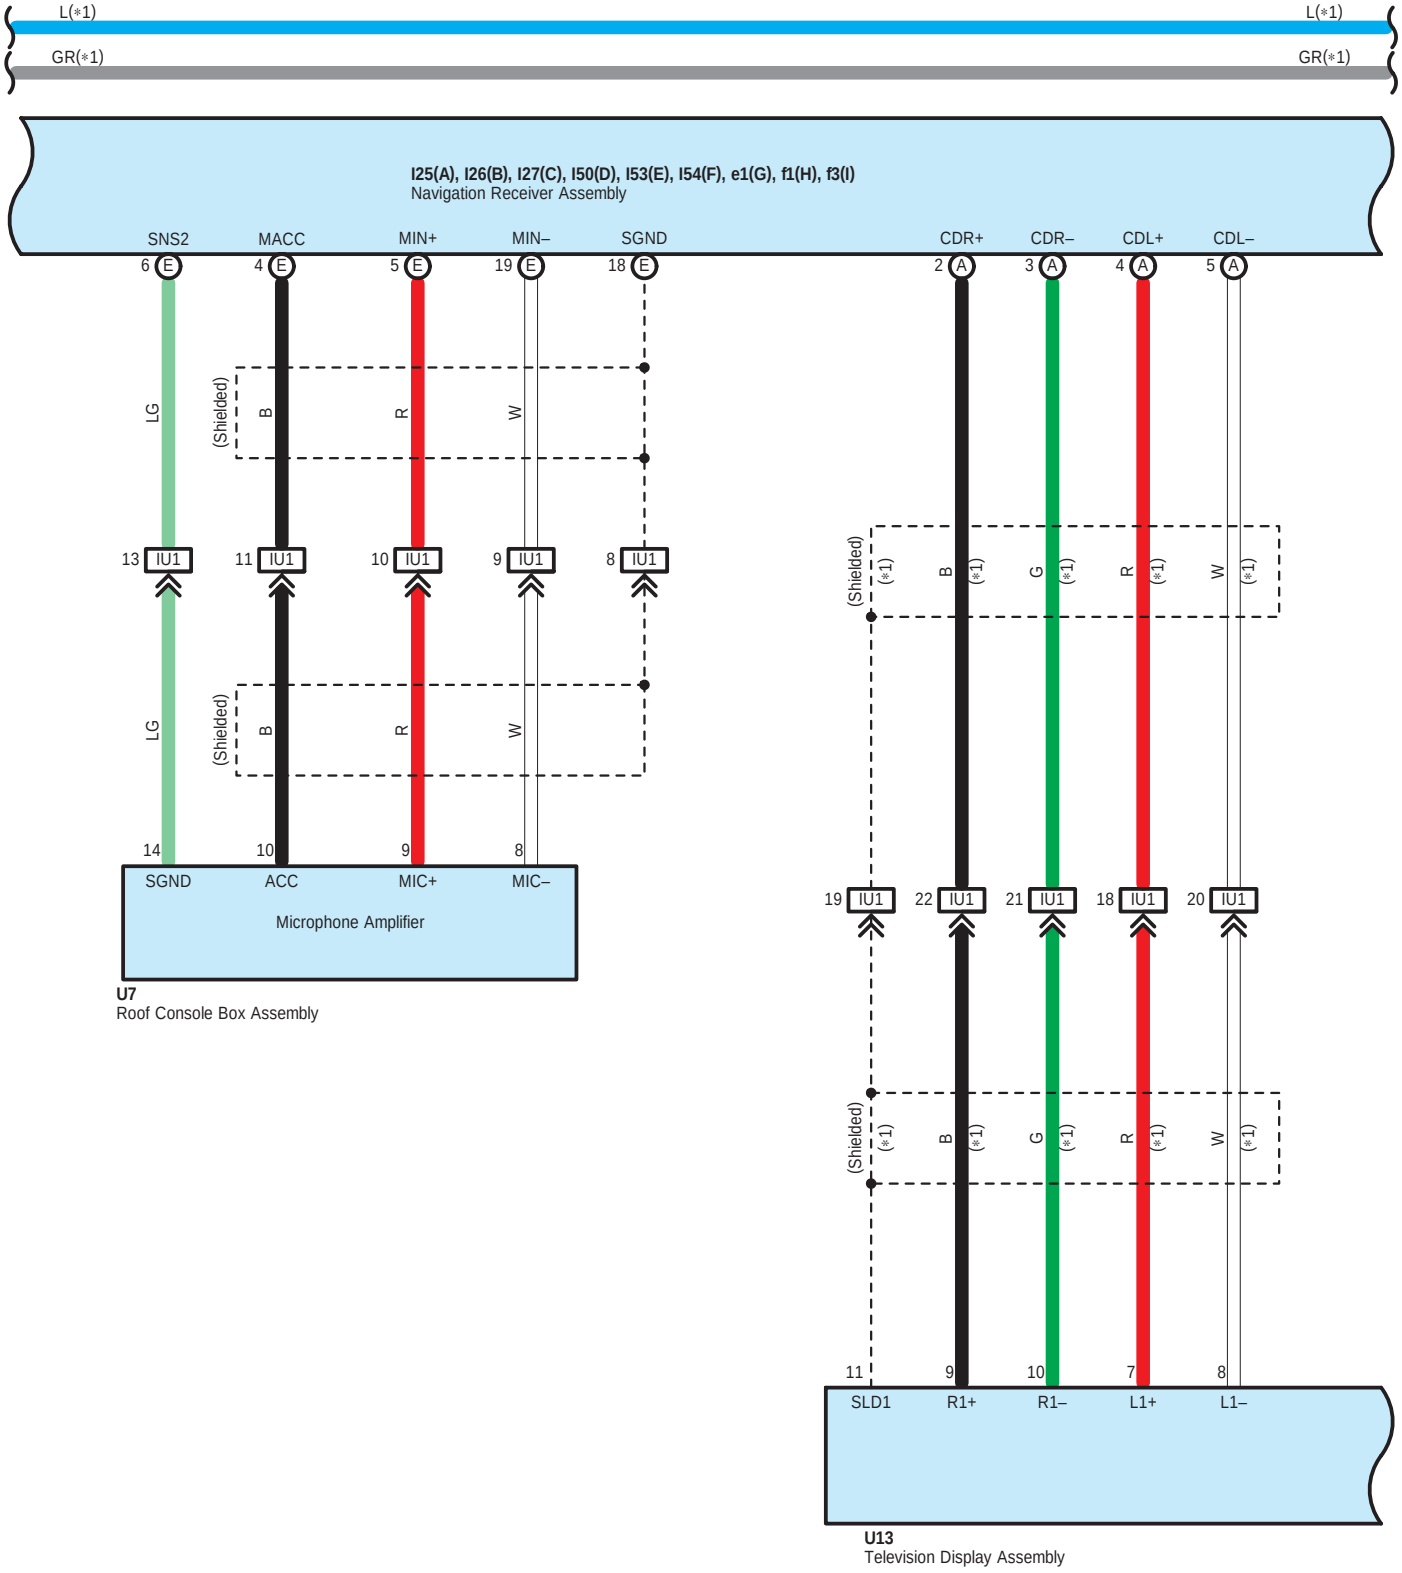

L(*1)
GR(*1)
L(*1)
GR(*1)
I25(A), I26(B), I27(C), I50(D), I53(E), I54(F), e1(G), f1(H), f3(I)
Navigation Receiver Assembly
SNS2
MACC
MIN+
MIN–
SGND
CDR+
CDR–
CDL+
CDL–
LG
(Shielded)
B
R
W
IU1
SGND
ACC
MIC+
MIC–
Microphone Amplifier
U7
Roof Console Box Assembly
G
(*1)
SLD1
R1+
R1–
L1+
L1–
U13
Television Display Assembly

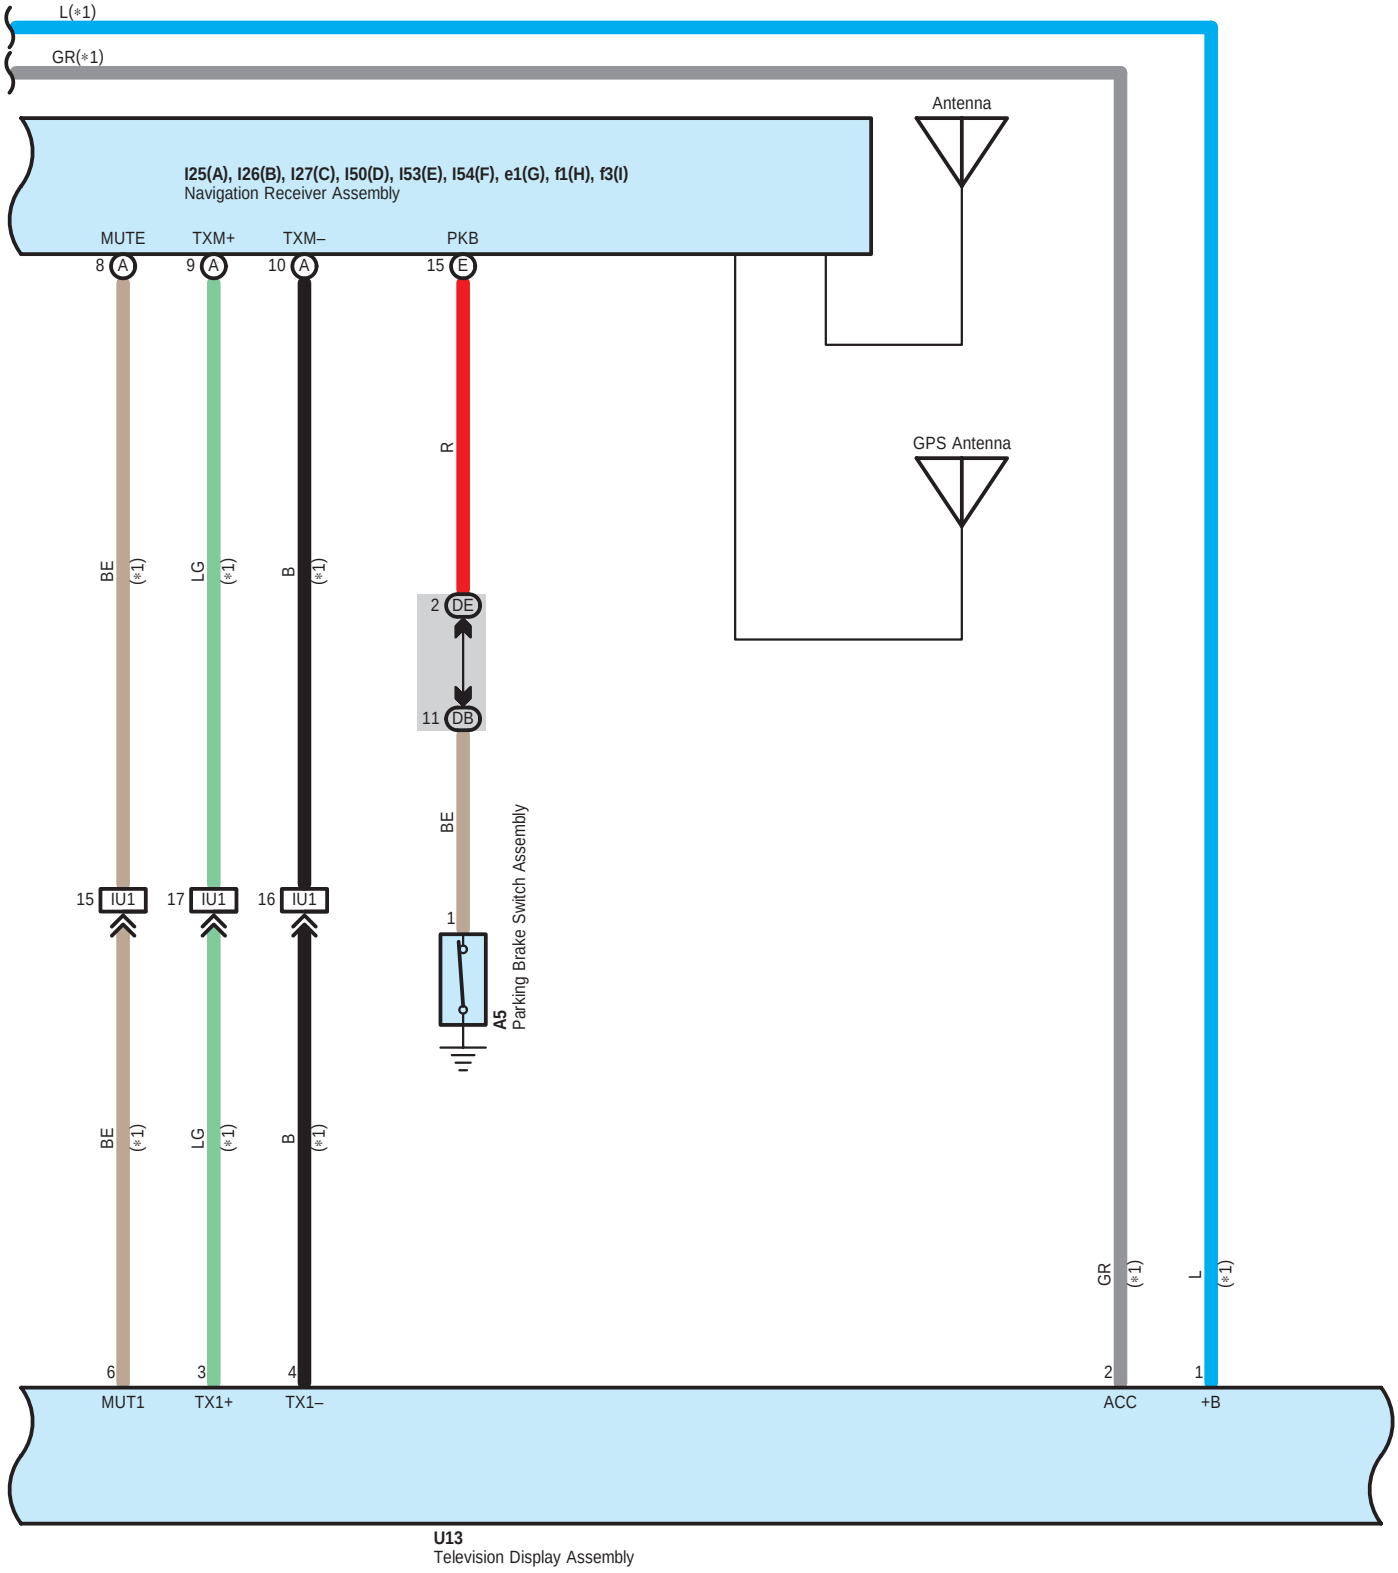

* 1 : w/ Rear Seat Entertainment System

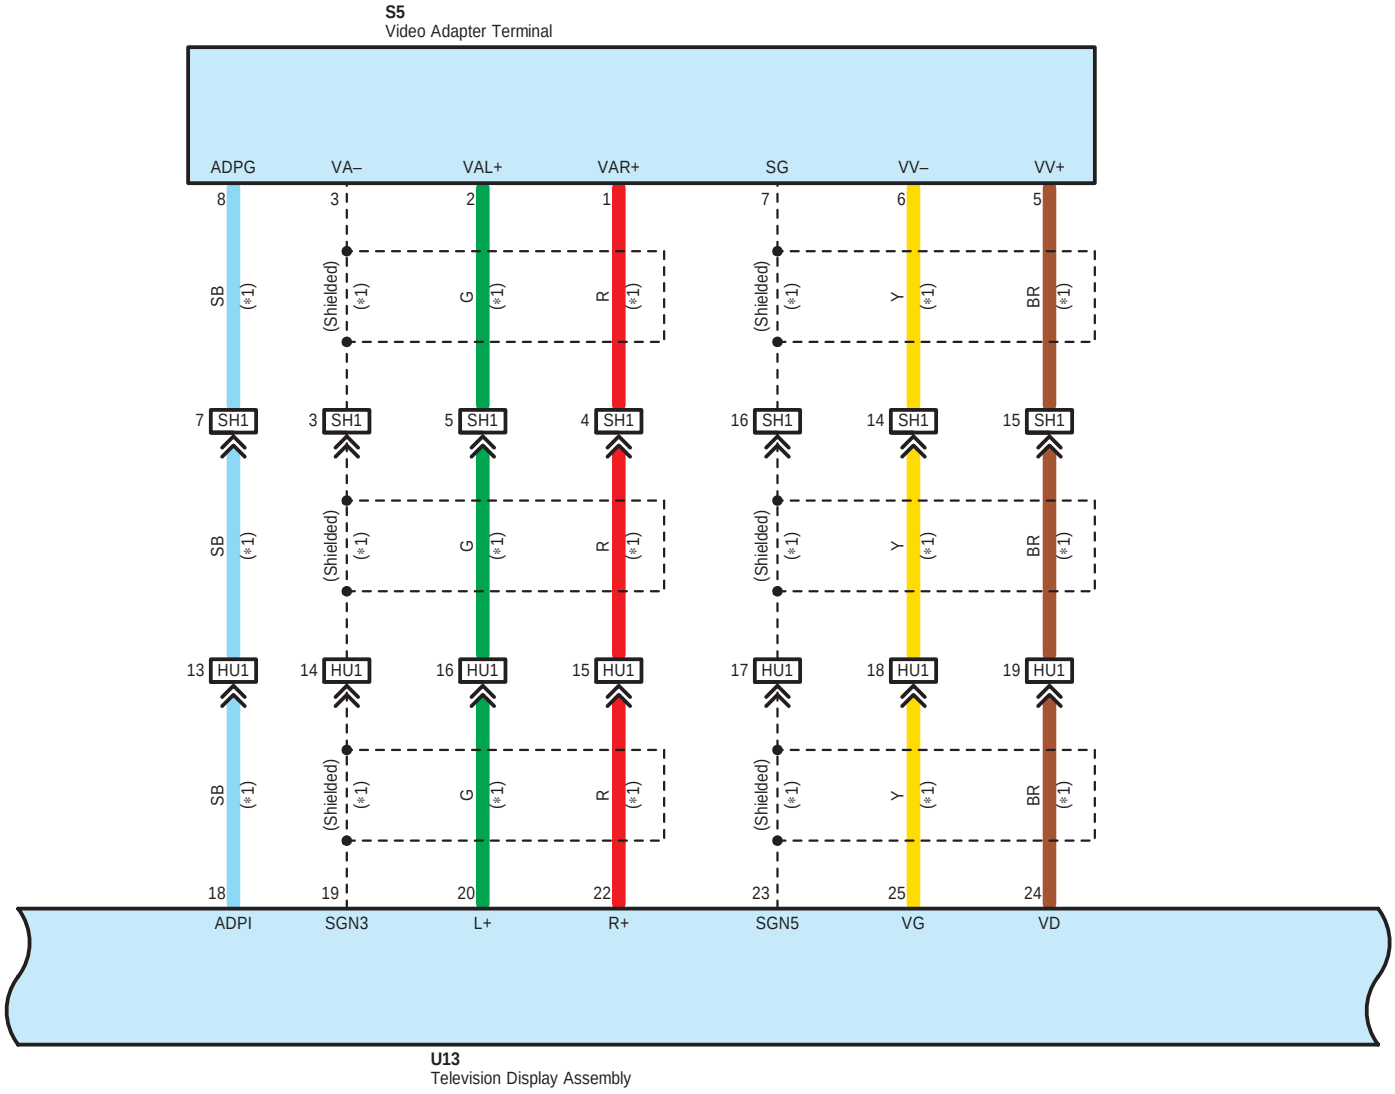
S5
Video Adapter Terminal
ADPG
VA–
VAL+
VAR+
SG
VV–
VV+
8
3
2
1
7
6
5
SB
(Shielded)
G
R
Y
BR
(*1)
7 SH1
3 SH1
5 SH1
4 SH1
16 SH1
14 SH1
15 SH1
13 HU1
14 HU1
16 HU1
15 HU1
17 HU1
18 HU1
19 HU1
18
19
20
22
23
25
24
ADPI
SGN3
L+
R+
SGN5
VG
VD
U13
Television Display Assembly


∗ 1 : w/ Rear Seat Entertainment System

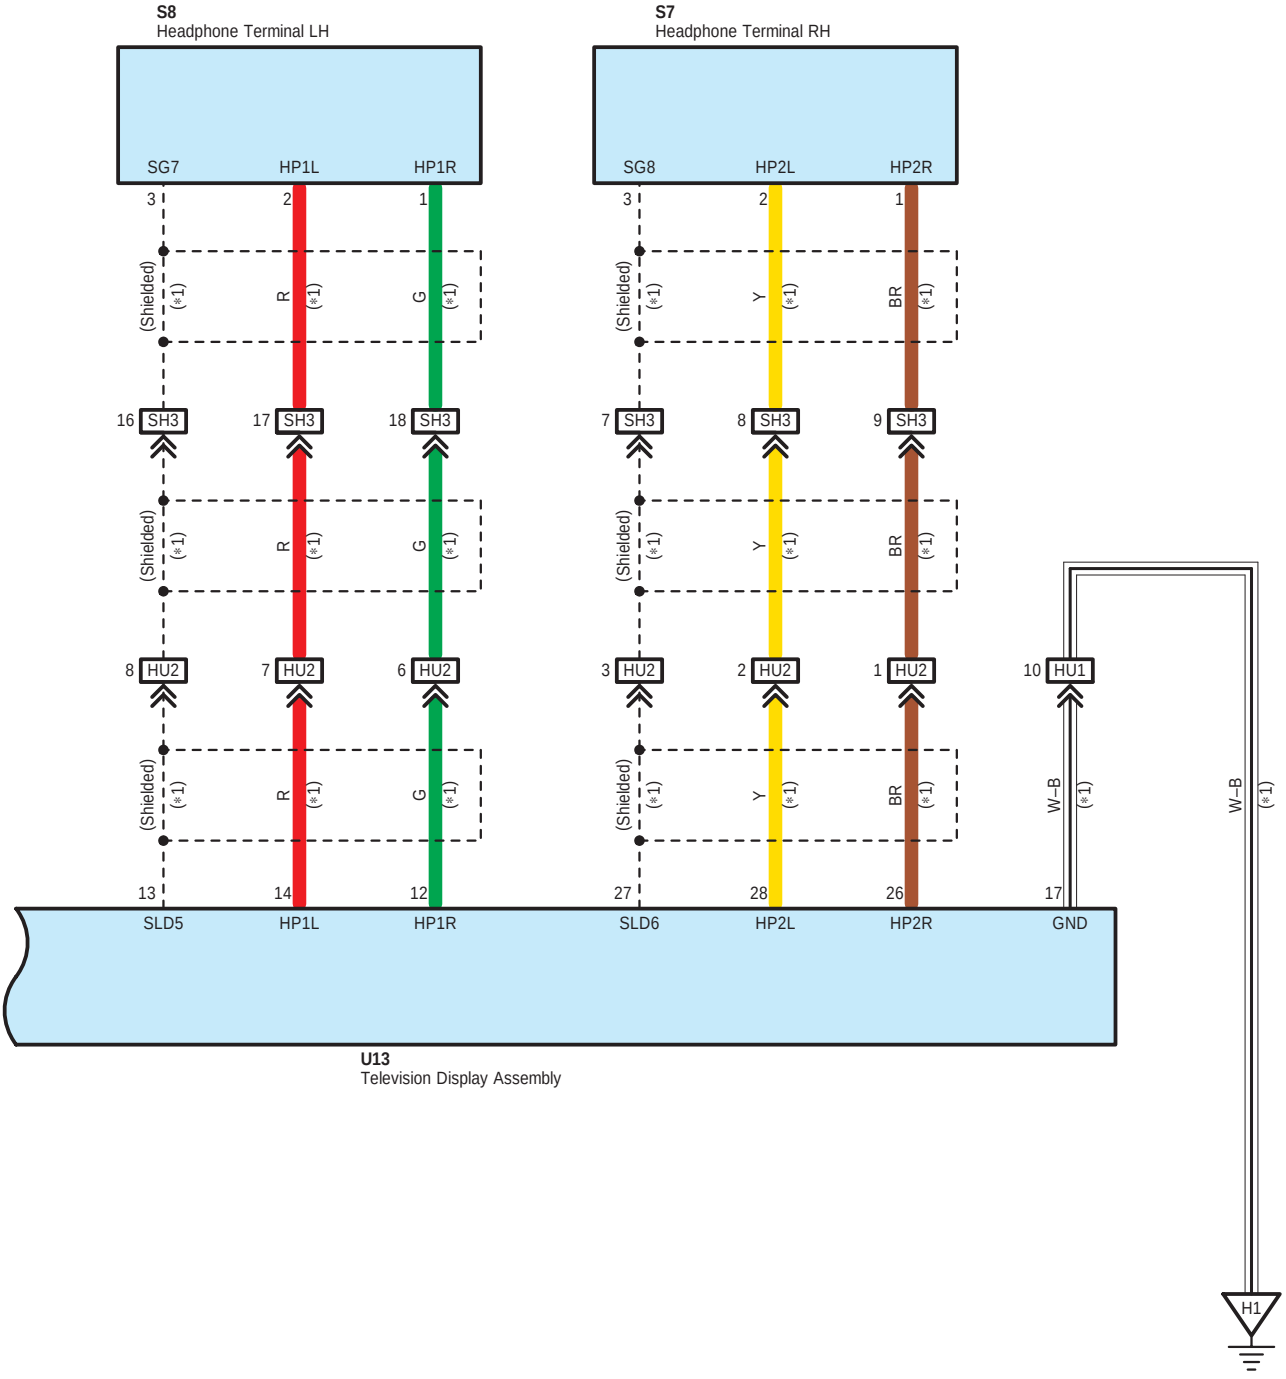


A 5
White




A 19
Black

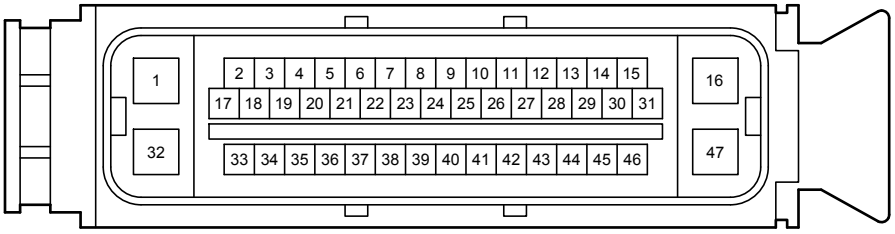

D 21
Gray

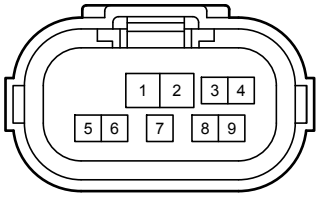


H 37
White

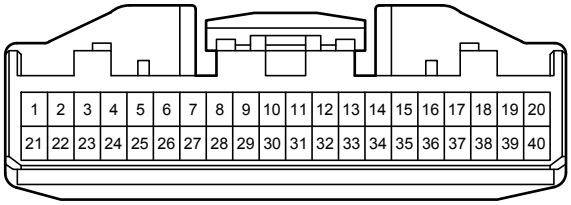


H 54
Black




H 77
Black

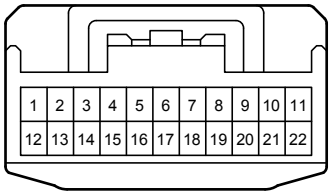


H 79
Black

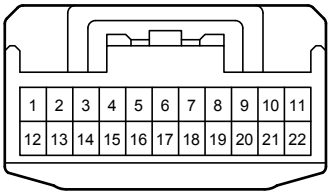


H 80
Black

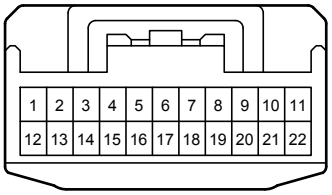


H 83
Gray

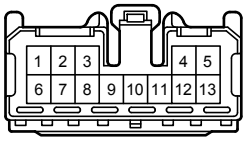


I 10
White



I 12
White




I 14
White

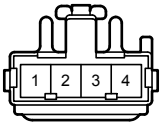


I 16
White




I 17
White

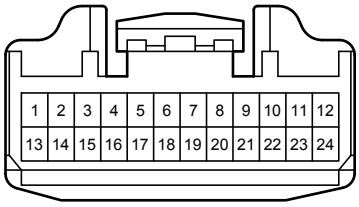


I 19
White



I 25
White

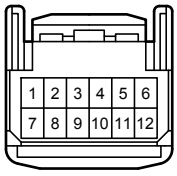


I 26
White

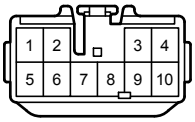


I 27
White




I 31
Blue

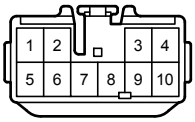


I 50
Gray

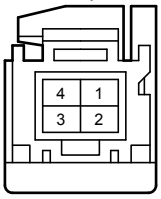


I 51
Black

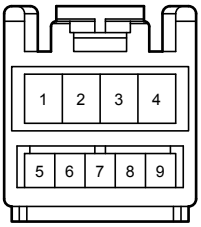


I 53
White

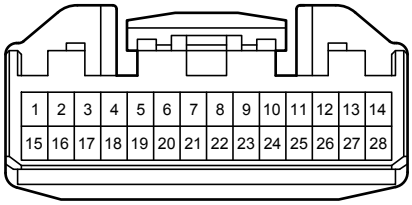

I 54
White

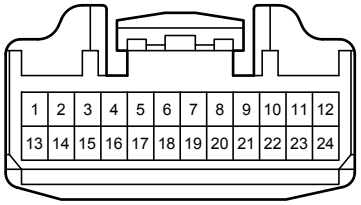


L 1
White



L 8
White



M 1
White




M 10
White



N 1
Gray




N 2
White




N 7
Gray




N 8
White




O 13
White




O 31
White

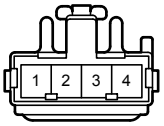


O 37
White

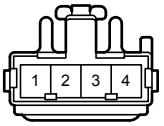


S 5
White

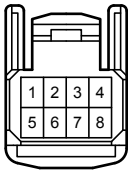


S 7
White




S 8
White




U 7
White

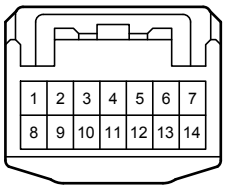


U 13
White

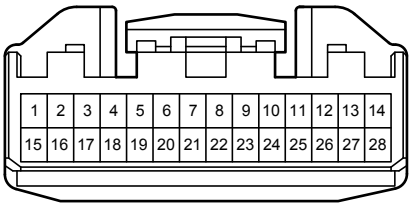


V 23
Gray

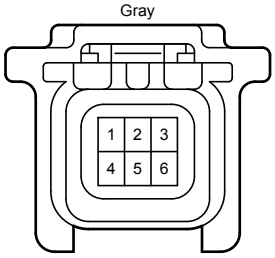


e 1
White

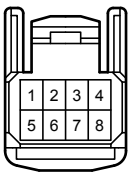


e 3
White

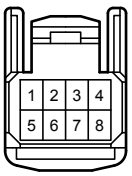


f 1
Brown

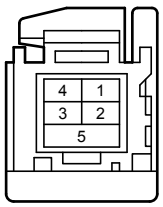


f 2
Brown

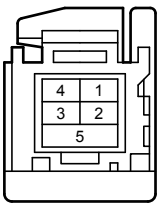


f 3
White




f 4
White




z 12
White

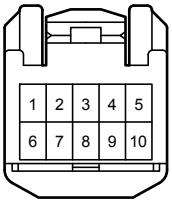


DB
White

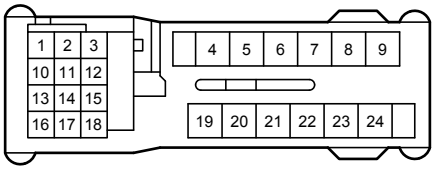


DD
White

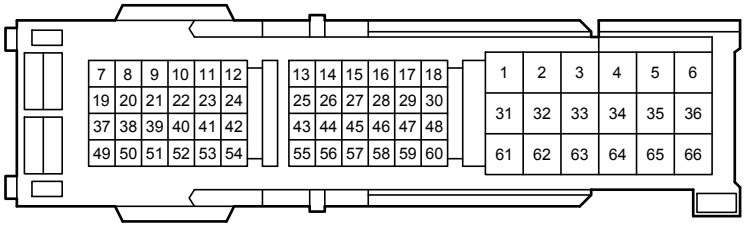


DE
White

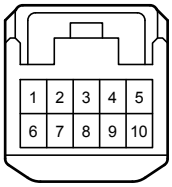


AH4
White

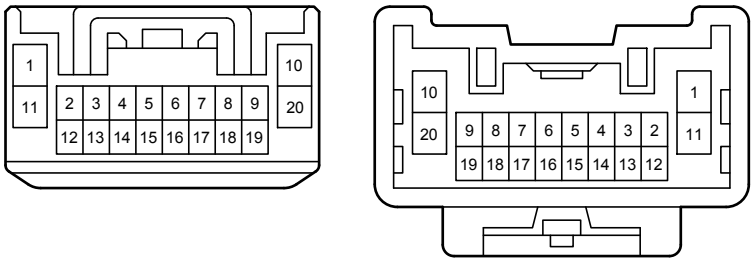


AH8
Gray

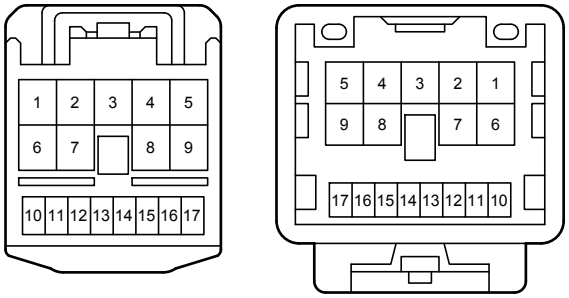


AH9
Gray

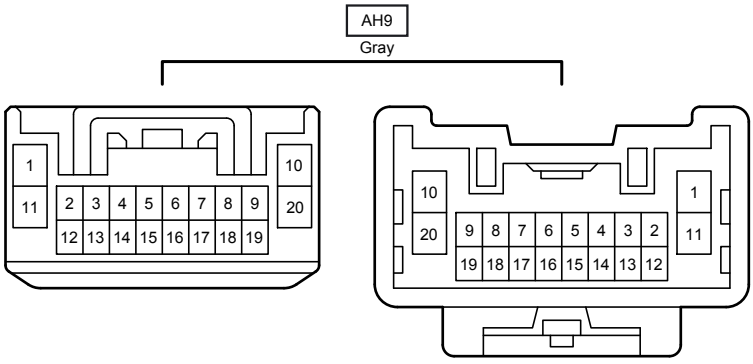


AH10
Gray

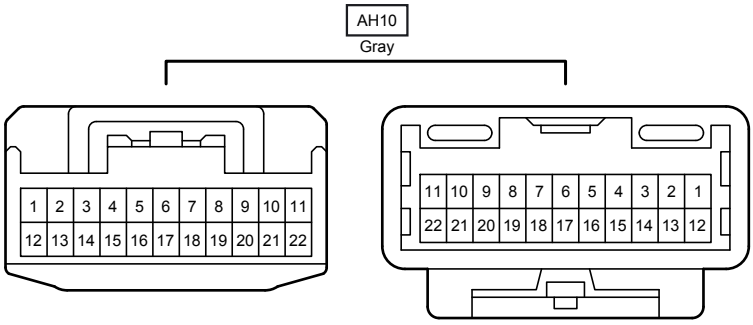


DA7
Gray

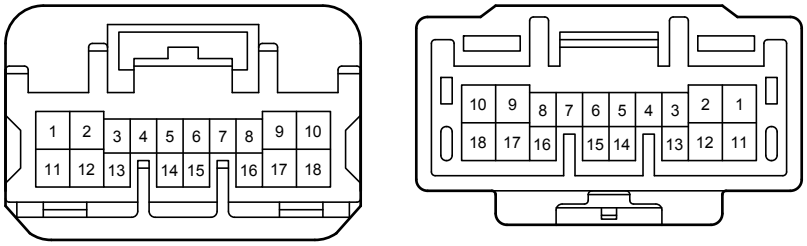


HI1
White

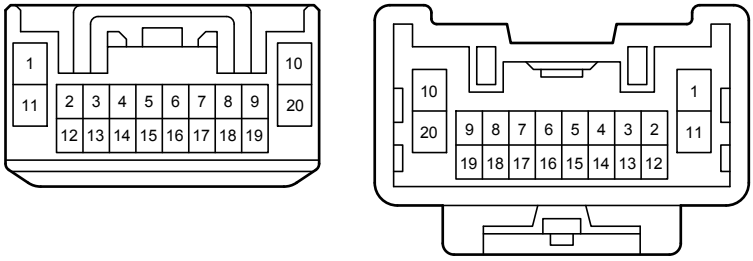


HU1
White

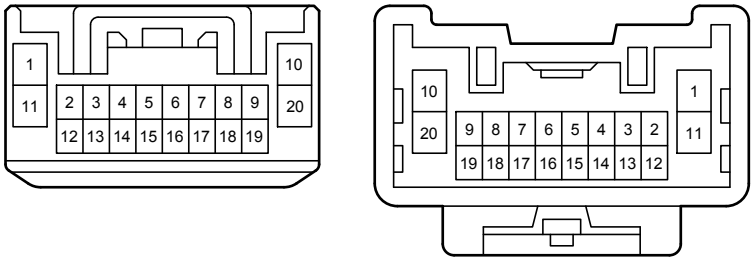


HU2
White

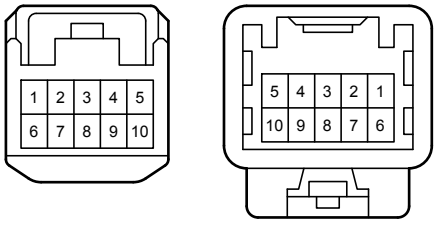


II1
White

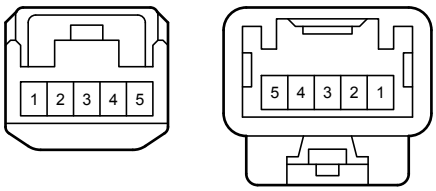


IU1
White

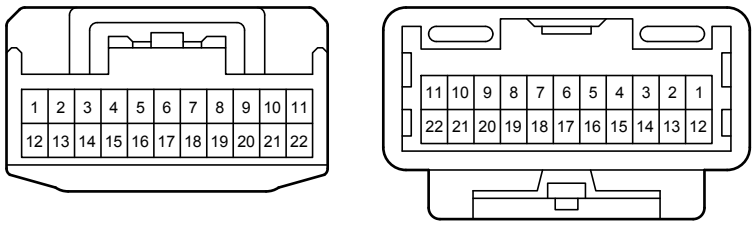


LI1
Blue

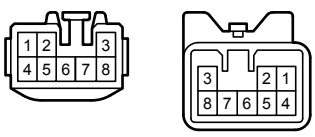


MI1
Blue

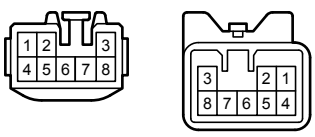


NO1
White

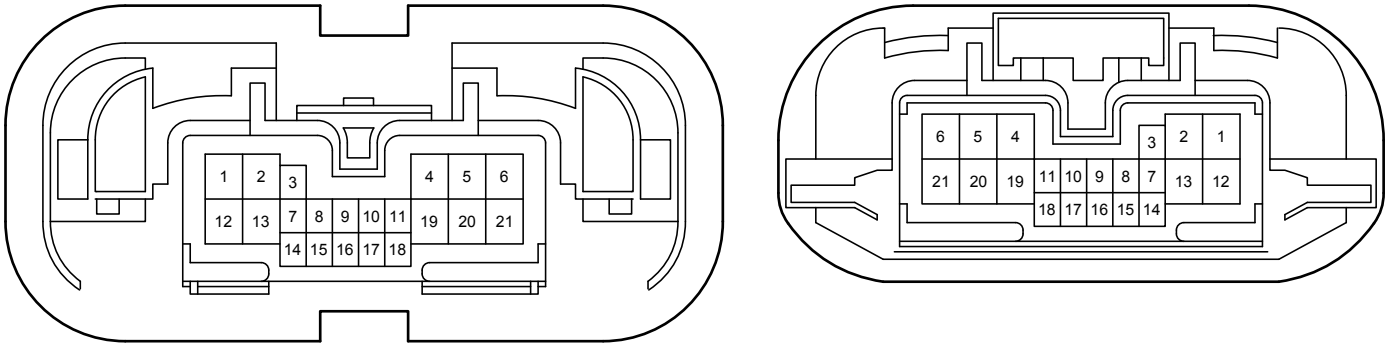


NP1
White

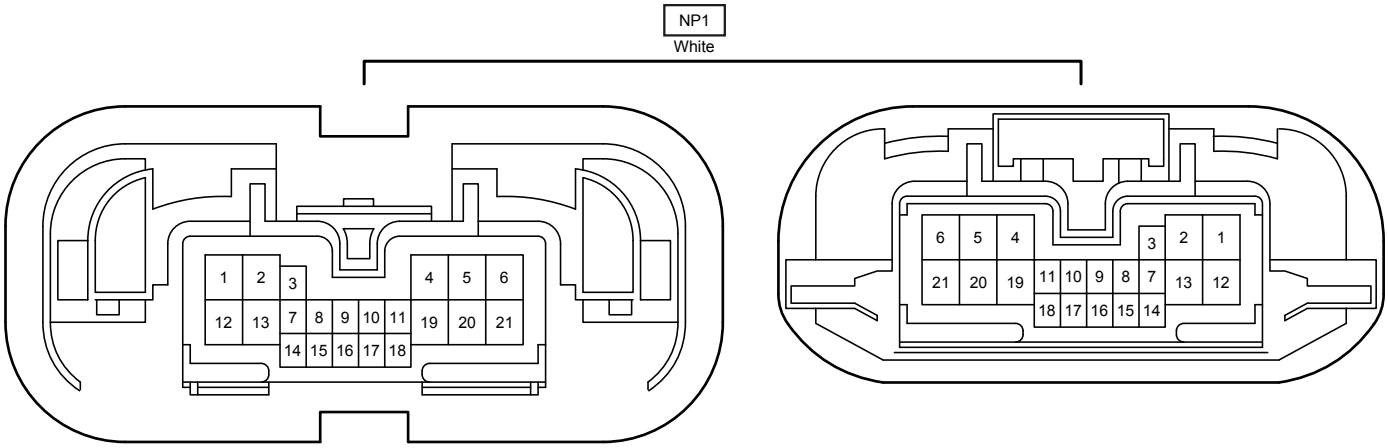


OH3
White

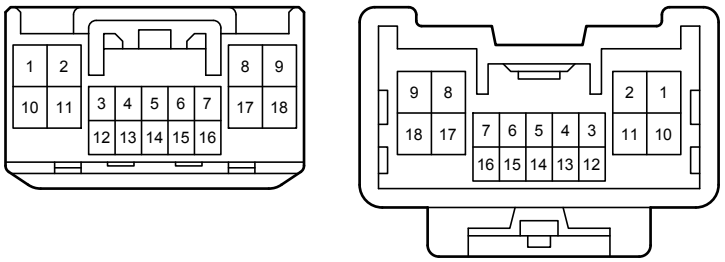


OI1
Gray

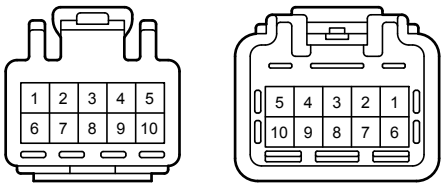



PI1
Black

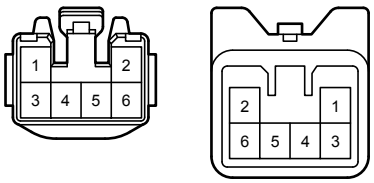


PO2
White

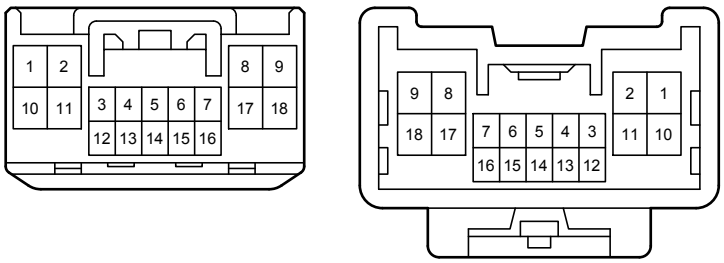

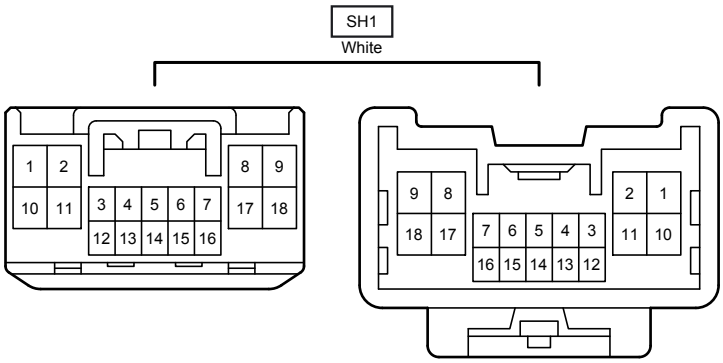
SH1
White
1 2 10 11 3 4 5 6 7 12 13 14 15 16 8 9 17 18
9 8 18 17 7 6 5 4 3 16 15 14 13 12 2 1 11 10

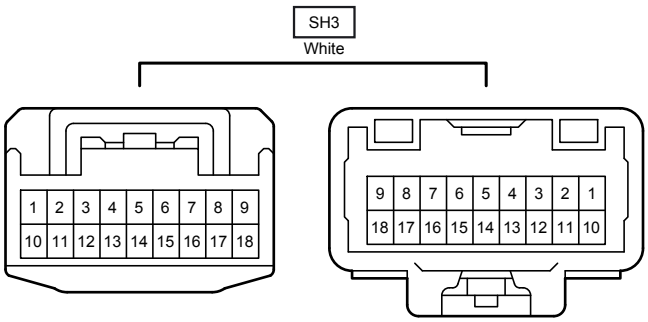
SH3
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1 18 17 16 15 14 13 12 11 10

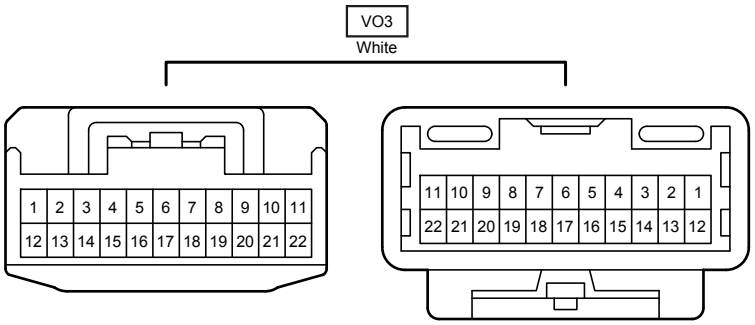
VO3
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1 22 21 20 19 18 17 16 15 14 13 12