


H37
Combination Meter Assembly
CANH
CANL
(BAT)
(IG)
20A
DEICER
7. 5A
LH–IG
7. 5A
ECU–IG
No. 1
A52(A), A53(B)
Junction Connector
O41(A)
Junction
Connector
DEICER
Relay
H119
Junction
Connector
H115
Junction
Connector
H45
Integration Control
and Panel Assembly
IG+
Front Wiper Deicer
Switch
STX
GND
A19
ABS and Traction
Actuator Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
Speed Sensors
H24(A)
A/C Amplifier Assembly
CANL
CANH
LIN1
D
SG–2
TAM
A25
Front Wiper
Deicer
(Windshield Glass)
Front Wiper
Deicer
A47
Junction Connector
A18
Ambient Temperature Sensor
(No. 1 Cooler Thermistor)
H83
Junction Connector
A1
H3
∗1 : w/o Electronic Modulated Air Suspension
∗2 : w/ Electronic Modulated Air Suspension


A 18
Black

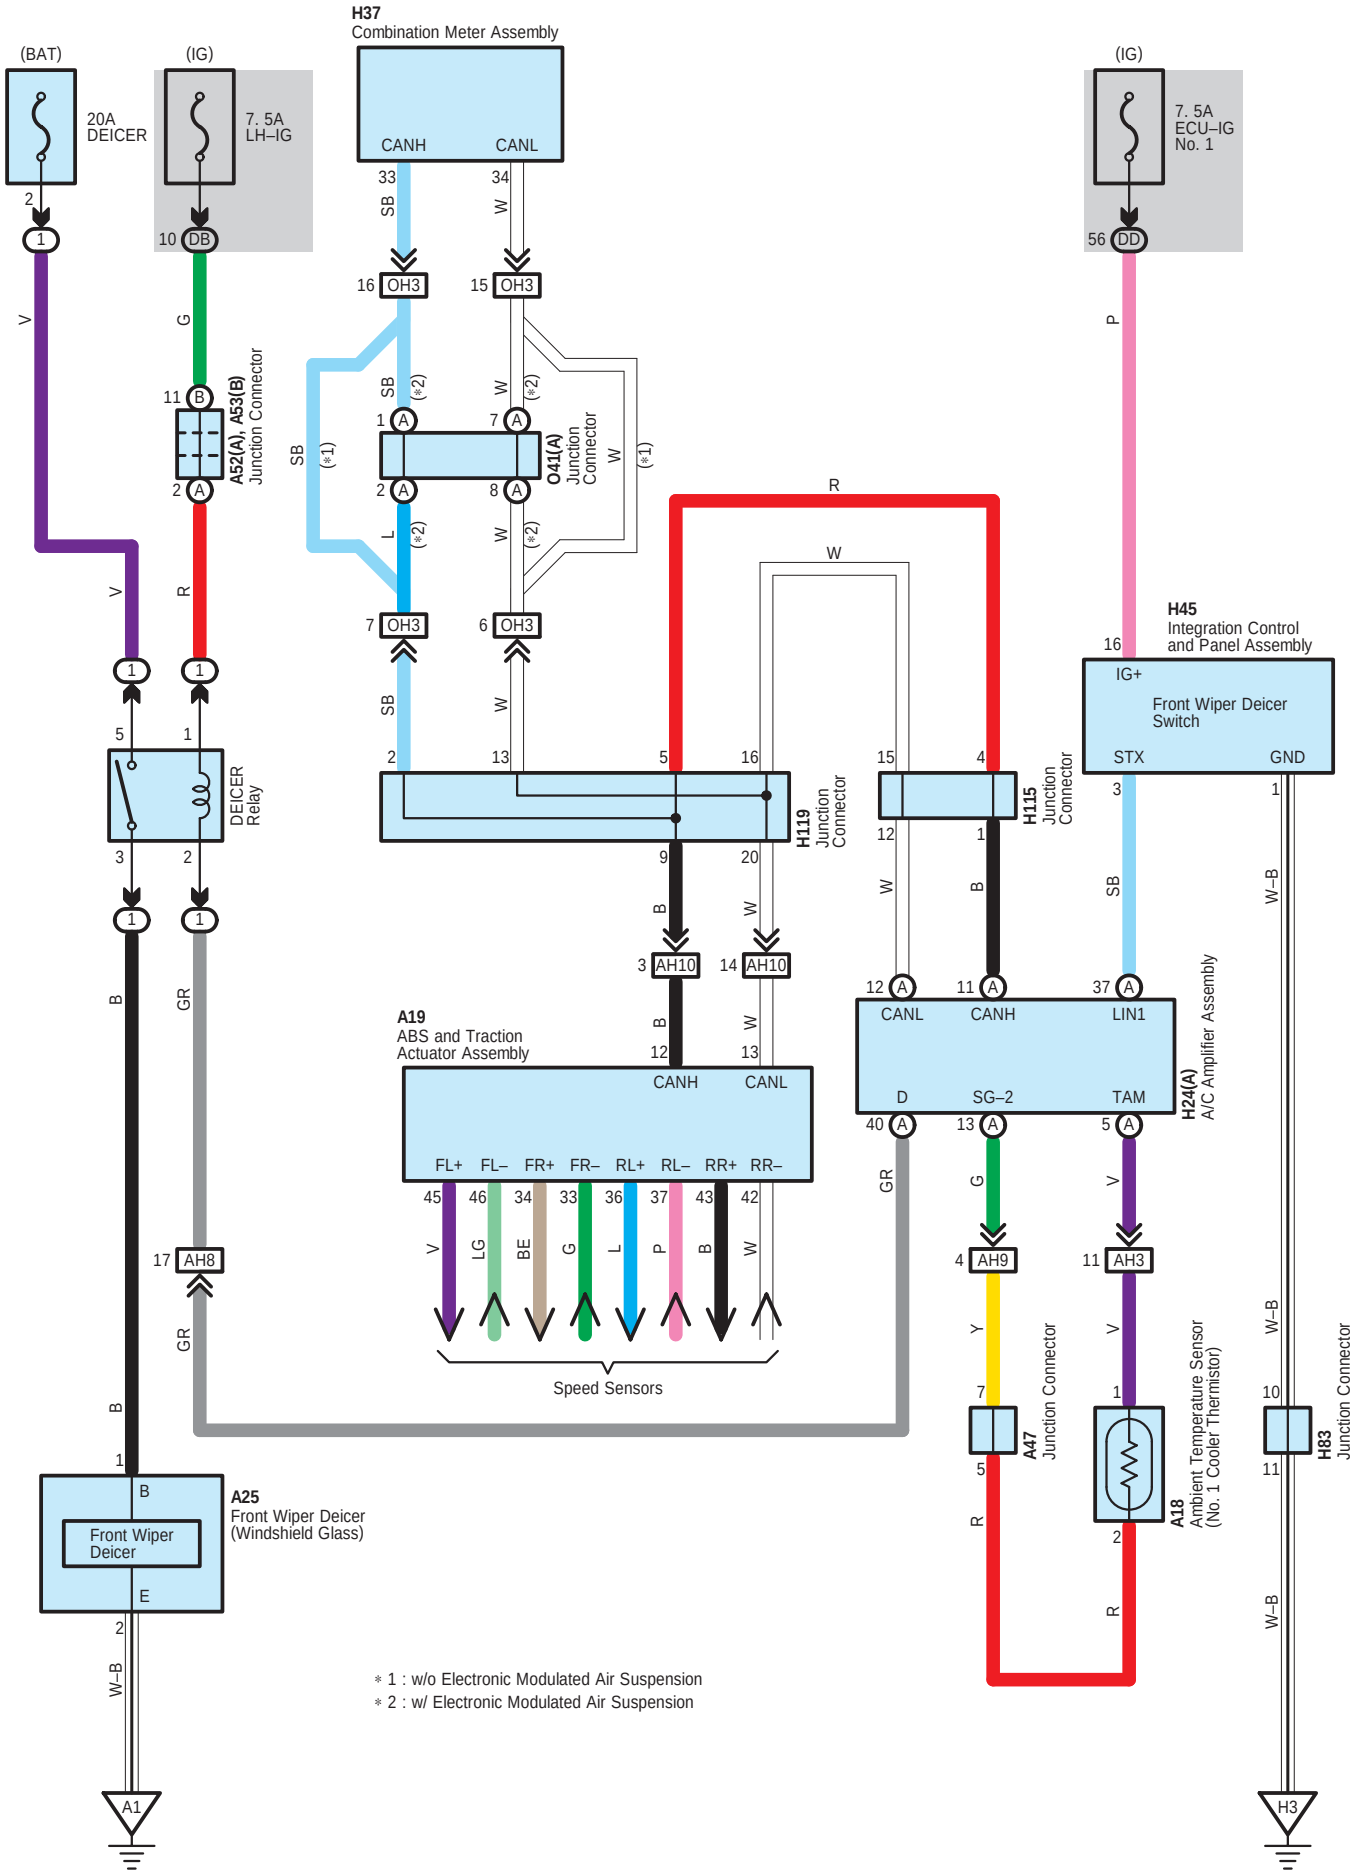


A 19
Black

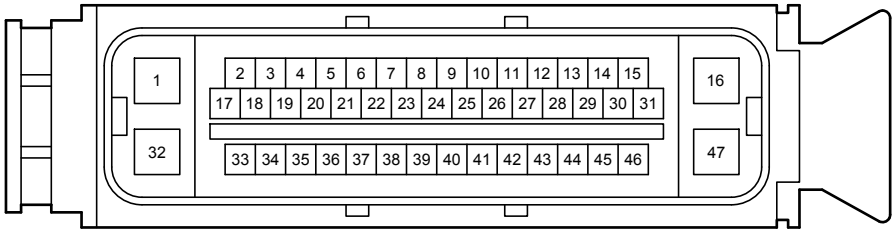


A 25
Black

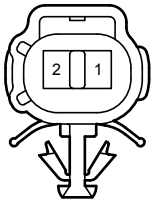


A 47
White

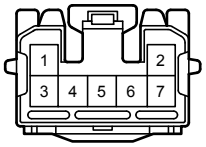


A 52
White

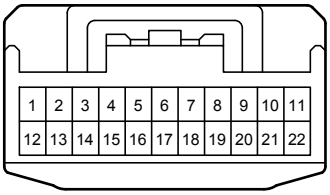


A 53
White

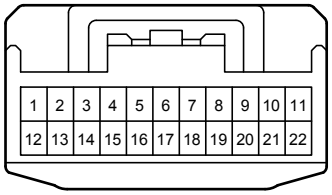


H 24
White

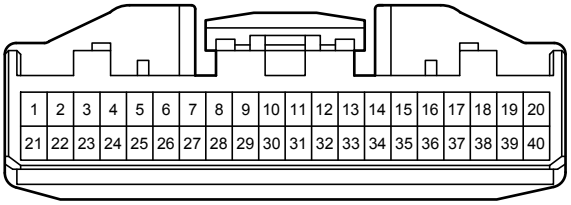


H 37
White

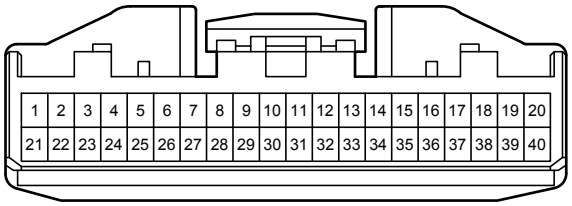


H 45
White

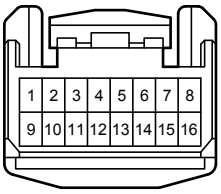


H 83
Gray

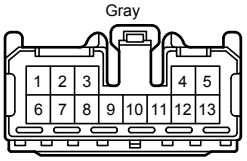


H115
Gray

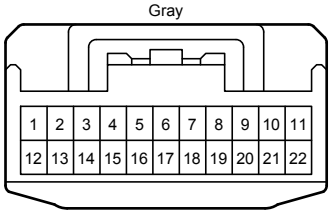


H119
Gray

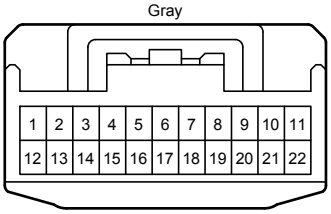


O 41
White

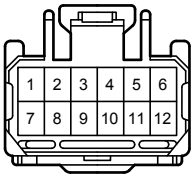



DB
White

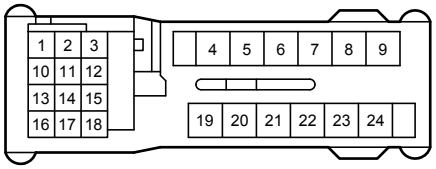

DD
White

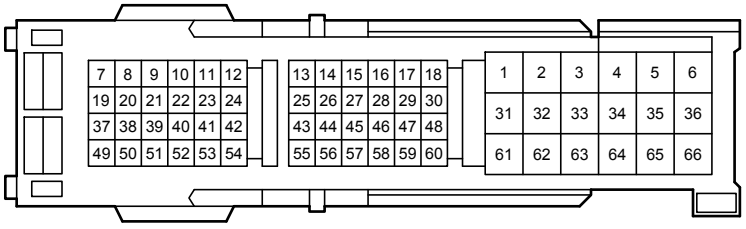

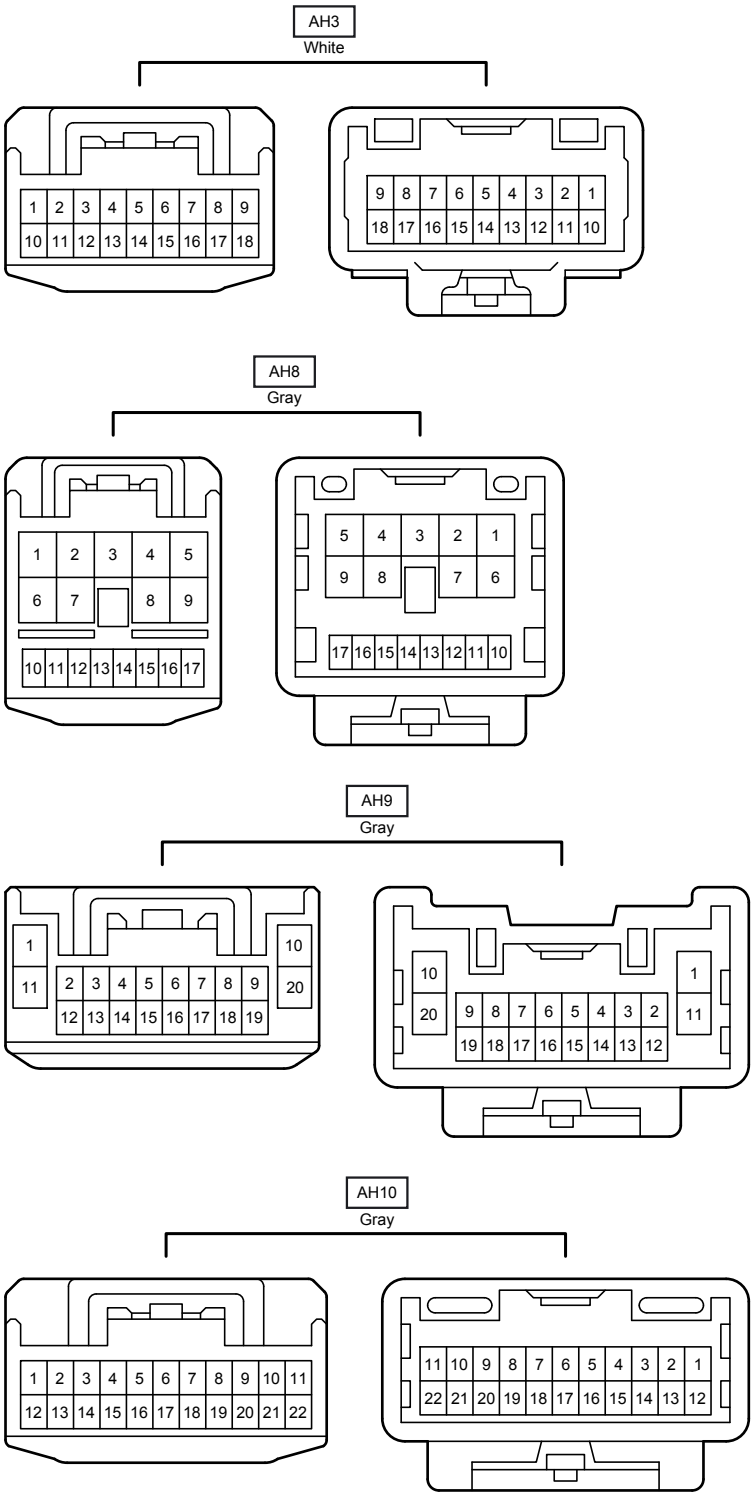
AH3
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
AH8
Gray
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10
AH9
Gray
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11
AH10
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12

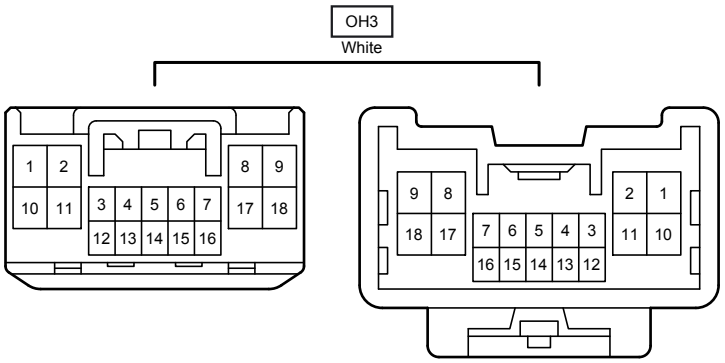
OH3
White
1
2
10
11
3
4
5
6
7
12
13
14
15
16
8
9
17
18
9
8
18
17
7
6
5
4
3
16
15
14
13
12
2
1
11
10